READ AND UNDERSTAND THESE INSTRUCTIONS BEFORE INSTALLING FIXTURE

This fixture is intended for installation in accordance with the National Code and local regulations.

To assure full compliance with local codes and regulations, check with your local electrical inspector before installation. To prevent electrical shock, turn off electricity at fuse box before proceeding.


Retain these instructions for maintenance reference.


INSTRUCTION SHEET NO.

SH20330

Page 1 0f 2

INSTRUCTIONS FOR INSTALLATION OF AGILI-T FIXTURES

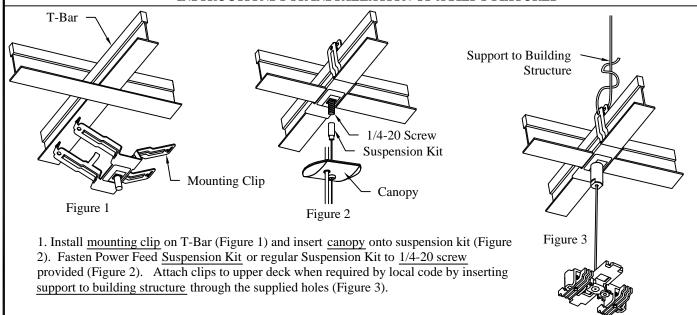

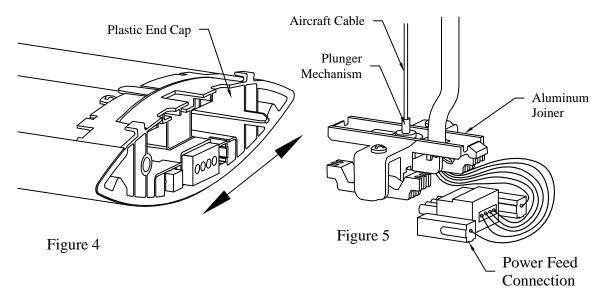

- 2. Install luminaire temporarily by inserting die-cast <u>aluminum joiner</u> mechanism at the end of <u>aircraft cables</u> (Figure 5). into <u>plastic end cap</u> of fixture (Figure 4). Manually plug in <u>power feed connection</u> (plus 2 extra communication cables for Agili-T Network) when installing single luminare or first of a row (Figure 5).
- 3. Adjust height using aircraft cable <u>plunger mechanism</u> (Figure 5). Adjust level by sliding <u>Aluminum Joiner</u> sideways as needed (Figure 4). Final level adjustment can be performed before or after installing end-cap or next luminaire in a row.



READ AND UNDERSTAND THESE INSTRUCTIONS BEFORE INSTALLING FIXTURE

This fixture is intended for installation in accordance with the National Code and local regulations. To assure full compliance with local codes and regulations, check with your local electrical inspector before installation. To prevent electrical shock, turn off electricity at fuse box before proceeding.

Retain these instructions for maintenance reference.

INSTRUCTION SHEET NO.

SH20330

Page 2 Of 2

INSTRUCTIONS FOR INSTALLATION OF AGILI-T FIXTURES

