

INSTALLATION INSTRUCTIONS



UFM Universal Flat Mount

NORTH AMERICA

3130 East Miraloma Avenue Anaheim, CA 92806 USA USA and Canada – Phone: 800-368-9700 Fax: 800-832-4888 EUROPE Swallow House, Shilton Industrial Estate, Shilton, Coventry, England CV79JY Phone: +44 (0) 2476 614700 Fax: +44 (0) 2476 614710

AUSTRALIA, NEW ZEALAND, OCEANIA (DISTRIBUTOR)

P.O. Box 295 Mordialloc Victoria 3195 Australia Phone: 03 9586 6330 www.premiermounts.com.au



©Premier Mounts 2007



Contents

- Warnings	2
- Assembly drawing	3
- Flat panel list	4
- Parts list	6
- Checking the thread depth	9
- Finding the center of the flat panel display	10
- Positioning the mounting brackets	11
- Securing the mounting brackets	13
- Finding the wood studs behind the wall structure	14
- Marking the mounting points on the wall	15
- Securing the wall plate to wood studs	16
- Securing the wall plate to a concrete wall	17
- Securing the flat panel to the wall	18
- Lateral shift adjustments	19
- Warranty	20

Warnings



The wall structure should be capable of supporting a max weight of 160 Lbs., the weight of the flat panel. More than 160 Lbs the wall must be reinforced. Proper installation procedure by qualified personnel as outlined in the installations instructions must be adhered to. Failure to do so could result in serious personal injury.



Safety precaution measures must be practiced at all times during the installation of this product. Use proper safety gear and tools for the installation procedure to prevent personal injury.



The entire installation instructions should be fully read and understood, including all of the safety symbols and safety precautions, before beginning installation. The installation instructions should be read, understood and followed to prevent personal injury or property damage. Keep these installation instructions in an easily accessible location for future reference.



Indicates that the power plug is to be disconnected from the power outlet.



Contact Premier Mounts for any questions



Safety precautions must be taken at all times.



Warning and caution in general



A secured structure wooden stud wall must always support the weight or load of the flat panel. Always confirm the center of the wood stud before beginning the installation.



Do not install in locations where there is vibration, movement or danger of impact. Failure to do so could result in flat panel cracking or falling from the wall causing damage and injury.



Do not install near heater, fireplace, direct sunlight or air conditioning or any other source of direct heat energy. Failure to do so may result in damage to the flat panel and could cause a risk of fire.



At least two qualified people should always perform the installation work. Injury and damage can result from dropping or mishandling the flat panel.



Mounting structure recommended wood studs, solid-flat concrete. Use a minimum diameter of 5/16" x 2 1/4" lag concrete wedge anchors (commercially available) or a minimum diameter of 5/16" x 3" lag wood screws.

Assembly drawing

Dimensions are in Inches and (mm) 28.000 (171.2) 16.000 1.245 (406.4) (31.75) (A) Ð (B)0000 0 þ \subset _ \subset 5.000 3.500 (127) (88.9) Ô $\overline{}$ - \subset 21.790 *(553.4)* -@ (H) \widehat{C} 16.000 (406.4) D 16.000 E _(406.4) 16.000 G (406.4) (F) 24.290 (616.97) Description 1.943 A. Wall plate (49.3) B. Mounting brackets

- C. Griplate[™]
- D. Mounting hardware
- E. Safety screws
- F. Leveling feet
- G. Wood stud
- H. 5/16" x 3" Lag screws and flat washers



Flat panel list

Acer	Eizo	Idex
PDP7859: M6 x 20	5420T: M8 x 30	PDM4260: M4 x 16
Akai	Electrograph	Ikegami
CTA42AR7A, PDP4247, PDP4290, PDP4294, PDP5090, HPT500AN: M8 x 25 – ½" nylon spacers - sleeves	DTS42W: M8 x 30 – ¼" nylon spacers (large) DTS4230: M8 x 30 – ½" nylon spacers - sleeves DTS42DD, DTS42GBDD, DTS42GB: M6 x 20	PTM4202: M5 x 20
Akira	Faroudja	Integra
EPM420, SV4201: M5 x 16	FPP42HD10, FPP50HD10: M4 X 16	PLA50V1: M4 X 16
Albatron	Fujitsu	FLAJUVI. 104 X 10
PWV46AC: M6 x 20		JVC
Barco	4211, 4212, 4221, 4222, 4208, 4209, 4213, 4214, 4229, 4241 4242, 4233: M5 x 16 5001, 5002, 5003, 5004, P50XHA10, P50XCA11UH, P50XHA30WS: M8 x 25 – flat washers PDS6101, PDS6001, PDS6002: M8 x 30 – ½" Nylon spacers - sleeves	GDV4200PZW, 4210, GDV4210PZWGA, 4211, GMP420UG, GMV42UG, JVP042WV74, PD42WV74, PD42WX84: M5 x 16
Cineversum 50: M8 x 20		GDV500PZU, GDV501U, 502U: M8 X 30 – ½" nylon spacers – sleeves
BenQ	Gateway	LG Electronics
PDP7843E: M6 x 20 – ¼" nylon spacers (small) PDP46W1: M6 X 12	GTWP42M102: M8 x 20, M8 x 35 – ¼" nylon spacers (large)	Flatron MU40PA10B, MU40PA15B: M5 x 20- ¼" nylon spacers
	GATEWAY 42: M8 x 30 – ¼" nylon spacers GATEWAY 46: M6 x 20 GATEWAY 50: M8 x 30 – ¼" nylon spacers	Flatron MN42PZ10, MN42PZ11, MU42PZ10, MU42PZ11B, MU42PZ15B: M5 x 20 MU50PZ41, MU50PZ90: M5 x 20
MP4200, MP4204: M5 x 16	Helios	Flatron MU60PZ10, MU60PZ11B, MU60PZ12B, MU60PZ90V: M8 x 25
Dream Vision		Luce
Revolution One, Revolution Five: M4 x 16	4200: M8 x 20	PDTV4220A: M5 x 25 – ½" nylon spacers
Dukane	Hitachi	
P37: M6 x 12		Marantz
P42: M6 x 12 P50: M8 x 20	32HDT20,CMP307XJ,CMP307XU,32HDT20 CMP401HDU, CMP402HDE, CMP402HDU, CMP4120HDU,CMP4121,CMP4121HDU,CMP4201U,	PD4280D, PD4282D, PD4290D, PD4292D, PD4293: M4 x 20
Dwin	CMIP4120HD0,CMIP4121,CMIP4121HD0,CMIP42010, CMP4202U, 42HDW10,42HDT20, 42HDT50, 42HDT55 M6 x 12 CMP5000WXU, CMP5003WXU, 50HDT50, 50HDT55: M8 X 20	PD4298HD: M6 X 20 PD5010D, PD5020, PD5040:
HD50: M8 x 30 – ½" nylon spacers - sleeves		Мах
EIKI		
PLD32: M5 x 20 - ¼" nylon spacers (small) PLD42XU: M5 x 20 - ¼" nylon spacers (small)		4600, 4600T: M6 x 20 5000: M8 x 30- ½" nylon spacers - sleeves



If your flat panel display is not listed, go to (page 8) to determine the thread pitch for your flat panel.

Mitsubishi	Princeton Graphics	Tatung
PD5010HD, PD5030: M4 x 16	AR3.4FTW,AR4.6PDP: M6 x 20	P46T: M6 x 20
Monivision	Rainbow	Toshiba
PWV46AC, PD46W00: M6 x 20	Spectrum 3750: M6 x 20	42HP82: M4 X 16 PD42W, PD42W1: M8 X 30 – ½ " nylon spacers
NEC	RCA	(large) - sleeves 50HP81: M8 X 30 – ½" nylon spacers (large) - sleeves
4200W, 4210W, M4A,MP2, PX42M3A, 42PD1W, PD2	PR42300, PHD42600, PHD50300, PHD50400: M4 X 16 PHD50500: M8 X 20	50HP82: M4 X 16
M5A,M5G, 42MP1, 42PD1, PX42VM1A, PX42VP1A, PX42VP2A, 42MP3, 42PD3, PX42VP3A, 42MP4, 42VP4A, 42MX2: M4 X 16, 5000W, PX50M5A, 50PD1, PX50VP1A, PX50MX1A, 50MP1, 50MP2, 50PD2,	111530300. NO X 20	Tredex
	Revox	TXP4600: M6 x 20
50VP2, 50MP3, 50XM3: M4 X 16	E1042: M6 x 20 E1050: M8 x 20	V-Inc
Norcent	Runco	Vizio P1, Vizio P4: M6 x 12
46WGA850: M6 x 12	PL42C, CW42: M4 X 16	Vidikron
Orion	PL42CXPL50CX: M8 X 30, ½" Nylon spacers – sleeves	VPW420: M8 X 30, ½" Nylon spacers (large) - sleeves
PM4202: M5 x 16	E1050, PL50C, PL50HDX, CW50MC: M8 X 20	VIEWSONIC
PW4202. W3 X 10	Sampo	VPW420: M8 x 30 – ½" nylon spacers - sleeves VPW425: M8 x 30 – ¼" nylon spacers (large)
Panasonic	PME42S6: M8 x 30 – ¼" nylon spacers (large) PME42F61: M8 x 20, M8 x 35 – ¼" nylon spacers	VPW450HD: M8 x 30 – ¼" nylon spacers (large) VPW500: M8 X 20
TC42P1, PT42PD3P, PT42PD1P, TC42P1F, PT37P1, TH42PWD3, TH37PWD4UZ, PT37PD4, TH37PW5EX,	(large) PME50X6: M8 x 30 – ¼" nylon spacers (large)	VPW505: M8 x 30 – ¼" nylon spacers (large) Yamaha
TH37PA20UP, TH42PD4UY, TH42PWD4EX, PT42P1, 42PD2, TH42PWD3U, TH42PHD5U, PT42PD3P, PT42PD4, PT42PHD4P, TH42PWD5UY, TH42PW5UZ, TH42PWD6UY, TH42PA20UP, TH42PL20E, TH42PAX20, TH50PHD3U, PT50PD3P, PT50PHD4P.	Samsung	
	PPM42S2, PPM42S3, SPL4225K, SPN4235, SPN4239: SPK4215M, PK42P2S: M8 x 25 – ½" nylon spacers	PDM1: M8 x 30 – ½" nylon spacers - sleeves Zenith
TH50PHD3E, TH50PHW3, TH50PD4, TH50PHD5UY, TH50PHD6UY, TH50PL20E, TH50TX20UP:	PPM50H2, HPL5025K: M8 x 30 – ½" Nylon spacers - sleeves	
M8 X 30 – ½" Nylon spacers – sleeves TH42PX20U, TH50PX20U: M8 X 70 – 1-1/2" Nylon	PPM50H3, HPN5039: M8 x 25 – ½" nylon spacers	DPDP40W, P40V22, DPDP40V, P40V24: M5 x 20 - ¼" nylon spacers (small)
spacers	Sanyo	P42W22, P42W22B, P42W24P, P42W34P: P40V24: M5 x 20 - ¼" nylon spacers (small) P50W26, P50W28, P50W38: M5 x 16
Philips	PDP421A: M5 x 20 - ¼" nylon spacer (small) PDP42H1NA: M5 x 20 - ¼" nylon spacer (small)	
42FD9934, 42FD9952, 42FD9954, 42PH9555, 42FD9935: M5 x 25 ½" Nylon spacers	Sharp	If your flat panel displayNoteNoteIf your flat panel displayis not listed, go to (page
BDS4611: M6 x 20 50FD9934/17S: M4 X 16	PZ42H2U, PZ43HV2U, PD50U, PZ50HV2U: M8 X 20	8) to determine the thread pitch for your flat panel.
Pioneer	SONY	I have been seen as a second se
PDPV401, V402, PDP4330HD, PDP433HDE, PDP433CMX, PDP433PU, PDP4300, PDP4340HD, PR0800HD, PR0800HDI, PR0910HD, PDP4310, PDP501X, V502MX, V502X, PDP503MX, V505, PDP505HD, PR01000HD, PDP503CMX, PDP5030HD, PDP503HDE, PDP5031HD, PDP5040HD, PR01000HDI,PR01110HD: M8 X 20 Planar	PFM42B1,PFM42B2: M6 x 20 - 5/16" flat washers PFM-42V1,PFM-42V2: M6 x 20 - 5/16" flat washers PFM50C1: M6 x 20 - 5/16" flat washers KE-42XBR900: M5 x 20 - 5/16" flat washers KE50XBR900: M5 x 20 - 5/16" flat washers KE42XS910: M5 x 20 - 5/16" flat washers KDE61XBR950: M5 x 20 - 5/16" flat washers	
	SVA	
42N: M4 x 16 50P: M8 x 20	HD4208TIII: M6 x 20 - ¼" nylon spacers	





Parts list (con't)

Nylon spacers and flat washers



The nylon spacers may be staked to achieve proper spacing.



Parts list (con't)

All of these parts are used to install the mounting bracket. Make sure that none of these parts are missing before beginning installation. If there are parts missing stop the installation and contact Premier Mounts.



Checking the thread depth on your flat panel



Finding center of the flat panel display



Proper installation procedure by qualified personnel as outlined in the installation instructions must be adhered to. Failure to do so could result in serious personal injury and possible damage to the flat panel.

STOP

INVERT THE FLAT PANEL PLACE IT ON A SOFT, FLAT SURFACE TO PREVENT DAMAGE TO THE FLAT PANEL. USE A BLANKET, FOAM, ETC. FAILURE TO DO SO WILL RESULT IN DAMAGING THE FLAT PANEL. DO NOT LAY THE FLAT PANEL ON THE FLOOR WITHOUT ANY PROTECTION TO THE GLASS. THE FLAT PANEL IS HEAVY AND FRAGILE. AT LEAST (2) QUALIFIED PERSONNEL ARE STRONGLY RECOMMENDED FOR INSTALLATION OF THIS PRODUCT. FAILURE TO DO SO COULD RESULT IN SERIOUS INJURY AND POSSIBLE DAMAGE TO THE FLAT PANEL.



Positioning the mounting brackets





Figure 7 Step 7 DIMPLES The Griplates[™] have M4, M5 M6 and M8 hole patterns to fit the hardware that your flat panel requires. EXAMPLE: If your plasma uses M8 x 20 Phillip M8 screws. Use the M8 mounting points. See figure 7 6 6 Step 8 M6 Once the mounting brackets are aligned secure the Griplate[™] to the flat panel. \bigcirc M5 The dimples of the top plates have to be Note facing up and the bottom dimples must be facing down. Use (1) Griplate[™] per M4 mounting point. See figure 8. Phillips screw driver Figure 8 DIMPLES FACING UP 6 Θ_{μ} 0 DIMPLES FACING UP DIMPLES FACING DOWN Bottom of flat panel \$~~{8} DIMPLES FACING DOWN *Caution* Do not over tighten the mounting hardware.



Leave a $\frac{3}{4}$ " gap on both mounting brackets as shown on this diagram.

Finding the wood studs behind the wall structure

Figure 9

Wood stud finder

(commercially available)

Step 9

Mark the wall and the center of the wood studs.

Note

Using a (commercially available) wood stud finder, locate the 16" or 24" stud centers behind the wall. Once found, make a pencil marking on the center of the wood studs. See figure 9.

The wall plates have (3) 16" and (1) 24" mounting slot positions. (Look at the assembly drawing on page 3)

Measure and mark the viewing height desired on the wall

Wood studs behind the wall structure



Step 10



Measure from the floor to the desired viewing height and mark the wall. See figure 10.

Note This marking will reference the center of your flat panel display once mounted on the wall.

Figure 10

16"

Marking the mounting points on the wall



- 15 -

Securing the wall plate to wood studs

Step 13



Level and secure the plate to the wall with the reference arrow facing up to the ceiling. Secure the plate using the four (4) 5/16" lag bolts and flat washers (supplied). See figure 13.



Use a minimum diameter of 5/16" x 3" long wood screws.



Do not over tighten the lag bolts.



Securing the wall plate to a concrete wall



Level and secure the plate to the wall with the reference arrow facing up to the ceiling. Use a min dia of 5/16" x 2 $\frac{1}{4}$ " lg concrete wedge anchors (commercially available). See figure 14.



Use a minimum diameter of 5/16" x 2 ¹/₄" long wedge anchors (commercially available).



Caution Do not over tighten the wedge anchors bolts.

Figure 14



Securing the flat panel to the wall mount



AT LEAST (2) QUALIFIED PERSONNEL ARE STRONGLY RECOMMENDED FOR INSTALLATION OF THIS PRODUCT. FAILURE TO DO SO COULD RESULT IN SERIOUS INJURY AND POSSIBLE DAMAGE TO THE FLAT PANEL.

Step 14



Raise the flat panel with the LEFT and RIGHT mounting brackets secured to the flat panel and insert the top hooks from each bracket to the rod from the wall plates. See figure 15.

Figure 15



Lateral shift adjustment

Step 15

Make any lateral shift adjustment and lock it by tightening the two (2) ¼"-20 Phillips screws found on the bottom of the mounting brackets. Use the foot leveler to adjust your plasma. See figure 16



Do not over tighten the $\frac{1}{4}$ "-20 screws to the rods.

Figure 16





To remove the display from the wall simply back off the ¹/4"-20 screws using a Phillips screwdriver and lift the unit of the wall carefully.

PREMIER MOUNTS

LIMITED LIFETIME WARRANTY

What and Who is Covered by this Limited Warranty and for How Long

Premier Mounts warrants this product to be free from defects in material and workmanship for the lifetime of the original installation of this product. The limited warranty is valid only for the original purchaser of the product. **What Premier Mounts Will Do**

At the sole option of Premier Mounts, Premier Mounts will repair or replace any product or product part that is defective. If Premier Mounts chooses to replace a defective product or part, a replacement product or part will be shipped to you at no charge, but you must pay any labor costs.

What is Not Covered; Limitations

PREMIER MOUNTS DISCLAIMS ANY LIABILITY FOR DAMAGE TO MOUNTS, ADAPTERS, DISPLAYS, PROJECTORS, OTHER PROPERTY, OR PERSONAL INJURY RESULTING, IN WHOLE OR IN PART, FROM IMPROPER INSTALLATION, MODIFICATION, USE OR MISUSE OF ITS PRODUCTS.

PREMIER MOUNTS DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. PREMIER MOUNTS IS NOT RESPONSIBLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING BUT NOT LIMITED TO, INABILITY TO USE ITS PRODUCTS OR LABOR COSTS FOR REMOVING AND REPLACING DEFECTIVE PRODUCTS OR PARTS. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

What Customers Must Do for Limited Warranty Service

If you discover a problem that you think may be covered by the warranty you MUST REPORT it in writing to the address below within thirty (30) days. Proof of purchase (an original sales receipt) from the original consumer purchaser must accompany all warranty claims. Warranty claims must also include a description of the problem, the purchaser's name, address, and telephone number. General inquiries can be addressed to Premier Mounts Customer Service at 1-800-368-9700. Warranty claims will not be accepted over the phone or by fax.

Premier Mounts Attn: Warranty Claim 3130 E. Miraloma Avenue Anaheim, CA 92806

How State Law Applies

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.