

INSTALLATION INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS

29477/29479

CAUTION

TO AVOID POSSIBLE ELECTRIC SHOCK, MAKE SURE THE ELECTRICITY IS SHUT OFF AT THE MAIN PANEL. IF YOU ARE REPLACING AN EXISTING FIXTURE, FIRST TURN THE FIXTURE OFF. NEXT, TURN THE WALL SWITCH OFF. FINIALLY, GO TO THE MAIN FUSE OR BREAKER BOX IN YOUR HOME. TURN THE FUSE OR BREAKER TO THE OFF POSITION. SOME TYPEOF FUSE MUST BE UNSCREWED TO SHUT OFF THE POWER. ALL WIRING MUST BE DONE IN ACCORDANCE WITH NATIONAL AND LOCALELECTRIC CODES. IF YOU ARE NOT FAMILIAR WITH WIRING, YOU SHOULD USE A QUALIFIED ELECTRICIAN.

1. ATTACH THE CROSSBAR TO THE CEILING OUTLET BOX USING THE TWO SCREW PROVIDED WITH THE OUTLET BOX.
2. INSERT THE FIXTURE WIRE AND THE GROUND WIRE UP THROUGH THE NIPPLE. ATTAÇH THE WHITE OR RIBBED FIXTURE WIRE TO THE WHITE SUPPLY WIRE IN THE OUTLET BOX USING THE WIRE CONNECTORS. ATTACH THE BLACK OR SMOOTH FIXTURE WIRE TO THE BLACK SUPPLY WIRE IN THE SAME MANNER. ATTACH THE FIXTURE AND SUPPLY GROUND WIRE ONTO THE CROSSBAR USING THE GROUND SCREW.
3. RAISE THE CANOPY TO THE OUTLET BOX AND SECURE IT BY FINIAL
4. INSTALL THE GLASS ONTO THE SOCKET AND SECURE BY SOCKET RING.

