


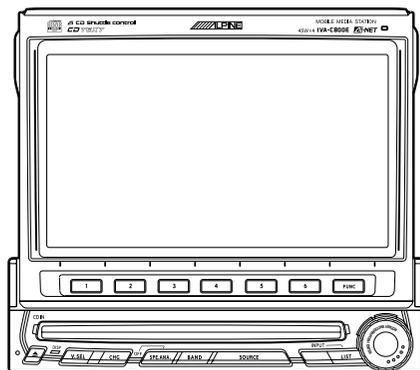

# IVA-C800E

## Mobile Media Station

- **OWNER'S MANUAL**  
Please read this manual to maximize your enjoyment of the outstanding performance and feature capabilities of the equipment, then retain the manual for future reference.
- **MODE D'EMPLOI**  
Veuillez lire ce mode d'emploi pour tirer pleinement profit des excellentes performances et fonctions de cet appareil, et le conservez-le pour toute référence future.
- **使用說明書**  
務請閱讀本說明書以便最大限度地享受本設備擁有的引人注目的功能特點，讀完後並請妥加保存以備將來參考。





## WARNING

This symbol means important instructions. Failure to heed them can result in serious injury or death.

Ce symbole désigne des instructions importantes. Le non-respect de ces instructions peut entraîner de graves blessures, voire la mort.

此符號表示重要的說明，不遵循這些說明可以導致嚴重的人身傷害或死亡。

# Precautions

---

**INSTALL THE PRODUCT CORRECTLY SO THAT THE DRIVER CANNOT WATCH TV/VIDEO UNLESS THE VEHICLE IS STOPPED AND THE PARKING BRAKE IS APPLIED.** It is dangerous for the driver to watch the TV/Video while driving the vehicle. The driver may be distracted from looking ahead and an accident could occur. If the product is not installed correctly, the driver will be able to watch the TV/Video while driving the vehicle and may be distracted from looking ahead causing an accident. The driver or other people could be severely injured.

---

**DO NOT OPERATE ANY FUNCTION THAT TAKES YOUR ATTENTION AWAY FROM SAFELY DRIVING YOUR VEHICLE.** Any function that requires your prolonged attention should only be performed after coming to a complete stop. Always stop the vehicle in a safe location before performing these functions. Failure to do so may result in an accident.

---

**KEEP SMALL OBJECTS SUCH AS BATTERY OUT OF THE REACH OF CHILDREN.** Swallowing them may result in serious injury. If swallowed, consult a physician immediately.

---

**DO NOT DISASSEMBLE OR ALTER.** Doing so may result in an accident, fire or electric shock.

---



## WARNING

This symbol means important instructions. Failure to heed them can result in serious injury or death.

Ce symbole désigne des instructions importantes. Le non-respect de ces instructions peut entraîner de graves blessures, voire la mort.

此符號表示重要的說明，不遵循這些說明可以導致嚴重的人身傷害或死亡。

# Precautions

---

**USE THIS PRODUCT FOR MOBILE 12V APPLICATIONS.** Use for other than its designed application may result in fire, electric shock or other injury.

---

**USE THE CORRECT AMPERE RATING WHEN REPLACING FUSES.** Failure to do so may result in fire or electric shock.

---

**USE ONLY IN CARS WITH A 12 VOLT NEGATIVE GROUND.** (Check with your dealer if you are not sure.) Failure to do so may result in fire, etc.

---

**DO NOT BLOCK VENTS OR RADIATOR PANELS.** Doing so may cause heat to build up inside and may result in fire.

---

**MINIMIZE DISPLAY VIEWING WHILE DRIVING.** Viewing the display may distract the driver from looking ahead of the vehicle and cause an accident.

---

**DO NOT WATCH VIDEO WHILE DRIVING.** Watching the video may distract the driver from looking ahead of the vehicle and cause an accident.

---

**KEEP THE VOLUME AT A LEVEL WHERE YOU CAN STILL HEAR OUTSIDE NOISE WHILE DRIVING.** Failure to do so may result in an accident.

---



## CAUTION

This symbol means important instructions. Failure to heed them can result in injury or property damage.

Ce symbole désigne des instructions importantes. Le non-respect de ces instructions peut entraîner des blessures ou des dommages matériels.

此符號表示重要的說明，不遵循這些說明可以導致人身傷害或財物損失。

## Precautions

---

**HALT USE IMMEDIATELY IF A PROBLEM APPEARS.** Failure to do so may cause personal injury or damage to the product. Return it to your authorized Alpine dealer or the nearest Alpine Service Centre for repairing.

---

**KEEP FINGERS AWAY WHILE THE MOTORIZED FRONT PANEL OR MOVING MONITOR IS IN MOTION.**

Failure to do so may result in personal injury or damage to the product.

---

**DO NOT PLACE HANDS, FINGERS OR FOREIGN OBJECTS IN INSERTION SLOTS OR GAPS.** Doing so may result in personal injury or damage to the product.

---

**DO NOT MIX NEW BATTERIES WITH OLD BATTERIES. INSERT WITH THE CORRECT BATTERY POLARITY.** When inserting the batteries, be sure to observe proper polarity (+ and -) as instructed. Rupture or chemical leakage from the battery may cause fire or personal injury.

---

Remove the anti-theft cover when you drive. This prevents the cover from falling off the unit and interfering with the safe operation of the vehicle.

---

# Precautions



## CAUTION

---

This symbol means important instructions. Failure to heed them can result in injury or property damage.

Ce symbole désigne des instructions importantes. Le non-respect de ces instructions peut entraîner des blessures ou des dommages matériels.

此符號表示重要的說明，不遵循這些說明可以導致人身傷害或財物損失。

Operation of some of the functions of this unit is very complex. Because of this, it was deemed necessary to place these functions into a special screen. This will restrict operation of these functions to times when the vehicle is parked. This ensures the focus of the driver's attention will be on the road and not on the IVA-C800E. This has been done for the safety of the driver and passengers.

Title Input and Audio Processor Adjustments cannot be made if the car is moving. The car must be parked and the parking brake must be engaged for the procedure described in the Owner's Manual to be valid. The warning "CAN'T OPERATE WHILE DRIVING," will be displayed if any attempts are made to perform these operations while driving.

This operation is the same as when selecting sources using the remote control (RUE-4185). When the car is parked, the selection is made as described in the Owner's Manual.

---

# Contents

Page/	Page / 頁次	
2/	3	Precautions
<hr/>		
<b>Basic Operation</b>		
20/	21	Using Face Cover
20/	21	Resetting the System
22/	23	Raising the Monitor
24/	25	Lowering the Monitor
26/	27	Turning Power On or Off
28/	29	Selecting the Monitor Opening Angle
28/	29	Adjusting the Monitor Viewing Angle
30/	31	Adjusting the Volume/Bass/Treble/ Balance/Fader
30/	31	Muting the Sound
32/	33	Turning Loudness On or Off
<hr/>		
<b>Radio Operation</b>		
34/	35	Manual Tuning
36/	37	Automatic Seek Tuning
38/	39	Manual Storing of Station Presets
40/	41	Automatic Memory of Station Presets
42/	43	Storing into Direct Access Preset (D.A.P.) Band
44/	45	Tuning to Preset Stations
46/	47	Selecting Preset Stations from List Displayed
48/	49	T.R.V.S. Search for Local Stations
<hr/>		
<b>CD Player/Changer (Optional) Operation</b>		
50/	51	Playing CD Player or Changer (Optional)
54/	55	Fast Forward and Backward
54/	55	Music Sensor Skip
56/	57	Repeat Play on Single Track
58/	59	M.I.X. (Random) Play
60/	61	Displaying and Scrolling CD Title/Text
62/	63	Displaying List of Track Titles/ CD Titles
66/	67	Controlling CD Changer
70/	71	Multi-Changer Selection
<hr/>		
<b>MD Player (Optional) Operation</b>		
72/	73	Playing Mini-Disc (MD)
74/	75	Music Sensor (Skip)
74/	75	Fast Forward and Backward
76/	77	Repeat Play
76/	77	M.I.X. (Random Play)
78/	79	Scrolling Displayed Titles
80/	81	Displaying List for MD Titles



# Contents

## Cassette Player Operation (Optional)

82/83	Controlling Cassette Player
84/85	Fast Forward/Rewind/Reversing Tape Direction/Pause
86/87	Programme Sensor
86/87	Repeat Play
88/89	Blank Skip



## DVD/Video CD/CD Player Operation (Optional)

90/91	Playing DVD/Video CD/CD
94/95	Still/Pause
94/95	Chapter (DVD) /Track (Video CD) Sensor
96/97	Fast Forward/Backward
96/97	Repeat Play
98/99	Playing tracks in random order (M.I.X.) (Video CD/CD)



100/101	<b>Auxiliary Device Operation</b> (Optional)
102/103	<b>Audio Processor Operation</b> (Optional)

## Other Useful Features


152/153	Displaying Spectrum Analyzer
154/155	Turning Defeat Mode On and Off
156/157	Titling Radio Stations/CDs
160/161	Adjusting Subwoofer Level
164/165	Switching Phase
166/167	Setting the External Device Interrupt Mode
170/171	Setting Interrupt Icon Display
172/173	Setting Bass Frequency
174/175	Setting Visual Modes
176/177	Selecting Rear Monitor
180/181	Displaying Time
182/183	Resetting Clock
186/187	Setting Daylight Saving Time
188/189	Turning Sound Guide Function On or Off
190/191	Demonstration
192/193	Setting Automatic Opening/Closing of Monitor
194/195	Adjusting Brightness of Picture
196/197	Adjusting Tint of Picture
198/199	Adjusting Colour of Picture
200/201	Illumination Control
202/203	Switching Background Textures/Colours
204/205	Setting Automatic Background Texture/ Colour Scroll
206/207	Switching Display Modes
208/209	Playing 2 Sources Simultaneously
212/213	<b>Remote Control</b>
218/219	<b>In Case of Difficulty</b>
228/229	<b>Specifications</b>

# Precautions



## Temperature

Be sure the temperature inside the vehicle is between +45°C (+113°F) and 0°C (+32°F) before turning your unit on.

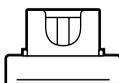


## Fuse Replacement

When replacing the fuse(s), the replacement must be of the same amperage as shown on the fuse holder. If the fuse(s) blows more than once, carefully check all electrical connections for shorted circuitry. Also have your vehicle's voltage regulator checked.

## Maintenance


If you have problems, do not attempt to repair the unit yourself. Return it to your Alpine dealer or the nearest Alpine Service Station for servicing.

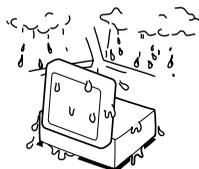

## Installation Location

Make sure the IVA-C800E monitor/receiver will not be exposed to:


- Direct sun and heat
- High humidity
- Excessive dust
- Excessive vibrations

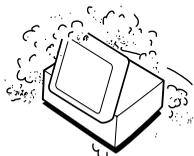

Alpine products equipped with the Ai-NET bus, connected to the IVA-C800E, can be operated from the IVA-C800E. Depending on the products connected, the functions and displays will vary. For details, consult your Alpine dealer.




# Basic Operation

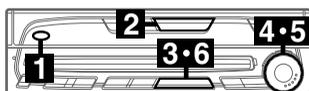


This section describes the basic operation of the radio. These operations also apply to the other sources.

**1**

Press the PWR (Power) button on the unit to turn the power on to the unit.

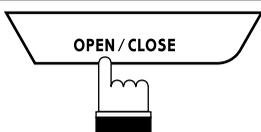**2**

Press the OPEN/CLOSE button to open the monitor. The unit beeps 3 times and raises the monitor. The opening screen appears on the monitor.

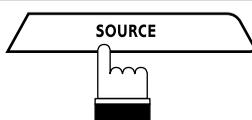**3**

Press the SOURCE button. The display shows the main menu screen.

**4**

Rotate the rotary encoder and select "RADIO" from the main menu.

**Note:** If a DVD player is connected and its power is on, the display shows " **DVD** **AUX2** " instead of " **AUX1** **AUX2** ."

## Radio Mode Screen/Ecran du mode radio/收音機模態熒幕

Selected Source/  
Source  
sélectionnée/  
選定的訊號源



Volume Level/  
Niveau du  
volume/  
音量位准


Current Time/  
Heure  
actuelle/  
當前時間

The Function Guide displays the labels for each of the Function buttons. These labels will change depending upon the functions for the selected source./Le guide des fonctions indique les différentes fonctions des touches de fonction. Le contenu du guide change chaque fois que vous changez de source./功能指南顯示每一功能按鈕的標識。這些標識隨著選定訊號源的功能而變化。

(To be continued)




# Basic Operation

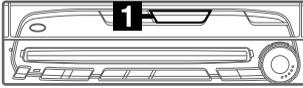

## Raising the Monitor

**Note:** The IVA-C800E is a precision device. With gentle handling, its unique capabilities can be enjoyed for a long time.

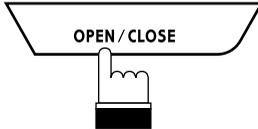
**1**

Press the OPEN/CLOSE button. The unit beeps 3 times and raises the monitor automatically.

- Notes:**
- In the monitor touches an obstacle while it is being raised, the unit will stop raising the monitor immediately. Should this occur, remove the obstacle and press the OPEN/CLOSE button again to raise the monitor
  - When the movable monitor is opened, do not place any object on the monitor and be careful not to bump or apply any pressure to the monitor while it is open. This can cause damage to the mechanism.
  - Under low ambient temperature conditions, the display may be dark for a short period of time immediately after the power is turned on. Once the LCD has warmed up, the display will return to normal.
  - For your safety, some operation of the unit cannot be performed while the vehicle is in motion. In this case, first stop the vehicle and engage the parking brake, then perform the operation.
  - Operation of the remote control (described on pages 214-216) can be carried out even while the monitor screen is closed.




# Basic Operation

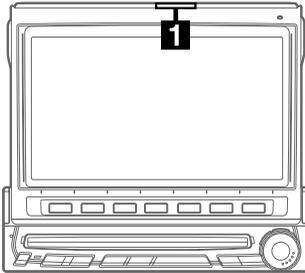

## Lowering the Monitor

**Note:** The IVA-C800E is a precision device. With gentle handling, its unique capabilities can be enjoyed for a long time.

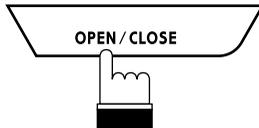**1**

Press the OPEN/CLOSE button. The unit will beep 3 times and lower the monitor automatically.

**Note:** If the monitor touches an obstacle while it is being lowered, the unit will stop lowering the monitor immediately. Should this occur, remove the obstacle and press the OPEN/CLOSE button again to lower the monitor.



# Basic Operation



## Turning Power On or Off

Some of this unit's functions, cannot be performed while the vehicle is in motion. Be sure to stop your vehicle in a safe location and apply the parking brake, before attempting these operations.

**1**

Press the PWR (Power) button to turn on the unit.

The opening screen appears automatically.

**Note:** The unit can be turned on by pressing any button on the unit except the MUTE, OPEN/CLOSE and   (ANGLE) buttons.


**2**

Press the PWR (Power) button again to turn off the unit.

- Notes:**
- The IVA-C800E draws minimal current even when its power switch is turned off. If the switched power (ignition) lead of the IVA-C800E is connected directly to the positive (+) post of the vehicle's battery, the battery may be discharged. If this lead is unswitched, it must be disconnected from the battery post should the vehicle be left unused for an extended period of time. An SPST (Single-Pole, Single-Throw) switch (sold separately) can be added to simplify this procedure. Then, you can simply place it in the OFF position when you leave the vehicle. Turn the SPST switch back ON before using the IVA-C800E. For connecting the SPST switch, refer to the Installation manual.
  - Some operation of the unit cannot be performed while the vehicle is in motion. In this case, be sure to first stop your vehicle and apply the parking brake, then perform the operation.




# Basic Operation

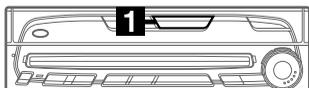


## Selecting the Monitor Opening Angle

The monitor opening angle can be set in 2 positions.

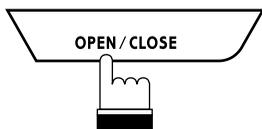
**1**

Press and hold the OPEN/CLOSE button for at least 2 seconds while the monitor is being raised. Each press changes the monitor angle back or forth.

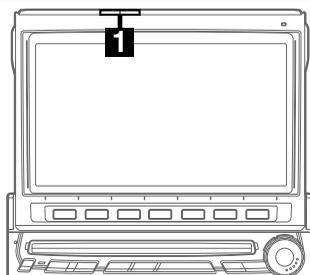

## Adjusting the Monitor Viewing Angle

Adjust the monitor's angle for better visibility.

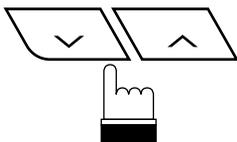
**1**

Press the  and  (ANGLE) buttons to adjust the monitor's angle so the screen will be in the best viewing position. Each press of the buttons produces a beep and changes the screen angle between 80 and 104 degrees.


- Notes:**
- If the monitor touches an obstacle while the angle is being adjusted the unit will stop the screen immediately. Should this happen, remove the obstacle and press the  or  button again.
  - The screen colour will vary when viewed at certain angles. Adjust the screen angle for the best viewing position.
  - If the voltage of the vehicle's battery power is low, the screen may blink when the screen angle is changed. This is normal and not a malfunction.



# Basic Operation

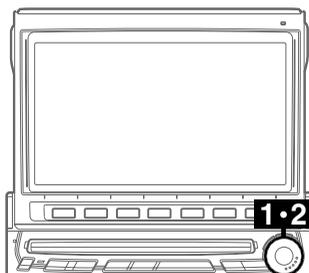

## Adjusting the Volume/ Bass/Treble/Balance/ Fader

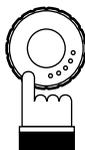**1**

Press the rotary encoder repeatedly until the mode you wish to adjust is obtained. Each press changes the modes as follows:


→ **BAS.** → **TRE.** → **BAL.** → **FAD.** → **VOL.**

The volume level can be adjusted at any time by just rotating the rotary encoder.


**2**

Rotate the rotary encoder to set to the desired sound within 5 seconds after selecting the mode.

**Note:** If the rotary encoder is not turned or pressed within 5 seconds after selecting the **BAS.** (Bass), **TRE.** (Treble), **BAL.** (Balance), or **FAD.** (Fader), the unit automatically defaults back to the **VOL.** (Volume) mode.

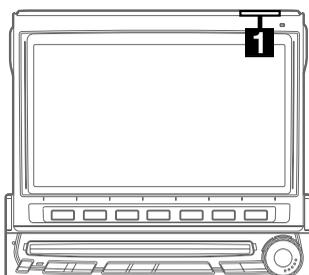

## Muting the Sound

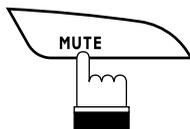
**1**

Press the MUTE button to switch between the Mute On and Off modes.

When the MUTE On mode is selected, the volume level instantly decreases.



# Basic Operation

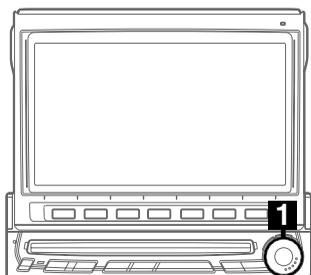

## Turning Loudness On or Off

Loudness introduces a special low and high frequency emphasis at the lower volume settings. This compensates for the ear's decreased sensitivity to bass and treble sound at these low listening levels.


**Note:** When an equalizer or digital sound processor is connected, this function is inoperative.

**1**


Press and hold the rotary encoder for at least 2 seconds to switch between the Loudness On and Off modes.




# Radio Operation

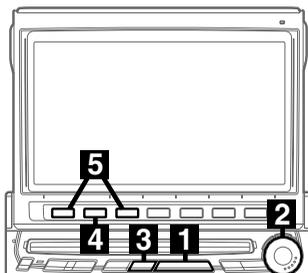


## Manual Tuning

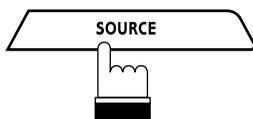**1**


Press the SOURCE button after turning on the power.  
The main menu screen appears.

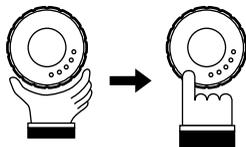**2**


Rotate the rotary encoder to scroll the bottom menu and select "RADIO," then press the rotary encoder.  
The radio mode is activated and the display changes to the Radio Mode screen.

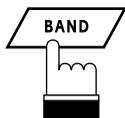**3**

Press the BAND button to select the desired radio band. Each press changes the bands as follows:

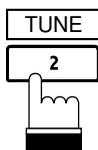**4**

Press the **2** (TUNE) button to choose the manual tuning mode. Each press changes the function modes for the buttons **1** and **3** as follows:

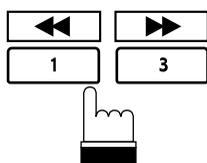
**5**

Press the **1** (◀◀) or **3** (▶▶) button to change the radio frequency downward or upward respectively. Each press changes the frequency by one step. When the button is pressed and held, the frequency changes continuously until the button is released.

**Note:** When a stereo FM station is tuned in, the STEREO indicator appears in the display.



# Radio Operation

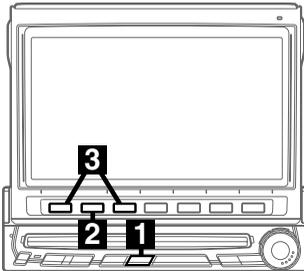


## Automatic Seek Tuning


There are two modes you can select for auto tuning, DX and Local:

- DX (Distance) mode (with DX SEEK indicator ON); Both strong and weak stations will be tuned in.
- Local mode (with DX SEEK indicator OFF); Only strong stations will be tuned in.

The initial setting is DX.

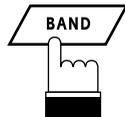
**1**

Press the BAND button repeatedly to select the desired radio band, FM or AM.

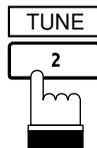**2**

Press the **2** (TUNE) button to select the desired mode, DX or Local. Each press changes as follows:

→ **Distance** → **Local** → **Manual**

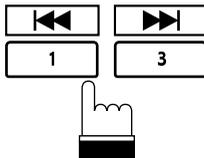**3**


Press the **1** (◀◀) or **3** (▶▶) button to automatically seek a radio station downward or upward respectively.

When the unit finds a station, it stops. To automatically seek next station, press the same button again.

**Note:** When a stereo station is tuned in, the STEREO indicator appears in the display.




# Radio Operation

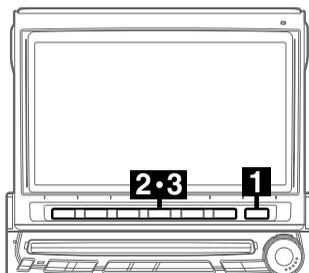


## Manual Storing of Station Presets

A total of 24 stations can be stored in the preset memory (6 stations for each band; FM1, FM2, AM or D.A.P.).

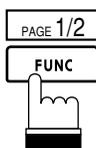
**1**

Tune in a desired radio station you wish to store in the preset memory by manual or automatic seek tuning.

Press the FUNC (PAGE 1/2) button.

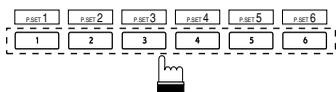**2**

Press and hold any one of the Function buttons **1** (P.SET1) through **6** (P.SET6) for at least 2 seconds. The Function Guide indicators in the display, P.SET1 through P.SET6, will blink for 5 seconds.

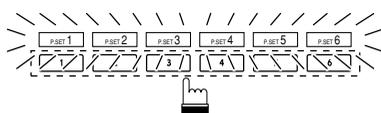**3**

While the P.SET1 through P.SET6 indicators in the display are blinking, press the Function button into which you wish to store the station (within 5 seconds). The indicators in the display stop blinking, showing that the station has been memorized at the Preset button pressed.

**4**


Repeat the above procedure (1 to 3) to store up to 5 other stations onto the same band.

To use this procedure for other bands, simply select the band desired and repeat the procedure.

**Note:** If a preset memory has already been set in the same Function button, it will be cleared and the new station will be memorized.




# Radio Operation

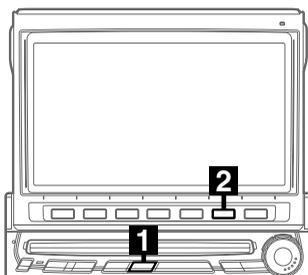


## Automatic Memory (A.MEMO) of Station Presets

The tuner can automatically seek and store 6 strong stations in the selected band in order of signal strength.

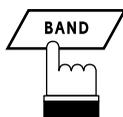**1**

Press the BAND button in the radio mode to select the desired radio band.

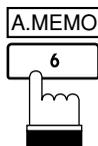
**2**

Press the **6** (A.MEMO) button. The tuner automatically seeks and stores 6 strong stations into the **1** (P.SET1) to **6** (P.SET6) buttons in order of signal strength. When the automatic storing has been completed, the tuner goes to the station stored in the **1** (P.SET1) button.

- Notes:**
- If no stations are stored, the tuner will return to the original station you were listening to before the automatic storing procedure began.
  - The radio station names (titles) may be erased when Automatic Memory of Station Presets function is performed.




# Radio Operation

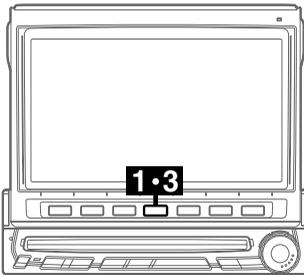

## Storing into Direct Access Preset (D.A.P.) Band

Any combination of AM and FM radio stations (up to 6 stations) can be manually preset onto the D.A.P. band.

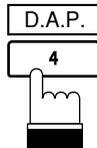
**1**

Press the **4** (D.A.P.) button in the radio mode to activate the D.A.P. mode.

**2**

To memorize stations onto the D.A.P. band, follow the steps for the Manual Storing of Station Presets procedure on page 38.


**Note:** This function can be used together with the Automatic Memory Preset if you want to have all AM or all FM stations stored into D.A.P.

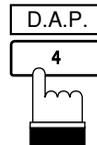**3**

Press the **4** (D.A.P.) button for a second time to deactivate the D.A.P. mode.




# Radio Operation

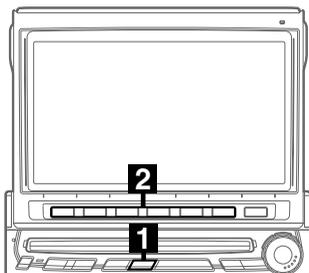


## Tuning to Preset Stations

You can tune in the preset stations in memory on each band using the Function buttons.

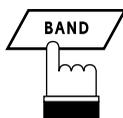**1**

Press the BAND button in the radio mode to choose the desired radio band. Each press changes the radio bands.


**Note:** To select the D.A.P. band, press the **4** (D.A.P.) button.

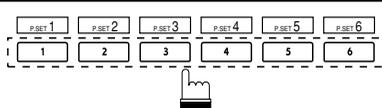**2**

Press the Function button **1** (P.SET1) through **6** (P.SET6) that has your desired preset station in memory. The preset station is received.



# Radio Operation

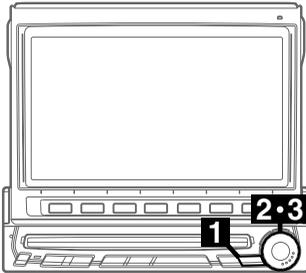

## Selecting Preset Stations from List Displayed

The desired preset station can be selected from the preset station list displayed. If stations have been titled (named), their titles will also be displayed. (For titling stations, see pages 156 and 158).

**1**

Press the LIST button. The list showing the preset stations (with the station titles if they have been titled).

**2**

Rotate the rotary encoder to select a desired preset station from the list.


**3**

When a desired station is selected, press the rotary encoder. The unit receives the selected preset station.

- Notes:**
- Press the LIST or FUNC (RETURN) button while in the preset list menu (station title list) to return to the radio mode display.
  - With the preset list menu displayed, press the **1** (RADIO) button to switch to the preset station list menu. Press the BAND button to change the radio bands.




# Radio Operation

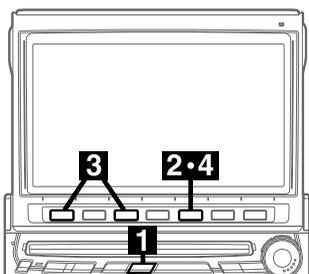


## T.R.V.S. Search for Local Stations

Using the T.R.V.S. feature of this unit, you can automatically seek and memorize up to 12 local stations (max.) in a memory separate from your regular preset memory. This keeps the currently preset stations you normally listen to, intact.

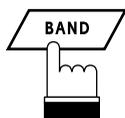
**1**

Press the BAND button and select the desired radio band.

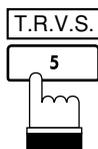
**2**

Press the **5** (T.R.V.S.) button to activate the T.R.V.S. mode. The unit will automatically search and store up to 12 receivable, local stations.

**Note:** If no stations are memorized, the display shows "NO MEMORY."

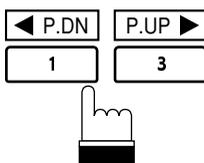**3**


Press the **1** (◀ P.DN) or **3** (P.UP ▶) button and select your desired station.

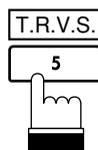**4**

To deactivate the T.R.V.S. mode, press the **5** (T.R.V.S.) button.



## CD Player/Changer <sup>English</sup> (Optional) Operation

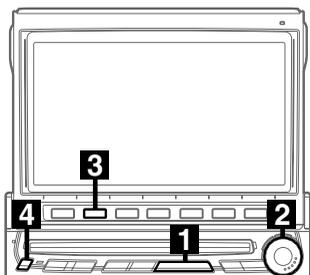


### Playing CD Player or Changer (Optional)

IVA-C800E has a built-in CD player. When an optional Alpine CD player or CD changer is connected, you can control it from the IVA-C800E. This section describes operation assuming that an Alpine CD player is connected.


(When a CD changer is connected, see page 66 to select your desired disc.)

**1**

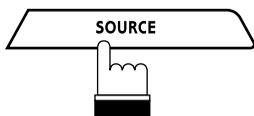

Press the SOURCE button to display the main menu screen.

**2**

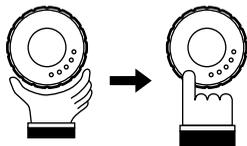


Rotate the rotary encoder and select the CD player mode. Then, press the rotary encoder to execute the selection. The display shows the CD player mode screen.

When a CD is inserted into the CD SLOT of the IVA-C800E, with the label side facing up, the unit starts to play the CD.

When an optional Alpine CD player is connected, inserting an CD into the optional CD player starts playback automatically.

**3**

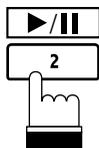

To temporarily pause playing, press the **2** (▶/||) button.

To resume play, press the **2** (▶/||) button for a second time.



## CD Player/Changer <sup>English</sup> (Optional) Operation

4



Press the eject (▲) button when you want to eject the CD. (If you use an optional CD player, press the eject button on the optional CD player.)


- Notes:**
- Three-inch (8cm) CD's can be used.
  - Only compact discs containing the mark shown can be used.



- We cannot fully guarantee the playback of CD-R (CD-Recordable). You cannot playback CD-RW (CD-ReWritable) on this unit.
- Be sure to turn the ignition key to the ACC or ON position before inserting an CD. Otherwise it may cause damage to the player.




## CD Player/Changer <sup>English</sup> (Optional) Operation

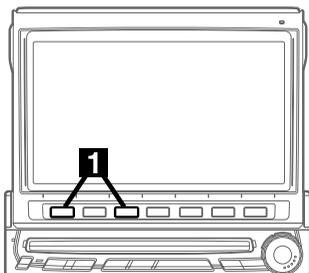


### Fast Forward and Backward

1

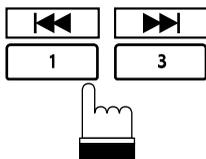


Press and hold the **3** (▶▶) or **1** (◀◀) button to quickly move forward or backward respectively to reach the desired music section on the disc. Release the button when the desired section is reached.

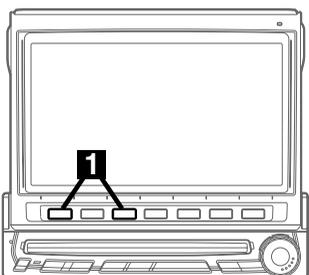

### Music Sensor Skip


This feature allows you to go to the beginning of a track.

1

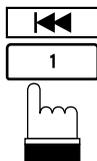

Lightly press the **1** (◀◀) button during the CD play to return to the beginning of the current track.


If you wish to return to the beginning of a track further back, repeatedly press the **1** (◀◀) button until the desired track is reached.

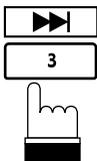

Lightly press the **3** (▶▶) button during the CD play to advance to the beginning of the next track. If you wish to advance to the beginning of a track further ahead, repeatedly press until the desired track is reached.




## CD Player/Changer <sup>English</sup> (Optional) Operation

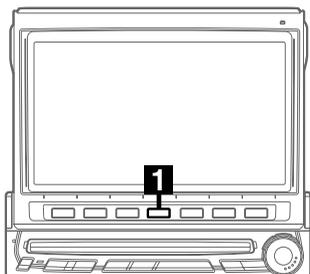

### Repeat Play on Single Track

1

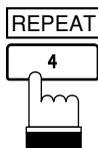


Press the **4** (REPEAT) button while the track that you want to play repeatedly is playing. The track will be repeatedly played until the repeat mode is cancelled.

To cancel the repeat play, press the **4** (REPEAT) button until the REPEAT indication disappears.

**Note:** Some Alpine CD changers have a REPEAT ALL function. With REPEAT ALL selected, all tracks on the selected disc will be played repeatedly.




## CD Player/Changer <sup>English</sup> (Optional) Operation

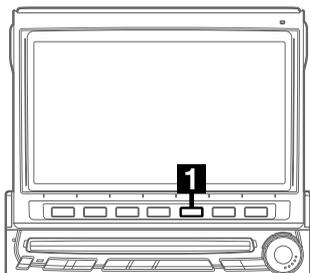

### M.I.X. (Random) Play

In the M.I.X. mode, the tracks on the disc will be played back in a random sequence.

**1**

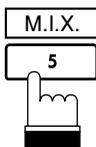


Press the **5** (M.I.X.) button in the CD mode. All the tracks on the disc will be played back in a random sequence.

The M.I.X. play continues until the M.I.X. mode is cancelled. To cancel the M.I.X. play, press the **5** (M.I.X.) button repeatedly until the M.I.X. indicator disappears.

- Notes:**
- If the CD changer connected has the M.I.X. ALL function, you may select M.I.X. ALL from the menu. In this case, all the tracks on all the discs in the magazine will play back in a random sequence. Once all the tracks on all the discs have been played back once the CD changer begins a new random sequence.
  - During M.I.X. play, Repeat Play for a single track will be disabled.




## CD Player/Changer <sup>English</sup> (Optional) Operation

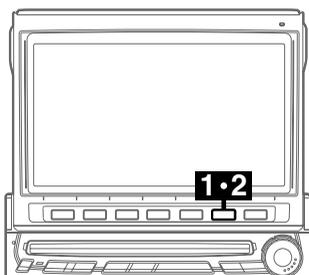

### Displaying and Scrolling CD Title/Text

If titles have been memorized for CDs, the CD titles can be shown on the display (for titling CDs, see "Titling Radio Stations/CDs" on page 156). If a CD changer having the CD text feature is connected, the text for the CD titles/tracks can be displayed and scrolled while you are playing a music CD with title/text.

**1**

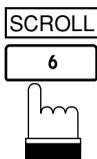

Press the **6** (SCROLL) button during CD play. Each press changes between the CD title scrolling mode and track title scrolling mode.

Description of "Title" and "Text":


- Title; this unit allows you to title (name) CDs (see page 156).
- Text; Some CDs have pre-recorded text information for the CD/track names etc.

**Notes:**

- If either of the disc and track titles is unavailable, the space for that title in the display will be left blank.
- If neither of the disc and track titles is available, the display will show "NO TITLE."

For the MD player, the same display as above will be shown.

**2**

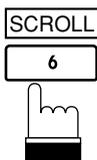

If the text/title is longer than 12 characters, press the **6** (SCROLL) button for at least 2 seconds to scroll the text/title.


To stop the scrolling, press and hold the **6** (SCROLL) button for at least 2 seconds.

**Notes:**

- Depending on the character styles, characters may not be displayed correctly.
- The unit might automatically scroll the text.



## CD Player/Changer <sup>English</sup> (Optional) Operation

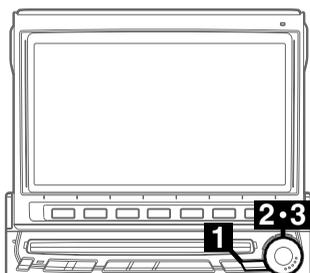

### Displaying List of Track Titles/CD Titles

If titles have been memorized for CDs, the CD title list can be displayed and CDs can be selected by their titles. (For memorizing titles, see pages 156 and 158.)

**1**



Press the LIST button in the CD/CD changer mode.

CD (built-in player) mode:

When CD text discs are inserted, the list of Track titles will be displayed. But if a CD without text is inserted the list of the disc titles will be displayed.

CD changer/CD (when connected to the CD player) mode:

The list of CD titles will be displayed.

**2**



Rotate the rotary encoder and select (highlight) your desired Track title or CD title to play.

(To be continued)



## CD Player/Changer <sup>English</sup> (Optional) Operation

3




Press the rotary encoder to execute the selection.

The selected title plays, the title list screen closes, and the CD mode main screen or CD changer mode main screen appears.

- Notes:**
- If the disc is not titled, the display shows "NO TITLE." If no disc is loaded, the display shows "NO DISC."
  - Pressing the LIST or FUNC (RETURN) button while the list of the disc titles is being displayed, changes the display back to the CD/CD changer mode screen.
  - To directly go to the preset radio station list screen, press the **1** (RADIO) button. Then, press the BAND button to change the radio band.  
Press the **2** button display the title list or the track title list only when CD with text is loaded in the built-in CD player.




# CD Player/Changer <sup>English</sup> (Optional) Operation

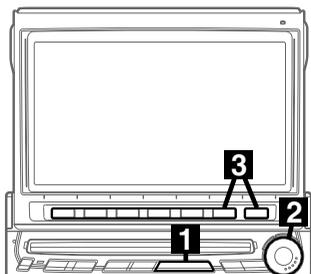


## Controlling CD Changer

If an optional Alpine CD Changer (6-Disc or 12-Disc) is connected to the IVA-C800E, the CD Changer can be controlled from the IVA-C800E.


You can directly select the CD Changer mode by pressing the CHG button on the IVA-C800E.

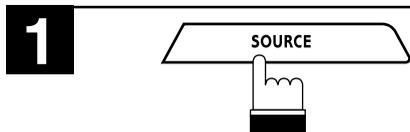

Press the SOURCE button to display the main menu.

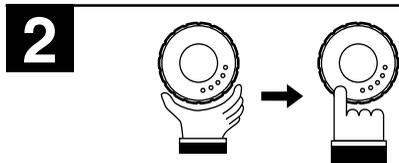

Rotate the rotary encoder to select "CD CHG," then press the rotary encoder. The display changes to the CD Changer mode screen.

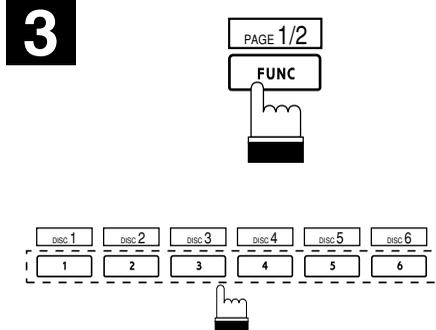

### When a 6-Disc CD Changer is connected



Press the FUNC (PAGE 1/2) button. The Function Guide display changes. Press the Function buttons to select your desired disc loaded. The Function buttons [1] (DISC1) through [6] (DISC6) select the discs from the first disc to 6th disc. For example, press the [3] (DISC 3) button to select the third disc.

**Note:** To select your desired track number on the selected disc, lightly press the [1] (◀◀) or [3] (▶▶) repeatedly until your desired track number is displayed.

(To be continued)



## CD Player/Changer <sup>English</sup> (Optional) Operation

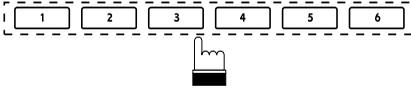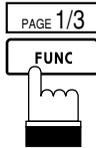


When a 12-Disc CD Changer is connected

You can select the disc numbers 1 to 6 in the same manner as for 6-disc Changer. Press the FUNC (PAGE 1/3) button twice to select the disc numbers 7 to 12. The Function Guide display changes and now the Function buttons [1]-[6] represent disc numbers 7-12. Press the Function buttons ([1] through [6]) to select your desired disc. For example, to select 9th disc, press [3] (DISC 9) button.

**Note:** To select your desired track number on the selected disc, lightly press the [1] (◀◀) or [3] (▶▶) repeatedly until your desired track number is displayed.




## CD Player/Changer <sup>English</sup> (Optional) Operation

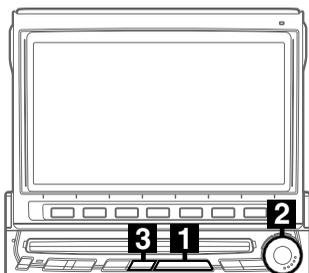

### Multi-Changer Selection


Alpine's Ai-NET system will support up to 6 CD Changers. When operating two or more changers, the KCA-400C (Multi-Changer Switching device) must be used. If you use 1 Switching device, you can connect up to 4 CD Changers. If you use 2 Switching devices, you can connect up to 6 CD Changers.

1

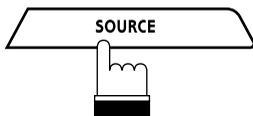

Press the SOURCE button to display the main menu.


2

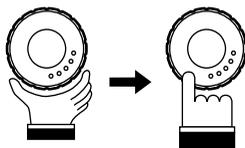

Rotate the rotary encoder to select changer 1-4 (when one KCA-400C is connected) or changer 1-6 (when two KCA-400Cs are connected). Then press the rotary encoder. The display shows the selected CD changer mode screen.

**Note:** When one KCA-400C is connected to the changer, "Changer 1-4" is displayed in the main menu. When two KCA-400Cs are connected to the changer, "Changer 1-6" is displayed in the main menu.

3

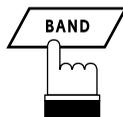

In Changer mode, you can select the next changer (connected changers only) by pressing the BAND button on the unit or on the remote.

**Note:** You cannot operate this function in the title display or Title inputting display.


4

To operate the selected changer, see "CD Player/Changer Operation" section.



## MD Player Operation (Optional)


English

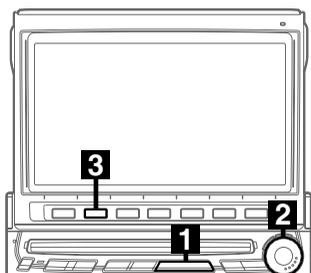

### Playing Mini-Disc (MD)


When an optional Alpine MD player is connected to the IVA-C800E, you can control the player from the IVA-C800E.  
(When the MDA-5051 is connected, MDs can be played back only.)

1

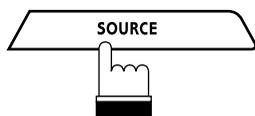

Press the SOURCE button.  
The main menu appears on the display.


2

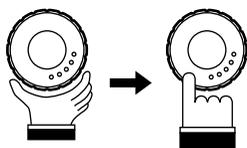

Rotate the rotary encoder and select "MD" from the main menu, then press the rotary encoder to execute the selection.  
The MD player mode screen appears on the display.  
Insert an MD into the MD player, the player starts to play the MD.

**Note:** Before inserting an MD, use your finger to feel around the MD cartridge. If you feel any small bumps or irregularities, remove them because these may cause a malfunction or damage to the player.

3

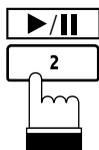

Press the [2] (▶/||) button to temporarily pause play. To resume play, press the [2] (▶/||) button for a second time.


4

Press the eject (▲) button on the MD player when you want to eject the MD.




# MD Player Operation (Optional)

English

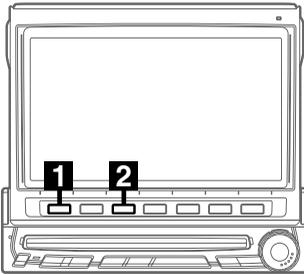


## Music Sensor (Skip)

1

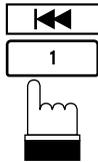


Momentarily press the **1** (⏮) button once to return to the beginning of the current track. If you wish to access a track further back, repeatedly press until you reach the desired track.

2

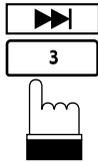


Press the **3** (⏭) button once to advance to the beginning of the next track. If you wish to access a track further ahead, press repeatedly until the desired track is reached.

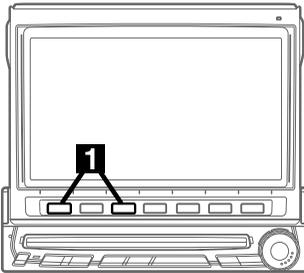

## Fast Forward and Backward

1

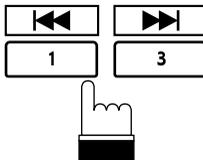


Press and hold the **1** (⏮) or **3** (⏭) button to quickly move backward or forward until you reach the desired section of the track. When you reach the desired section, release the button. The player starts playing from that section.



## MD Player Operation (Optional)

English

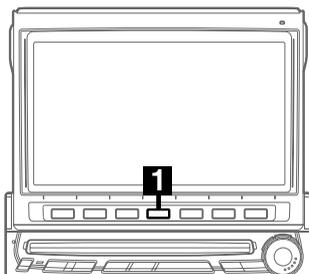


### Repeat Play

1




Press the **[4]** (REPEAT) button to play back repeatedly the track being played. The REPEAT indicator appears and the track plays repeatedly.  
Press the **[4]** (REPEAT) button repeatedly until the REPEAT indicator disappears to deactivate the repeat play.

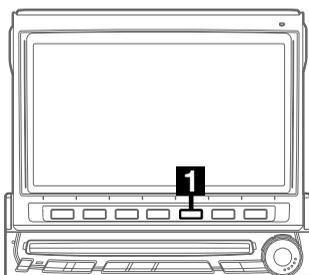

### M.I.X. (Random Play)

1

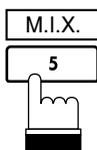


Press the **[5]** (M.I.X.) button in the play or pause mode. The M.I.X. indicator will illuminate and the tracks on the disc will be played back in a random sequence. After all the tracks on the disc have been played back once, the player will begin a new random sequence play until the M.I.X. mode is deactivated.  
To stop the M.I.X. play, press the **[5]** (M.I.X.) button repeatedly until the M.I.X. indicator disappears.



# MD Player Operation (Optional)


English

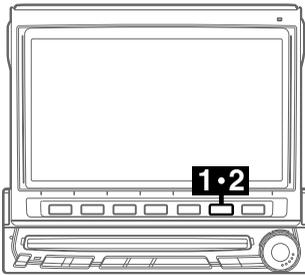

## Scrolling Displayed Titles

The MD player can scroll titles (disc or track names) having up to a maximum of 32 characters.


**1**

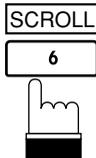

Press the **6** (SCROLL) button repeatedly while an MD is being played.

Each press toggles between the MD title scrolling and track title scrolling.

**2**

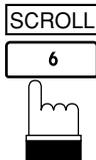

Press and hold the **6** (SCROLL) button for at least 2 seconds to start the auto scrolling.

The title will be scrolled repeatedly.


To deactivate the auto scrolling, press and hold the **6** (SCROLL) button for at least 2 seconds.

- Notes:**
- Depending on the MD deck used for recordings/inputting titles, the characters may not be displayed correctly.
  - If the MD title or track titles are not memorized, the unit displays "NO TITLE."



## MD Player Operation (Optional)

English

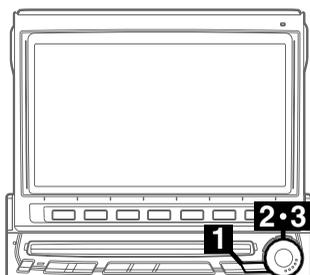

### Displaying List for MD Titles

1



Press the LIST button in the MD player mode. The list of the MD titles appears in the display.

2



Rotate the rotary encoder to select the desired title by moving the cursor to that title.


3



Press the rotary encoder to execute the selection. The selected MD title will be played back and the MD player mode screen will appear.


- Notes:**
- If the MD is not titled, the display shows "NO TITLE." If no MD is loaded, the display shows "NO DISC."
  - Pressing the LIST or FUNC (RETURN) button while the list of the titles is being displayed changes the display back to the MD player mode screen.
  - To directly return to the preset radio station list screen while the list of the titles is being displayed, press the **1** (RADIO) button. Then, press the BAND button to change the radio band.

When the **2** is pressed, the display shows the title list or the track title list only when a CD with text is loaded in the built-in CD player.

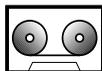

## Cassette Player Operation (Optional)


English

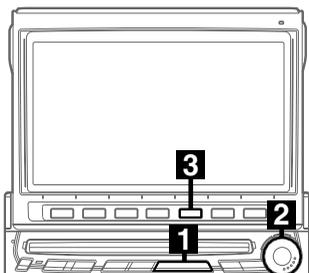

### Controlling Cassette Player


If an optional Alpine cassette player is connected to the IVA-C800E, it can be controlled from the IVA-C800E.

**1**

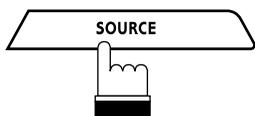


Press the SOURCE button to display the main menu screen.

**2**

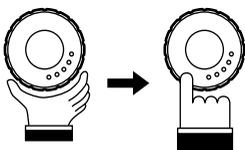

Rotate the rotary encoder and select "TAPE" from the menu. Then, press the rotary encoder to execute the selection. The display shows the cassette player mode screen.

**3**

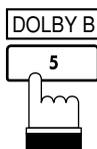


When you play a cassette tape recorded using Dolby B Noise Reduction, press the **[5]** (DOLBY B) button to activate or deactivate Dolby B Noise Reduction.

**4**

To stop tape play and eject the cassette tape, press the EJECT button on the cassette player.




# Cassette Player English Operation (Optional)

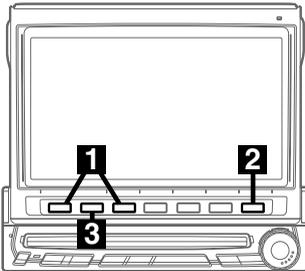


## Fast Forward/Rewind/ Reversing Tape Direction/Pause

**1**

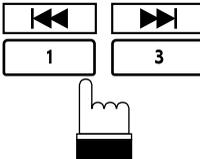


Press and hold the **3** (▶▶) or **1** (◀◀) button for at least 2 seconds to fast forward or fast rewind the tape respectively. When the tape reaches the desired portion, press and hold the **3** (▶▶) or **1** (◀◀) button again for at least 2 seconds, or press the **2** (▶/||) button to resume tape play.

**2**

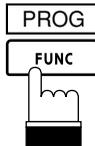


Press the FUNC (PROG) button to change the tape direction to play the other side of the tape.

**3**

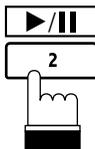


Press the **2** (▶/||) button to temporarily pause the tape play. Press again to resume tape play.

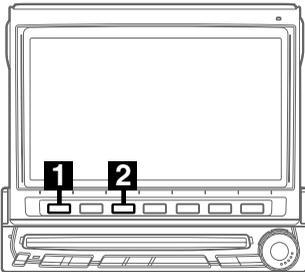


## Programme Sensor

**1**

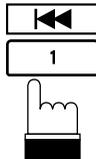


Lightly press the **1** (◀◀) button once during tape play to return to the beginning of the programme being currently played. If you wish to return to a programme further back, press repeatedly until the number of programmes you would like to skip is obtained.

**2**

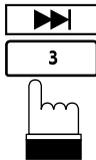


Lightly press the **3** (▶▶) button once during tape play to advance to the beginning of the next programme. If you wish to advance to a program further ahead, press repeatedly until the number of programmes you would like to skip is obtained.

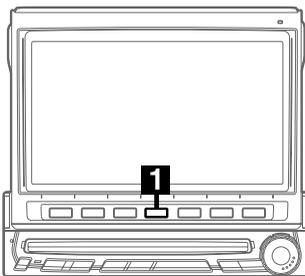

## Repeat Play


**1**

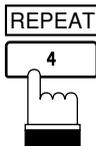

Press the **4** (REPEAT) button to play back repeatedly the programme being currently played.  
To stop the repeat play, press the **4** (REPEAT) button until the REPEAT indicator disappears.




# Cassette Player English Operation (Optional)

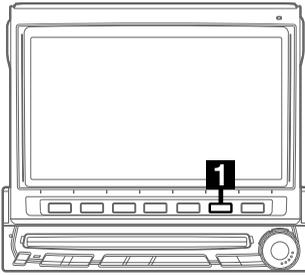


## Blank Skip

**1**

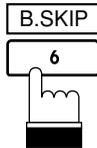

Press the **6** (B.SKIP) button during tape play to skip over blank portions of the tape lasting 15 seconds or longer.

To deactivate the blank skip mode, press the **6** (B.SKIP) button for a second time.

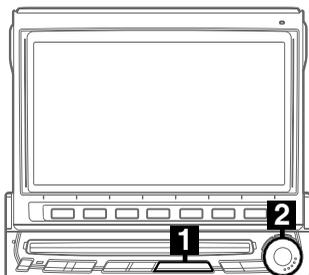

## Playing DVD/Video CD/ CD

If an optional Alpine DVD/video CD/CD player is connected to the IVA-C800E, you can control it from the IVA-C800E.


### **WARNING**

It is dangerous (and illegal in many states) for the driver to watch the TV/Video while driving the vehicle. The driver may be distracted from looking ahead and an accident could occur.

Install the IVA-C800E correctly so that the driver cannot watch TV/Video unless the vehicle is stopped and the emergency brake is applied.


If the IVA-C800E is not installed correctly, the driver will be able to watch the TV/Video while driving the vehicle and may be distracted from looking ahead causing an accident. The driver or other people could be severely injured.

1

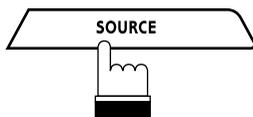

Press the SOURCE button to display the main menu screen.

2

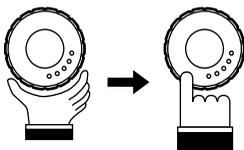

Rotate the rotary encoder and select "DVD" from the menu. Then, press the rotary encoder to execute the selection. The display shows the DVD player mode screen.

Insert a disc into the DVD/video CD/CD player, the player starts playing.

**Note:**

Press the FUNC (F.GUIDE) button during DVD/video CD/CD play to turn on or off the Function Guide display.


In the ON position:

The Function Guide display will always be shown.


In the OFF position:

The Function Guide display will disappear after approx. 5 seconds if no button is pressed.


If you want to display the Function Guide screen again, press any one of the Function buttons [1] through [FUNC].

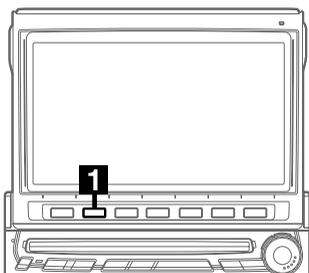


## Still/Pause

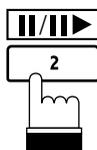**1**


Press the **2** (||▶) button during DVD/video CD/CD play to freeze frame or pause. To resume normal play, press the **2** (||▶) button for a second time.

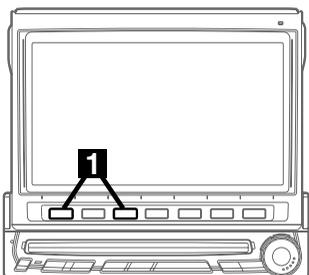


## Chapter (DVD)/Track (Video CD) Sensor

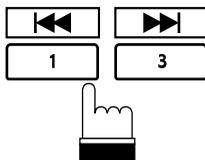**1**


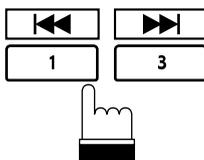
Lightly press the **1** (◀◀) or **3** (▶▶) button during DVD/video CD/CD play to return to the beginning of the chapter/track being currently played or advance to the beginning of the next chapter/track respectively.

**Note:** The word "chapter or track" means a division of the recorded picture/sound on a DVD/video CD/CD respectively.

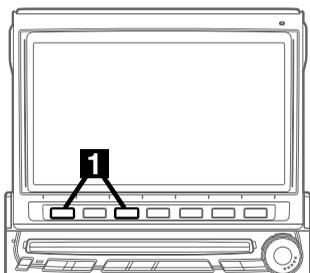


## Fast Forward/Backward

# 1



Press and hold the [1] (⏮) or [3] (⏭) button during play to fast backward or forward respectively. Release the button when you reach the desired portion you wish to play. Playback starts from that portion.

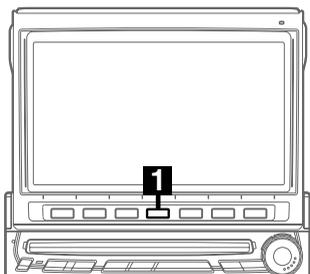

## Repeat Play

# 1



Press the [4] (REPEAT) button during play to repeatedly play the chapter/track or title/disc being currently played.

Each press changes the repeat play as follows:

DVD:


**Chapter (repeat play)** ↔ **Repeat Off (normal play)**

Video CD/CD:

**Track (repeat play)** ↔ **Disc (repeat play)**


### Note:

The track/disc repeat modes cannot be used on video CDs with playback control (PBC). Press "MENU" to turn the PBC function off. For more details, see the operating instructions of your DVD player.

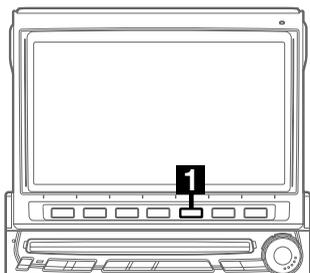

## Playing tracks in random order (M.I.X.)(Video CD/CD)

You can play all the tracks in random order. You can use the M.I.X. function only on the connected DVD player equipped with the M.I.X. function.

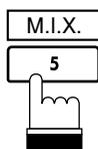**1**


1. Press the **[5]** (M.I.X.) button while playing the Video CD or CD. All the tracks play in random order.  
To cancel M.I.X. play and return to the original play order, Press the **[5]** (M.I.X.) button again.

**Notes:**

- You cannot use the repeat play mode during M.I.X. play.
- The M.I.X. play mode cannot be used on video CDs with the playback control (PBC). Press "MENU" to turn the PBC function off. For more details, see the operating instructions of your DVD player.

# Auxiliary Device Operation (Optional)

English

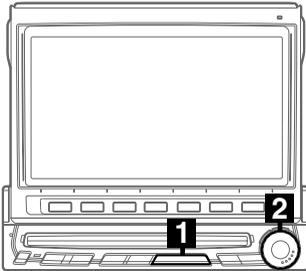

## Operating Auxiliary Devices

To operate your devices connected to the AUX terminals on the rear panel of IVA-C800E, follow the procedure described below.


### WARNING

It is dangerous (and illegal in many states) for the driver to watch the TV/Video while driving the vehicle. The driver may be distracted from looking ahead and an accident could occur.

Install the IVA-C800E correctly so that the driver cannot watch TV/Video unless the vehicle is stopped and the emergency brake is applied.

If the IVA-C800E is not installed correctly, the driver will be able to watch the TV/Video while driving the vehicle and may be distracted from looking ahead causing an accident. The driver or other people could be severely injured.


1

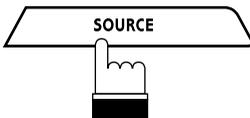

Press the SOURCE button.

The main menu screen appears on the display.

2

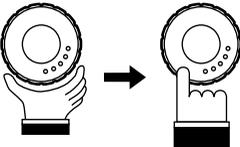


Rotate the rotary encoder and select "AUX", then press the rotary encoder to execute the selection.

**Note:** If the AUX mode is not displayed on the main menu, select "AUX IN" in the Initialization mode screen. Either AUX1 or AUX2 should be turned ON.



## Audio Processor Operation (Optional)

English

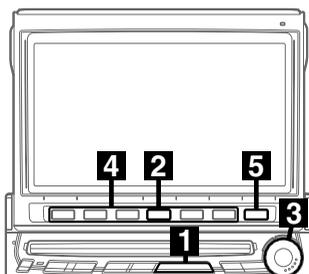


### Selecting Factory (Maker's) Equalization Presets

If an optional Alpine Equalizer is connected to the IVA-C800E, the Equalizer can be controlled from the IVA-C800E.


Six equalization curves are preset on the Equalizer at the factory.

**1**

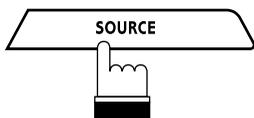


Press the SOURCE button.  
The main menu screen appears on the display.

**2**

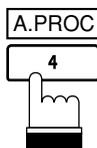

Press the **4** (A.PROC) button to display the list of the Audio Processors (A.PROC).


**3**

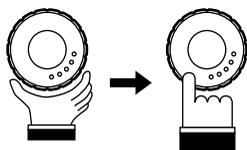

Rotate the rotary encoder and select "Equalizer." Then press the rotary encoder to execute the selection.

The display changes to the Equalizer mode screen.

**4**

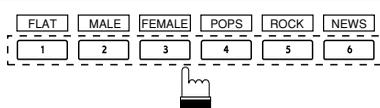

Select a desired Equalizer characteristic curve and press the corresponding Function button (**1** (FLAT) through **6** (NEWS)).


You can select your desired equalizer characteristic curve from 6 preset characteristic curves; FLAT, MALE, FEMALE, POPS, ROCK and NEWS.

(To be continued)



## Audio Processor English Operation (Optional)

5

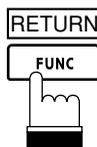

When you have selected your desired characteristic curve, press the FUNC (RETURN). The display returns to the Audio Processor List screen.

**Note:** When the FUNC (RETURN) button is pressed, the display returns to the previous screen.

**Tip:** In the equalizer mode, for example, you can horizontally scroll each of the mode screens by rotating the rotary encoder to the left or right. You can also adjust the volume level by pressing and rotating the rotary encoder (DHE, Surround, BBE, listening position, time collection mode main screen only).




## Audio Processor English Operation (Optional)


### Creating Personal Equalizer Characteristic Curves

You can create your own equalizer characteristic curves. The following is the procedure.

**Note:** The Parking Brake must be engaged to access the Equalizer Adjustment mode screen. Attempting to access this screen while driving will display the warning-CAN'T OPERATE WHILE DRIVING.

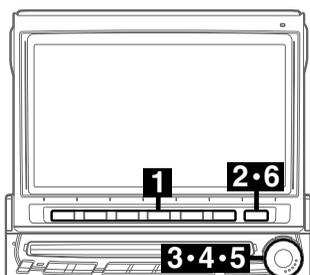


**1**

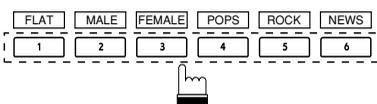

Display the equalizer mode screen by pressing one of the Function buttons **1** (FLAT) through **6** (NEWS) to select the desired characteristic curve you wish to change.

**2**

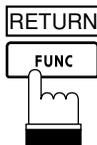

Press and hold the FUNC (RETURN) button for at least 2 seconds. The display changes to show the equalizer adjustment screen.

**3**




Rotate the rotary encoder clockwise or counterclockwise to select the frequency that you wish to adjust. The colour of the frequency changes when it is selected.

**4**



Press the rotary encoder to execute the selection.


**5**

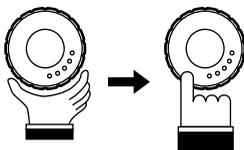

Make level adjustments by rotating the rotary encoder. Press and release the rotary encoder at the desired level.

Repeat the above steps to adjust other frequencies.


**6**

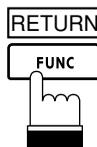

When the adjustments have been completed, press the FUNC (RETURN) button. The display changes to the Equalizer mode screen.




## Audio Processor English Operation (Optional)

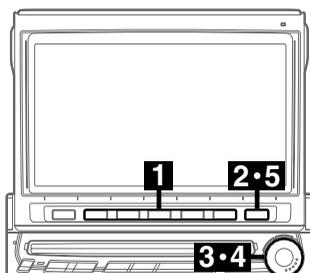


### Adjusting Surround Levels and Surround Delay Time

If your equalizer connected is equipped with the surround level/time adjustment feature, you can adjust the surround sound levels and surround delay time to suit to your preference.

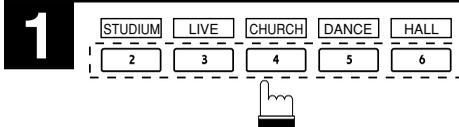


Display the surround mode screen and press one of the Function buttons [2] (STADIUM) through [6] (HALL) (except "NORMAL") that has the surround mode you wish to adjust.

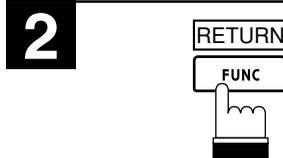


Press and hold the FUNC (RETURN) button for at least 2 seconds.

The display changes to the surround adjustment screen.

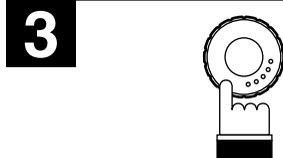


Press the rotary encoder to select the surround delay time or surround level that you wish to adjust.

Each press toggles between the surround delay time and surround level modes.

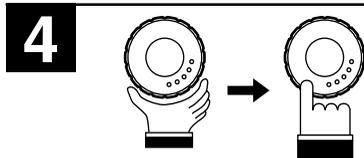

Turn the rotary encoder clockwise or counter-clockwise to adjust the surround sound level or delay time to your preference.

After adjustment press the rotary encoder.

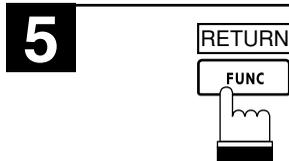


When your adjustments are complete, press the FUNC (RETURN) button.

The display returns to the Surround mode screen.




# Audio Processor Operation (Optional)

English

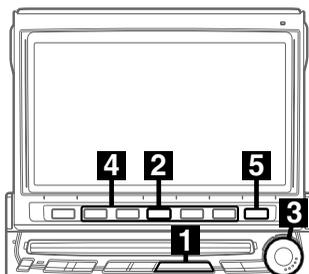


## Selecting DHE (Digital Harmonic Enhancer) Mode


The DHE mode enhances the sound of musical instruments or vocals, while masking road noises of a moving vehicle. The result is music with more clarity.

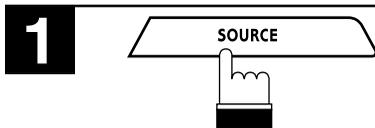


Press the SOURCE button.  
The main menu screen appears on the display.

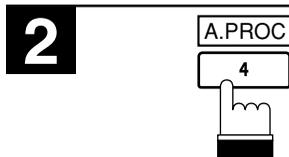

Press the [4] (A.PROC) button to display the Audio Processor List screen.

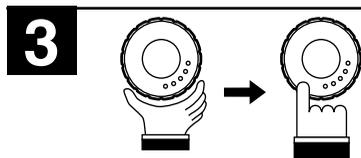

Rotate the rotary encoder and select "DHE," then press the rotary encoder to execute the selection.  
The DHE mode screen appears.

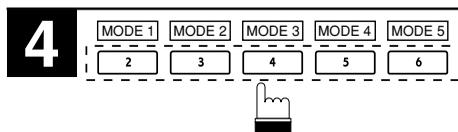

Press one of the Function buttons [2] (MODE1) through [6] (MODE5) that has your desired DHE mode. There are 5 modes as follows.  
When the [1] (OFF) button is pressed, the DHE mode will be deactivated.

**Beat MAX  
(MODE1)**

Enhances the rhythmic bass sound to make very harmonic bass sound.

**Lyric MAX  
(MODE2)**

Enhances voice of female singers to make it brighter.

**Beat MIX  
(MODE3)**

Balances the bass sound to make it brighter.

**Lyric MIX  
(MODE4)**

Reproduces voice of female singers clearer.

**Phase MIX  
(MODE5)**


Reproduces any kind of music sources more balanced and crisp.

(To be continued)



## Audio Processor English Operation (Optional)

5

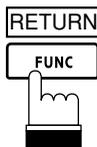


When you have selected your desired DHE mode, press the FUNC (RETURN) button. The display returns to the Audio Processor List screen.

**Tip:** When the FUNC (RETURN) button is pressed, the display returns to the previous screen.




## Audio Processor English Operation (Optional)

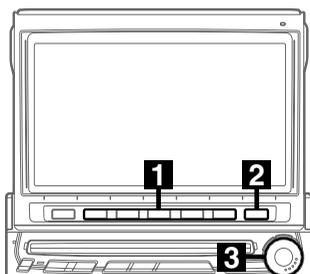

### Setting DHE Power or Fine Mode


The DHE Power and Fine modes enhance the DHE effects. Power makes coarse adjustments to the overall balance whereas Fine will make more subtle changes. Listen how each mode affects the music and select the one most pleasing to your taste.

# 1

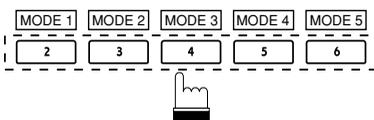


Activate the DHE mode, then press one of the Function buttons **2** (MODE1) through **6** (MODE5) that has the desired DHE mode to be adjusted.

# 2

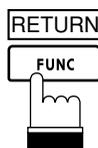

Press and hold the FUNC (RETURN) button for at least 2 seconds.  
The DHE adjustment mode is activated.

# 3

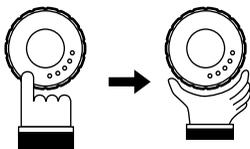

Press the rotary encoder to select the desired mode either DHE Power or DHE Fine mode, then rotate the rotary encoder to select the ON or OFF mode. Each press toggles between the Power/Fine on and off modes.  
When it is set to the ON mode, the DHE effects will be enhanced.

#### Effect of the Power On mode:

- More powerful bass sound and crisp, clear sound will be produced.


#### Effect of the Fine On mode:

- Vocal/chorus music will be refined and becomes clearer.



## Audio Processor Operation (Optional)


English

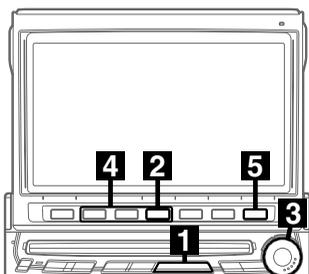

### Selecting BBE Mode


The BBE (Barcus Berry Electronics) Surround Processor is designed to return the natural balance of harmonic time alignment, which disappears when the sound signal is amplified and reproduced by loudspeakers. The result of this processing is crisp, clean sound with tighter transients and sharper imaging. If you make the BBE adjustments after adjusting the surround settings, the audible processing result will be enhanced remarkably.

1

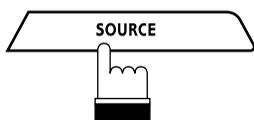


Press the SOURCE button.  
The main menu screen appears in the display.

2

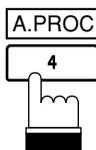


Press the [4] (A.PROC) button. The Audio Processor List screen is displayed.

3

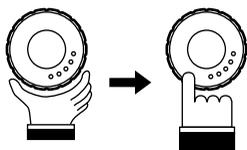

Rotate the rotary encoder and select "BBE" from the list displayed. Press the rotary encoder to execute the selection.  
The display changes to the BBE mode screen.


4

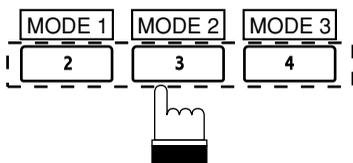

Select a desired BBE mode and press the corresponding Function button, [2] (MODE1) through [4] (MODE3). The effect is proportionally reduced for the BBE-2 and BBE-3 has the least effect.

To deactivate the BBE mode, press the [1] (OFF) button.

5

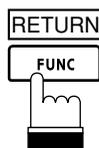


When the setting has been completed, press the FUNC (RETURN) button.

**Tip:** When the FUNC (RETURN) button is pressed, the display returns to the previous screen.




# Audio Processor English Operation (Optional)

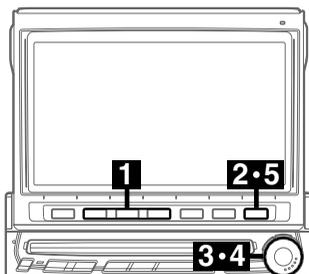


## Customizing BBE Mode

This function is operative only when an audio processor equipped with the BBE level (Low and High) adjustment feature is connected.

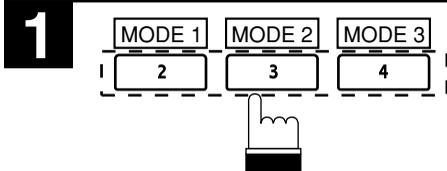


Activate the BBE mode, then press one of the Function buttons **2** (MODE1) through **4** (MODE3) that has the BBE mode you wish to adjust.

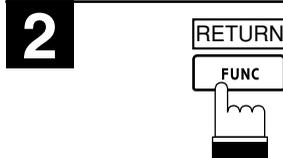


Press and hold the FUNC (RETURN) button for at least 2 seconds.  
The BBE adjustment mode is activated.



Press the rotary encoder to select "HI LEVEL" or "LOW LEVEL." Each press toggles between "HI LEVEL" and "LOW LEVEL."

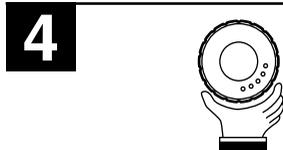


Rotate the rotary encoder and adjust the level to your desired level.

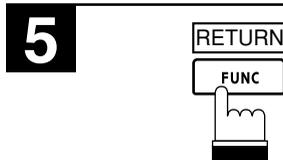

When adjustment is complete, press the FUNC (RETURN) button. The display returns to the BBE mode screen.




## Audio Processor Operation (Optional) English

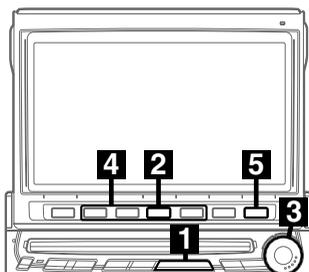

### Selecting Listening Position


You can select the listening position for optimum sound field depending on the number of passengers in the vehicle.

**1**

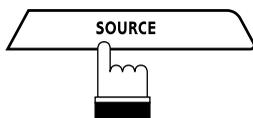


Press the SOURCE button.  
The main menu screen appears on the display.

**2**

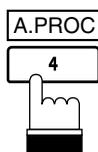


Press the **4** (A.PROC) button. The Audio Processor List screen appears.

**3**

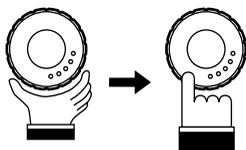

Rotate the rotary encoder and select L.P.S. (Listening Position Setting) in the menu. Press the rotary encoder to execute the selection. The display changes to the L.P.S. (Listening Position Selection) mode screen.

**4**

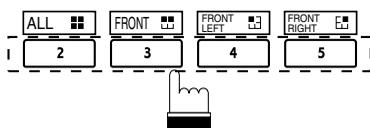

Press one of the Function buttons **2** (ALL) through **5** (FRONT/RIGHT) that has your desired listening position.

- Notes:**
- The black squares show the listening positions.
  - When the **1** (OFF) button is pressed, the L.P.S. mode is deactivated.

**5**




When selection has been completed, press the FUNC (RETURN) button.  
The display returns to the Audio Processor List screen.

**Tip:** When the FUNC (RETURN) button is pressed, the display returns to the previous screen.



## Audio Processor Operation (Optional)

English

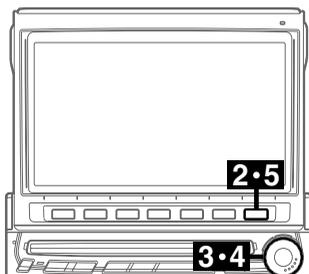


### Adjusting Listening Position

**1**

Activate the L.P.S. mode and select the listening position you wish to adjust by referring to "Selecting Listening Position" section.

**2**

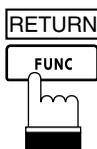

Press and hold the FUNC (RETURN) button for at least 2 seconds.  
The display changes to the L.P.S. adjustment mode.

**3**




Press the rotary encoder and select "F/R" (Front/Rear) or "L/R" (Left/Right) you wish to adjust.

**4**



Rotate the rotary encoder to adjust to the desired listening position.  
When the rotary encoder is rotated in the F/R mode, the cursor moves forward or backward, and when it is rotated in the L/R mode, the cursor moves to the left or right.

**5**

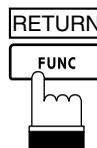


When adjustment is complete, press the FUNC (RETURN) button.  
The display returns to the L.P.S. mode screen.




## Audio Processor Operation (Optional)

English

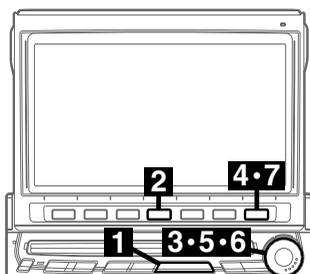


### Adjustment of Time Correction Value

**1**

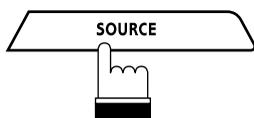


Press the SOURCE button.  
The main menu appears on the display.

**2**

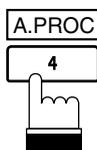


Press the **4** (A.PROC) button.  
The Audio Processor List appears.

**3**

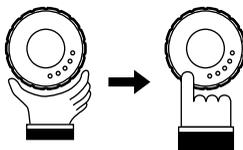

Rotate the rotary encoder and select the "Time-Corr." (Time-Correction), then press the rotary encoder.  
The display changes to the Time-Correction mode screen.

**4**

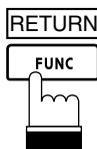

Press and hold the FUNC (RETURN) button for at least 2 seconds.  
The display changes to the Time-Correction Adjustment mode screen.

**5**



Press the rotary encoder repeatedly to select the position (seat) you wish to adjust.  
Each press changes the seat positions as follows:

→ Fr/Left → Fr/Right → Rear/Left → Rear/Right →

(To be continued)




## Audio Processor English Operation (Optional)

6



Rotate the rotary encoder clockwise or counterclockwise to increase or decrease the Time-Correction value respectively to your desired value.

7

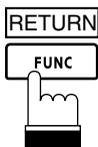


When adjustment has been completed, press the FUNC (RETURN) button. The display returns to the Time-Correction mode screen.

**Tip:** When the FUNC (RETURN) button is pressed, the display returns to the previous screen.




## Audio Processor English Operation (Optional)

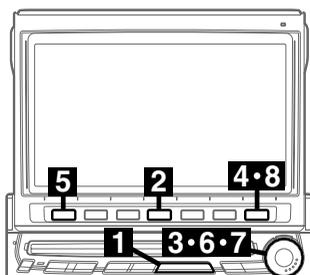


### Adjusting Cross-Over (X-Over) Point of 2-Way Divider

If an optional Alpine Channel Divider PRA-H400 is connected, you can control the Divider from the IVA-C800E.


Use this procedure when one or two 2-way-system or 3-way system channel dividers are connected.

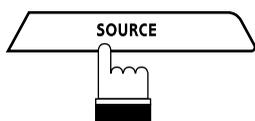**1**

Press the SOURCE button.  
The main menu screen appears on the display.

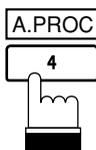**2**


Press the **4** (A.PROC) button.  
The display shows the Audio Processor list screen.

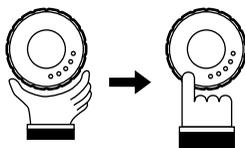**3**

Rotate the rotary encoder and select the "Divider" (when one divider is connected) or "Divider-F and Divider-R" (when two dividers are connected), then press the rotary encoder to execute the selection.  
The display changes to the Divider mode screen.

**4**

Press and hold the FUNC (RETURN) button for at least 2 seconds.  
The mode changes to the Divider Adjustment mode.

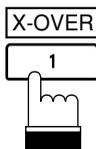**5**

Press the **1** (X-OVER) button. The mode changes to the Cross-Over Adjustment mode.

(To be continued)



# Audio Processor English Operation (Optional)

## 6



Press the rotary encoder and select the channel that you wish to adjust.

Each press changes the channel as follows.

**When only one 2-way divider is connected:**

→ Low → F-High → R-High →

**When two 2-way dividers are connected:**

→ Low → High →

↕ Each time the [6] (F/R) button is pressed, the mode switches between the Front adjustment and Rear adjustment modes, and the display also changes.

→ Low → High →

**When only one 3-way divider is connected:**

→ Low → Mid-L → Mid-H → High →

**When two 3-way dividers are connected:**

→ Low → Mid-L → Mid-H → High →

↕ Each time the [6] (F/R) button is pressed, the mode switches between the Front adjustment and Rear adjustment, and the display also changes.


→ Low → Mid-L → Mid-H → High →

## 7



Rotate the rotary encoder clockwise or counterclockwise to adjust the Cross-Over point upward or downward to your desired point.

## 8

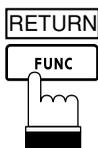


When the adjustment has been completed, press the FUNC (RETURN) button. The display returns to the Divider mode screen.




# Audio Processor Operation (Optional)

English

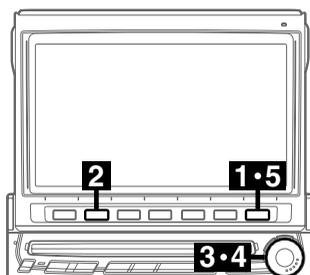


## Adjusting Levels

# 1

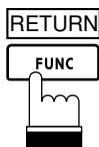

Press and hold the FUNC (RETURN) button for at least 2 seconds in the Divider mode. The mode changes to the Divider Adjustment mode.

# 2

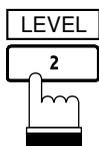

Press the [2] (LEVEL) button. The mode changes to the Level Adjustment mode.


# 3




Press the rotary encoder and select the channel you wish to adjust.

Each press changes the channels as follows:


**When only one 2-way system divider is connected:**

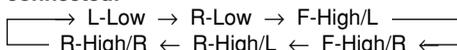


**When two 2-way system dividers are connected:**

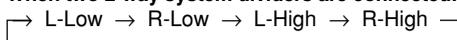


Each time the [6] (F/R) button is pressed, the mode switches between the Front adjustment, and Rear adjustment modes, and the display also changes.

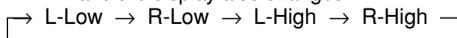


**When only one 3-way divider is connected:**

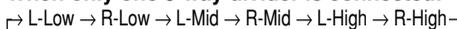

**When two 3-way dividers are connected:**

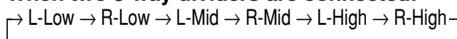

Each time the [6] (F/R) button is pressed, the mode switches between the Front adjustment and Rear adjustment modes, and the display also changes.

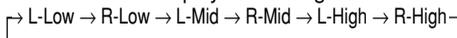




## Audio Processor English Operation (Optional)

**4**



Rotate the rotary encoder clockwise or counterclockwise to adjust to your desired level upward or downward respectively.

**5**

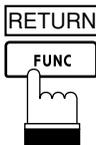


When adjustments have been completed, press the FUNC (RETURN) button. The display returns to the Divider mode.



# Audio Processor Operation (Optional)

English

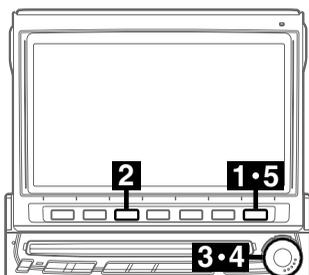

## Adjusting Time - Correction for 2-Way Speaker System


Use this procedure to adjust the sound time difference between the speakers.

# 1



Press and hold the FUNC (RETURN) button for at least 2 seconds in the Divider mode. The mode changes to the Divider Adjustment mode.

# 2

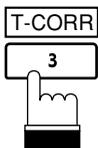


Press the [3] (T-CORR.) button. The mode changes to the Time Correction Adjustment mode.

# 3




Press the rotary encoder and select the channel you wish to adjust.


Each press changes the channels as follows:  
**When only one 2-way divider is connected:**

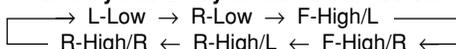


**When two 2-way dividers are connected:**

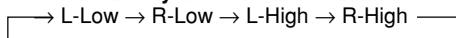


Each time the [6] (F/R) button is pressed, the mode switches between the Front adjustment and Rear adjustment modes, and the display also changes.

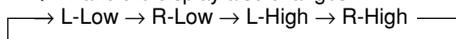


**When only one 3-way divider is connected:**

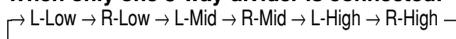

**When two 3-way dividers are connected:**

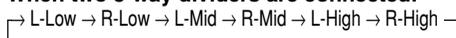

Each time the [6] (F/R) button is pressed, the mode switches between the Front adjustment and Rear adjustment modes, and the display also changes.

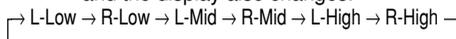

(To be continued)




## Audio Processor English Operation (Optional)

**4**



Rotate the rotary encoder clockwise or counterclockwise to adjust the time correction value upward or downward respectively.

**5**

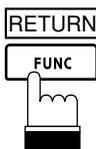


When adjustments have been completed, press the FUNC (RETURN) button. The display returns to the Divider mode screen.



# Audio Processor Operation (Optional)


English

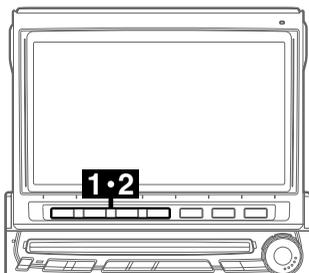

## Memorizing Divider Settings

You can store your settings of the divider(s) in memory when you have adjusted them.

**1**

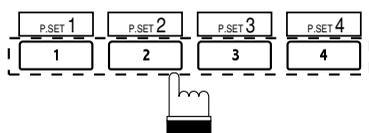


After adjusting the divider(s), display the Divider mode screen.

Press and hold any one of the Function buttons **1** (P.SET1) through **4** (P.SET4) for at least 2 seconds.

The indicators for the 4 buttons blink for 5 seconds.

**2**

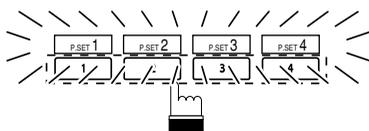


While the indicators are still blinking, Press the Function button into which you want to memorize (preset) the divider settings.

Repeat the above steps to memorize 3 other divider settings.




## Audio Processor Operation (Optional)

English

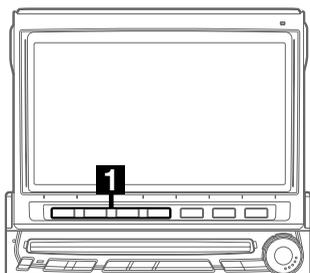

### Recalling Memorized Divider Settings Using Function Buttons

1

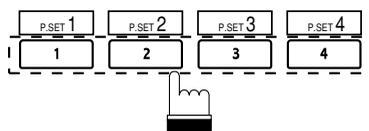


Display the Divider mode screen.  
Press the Function button **1** (P.SET1) through **4** (P.SET4) that has your desired divider settings.  
The divider setting stored at the Function button will be recalled.

**Tip:** You can also recall your desired divider settings memorized by pressing the **4** (◀P.DN) or **5** (▶P.UP) button in the Divider mode.




## Audio Processor Operation (Optional) English

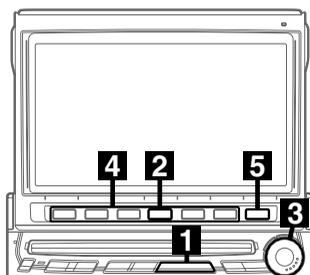

### Recalling Divider Settings Memorized Using Optional Divider


If an optional Alpine divider (such as PXA-H600/PXA-H510) is connected, you can recall the settings memorized using the optional divider.

**1**

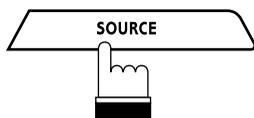

Press the SOURCE button.  
The main menu is displayed on the display.

**2**

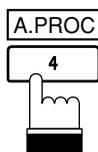


Press the **4** (A.PROC) button.  
The Audio Processor List screen is displayed.

**3**




Rotate the rotary encoder and select "Adaptive EQ." The Function Guide screen is displayed.

**4**

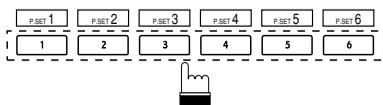


Press one of the Function buttons **1** (P.SET1) through **6** (P.SET6) that has your desired setting memorized using the optional divider.

**5**

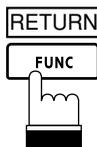

Press the FUNC (RETURN) button.  
The display returns to the main menu screen.

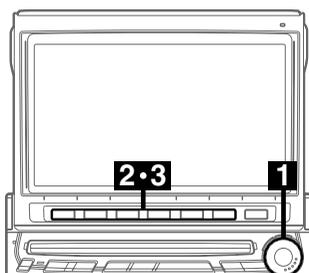

## Memorizing Characteristic Curves


Equalization characteristic curves created by yourself or factory preset can be stored in memory.

# 1



Select one of the factory preset characteristic curves or make your own (personal) characteristic curve. Then, display the Audio Processor List and select "Private Memo."


# 2

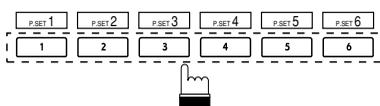

Press and hold any one of the Function buttons [1] (P.SET1) through [6] (P.SET6) for at least 2 seconds.

The Function Guide indicators P.SET1 through P.SET6 in the preset mode display blink indicating that you can memorize the characteristic curve.

# 3

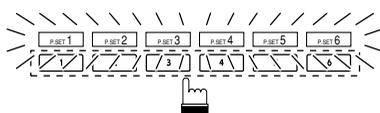

While the Function Guide indicators are blinking, press the Function button [1] (P.SET1) through [6] (P.SET6) into which you wish to memorize the characteristic curve. Now, the characteristic curve has been memorized.


Repeat this procedure to memorize other characteristic curves.

**Note:** This unit can memorize curves together with the settings of the equalizer, DHE, BBE and Surround Time Correction.




## Audio Processor Operation (Optional)

English

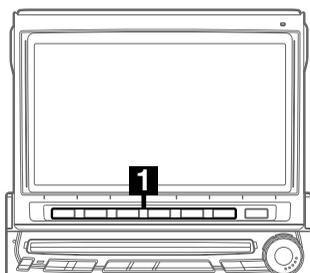


### Recalling Memorized Characteristic Curves Using Function Buttons

1

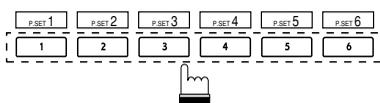

Activate the desired mode, DHE, BBE, surround, time correction or equalizer, then press the Function button **1** (P.SET1) through **6** (P.SET6) that has your desired characteristic curve.

The selected characteristic curve is recalled.

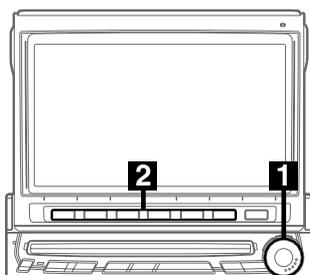

### Selecting Characteristic Curves from Displayed Audio Processor List


You can select your desired characteristic curves directly from the Audio Processor (A.PROC) List without switching to individual mode screens.

1




Display the Audio Processor List screen. Rotate the rotary encoder and select the desired mode by moving the cursor. The Function Guide for the selected mode is displayed.

2

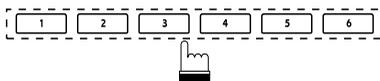

Press the Function buttons **1** through **6** that has your desired characteristic curve. The list shows the details of the curve selected.

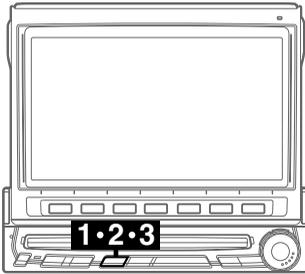

## Displaying Spectrum Analyzer

When this unit is connected to an external audio processor and an external amplifier, or to an external audio processor without a spectrum analyzer function, this feature does not function.

**1**



While the main screen for a music source is displayed, press the SPE.ANA. button to turn on the spectrum analyzer mode.

**2**



Each time you press the SPE.ANA. button, the spectrum analyzer modes change. There are three modes, select your desired mode to match the music being played.



Mode 1: This mode can be used for any genre of music.



Mode 2: This mode is suitable to vocal song music.




Mode 3: This mode emphasizes the rhythmical bass sound and gives an image of vivid low frequencies.

**3**




To deactivate the spectrum analyzer mode, press the SPE.ANA. button for at least 2 seconds.

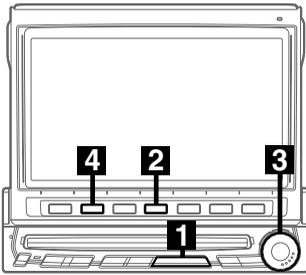

## Turning Defeat Mode On and Off


When the defeat mode is on, the sound signals bypass the BBE and surround circuits and directly go to the line output. The equalizer curve, therefore, becomes flat.

**1**

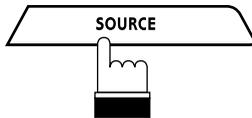

Press the SOURCE button. The main menu screen appears on the display.

**2**

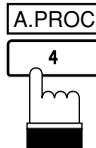


Press the **4** (A.PROC) button. The display shows the Audio Processor List screen.

**3**




Rotate the rotary encoder and select "Defeat." The Function Guide is displayed.

**4**

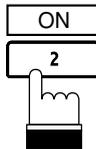

Press the **2** (ON) button to turn on the defeat mode. The sound signals pass the BBE and surround circuits.  
To turn off the defeat mode, press the **1** (OFF) button.

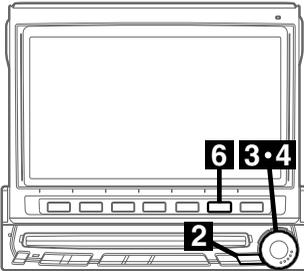

## Titling Radio Stations/CDs

You can title radio stations and CDs. This manual describes how to title radio stations.

Immediately after inputting titles or changing the settings of Initialize Mode or Display Mode (while the system is inputting the titles or data automatically) do not turn the ignition key (engine key) to OFF.


Otherwise, the title may not be written, or the settings may not be changed.

**Note:** The Parking Brake must be engaged to access the TITLE INPUT mode screen. Attempting to access this screen while driving will display the warning-CAN'T OPERATE WHILE DRIVING.

**1**

Activate the radio mode.  
Tune in a radio station you wish to title.

**2**

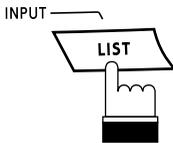

Press and hold the INPUT button for at least 2 seconds.  
The Title Inputting screen appears in the display.

**3**



Characters are displayed at the bottom menu.  
Rotate the rotary encoder and select the desired character for the first position.  
To change between upper case, lower case, numeral and symbol, press the [3] (A/1) button.  
Each press changes the bottom menu.

**4**




When the character for the first position has been selected, press the rotary encoder. The first character has been memorized at the first position. See "Notes" on next page.

**5**

Repeat steps 3 and 4 to enter the rest of characters. You can input up to 12 characters for titling one radio station (or CD).

(To be continued)


# 6

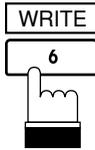

When titling has been completed, press the **[6]** (WRITE) button to store the title in memory. The display changes to the Radio mode.

To title other stations (or CDs), repeat this procedure. You can title up to 120 (max.) stations and CDs combined. The input titles will be displayed when a station (or CD) titled is selected.

- Notes:**
- If the memory capacity for radio station titles is full and if you attempt to title a new station, the oldest title will be erased to make room for the new one. To delete a title, select the title you want to delete, then select "SPC" (space) and press **[6]** (WRITE) button.
  - When the **[1]** (◀ BACK) or **[2]** (NEXT ▶) button is pressed, the cursor moves to the left or right on the input titles.
  - If an incorrect character has been entered, select "SPC" (space) and input a new character or press the **[4]** (DELETE) button to delete the previous character. Press the **[5]** (CLEAR) button while inputting the titles to erase all the characters you have input.
  - Pressing the FUNC (RETURN) button in the Title Input mode changes the display back to the previous display.

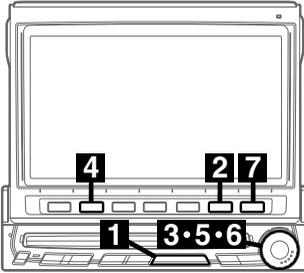


## Adjusting Subwoofer Level (when subwoofer is used with other speakers)

Immediately after inputting titles or changing the settings of Initialize Mode or Display Mode (while the system is inputting the titles or data automatically) do not turn the ignition key (engine key) to OFF.

Otherwise, the title may not be written, or the settings may not be changed.


**Note:** The Parking Brake must be engaged to access the Initialization mode screen. Trying to access this screen while driving will display the warning-CAN'T OPERATE WHILE DRIVING.

1

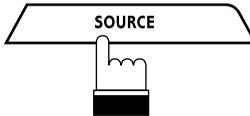

Press the SOURCE button.  
The main menu appears on the display.

2

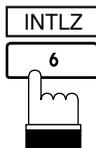


Press the [6] (INTLZ) button.  
The Initialization mode screen is displayed.

3



Rotate the rotary encoder and select "Sub wf."  
The Function Guide appears on the display.

4

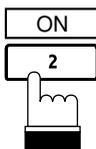

Press the [2] (ON) button to turn on the subwoofer.  
To turn off the subwoofer, press the [1] (OFF) button.

(To be continued)

## Other Useful Features

English

5



Press the rotary encoder repeatedly to select "SUB W." Each press changes the modes as follows:


→ BAS. → TRE. → BAL. → FAD. → SUB.W. → VOL.

6




Rotate the rotary encoder and adjust the subwoofer output level.

7

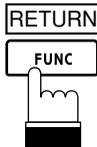

When your adjustment has been completed, press the FUNC (RETURN) button. The display returns to the main menu.

- Notes:**
- For further information, please contact your Alpine dealer.
  - When you connect a subwoofer, you need an amplifier with built-in low-pass filter.\*
    - \* The low-pass filter passes only the frequencies below the selected cut-off frequency. Any high frequency content of the audio signal above the cut-off will be removed.
  - With the Initialization screen displayed, pressing and rotating the rotary encoder can adjust the volume level.

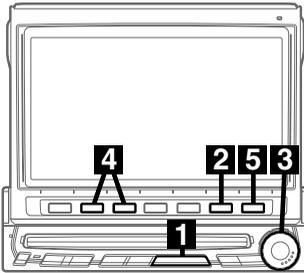


## Switching Phase

Use the phase-switching function after connecting your audio-processor, amplifier and subwoofer to the IVA-C800E.


Immediately after inputting titles or changing the settings of Initialize Mode or Display Mode (while the system is inputting the titles or data automatically) do not turn the ignition key (engine key) to OFF. Otherwise, the title may not be written, or the settings may not be changed.

**1**

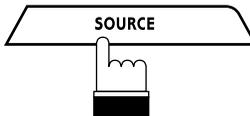

Press the SOURCE button.  
The main menu appears on the display.

**2**

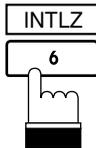


Press the **6** (INTLZ) button.  
The Initialization mode screen is displayed.

**3**



Rotate the rotary encoder and select "Sub Wf."  
The Function Guide is displayed.


**4**

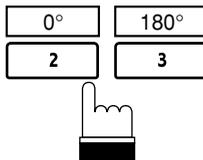


Press the **2** (0°) or **3** (180°) button to switch the phase of the subwoofer output.

To turn off this function, press the **1** (OFF) button.

**5**

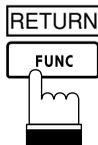

When setting has been completed, press the FUNC (RETURN) button.  
The display returns to the main menu screen.

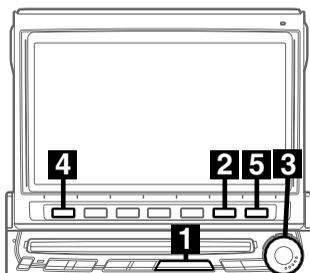


## Setting the External Device Interrupt Mode

If an Alpine Ai-NET Interrupt Box (NVE-K200) is connected to the IVA-C800E, an Auxiliary Source will be allowed to interrupt the current audio source. For example, use this function to have the sound of your TV interrupt CD or MD play when it occurs. The CD/MD player will be automatically muted during the voice guidance. For further details, please refer to the manual for NVE-K200.

Immediately after inputting titles or changing the settings of Initialize Mode or Display Mode (while the system is inputting the titles or data automatically) do not turn the ignition key (engine key) to OFF.

Otherwise, the title may not be written, or the settings may not be changed.

**1**

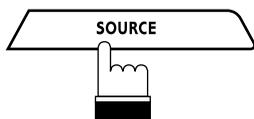

Press the SOURCE button.  
The main menu screen appears on the display.

**2**



Press the **6** (INTLZ) button.  
The Initialization mode screen appears on the display.


**3**



Rotate the rotary encoder and select "IN-INT MUTE" from the Initialization mode screen. The Function Guide appears on the display.

(To be continued)

4

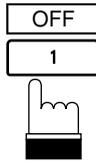


Press the **1** (OFF) button to turn off the mute mode.

**In the mute OFF mode:**

The volume level can be adjusted in the interrupt mode.


**Note:** When the Mute On mode is selected, sound will not be produced.

5

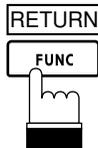

When your setting has been completed, press the FUNC (RETURN) button. The display returns to the main menu.

**Note:** The Auxiliary device being connected, must have an Interrupt wire with a positive trigger, for this function to operate automatically. Otherwise, a separate switch needs to be added to switch manually.

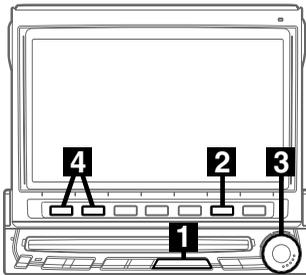


## Setting Interrupt Icon Display (IN-INT)

The unit can display the icon of the external device such as a telephone whenever a phone call comes in to tell you there is a phone call.


Immediately after inputting titles or changing the settings of Initialize Mode or Display Mode (while the system is inputting the titles or data automatically) do not turn the ignition key (engine key) to OFF. Otherwise, the title may not be written, or the settings may not be changed.

**1**

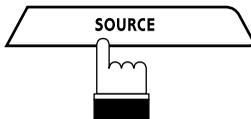

Press the SOURCE button.  
The main menu appears on the display.

**2**

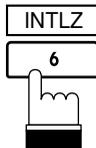


Press the **[6]** (INTLZ) button.  
The Initialization mode screen appears.

**3**




Rotate the rotary encoder and select "IN-INT."  
The Function Guide is displayed.

**4**

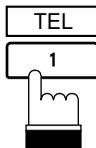

Press **[1]** (TEL) button.  
When the external device (telephone) sends the interrupt signal, the telephone icon appears on the display.  
When the **[2]** (INT.) button is pressed, the INT icon appears on the display.

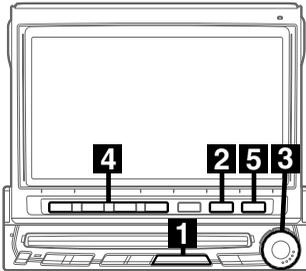


## Setting Bass Frequency

Immediately after inputting titles or changing the settings of Initialize Mode or Display Mode (while the system is inputting the titles or data automatically) do not turn the ignition key (engine key) to OFF.

Otherwise, the title may not be written, or the settings may not be changed.


**Note:** When an equalizer or digital sound processor is connected, this function is inoperative.

**1**

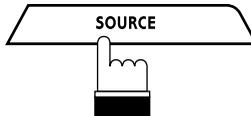

Press the SOURCE button.  
The main menu appears on the display.

**2**

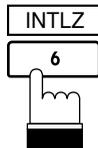


Press the **6** (INTLZ) button.  
The Initialization mode screen appears.

**3**




Rotate the rotary encoder and select "BASS Cont." to activate the Bass Control mode.

**4**

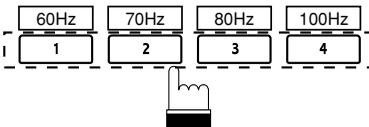


Press the Function button **1** (60 Hz) through **4** (100 Hz) that has the frequency you wish to control.

**5**

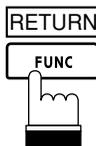

Press the FUNC (RETURN) button.  
The display returns to the main menu screen.

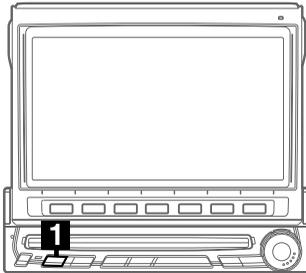

## Setting Visual Modes

To gain direct access to one of the different visual screens, preset to the desired source. You can then display the screen of the preset item by just pressing the V. SEL button on the IVA-C800E.

Immediately after inputting titles or changing the settings of Initialize Mode or Display Mode (while the system is inputting the titles or data automatically) do not turn the ignition key (engine key) to OFF.


Otherwise, the title may not be written, or the settings may not be changed.

**1**



Press the V.SEL button to preset the desired item. Each press changes the visual modes.



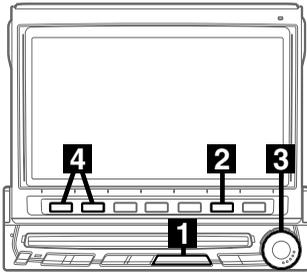


## Selecting Rear Monitor

If a rear-seat monitor is connected to the IVA-C800E, you can switch the picture/sound of the rear-seat monitor from the IVA-C800E.

Immediately after inputting titles or changing the settings of Initialize Mode or Display Mode (while the system is inputting the titles or data automatically) do not turn the ignition key (engine key) to OFF.


Otherwise, the title may not be written, or the settings may not be changed.

**1**

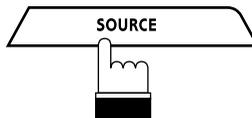

Press the SOURCE button.  
The main menu appears on the display.

**2**

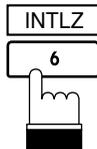

Press the [6] (INTLZ) button.  
The Initialization mode screen appears.

**3**




Rotate the rotary encoder and select "AUX OUT."  
The Function Guide is displayed.

(To be continued)

# 4

- When the [1] (AUX1) button is pressed, the device connected to Terminal AUX 1 will be played on the rear-seat monitor and the monitor produces picture and sound.
- When the [2] (AUX2) button is pressed, the device connected to Terminal AUX 2 will be played on the rear-seat monitor and the monitor produces picture and sound.


- Notes:**
- If the DVD player (DVA-5205E) is connected to the AUX1 terminal and the V. OUT button on the remote control supplied with the DVD player (DVA-5205E) is pressed and held for more than 2 seconds after having performed steps 1 to 4 on page 176-178, the picture and voice will be produced.
  - To deactivate the mode, press the same button.
  - If no particular picture is selected for the rear-seat monitor in the AUX OUT mode, the rear-seat monitor displays the same picture as for the IVA-C800E.
-

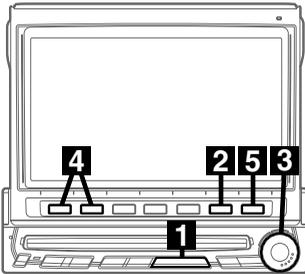

## Displaying Time


Immediately after inputting titles or changing the settings of Initialize Mode or Display Mode (while the system is inputting the titles or data automatically) do not turn the ignition key (engine key) to OFF. Otherwise, the title may not be written, or the settings may not be changed.

**1**

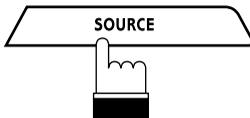

Press the SOURCE button.  
The main menu appears on the display.

**2**

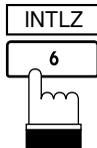


Press the **6** (INTLZ) button.  
The Initialization mode screen appears.

**3**




Rotate the rotary encoder and select "CLOCK DISP."  
The Function Guide appears.

**4**

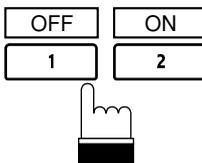


Press the **1** (OFF) or **2** (ON) button to turn off or on the clock display respectively.

**5**

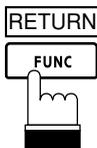

Press the FUNC (RETURN) button.  
The display returns to the main menu screen.

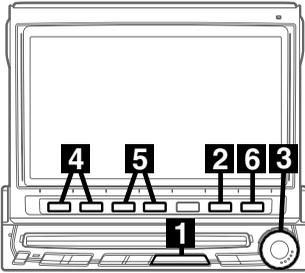


## Resetting Clock

Immediately after inputting titles or changing the settings of Initialize Mode or Display Mode (while the system is inputting the titles or data automatically) do not turn the ignition key (engine key) to OFF.


Otherwise, the title may not be written, or the settings may not be changed.

**1**

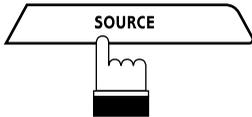

Press the SOURCE button.  
The main menu appears on the display.

**2**

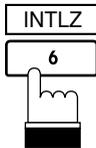


Press the [6] (INTLZ) button.  
The Initialization mode screen appears.

**3**




Rotate the rotary encoder and select "CLOCK ADJ." to activate the clock adjustment mode.  
The Function Guide appears.

**4**

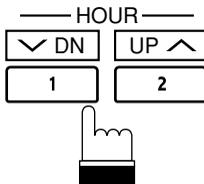

Press the [1] (∨DN) or [2] (UP∧) button to delay or advance the hours respectively.


**5**

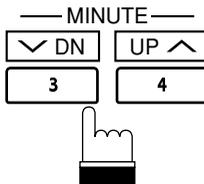

Press the [3] (∨DN) or [4] (UP∧) button to delay or advance the minutes respectively.

(To be continued)


# 6

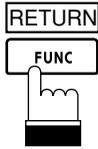

Press the FUNC (RETURN) button after adjusting the clock.

The display returns to the main menu screen.

**Note:** To quickly set the time to the nearest hour, press the  (TIME RESET) button. If the displayed time is before the half hour, pressing the  (TIME RESET) button sets the clock back to the previous hour. If the displayed time is after the half hour, pressing the  (TIME RESET) button sets the clock forward to the beginning of the next hour.

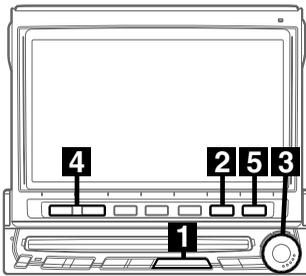


## Setting Daylight Saving Time

Immediately after inputting titles or changing the settings of Initialize Mode or Display Mode (while the system is inputting the titles or data automatically) do not turn the ignition key (engine key) to OFF.


Otherwise, the title may not be written, or the settings may not be changed.

**1**

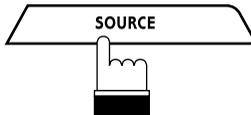

Press the SOURCE button.  
The main menu screen is displayed.

**2**

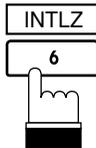


Press the [6] (INTLZ) button. The Initialization screen is displayed.

**3**




Rotate the rotary encoder and select "Summer Time." The Function Guide is displayed.

**4**

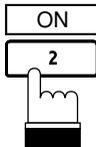


Press the [2] (ON) button to place the Summer Time mode ON.  
The time advances by one hour.  
To return to the ordinary time, press the [1] (OFF) button.

**5**

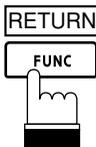

Press the FUNC (RETURN) button.  
The display returns to the main menu screen.

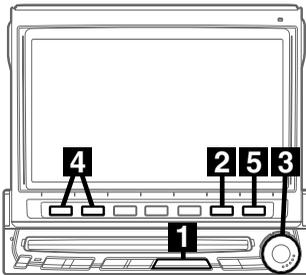


## Turning Sound Guide Function On or Off

The Sound Guide function will give audible feedback with a beep sound when a button on the unit is pressed to acknowledge the receipt of the signal from the button.

Immediately after inputting titles or changing the settings of Initialize Mode or Display Mode (while the system is inputting the titles or data automatically) do not turn the ignition key (engine key) to OFF.


Otherwise, the title may not be written, or the settings may not be changed.

**1**

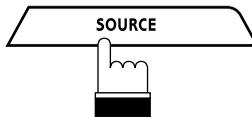

Press the SOURCE button.  
The main menu appears on the display.

**2**

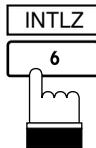


Press the **6** (INTLZ) button.  
The Initialization mode screen appears.

**3**




Rotate the rotary encoder and select "BEEP."  
The Function Guide is displayed.

**4**

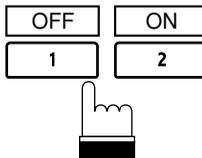


Press the **2** (ON) button to activate the Sound Guide mode. The display shows "BEEP ON."  
Press the **1** (OFF) button to deactivate the Sound Guide mode. The sound guide beep will not be produced when a button on the unit is pressed.

**5**

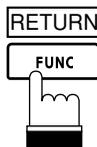

When the setting has been completed, press the FUNC (RETURN) button.  
The display returns to the main menu screen.

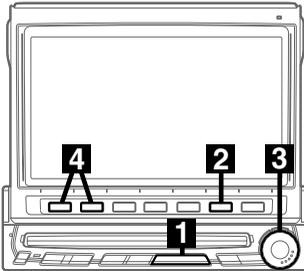


## Demonstration

In the Demonstration mode, the unit performs scanning of the basic operation of each source.

Immediately after inputting titles or changing the settings of Initialize Mode or Display Mode (while the system is inputting the titles or data automatically) do not turn the ignition key (engine key) to OFF.


Otherwise, the title may not be written, or the settings may not be changed.

**1**

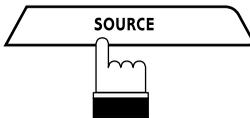

Press the SOURCE button.  
The main menu appears on the display.

**2**

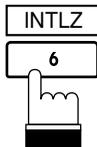


Press the **6** (INTLZ) button.  
The Initialization mode screen appears.

**3**




Rotate the rotary encoder and select "DEMO" to activate the Demonstration mode.  
The display shows the Function Guide screen.

**4**

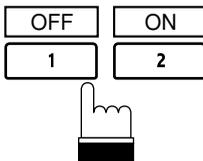

Press the **2** (ON) button to activate the Demonstration mode. When the Demonstration mode is activated, the unit automatically starts the demonstration (simulation). The demonstration continues until the demonstration mode is deactivated.

To deactivate the demonstration mode, press the **1** (OFF) button. The demonstration stops.

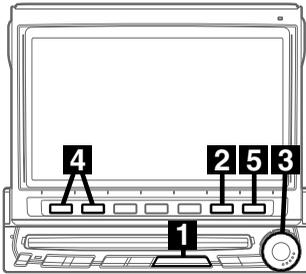


## Setting Automatic Opening/Closing of Monitor

When the Automatic Opening/Closing mode is "ON," the monitor automatically opens when the ignition key is turned to the "ACC" or "ON" position. The monitor automatically closes when the ignition key is turned OFF.


Immediately after inputting titles or changing the settings of Initialize Mode or Display Mode (while the system is inputting the titles or data automatically) do not turn the ignition key (engine key) to OFF. Otherwise, the title may not be written, or the settings may not be changed.

**1**

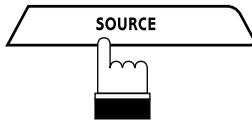

Press the SOURCE button.  
The main menu appears on the display.

**2**

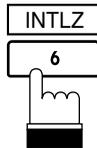


Press the **6** (INTLZ) button.  
The Initialization mode screen appears.

**3**




Rotate the rotary encoder and select "AUTO OPEN."  
The display shows the Function Guide.

**4**

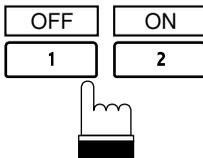


Press the **2** (ON) button to set the Auto Opening mode ON.  
To set the Auto Opening mode OFF, press the **1** (OFF) button. If set to the "OFF" position, the monitor should be manually opened or closed by pressing the OPEN/CLOSE button.

**5**

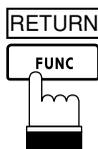

Press the FUNC (RETURN) button, the display returns to the main menu screen.

## Adjusting Brightness of Picture

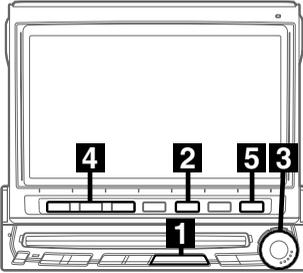


Immediately after inputting titles or changing the settings of Initialize Mode or Display Mode (while the system is inputting the titles or data automatically) do not turn the ignition key (engine key) to OFF.

Otherwise, the title may not be written, or the settings may not be changed.


**Note:** The Parking Brake must be ON to access the screen while driving will display the warning-CAN'T OPERATE WHILE DRIVING.

**1**

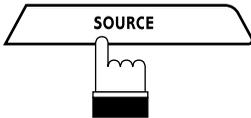

Press the SOURCE button.  
The main menu appears on the display.

**2**

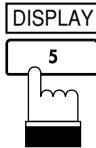


Press the **[5]** (DISPLAY) button.  
The Display mode screen appears.

**3**




Rotate the rotary encoder and select "BRIGHT" to activate the Brightness Adjustment mode.  
The display shows the Function Guide.

**4**

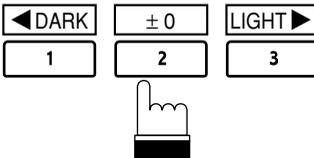


Press the **[1]** (◀ DARK) to make the picture darker or press the **[3]** (LIGHT ▶) to make the picture brighter. You can adjust the brightness between MIN (-15) and MAX (+15). When it reaches the minimum or maximum point, the display shows "MIN" or "MAX" respectively. To quickly set to the center position, press the **[2]** (±0) button.

**5**

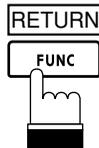

When the adjustment has been completed, press the FUNC (RETURN) button. The display returns to the main menu screen.

**Note:** You can adjust the volume level while the Display mode screen is shown by first pressing the rotary encoder and then rotating the rotary encoder.

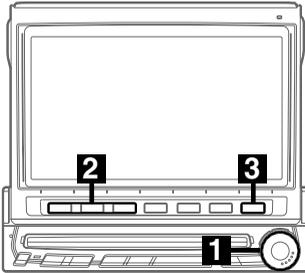

## Adjusting Tint of Picture

Tint adjustment can be made only in the DVD, AUX1 and AUX2 modes.

Immediately after inputting titles or changing the settings of Initialize Mode or Display Mode (while the system is inputting the titles or data automatically) do not turn the ignition key (engine key) to OFF.


Otherwise, the title may not be written, or the settings may not be changed.

**1**




Rotate the rotary encoder while the DISPLAY mode screen is displayed and select "TINT" to activate the Tint Adjustment mode. The Function Guide is displayed.

**2**

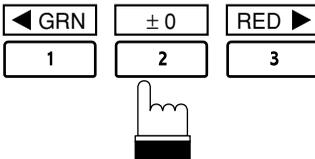


Press the **1** (◀ GRN) button to adjust green and press the **3** (RED ▶) button to adjust red. To quickly set to the center position, press the **2** (±0) button.

**3**

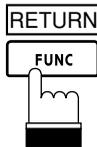

When the tint adjustment has been completed, press the FUNC (RETURN) button. The display returns to the main menu screen.

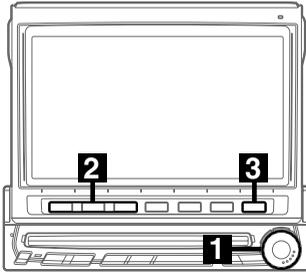

## Adjusting Colour of Picture

Color adjustment can be made only in the DVD, AUX1 and AUX2 modes.


Immediately after inputting titles or changing the settings of Initialize Mode or Display Mode (while the system is inputting the titles or data automatically) do not turn the ignition key (engine key) to OFF. Otherwise, the title may not be written, or the settings may not be changed.

**1**




Rotate the rotary encoder while the DISPLAY mode screen is displayed and select "COLOR" to activate the colour adjustment mode. The Function Guide is displayed.

**2**

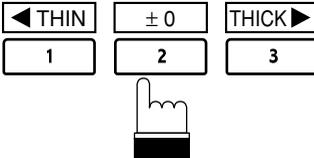

Press the **1** (◀ THIN) or **3** (THICK ▶) button to make the color of the picture brighter or darker respectively to get your desired colour. You can adjust the colour between MIN (-15) and MAX (+15). When it reaches the minimum or maximum point, the display shows "MIN" or "MAX" respectively. To quickly set to the center position, press the **2** (±0) button.

**3**

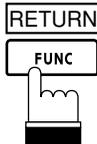



When the adjustment has been completed, press the FUNC (RETURN) button. The display returns to the main menu screen.

## Illumination Control


Setting the illumination control to AUTO, decreases the illumination brightness of the IVA-C800E, whenever the parking lamps of the vehicle are ON.

Use this function if you feel the unit's illumination is too bright at night.

Immediately after inputting titles or changing the settings of Initialize Mode or Display Mode (while the system is inputting the titles or data automatically) do not turn the ignition key (engine key) to OFF. Otherwise, the title may not be written, or the settings may not be changed.

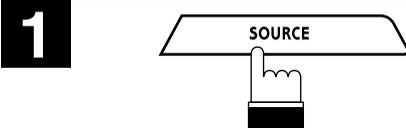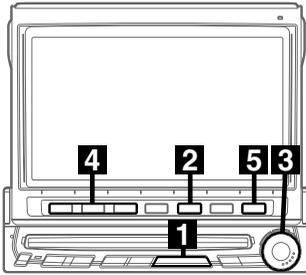


Press the SOURCE button.  
The main menu appears on the display.

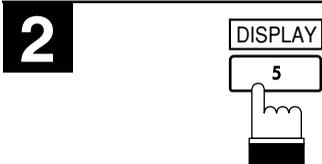


Press the **5** (DISPLAY) button.  
The Display mode screen is displayed.




Rotate the rotary encoder and select "DIMMER."  
The Function Guide is displayed.

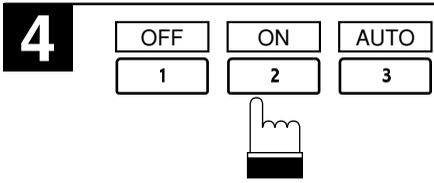

- Press the **3** (AUTO) button to activate the Auto Dimmer mode. In the Auto Dimmer mode, the background illumination of the monitor is synchronized with the instrument illumination of the vehicle (the dimmer input lead should be connected).
- Press the **1** (OFF) button to deactivate the Auto Dimmer mode to keep the background illumination bright.
- Press the **2** (ON) button to keep the background illumination of the monitor dark.

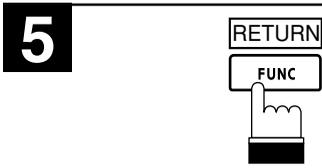

When the setting has been completed, press the FUNC (RETURN) button.  
The display returns to the main menu screen.

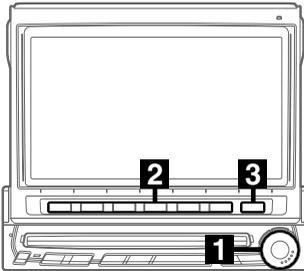

## Switching Background Textures/Colours

You have a choice of 12 different background textures/colours preset at the factory. Select them following the procedure below.


Immediately after inputting titles or changing the settings of Initialize Mode or Display Mode (while the system is inputting the titles or data automatically) do not turn the ignition key (engine key) to OFF. Otherwise, the title may not be written, or the settings may not be changed.

**1**



Rotate the rotary encoder while the Display mode screen is displayed and select "B.GND TEXTURE" or "B.GND COLOR." The Function Guide appears on the display.

**2**

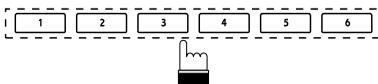


Press the Function buttons (1 through 6) that has your desired texture.

The Function buttons have textures/colours as follows.

	1	2	3	4	5	6
B.GND TEXTURE	MARBLE	SKY	WOOD	GRAD.	METAL	ABYSS
B.GND COLOR	C1	C2	C3	C4	C5	C6


The background colour changes with respect to the selected texture.

**3**

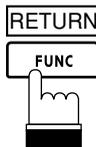

When your selection has been made, press the FUNC (RETURN) button.

The display returns to the main menu screen.

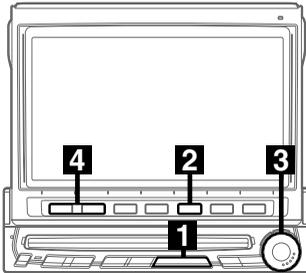


## Setting Automatic Background Texture/ Colour Scroll

Turn on the Automatic Background Texture/ colour Scroll to automatically change background texture/colours. The background texture/colour will change each time the ignition key is turned off and turned back on again (12 textures/colours).


Immediately after inputting titles or changing the settings of Initialize Mode or Display Mode (while the system is inputting the titles or data automatically) do not turn the ignition key (engine key) to OFF. Otherwise, the title may not be written, or the settings may not be changed.

**1**

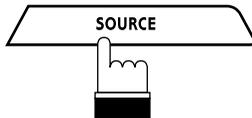

Press the SOURCE button.  
The main menu appears on the display.

**2**

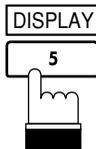


Press the **5** (DISPLAY) button to activate the Display mode.  
The Display mode screen appears.

**3**



Rotate the rotary encoder and select "AUTO B.GND."  
The Function Guide is displayed.


**4**

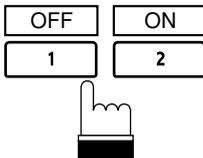

Press the **2** (ON) button to turn on the Auto Background Texture/colour Scroll mode.  
To turn off the Auto Background Texture/colour Scroll mode, press the **1** (OFF) button.

The background textures/colours scroll when the ignition key is turned off once and turned back on again as follows:

→ MARBLE → SKY → WOOD → GRAD. → METAL  
← C6 ← C5 ← C4 ← C3 ← C2 ← C1 ← ABYSS ←

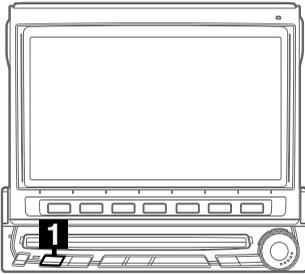



## Switching Display Modes

1




Press and hold the DISP button for at least 2 seconds in the AUX mode.


Each press changes the display modes as follows:

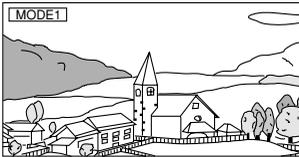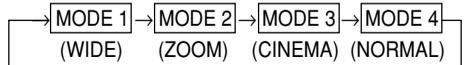


In the Mode 1 (Wide), the monitor displays a normal picture wider to fit in the wide-screen monitor by evenly stretching out the picture horizontally.

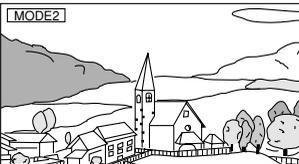


In the Mode 2 (Zoom), the monitor displays a normal picture wider to fit in the wide-screen monitor by unevenly stretching out. The center portion of the picture is stretched out only slightly in order to make the important center portion of the picture look natural.

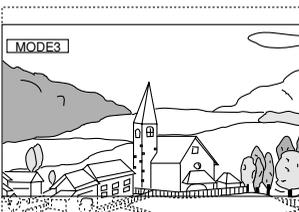

In the Mode 3 (Cinema), the monitor displays a normal picture by stretching out the picture horizontally and vertically. This mode is good for displaying a cinema type picture with the proportion of 16 to 9.

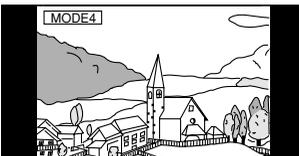


In the Mode 4 (Normal), the monitor displays normal picture at the centre of the screen with a vertical black belt at each side.

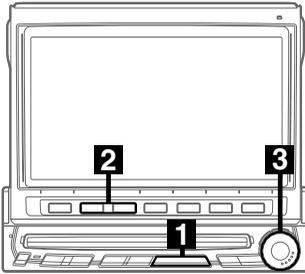


## Playing 2 Sources Simultaneously


You can listen to the audio portion of another source while watching the picture of current source, or you can watch the video portion of another source while listening to current source.

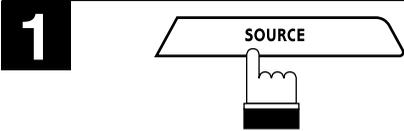

Press the SOURCE button.  
The main menu appears on the display.

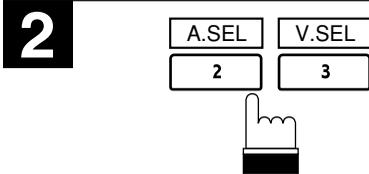


To change only the audio portion while watching the current video source:  
Press the **2** (A.SEL) button to select the audio portion.  
(Example)

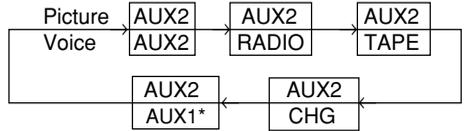

**Note:** Operative only when the video source is DVD, AUX1 or AUX 2.


To change only the video portion while listening to the current audio source:  
Press the **3** (V.SEL) button to select the video portion.  
(Example)

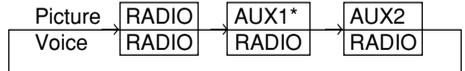

\* If a DVD player is connected, you can receive the DVD picture/sound. With the DVD player (DVA-5205E) connected, pressing and holding the V. OUT button on the remote control supplied with the DVD player (DVA-5205E) for more than 2 seconds after performing steps 1 to 4 on page 176-178 produces the picture and voice of the DVD.

(To be continued)


**3**

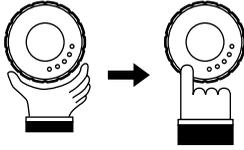

Rotate the rotary encoder and select your desired audio source or video source, and press the rotary encoder to execute the selection.

# Remote Control English

(RUE-4185 supplied with IVA-C800E)

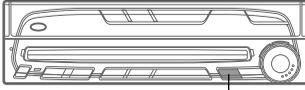


Remote Sensor/  
Capteur de télécommande/  
遙控感應器

## Replacing battery

Applicable battery: Use two "AAA" sized dry batteries.

- Point the remote control transmitter toward the remote sensor on the IVA-C800E and use the remote control within 2 meters from the IVA-C800E.


**1**

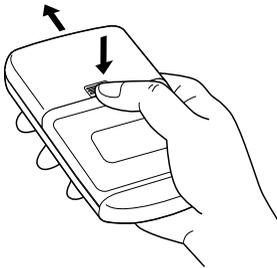

### Opening the battery cover

Slide out the battery cover while firmly pressing outward.


**2**

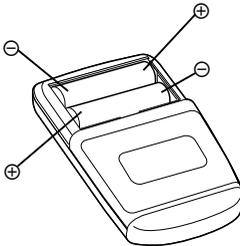

### Replacing the battery

Put the batteries in the case as illustrated observing battery polarities.

**3**

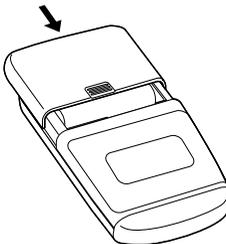


### Closing the cover

Push the cover as illustrated until a click is heard.

## Remote Control Operation English

### (RUE-4185 supplied with IVA-C800E)

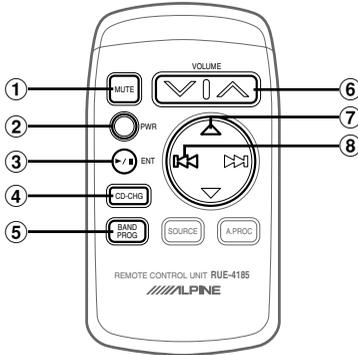

#### ① Mute Button

Press the button to lower the volume by 20 dB instantly. Press the button again to cancel.

#### ② Power Switch

Press the switch to turn the power on/off.

#### ③ ENT (Enter) Button

- This button has the same function as pressing the rotary encoder on the main unit.
- Pressing and holding this button for more than 2 seconds turns the loudness on or off (when neither an equalizer nor a digital sound processor is connected).

#### ▶/|| Button

Press and hold this button for more than 2 seconds to play or pause (In CD/MD/Changer mode).

#### ④ CD-CHG (CD Changer) Button

Press the button to change to the CD changer operation.

#### ⑤ Band/Programme Button

##### Radio Mode: BAND Button

Press the button and the band will change as shown below.

→ F1 → F2 → AM →

##### Cassette Player Mode: Programme Button

Press the button to change between the A and B sides of the tape.

##### Changer Mode: Band Button

Switches changers (when a Multi-Changer Switching device is connected).

#### ⑥ Volume Adjustment Buttons

To increase the volume level:

Press the  button

To decrease the volume level:

Press the  button

The buttons have the same functions as

rotating the rotary encoder on the main unit.

#### ⑦ ▲ Button

**Radio Mode:** Pressing the button will select, in ascending order, stations programmed in the radio's presets as shown below.

→  →  ...  →


##### CD Changer Mode: DISC Select (UP) Button

Press the button to select a disc in ascending order.

(To be continued)

# Remote Control English

(RUE-4185 supplied with IVA-C800E)

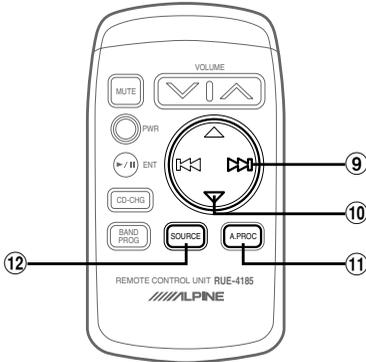

### Cassette Player Mode:

Press this button to advance to the beginning of the next selection.

⑧ **◀◀ Button**

**Radio Mode:** SEEK (DN) Button

**CD/MD Mode:** Press the button to go back to the beginning of the current track.

**Cassette Player Mode:** Press this button to rewind the tape.

**Audio Processor Mode:** Press this button to select the desired Maker/Personal settings memorized after pressing the Audio Processor button when an audio processor is Ai-NET connected.

⑨ **▶▶ Button**

**Radio Mode:** SEEK (UP) Button


**CD/MD Mode:** Press the button to advance to the beginning of the next track.

**Cassette Player Mode:** Press to fast forward the tape.

**Audio Processor Mode:** Press this button to select the desired Maker/Personal settings memorized after pressing the Audio Processor button when an audio processor is Ai-NET connected.

⑩ **▼ Button**

**Radio Mode:** Pressing the button will select, in descending order, stations programmed in the radio's presets as shown below.

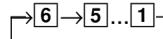

### CD Changer Mode: DISC Select (DN) Button

Press the button to select a disc in descending order.

### Cassette Player Mode:

Press this button to return to the beginning of the current selection or a selection further back.

⑪ **Audio Processor Button**

Press to change the modes such as Equalizer, Surround, etc. when an external audio processor is Ai-NET connected.

⑫ **SOURCE Select Button**

Press to select the source modes.

# In Case of Difficulty

## Symptom/Symptôme/症候

## Cause and Solution

Screen not displayed./Aucun écran n'apparaît./熒幕不顯示。

- Brightness control is set at the minimum position.
  - Adjust the Brightness control.
- Temperature in the vehicle is too low.
  - Increase the vehicle's interior temperature to operation temperature range.

Movement of displayed picture is abnormal./Le mouvement de l'image affichée n'est pas normal./所顯示影像的移動不正常。

- Temperature in the vehicle is too high
  - Allow the vehicle's interior temperature to cool.

Unclear or noisy display./Affichage pas clair ou bruité./顯示不清晰或有干擾。

- Fluorescent plate is worn out.
  - Replace the fluorescent plate.

Unclear picture display./Affichage pas clair de l'image./不清晰畫面顯示。

- Fluorescent tube is exhausted.
  - Replace the fluorescent tube\*.

\* The fluorescent tube replacement is not free of charge even within the warranty period, for the tube is an article of consumption.

---

**Radio Mode**


---

**Symptom/Symptôme/症候**
**Cause and Solution**


---

Unable to receive stations./Impossible de recevoir les stations./不能接收電台。

- No antenna or open connection in cable.
    - Make sure the antenna is properly connected; replace the antenna or cable if necessary.
- 

Unable to tune stations in the seek mode./Impossible d'accorder les stations en mode de recherche automatique./在尋找模式下不能調諧電台。

- You are in a weak signal area.
    - Make sure the tuner is in the DX mode.
  - If the area you are in is a primary signal area, the antenna may not be grounded and connected properly.
    - Check your antenna connections; make sure the antenna is properly grounded at its mounting location.
  - The antenna may not be the proper length.
    - Make sure the antenna is fully extended; if broken, replace the antenna with a new one.
- 

Broadcast is noisy./Réception parasitée./廣播有雜音。

- The antenna is not the proper length.
    - Extend the antenna fully; replace it if it is broken.
  - The antenna is poorly grounded.
    - Make sure the antenna is grounded properly at its mounting location.
  - The station signal is weak and noisy.
    - If above solution does not work, tune in another station.
-

**CD Mode****Symptom/Symptôme/症候****Cause and Solution**

CD playback sound is wavering./Le son de lecture de CD est déformé./CD 播放的聲音抖動。

- Moisture condensation in the CD Module.
  - Allow enough time for the condensation to evaporate (about 1 hour).

CD insertion not possible./Insertion de CD impossible./不能插入 CD。

- A CD is already in the CD player.
  - Eject the CD and remove it.
- The CD is being improperly inserted.
  - Make sure the CD is being inserted following instructions in the CD Player Operation section.

Unable to fast forward or backward the CD./Avance rapide ou inversion impossibles./CD 不能快進或快倒。

- The CD has been damaged.
  - Eject the CD and discard it; using a damaged CD in your unit can cause damage to the mechanism.

CD playback sound skips due to vibration./Pertes de son dues à des vibrations./由於震動，CD 播放的聲音跳躍。

- Improper mounting of the unit.
  - Securely re-mount the unit.
- Disc is very dirty.
  - Clean the disc.
- Disc has scratches.
  - Change the disc.

CD playback sound skips without vibration./Pertes de son non dues à des vibrations./無震動時 CD 播放的聲音跳躍。

- Dirty or scratched disc.
  - Clean the disc; damaged disc should be replaced.

## Indication for CD Changer

### Indication/Indication/指示

### Cause and Solution

HIGH-TEMP

- Temperature in the vehicle is too high.
  - Allow the vehicle's interior temperature to cool.  
The indicator will disappear when the temperature returns to within operation range.

NO MAGAZINE

- No CD magazine is loaded into the CD Changer.
  - Insert a magazine.

ERROR

- Malfunction in the CD Changer.
  - Consult your Alpine dealer.  
Press the magazine eject button and pull out the magazine. Check the indication and insert the magazine again. If the magazine cannot be pulled out, consult your Alpine dealer.
- Magazine ejection not possible.
  - Press the magazine eject button.  
If the magazine does not eject, see the Owner's Manual for the CD Changer.
- A disc is left inside the CD Changer.
  - Press the EJECT button to activate the eject function. When the CD Changer finishes the eject function, insert an empty CD magazine into the CD Changer to receive the disc left inside the CD Changer.

## Indications concernant le changeur CD

## CD 換碟機指示

### Cause et solution

### 原因和解決方法

- La température à l'intérieur du véhicule est trop élevée.
  - Faites baisser la température à l'intérieur du véhicule.  
Cet indicateur disparaît quand la plage normale de température est rétablie.
- Aucun chargeur CD dans le changeur.
  - Insérez-en un.
- Le changeur CD ne fonctionne pas.
  - Consultez votre revendeur Alpine.  
Appuyez sur la touche d'éjection du chargeur et sortez le chargeur. Vérifiez l'indication et insérez à nouveau le chargeur. Si vous ne pouvez pas le sortir, consultez votre revendeur Alpine.
- L'éjection du chargeur est impossible.
  - Appuyez sur la touche d'éjection du chargeur.  
Si le chargeur ne peut pas être éjecté, reportez-vous au mode d'emploi du changeur CD.
- Un disque est resté dans le changeur CD.
  - Appuyez sur la touche EJECT pour activer la fonction d'éjection. Quand l'éjection est terminée, insérez un chargeur CD vide dans le changeur pour sortir le disque restant dans le changeur CD.
- 汽車內溫度太高。
  - 讓汽車內溫度冷卻下來。  
當溫度恢復到本機操作溫度範圍內時，指示即消失。
- CD 換碟機內未裝 CD 唱碟匣。
  - 裝入唱碟匣。
- CD 換碟機故障。
  - 洽詢 Alpine 經銷店。  
按下唱碟匣彈出按鈕，拉出唱碟匣。檢查指示並重新插入唱碟匣。如果唱碟匣拉不出，請洽詢 Alpine 經銷店。
- 唱碟匣不能彈出。
  - 按下唱碟匣彈出按鈕。  
如果唱碟匣不彈出，請查閱 CD 換碟機使用說明書。
- 唱碟留在 CD 接碟機裡面。
  - 按下 EJECT（彈出）按鈕以激活彈出功能。當 CD 換碟機結束彈出功能，請把空的 CD 唱碟匣插入 CD 換碟機以收受留在 CD 換碟機內的唱碟。

# Specifications

English/Français/中文

## MONITOR SECTION

Screen Size/Taille de l'écran/熒幕尺寸 .....	6.5"
LCD Type/Type d'écran LCD/液晶顯示器類型 .....	Transparent type TN LCD
Operation System/Système de fonctionnement/操作系統 .....	TFT active matrix
Number of Picture Elements/Nombre d'éléments d'image/像素數 .....	336,960 pcs. (1,440 × 234)
Effective Number of Picture Elements/Nombre effectif d'éléments d'image/有效畫素 .....	99.99% or more
Illumination System/Système d'éclairage/照明系統 .....	U-shaped cold cathode fluorescent tube

## FM TUNER SECTION

Tuning Range/Plage d'accord/調諧範圍 .....	87.5 – 108.0 MHz
Mono Usable Sensitivity/Sensibilité utilisable mono/單音可用靈敏度 .....	9.3 dBf (0.8 $\mu$ V/75 ohms)
50 dB Quieting Sensitivity/Sensibilité à 50 dB/50 dB 靜噪靈敏度 .....	13.5 dBf (1.3 $\mu$ V/75 ohms)
Alternate Channel Selectivity/Sélectivité de canal alternatif/相隔頻道靈敏度 .....	80 dB
Signal-to-Noise Ratio/Rapport signal sur bruit/訊號雜訊比 .....	80 dB
Stereo Separation/Séparation stéréo/立體聲分隔 .....	35 dB
Capture Ratio/Taux de capture/俘獲比 .....	2.0 dB

## AM TUNER SECTION

Tuning Range/Plage d'accord/調諧範圍 .....	531 – 1,602 kHz
Usable Sensitivity/Sensibilité utilisable/可用靈敏度 .....	22.5* $\mu$ V/27.0 dB

(\*IEC Standard)

# Specifications

English/Français/中文

## CD PLAYER SECTION

Frequency Response/Réponse en fréquence/頻率響應 .....	5 – 20,000 Hz (±1 dB)
Wow & Flutter (% WRMS)/Pleurage et scintillement (% efficace)/ 晃拌度 (%WRMS) .....	Below measurable limits
Total Harmonic Distortion/Distorsion harmonique totale/總諧波失真 .....	0.008% (at 1 kHz)
Dynamic Range/Plage dynamique/動態範圍 .....	95 dB (at 1 kHz)
Signal-to-Noise Ratio/Rapport signal sur bruit/訊號雜訊比 .....	95 dB
Channel Separation/Séparation de canaux/頻道分隔 .....	85 dB (at 1 kHz)

## REMOTE CONTROL

Battery Type/Type de pile/電池型式 .....	AAA size batteries (2 pcs.)
Width/Largeur/寬 .....	56 mm (2-1/4")
Height/Hauteur/高 .....	14 mm (9/16")
Depth/Profondeur/深 .....	105 mm (4-1/8")
Weight/Poids/重量 .....	50 g (1.8 oz)

## GENERAL

Power Requirement/Alimentation/電源 .....	14.4 V DC (11–15 V allowable)
Operating temperature/Température de fonctionnement/操作溫度 .....	+32°F to +113°F (0°C to + 45°C)
Maximum Power Output*/Sortie max. d'alimentation*/最大功率輸出* .....	45 W × 4
Output Voltage/Tension de sortie/輸出電壓 .....	1000 mV/10 k ohms
Maximum Pre-Output Voltage/ Tension maximale sortie pré-ampli/ 最大預輸出電壓 .....	2 V/10k ohms
Bass/Graves/低音 .....	±15 dB at 30 Hz
Treble/Aigus/高音 .....	±15 dB at 10 kHz
Weight/Poids/重量 (Monitor Section) .....	1.7 kg (3 lbs. 12 oz)
(Tuner Section) .....	1.6 kg (3 lbs. 8 oz)

# Specifications

English/Français/中文

## CHASSIS SIZE (Monitor section)

Width/Largeur/寬 ..... 178 mm (7")

Height/Hauteur/高 ..... 50 mm (2")

Depth/Profondeur/深 ..... 156 mm (6-1/8")

## CHASSIS SIZE (Tuner section)

Width/Largeur/寬 ..... 259 mm (9-13/16")

Height/Hauteur/高 ..... 37 mm (1-7/16")

Depth/Profondeur/深 ..... 177.5 mm (6-15/16")

- Notes:**
- Due to continuous product improvement, specifications and design are subject to change without notice.
  - The LCD panel is manufactured using an extremely high precision manufacturing technology. Its effective pixel ratio is over 99.99%. This means that there is a possibility that 0.01% of the pixels could be either always ON or OFF.

\* Under maximum operating voltage and input signal, into 4 ohms.



SERIAL NUMBER/NUMÉRO DE SÉRIE/系列號: \_\_\_\_\_  
INSTALLATION DATE/DATE D'INSTALLATION/安裝日期: \_\_\_\_\_  
INSTALLATION TECHNICIAN/INSTALLATEUR/安裝技術員: \_\_\_\_\_  
PLACE OF PURCHASE/LIEU D'ACHAT/購置地點: \_\_\_\_\_

**ALPINE ELECTRONICS, INC.**

Tokyo office: 1-1-8 Nishi Gotanda,  
Shinagawa-ku, Tokyo 141-8501, Japan  
Tel.: (03) 3494-1101

**ALPINE ELECTRONICS OF AMERICA, INC.**

19145 Gramercy Place, Torrance,  
California 90501, U.S.A.  
Tel.: 1-800-ALPINE-1 (1-800-257-4631)

**ALPINE ELECTRONICS OF CANADA, INC.**

Suite 203, 7300 Warden Ave. Markham,  
Ontario L3R 9Z6, Canada  
Tel.: 1-800-ALPINE-1 (1-800-257-4631)

**ALPINE ELECTRONICS OF AUSTRALIA PTY. LTD.**

6-8 Fiveways Boulevard Keysborough,  
Victoria 3173, Australia  
Tel.: (03) 9769-0000

**ALPINE ELECTRONICS GmbH**

Kreuzerkamp 7-11 40878 Ratingen, Germany  
Tel.: 02102-45 50

**ALPINE ITALIA S.p.A.**

Via C. Colombo 8, 20090 Trezzano Sul  
Naviglio MI, Italy  
Tel.: 02-48 47 81

**ALPINE ELECTRONICS FRANCE S.A.R.L.**

(RCS PONTOISE B 338 101 280)  
98, Rue De La Belle Etoile, Z.I. Paris Nord II  
B.P. 50016 F-95945, Roissy,  
Charles De Gaulle Cedex, France  
Tel.: 01-48 63 89 89

**ALPINE ELECTRONICS OF U.K., LTD.**

13 Tanners Drive, Blakelands,  
Milton Keynes MK14 5BU, U.K.  
Tel.: 01908-61 15 56

**ALPINE ELECTRONICS DE ESPAÑA, S.A.**

Portal De Gamarra 36, Pabellón 32  
01013 Vitoria (Alava)-Apdo. 133, Spain  
Tel.: 34-45-283588

Yamagata Printing Co.,  
Ltd.  
2-6-34, Takashima,  
Nishi-ku, Yokohama,  
Kanagawa, Japan

Designed by ALPINE Japan  
Printed in Japan (Y)  
68P30540Y49-O