 


verilux[®]
The Healthy Lighting Company™

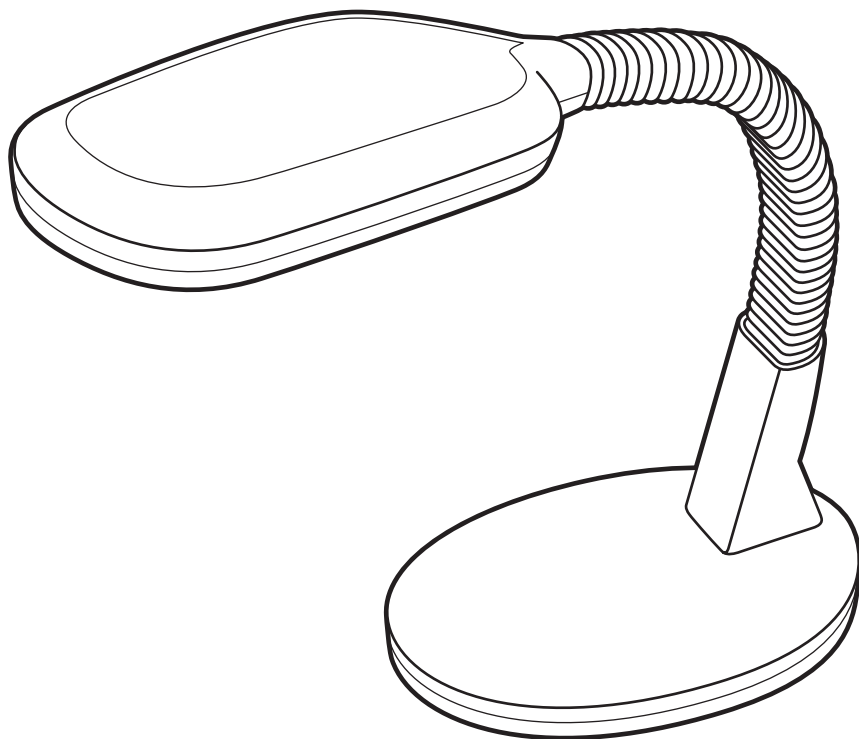

Original | Deluxe

Natural Spectrum® Desk Lamp

VD01



Dear Customer,

Thank you for purchasing the Verilux® Original Deluxe Natural Spectrum® Desk Lamp. You have received a quality product, backed by a three-year limited warranty. As a Verilux® customer, your satisfaction means everything to us. We look forward to serving you now and in the future.

Many other healthy lighting products are available through our catalog and online. Please visit us on the web at www.Verilux.com to learn about other great Verilux® products.

Have a Bright Day!

A handwritten signature in black ink that reads "Nicholas Harmon". The script is fluid and cursive, with a long, sweeping underline.

Nicholas Harmon
President and CEO

IMPORTANT SAFETY INSTRUCTIONS

SAVE THESE INSTRUCTIONS

Thank you for purchasing the Original Natural Spectrum® Deluxe Desk Lamp. Please read the following safety information before using. To reduce the risk of fire, electrical shock, or injury to persons:

- Do NOT dismantle.
- Do NOT alter power cord.
- Turn off/unplug and allow to cool before replacing bulb or cleaning.
- For indoor use only.
- The lamp is an electrical device. DO NOT USE NEAR WATER

 
GENERAL PRECAUTIONS

- Before plugging in the lamp, check to make sure the voltage corresponds with the main voltage of your location (120 volts).
- Do not use the lamp outside or in wet locations such as bathrooms. It is intended for indoor, dry use only.
- Not for use with light dimmers, timers, motion detectors or extension cords.
- This product may cause interference with radios, cordless telephones, or devices that use a wireless remote control, such as televisions. If interference occurs, move the product away from the device, plug the product or device into a different outlet, or move the lamp out of the line of sight of the remote control receiver.
- The light bulb may become loose during transit. To reinstall the light bulb, see the bulb installation instructions on page 6.
- Do NOT use lubricating agent in assembly; please see troubleshooting section if you are having difficulty assembling your lamp.
- Unplug from electrical outlet for extended periods of non-use or during lightning storms to ensure protection of the electronics.

GETTING STARTED


Main Parts & Controls

- A. Lamp Head
- B. Gooseneck
- C. Lamp Base
- D. Power Cord
- E. Polarized Plug
- F. Parabolic Grid Diffuser
- G. Bulb
- H. High/Off/Low Switch

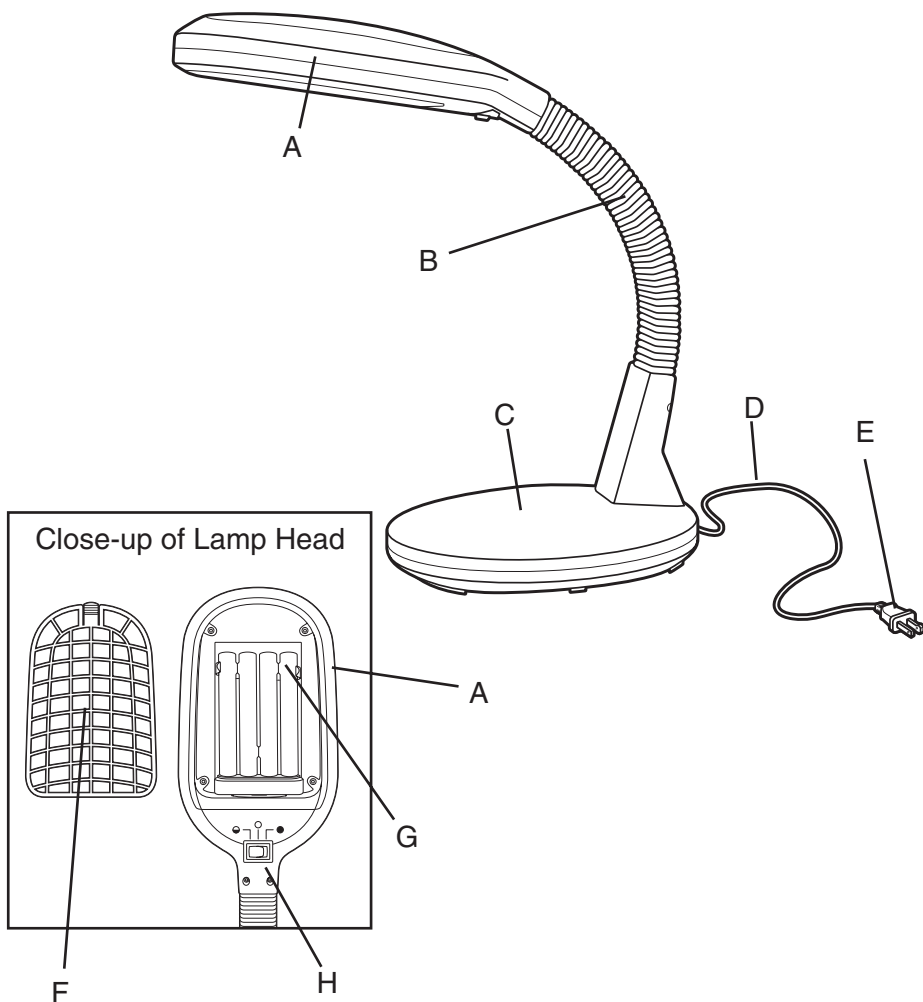

SET-UP INSTRUCTIONS

 
1. Attaching the Parabolic Grid Diffuser
 - Remove grid diffuser from protective plastic bag
 - Insert plastic pegs at bottom of grid diffuser into openings near bulb socket
 - Snap tab into place
2. Plug lamp into outlet and turn on; if bulb does not illuminate instantly, please refer to the troubleshooting section of this manual.

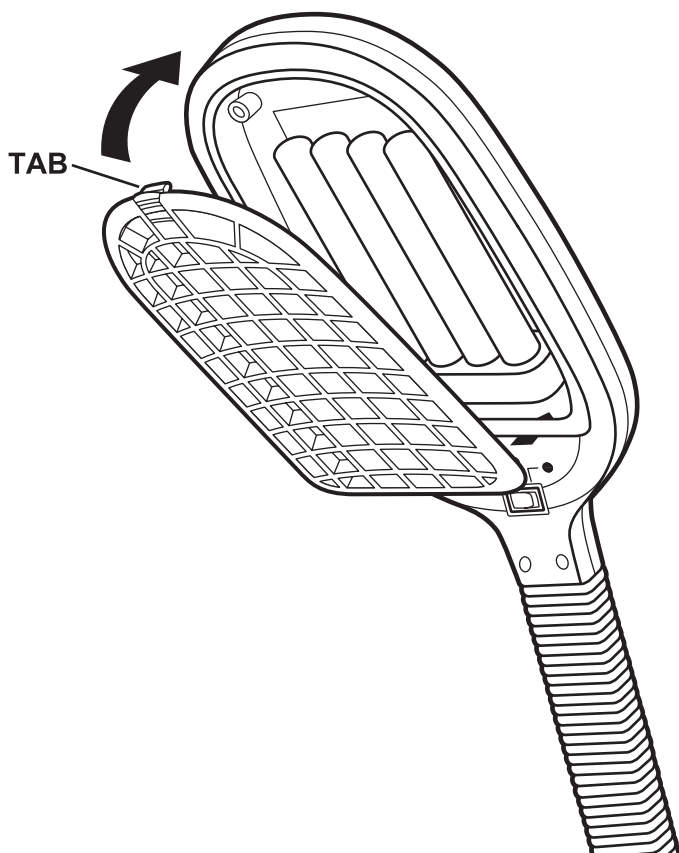

BULB REPLACEMENT INSTRUCTIONS


Removal

 1. Unplug lamp from power source.
2. To access to the bulb, remove grid diffuser by depressing the tab and lifting it out. (See page 5)
3. Firmly hold bulb base (B) and pull bulb (C) from the socket (A) in an outward motion.

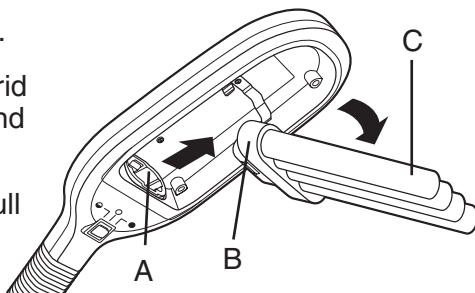

Installation

 1. Unplug lamp from power source.
2. Firmly hold base (B) and push bulb (C) into the socket (A).
3. Be sure bulb is firmly seated in the socket (see below) and snapped into the metal bulb clip (D).
4. Replace grid diffuser.

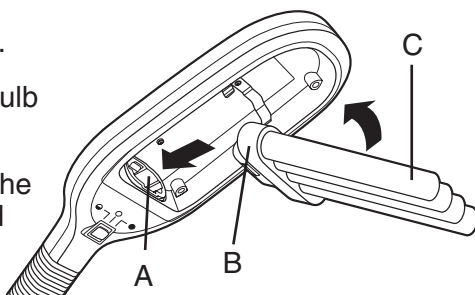

YES


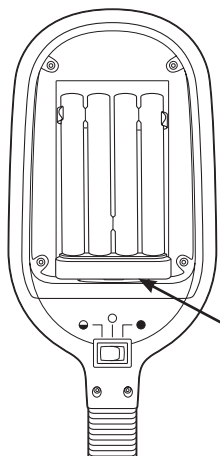 


Fig. 10

 NO

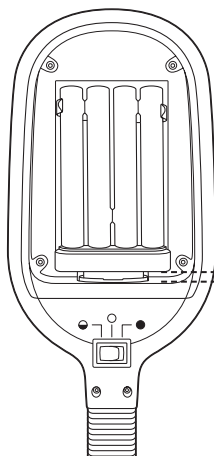

Correctly seated bulb

Incorrectly seated bulb

CARE & CLEANING

Your lamp is made from high quality materials that will last for many years with minimum care. You may want to periodically clean the lamp, using a mild non-abrasive cleaner and soft cloth. When cleaning, make sure you have turned off and unplugged the unit, and allowed sufficient time for the unit to cool. All liquid should be properly wiped away and dried prior to restoring power.

DO NOT USE SOLVENTS OR CLEANERS CONTAINING ABRASIVES, OR AMMONIA BASED CLEANERS

Note: All moisture should be properly wiped away and dried prior to restoring power.

TROUBLESHOOTING

Before Requesting Service on Your Verilux® Lamp, Please Read the Following:

- Make sure all power connectors, cords, and plugs are inserted fully and securely.
- Be sure the bulb is securely seated into the socket. (See page 8)
- Make sure there is power to the wall outlet or try another outlet.

PROBLEM	CHECK	SOLUTION
Light won't come on	Has the plug come loose?	Insert plug securely into wall outlet.
	Is the bulb old?	Check the bulb for blackening/darkening at the ends (an indicator of bulb life) and replace bulb.
	Is the bulb connected securely to the socket?	Be sure the bulb is securely seated into the socket, repeat the bulb installation process.
Blackening/darkening at ends of bulb	Is the bulb new?	Sometimes when a new bulb is turned on for the first time the tube will darken, but this will fade after a few minutes.
	Is the bulb old?	With older bulbs darkening of the tube indicates end of bulb life. (This doesn't affect operation except to reduce the amount of light available since the phosphor in that area has become inactive). Bulb replacement is recommended.
Light flickers	Has the plug come loose?	Insert plug securely into wall outlet.
	Is the bulb connected securely to the socket?	Be sure the bulb is securely seated into the socket, repeat the bulb installation process.
	Is the lamp connected to a dimmer switch?	Connect lamp plug only to wall outlet without a dimmer switch.

Three-Year Limited Warranty

ATTENTION! ONCE OPENED, PLEASE **DO NOT** RETURN THIS PRODUCT TO THE STORE WHERE IT WAS PURCHASED FOR REPAIR OR REPLACEMENT!

Many questions may be answered by visiting www.Verilux.com, or you may call our customer service department at 1-888-544-4865.

This limited warranty is provided by:

Verilux, Inc., 340 Mad River Park, Waitsfield, VT 05673

Verilux® warrants this product to be free from defects in material and workmanship for a period of three years from the date of the original retail purchase. During the limited warranty period, Verilux, Inc. will, at its option, repair or replace defective parts of this product, at no charge to the customer, subject to the following limitations. This limited warranty does not include any postage, freight, insurance or delivery fees. This warranty does not cover damage, defect or failure caused by or resulting from accident, external destruction, alteration, modification, abuse, misuse, or misapplication of this product.

If, during the first three years of ownership, this product fails to operate properly, it should be returned as specified below:

Please pack the defective product in its original protective packing and box, with a copy of your sales receipt, along with \$6.95 (check or money order to cover shipping and handling), and send to:

For U.S. Postal Service Only:

**Verilux Warranty
Service Center, c/o WTB**

P.O. Box 119, West Redding, CT 06896

For Fed Ex & UPS Only:

**Verilux Warranty
Service Center, c/o WTB**

32 Henry Street, Bldg 17A, Bethel, CT 06801

Please allow 4-6 weeks before you receive the repaired or replaced product.

ATTENTION: When returning a product, be aware that damage during shipping is the responsibility of the purchaser and will void any warranty claim. We recommend that you insure the shipment by shipper when returning this product or any parts. Be sure to return product in original packaging.

Note: Verilux® recommends using a quality surge suppressor on all electronics equipment. Voltage variations and spikes can damage electronic components in any system. A quality suppressor can eliminate the vast majority of failures attributed to surges and may be purchased at electronics stores.

Due to ongoing improvements, actual product may have slight variations from the product described in this manual.

Please visit our web site at: www.Verilux.com

verilux®
The Healthy Lighting Company™

340 Mad River Park, Waitsfield, VT 05673

1-888-544-4865

Printed in Taiwan for Verilux, Inc.

© Copyright 2007 Verilux, Inc. All rights reserved.