American Standard

METERING FAUCET

Installation Instructions 1340 SERIES *1340M SERIES*

SINGLE TAP PUSH BUTTON FAUCET

1340 SERIES FOR COLD AND TEMPERED SUPPLIES

1340M SERIES INCLUDES BELOW DECK MIXING VALVE WITH STRAINER






Certified to comply with ANSI A112.18.1M U.S. PATENT NOS.

Thank you for selecting American-Standard...the benchmark of fine quality for over 100 years. To ensure that your installation proceeds smoothly-please read these instructions carefully before you begin.

WARNING: SUPPLY INLET MUST BE FILTERED WITH A 60 MESH SCREEN. USE AMERICAN STANDARD MIXING VALVE WITH STRAINER OR COMMERCIAL 60 MESH STRAINER.

012692D

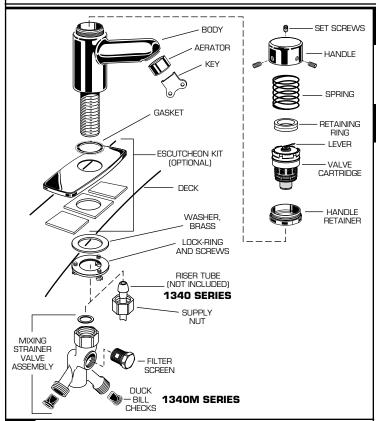


ASSEMBLING ESCUTCHEON KIT (OPTIONAL)

CAUTION

Turn off hot and cold water supplies before beginning.

 - Peel off paper backing from PADS and stick both PADS to underside of ESCUTCHEON about 1/4" from ends.
- Peel off paper backing from WASHER and stick WASHER into circular groove of SUPPORT PLATE.
- Place SUPPORT PLATE in center of ESCUTCHEON with WASHER visible. Apply a bead of PUTTY around
- Turn ESCUTCHEON over and center it with SUPPORT PLATE over center hole of sink deck.



PAD

ASSEMBLING MOUNTING KIT

Thread (3) SCREWS into LOCK RING.

SCREWS should extend half-way thru RING.

LOCK RING

MOUNTING FITTING

- Install faucet through the ESCUTCHEON being sure the rubber GASKET is between the FAUCET and the ESCUTCHEON.
- Install brass WASHER and turn LOCK-RING onto SHANK.
- Tighten (3) SCREWS in the LOCK-RING to secure fitting.

FOR 1340 SERIES ONLY


- Warning; 60 MESH STRAINER required for supply water.
- Install RISER TUBE (not included) and tighten SUPPLY NUT.
- Connect RISER TUBE to COLD or TEMPERED water supply.


FOR 1340M SERIES


Connect FLEXIBLE FAUCET SUPPLIES (1/2" faucet cone on one end, 3/8" compression on the other) to the MIXING VALVE INLETS and the hot/cold wall stops. The FLEXIBLE FAUCET SUPPLIES are **NOT** included. Turn on WALL STOPS and check


With WALL STOPS open and water flowing, adjust MIXING VALVE to temper water.

for leaks.

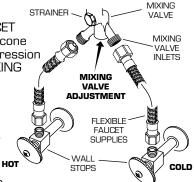

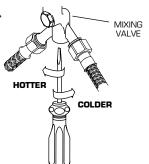

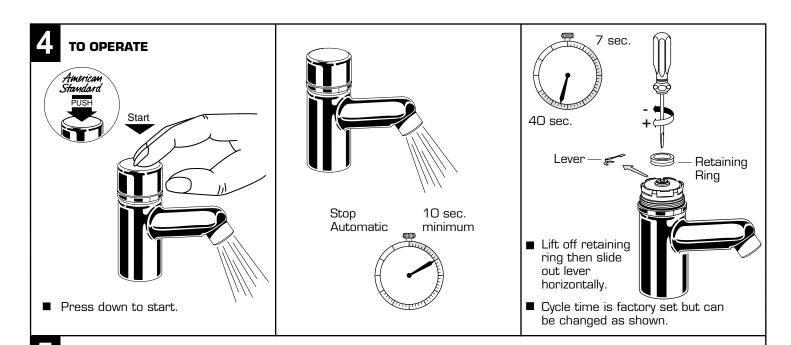

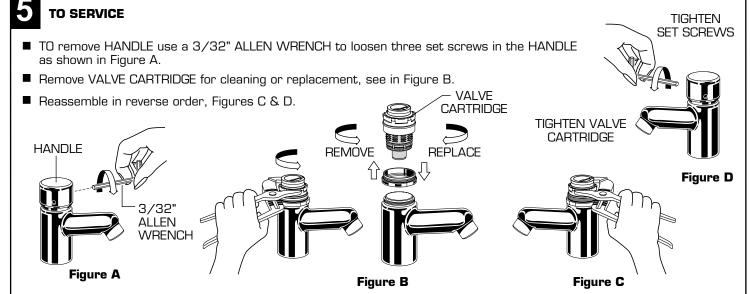





■ Use included key to install SPRAY into spout end.




HOTLINE FOR HELP For toll-free information and answers to your questions, call: 1 (800) 442-1902

Weekdays 8:00 a.m. to 7:00 p.m. Eastern Time
IN CANADA 1-800-387-0369 (TORONTO 1-905-306-1093)

Product names listed herein are trademarks of American Standard Inc. ©American Standard Inc. 1996

ROUGHING-IN DIMENSIONS

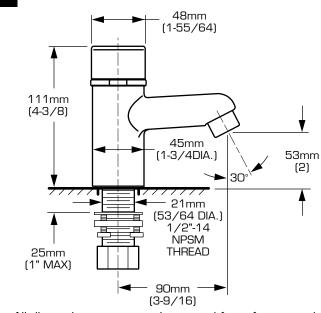

All dimensions are approximate and for reference only.

012692D