




GT-2C-L/GT-2C


GT-2H-L/GT-2H

Apartment Intercom System
Master Monitor Station/Sub Master Monitor Station

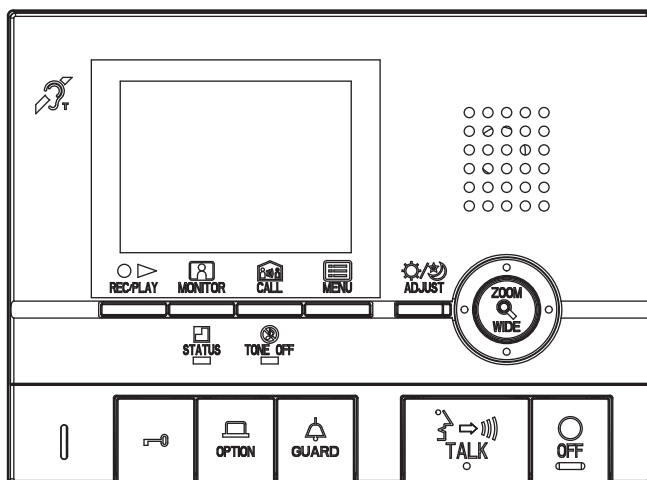

GT-2C-L/GT-2C

Master monitor station

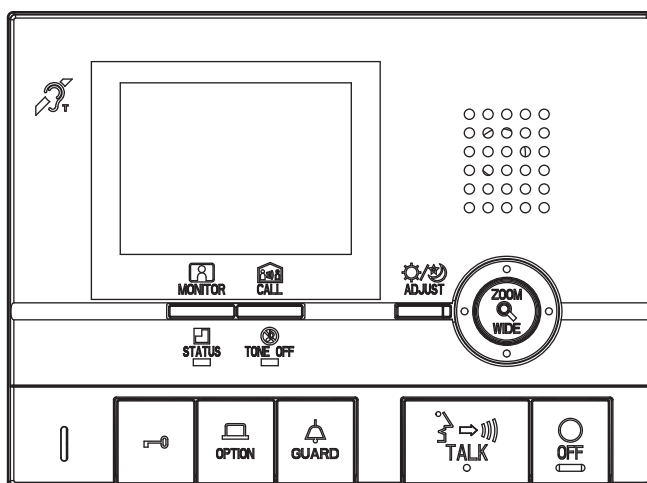

GT-2H-L/GT-2H

Sub master monitor station

PRECAUTIONS



⚠ WARNING

(Negligence could result in death or serious injury.)

- ⊘ 1. High voltage is present internally. Do not open the case. Electric shock could result.
- ⊘ 2. Do not dismantle or alter the unit. Fire or electric shock could result.
- ⊘ 3. Do not connect non-specified power sources to the +, - terminals. Also, do not install two power supplies in parallel to a single input. Fire or damage to the unit could result.
- ⊘ 4. Keep the unit away from water or any other liquid. Fire or electric shock could result.
- ⊘ 5. Do not put any metal or flammable material into the unit through the openings. Fire or electric shock could result.
- ⊘ 6. Do not use a power supply with a voltage other than the specified. Fire or electric shock could result.

⚠ CAUTION

(Negligence could result in injury to people or damage to property.)

- ⓘ 1. For power supply, use Aiphone power supply model or model specified for use with system. If non-specified product is used, fire or malfunction could result.
- ⊘ 2. Do not install the unit in any of the following locations. Fire, electric shock, or unit trouble could result.
 - * Places under direct sunlight or places near heating equipment that varies in temperature.
 - * Places subject to dust, oil, chemicals, etc.
 - * Places subject to moisture and humidity extremes, such as bathrooms, cellars, greenhouses, etc.
 - * Places where the temperature is quite low, such as inside a refrigerated area or in front of an air conditioner.
 - * Places subject to steam or smoke (near heating or cooking surfaces).
 - * Where noise generating devices such as dimmer switches or inverter electrical appliances are close by.
- ⊘ 3. Do not put anything on the unit or cover the unit with cloth, etc. Fire or unit trouble could result.
- ⊘ 4. Do not press on the LCD or subject it to high impact. The LCD glass could be punctured and result in an injury.
- ⊘ 5. If the LCD is punctured, do not allow skin contact with the liquid crystal inside. Inflammation could result.
 - * If liquid crystal is ingested, immediately gargle with water and seek medical attention.
 - * If contact with the eyes or skin occurs, clean with pure water for at least 15 minutes and seek medical attention.
- ⊘ 6. Do not place (install) the unit in locations subject to frequent vibration or impact. Injury or damage could result if the unit falls.

General Precautions


1. Keep the unit more than 1 m away from radio or TV set.
2. This unit is for indoor use only. Do not use outdoors.
3. In areas where broadcasting station antennas are close by, intercom system may be affected by radio frequency interference.
4. As to other manufacturer's devices (such as sensor, detectors, door releases) used with this system, comply with the Specifications and Warranty conditions that the manufacturers or vendors present.
5. If the unit is down or does not operate properly, unplug the power supply or turn off the control unit's power switch.
6. The unit is for wall-mount use only. For desktop applications, use desk stand.
7. When wall-mounted, the top of the unit may darken. This does not indicate a malfunction.
8. The unit case may become warm with use, but this is not a unit malfunction.
9. If a cellular phone is used close by, the unit may malfunction.
10. The LCD panel is manufactured with very high precision techniques. Please be aware of this in advance.
11. Refrain from using this unit in sunlit areas.
12. At night, due to reduced lighting on the object, the monitor sees more noise and the face becomes more difficult to see, but this is not a malfunction.
13. Talk within 50 cm (20") or less from the unit. If you stand too far away, it may be difficult for the other person to hear the communication.
14. If there are loud noises around the unit (such as music playing or children crying), the sound may break up and be difficult to hear.
15. During communication, if you speak before the other person has finished talking, your voice may not come through clearly. Communication will proceed smoothly if you wait until the other person has finished before speaking.
16. At a gate or porch illuminated by a fluorescent lamp, the picture may vary, but this is not a malfunction.
17. When outside temperature lowers sharply after rainfall, etc., the inside of the camera may fog up slightly, causing a blurry picture, but this is not a malfunction. Normal operation will be restored when moisture evaporates.
18. Due to the environmental sound around the unit, it may hinder smooth communication, but this is not a malfunction.
19. When protection film is affixed to a unit, be sure to remove this before use.
20. The outline of video images displayed by video door station may differ from that of the actual person(s) or background, but this is not a malfunction.
21. If the screen of a video door station freezes during wintertime, the picture may become difficult to see or the CALL button may not move, but this is not a malfunction.
22. Aiphone assumes no responsibility for corruption of saved information (such as changes to or deletion of saved information). Please be aware of this in advance.
23. The unit turns inoperative during power failure.
24. When putting a hearing aid into T-mode and approaching the unit, the intercom system may be affected by radio frequency interference etc., depending on the installation environment.
25. Be careful about where the unit is used, as use of computers, televisions, or radios near the unit may affect transmission from the unit or cause unwanted noise.
26. If very bright light such as direct sunlight hits the camera, white lines may appear on the screen or the light may create a reflection pattern on the screen. This will make it difficult to see the caller's face, but this is not a unit malfunction.

Table of Contents


1 NAMES	
Master monitor station (GT-2C-L/GT-2C)	4
Sub master monitor station (GT-2H-L/GT-2H)	4
2 VIEWING THE SCREEN (MASTER MONITOR STATION)	5
3 OPERATING METHOD (MASTER MONITOR STATION)	
Turning off the screen display	6
Setting the date and time	6
4 RECEIVING CALLS	
Answering a call	7
Door release	8
Light control	8
Doctor call (master monitor station)	8
5 CALLING	
Calling security guard stations	9
Room-to-room calling	9
6 MONITORING	10
7 OPERATION DURING COMMUNICATION AND MONITORING	
ZOOM/WIDE switching	11
Pan/tilt operation	11
Individual door zoom picture pre-set (master monitor station)	11
Night illumination	12
Backlight adjustment and night sensitivity adjustment	12
Switching of surveillance camera monitor in common area	12
8 RECORDING AND PLAYING (MASTER MONITOR STATION)	
Automatic recording	13
Manual recording	13
Playing recorded pictures	14
Saving recorded pictures	15
Erasing recorded pictures	15
9 ALARMS AND RELATED INFO.	
OPTION button	16
Emergency alarm	16
External calls	17
PRESENCE SECURITY, ABSENCE SECURITY setting (master monitor station)	17
Canceling security setting after arrival (master monitor station)	18
Canceling security alarms (master monitor station)	18
10 CHANGING SETTINGS (MASTER MONITOR STATION)	
Using the MENU	19
LANGUAGE setting	19
CALL TONE switching	20
Picture memory setting for individual door call	20
External call sound time duration setting	21
Individual door call time setting	21
Individual door night illumination setting	22
SECURITY PIN setting	23
DEPARTURE TIMER, ARRIVAL TIMER setting	24
Security alarm sound duration time setting	24
11 TECHNICAL PRECAUTIONS	25
12 SPECIFICATIONS	25

1 NAMES

Master monitor station (GT-2C-L/GT-2C)

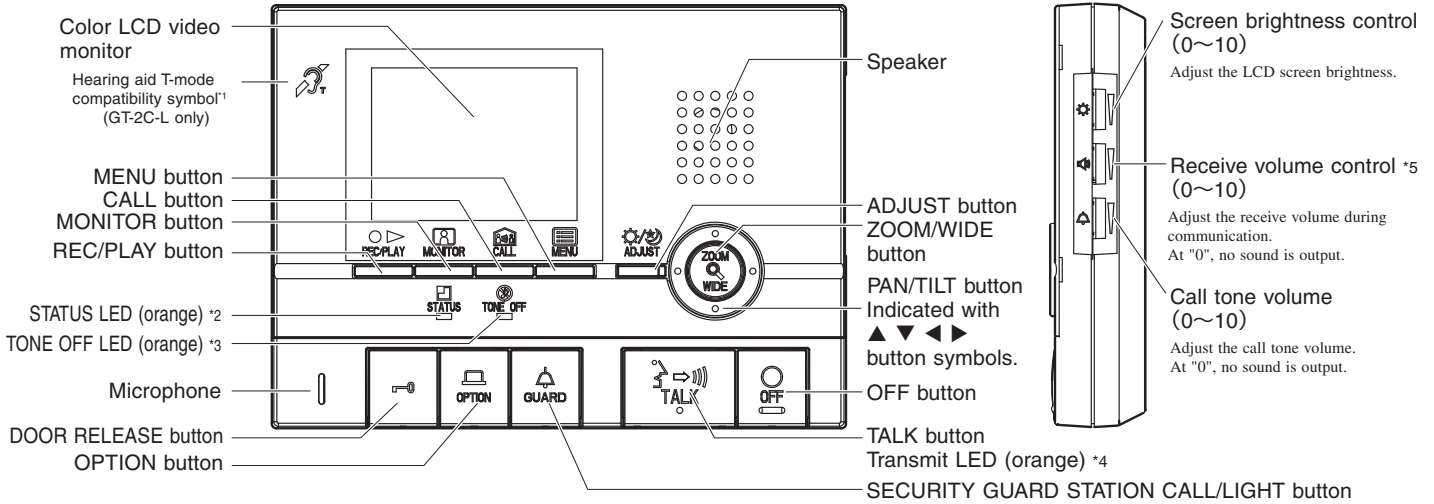

Sub master monitor station (GT-2H-L/GT-2H)

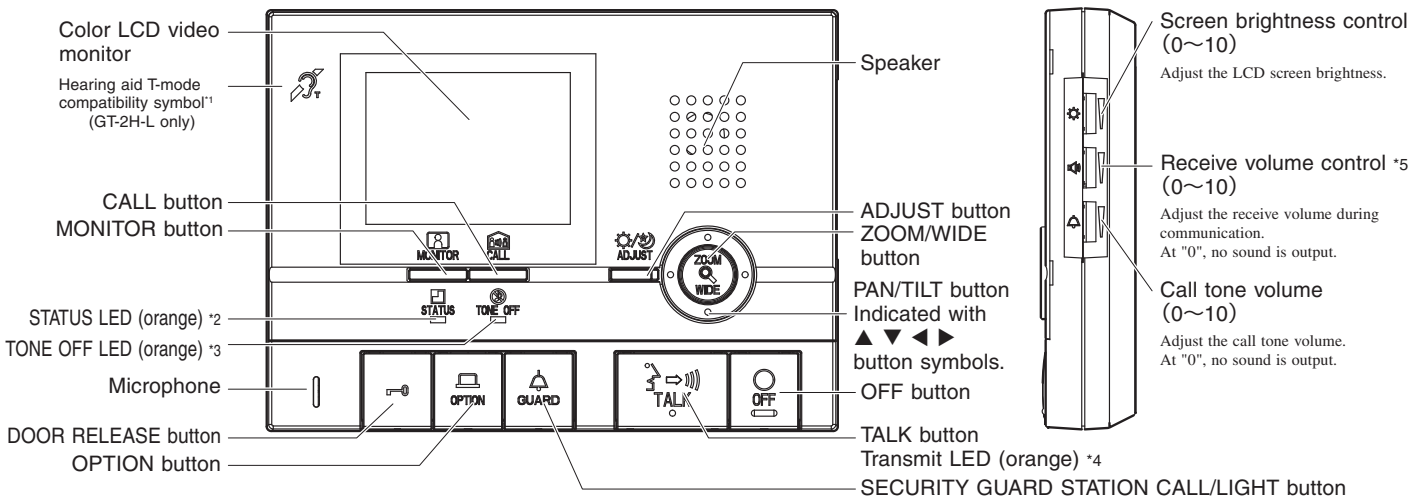

*1: This unit emits an electromagnetic field for hearing aids equipped with T-mode to produce clear audio.

*2: The status is indicated by the LED lighting and blinking.

Long-interval blinking: Blinks every 5.5 seconds

Medium-interval blinking: Blinks every 2.5 seconds


Blinking: Blinks every 0.5 seconds

*3: When the call tone is set to OFF, this LED will blink with a long interval.

*4: The LED lights up while communicating.

*5: When the handset is connected, the receive volume control cannot be adjusted.

2 VIEWING THE SCREEN (MASTER MONITOR STATION)

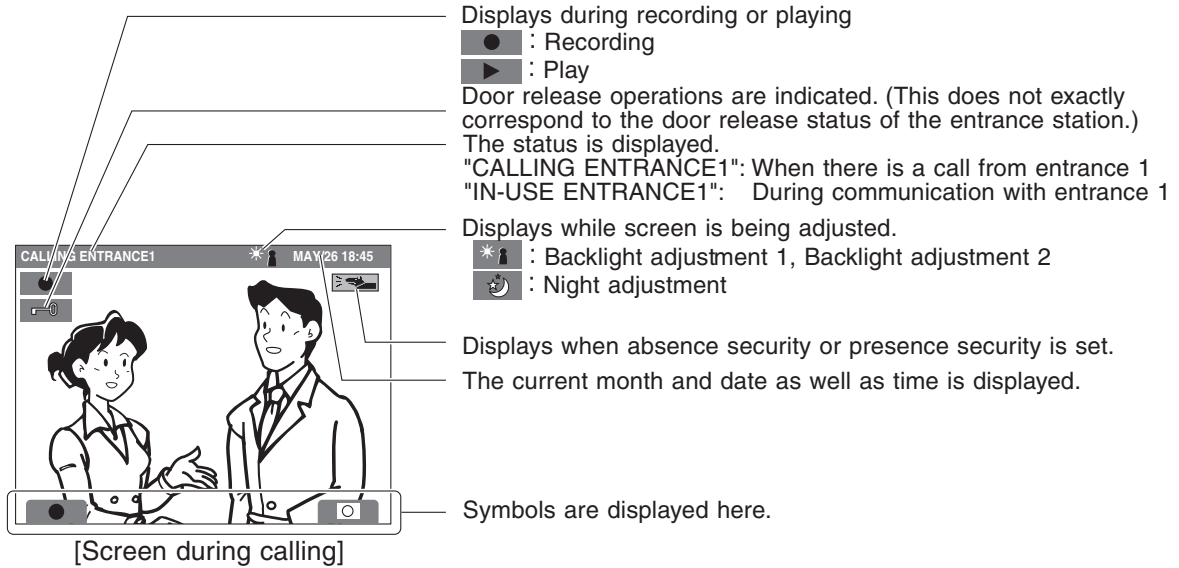

3 OPERATING METHOD (MASTER MONITOR STATION)


To operate this unit, check the symbol and then press the appropriate operation button. This unit is not operated with touch-panel operation.

⚠ Do not press on the LCD or subject it to high impact. The LCD glass could break which could result in an injury.



Main symbols and function descriptions


Symbol	Function description
●	To manually record
↶	To return to the screen of the previous operation
⏮	To display the previous (more recent date/time) picture
▶	To play the recorded pictures
⏭	To display the next (older date/time) picture
🔒/🔓	To save or erase an image
🗑️	To erase a recorded image
⏩	To fast forward the play screen
⏸	To pause the play screen
⏪	To advance the play screen frame by frame
⏮	To reverse the play screen frame by frame
📷	To erase the display
🔒/🔓	To save recorded pictures
👤	To perform monitoring
🏠	To perform room-to-room communication
⚙️	To perform setting

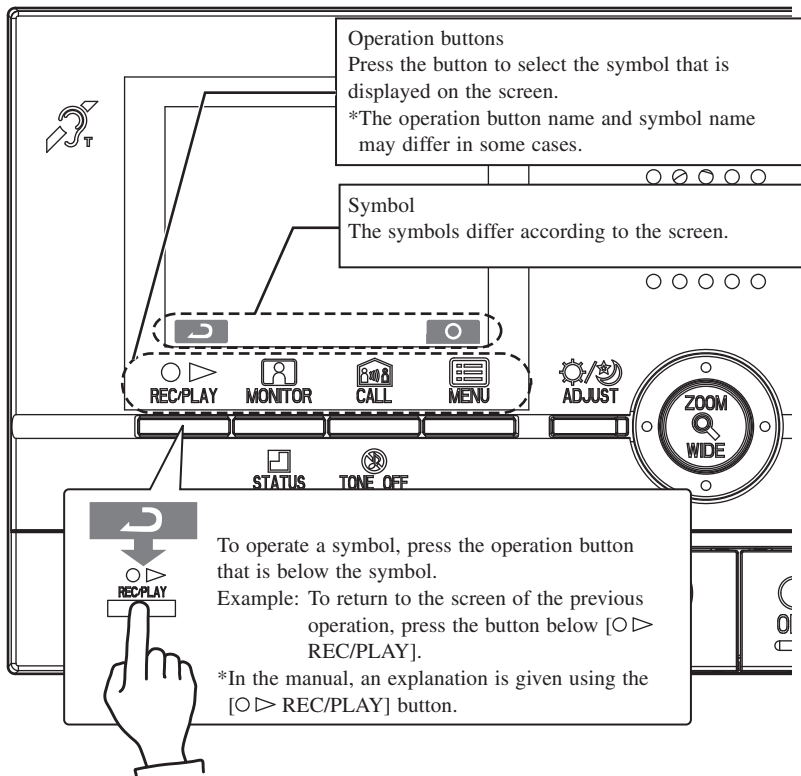*Setting can also be done by pressing [🔍 ZOOM/WIDE] button.



 



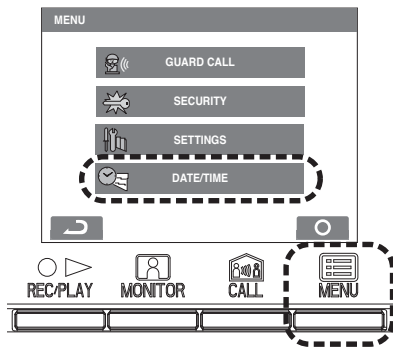
3-1 Turning off the screen display

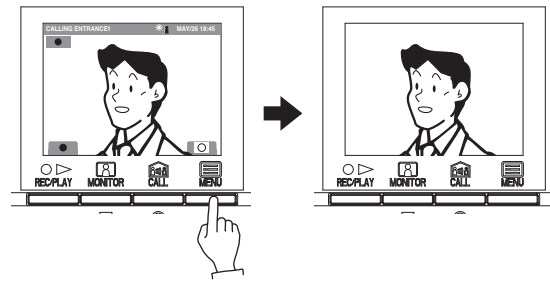
 
 is displayed on the screen while video images are played. Press the  MENU] button to turn off all items displayed on the screen (date, time, etc.) so that the entire picture is visible.




3-2 Setting the date and time


- In the standby mode, press the  MENU] button.
 - When the time is set to the initial setting, skip step 2 and go to step 3.
- Press the  or  button to select the "DATE/TIME", and press the  MENU] button.





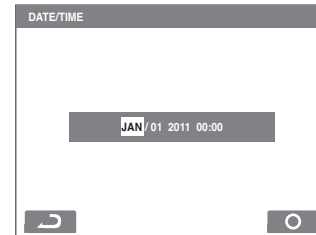

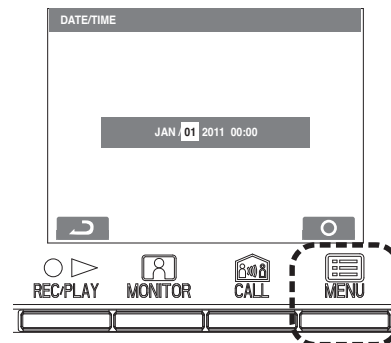

- In the "DATE/TIME" screen, press the  or  button to select the "Month".










- Press the  button to set the "Month" and the cursor will move to "Day".




- Perform the same steps to set the "Day", "Year", "Hour" and "Minute". After setting the "Minute", press the  MENU] button to complete the settings.
- Press the  OFF] button to return to the standby mode.

-  1. If there are no operations for approximately 1 minute during the setup mode, the setting will end automatically. If the settings end while incomplete, start again from the beginning.
-  2. A maximum error of ± 60 seconds can occur in the displayed time over a month. Periodically adjusting the time setting is recommended.
-  3. When power is not supplied to the unit for more than 30 minutes, the set time will return to its initial setting, "JAN/01/2011 00:00", and the STATUS LED (orange) will blink with a long interval.
-  4. If the security sensor is not installed, "SECURITY" will not display.

NOTES: Operations for setting numbers

-  button (press once): The date or time increases by one.
-  button (press once): The date or time decreases by one.
-  button (press once): The cursor moves to the left.
-  button (press once): The cursor moves to the right.
-  button (press and hold for 1 second or more): The date or time increases in succession.
-  button (press and hold for 1 second or more): The date or time decreases in succession.
-  MENU] button : The settings are fixed.

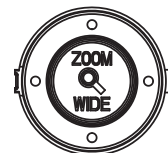


4 RECEIVING CALLS


⚠ The unit used in the example pictures is a master monitor station.

4-1 Answering a call


- 1 When a call is received from an entrance station, security guard station, or door station, a call tone will sound and the STATUS LED blinks. If the station has a camera, a picture will be displayed on the monitor. If the station has a doorbell, a call tone sounds. (Communication is not possible.)

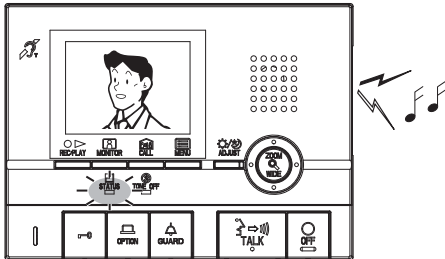

- 2 Press the [TALK] button once, and after the beep, communicate hands-free. Hands-free communication starts when the STATUS LED switches from blinking to steadily lit. Transmit LED lights when you talk, and goes off as you listen to the caller (or hear outside sounds).
 - If you press the [TALK] button for at least one second while talking hands-free, a beep will be emitted and you can communicate by press-to-talk communication.
 - In press-to-talk communication, you press the [TALK] button to talk and release it to listen.
 - Calling turns off after a set amount of time if there is no answer. (Turning off occurs after 45 seconds for the direct select entrance station.)
 - Listening is possible with hearing aids with T-mode. (GT-2C-L/GT-2H-L only)
 - On a sub master monitor station also, the STATUS LED switches from blinking to steadily lit.

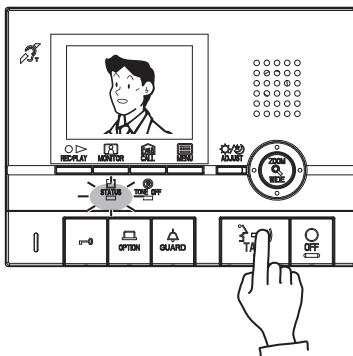

- 3 When you are done talking, press the [OFF] button. The STATUS LED will go off.

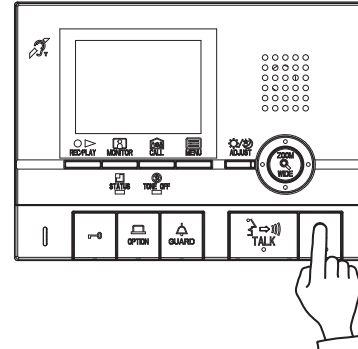


- NOTES:
1. If the call tone volume is turned off, the TONE OFF LED will blink with a long interval.
 2. When press-to-talk is disabled, press-to-talk communication cannot be used.
 3. During communication, it is not possible to switch back to hands-free communication from press-to-talk communication.
 4. The communication will be ended automatically after approximately 1 minute when hands-free communication is made at the residential station or after approximately 3 minutes when the hand-set is used.

⚠ The unit emits an electromagnetic field. If a hearing aid with T-mode is brought too close to the unit, this may cause ear pain. (GT-2C-L/GT-2H-L only)


Log-data function for missed calls from security guard station (master monitor station)

When a call from a security guard station is not answered, a call record picture is recorded (counted as 1 shot). The name of the security guard station is also displayed.

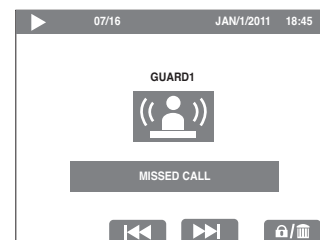

4-2 Door release

- 1 Press the [] button while in communication with the entrance station.

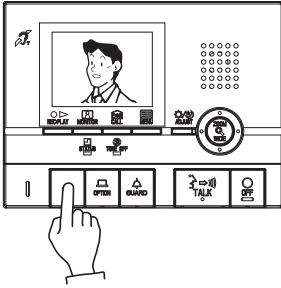

- 2 Door release is activated at the entrance station. [] is displayed for approx. 5 sec. at the master monitor station. (This does not exactly correspond to the door release status of the entrance station.)

- If the station has a camera, the door release will also activate during calling.


- ⚠ Depending on the electric door release system that you use, door release may be active only while the door release button is pressed.



4-3 Light control

Turning the entrance light on (when light is installed in common area)

- 1 Press the [] button once during entrance station calling, communication, or monitoring.

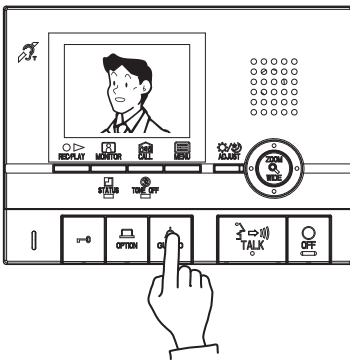

- 2 The outside light at the entrance will only turn on for the preset duration of time.




- ⚠ This function is not available if a surveillance camera is installed in the common area.


4-4 Doctor call (master monitor station)

When the specified residence is called using Doctor call (automatic entry), the electric lock is automatically released without a door release operation from the residential station.

- 1 In the standby mode, press the [] button while pressing the [] button. Press the button once more to reset the Doctor call function.
 - When Doctor call is enabled, the TONE OFF LED blinks with a medium interval.

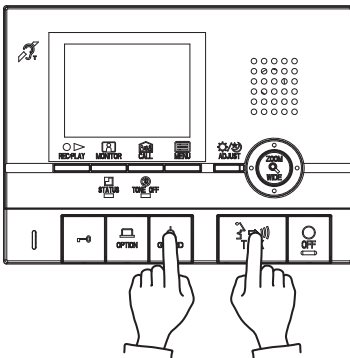


- 3 The residential station for which the Doctor call function is set is called. Press the [] button as necessary to respond.

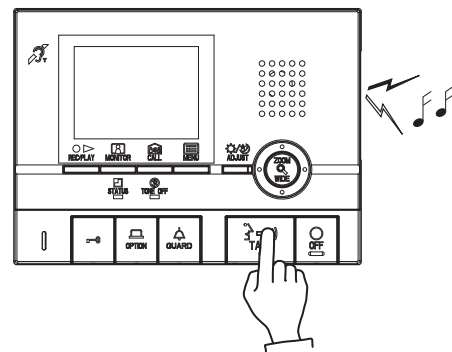

NOTES: When Doctor call is enabled, the TONE OFF LED function cannot be used. (It is possible to turn the call tone off.) When calls are transferred to the security guard station, door release with Doctor call is not possible.

- 2 Press CALL button of the entrance station to unlock a door without a door release operation from the residential station.

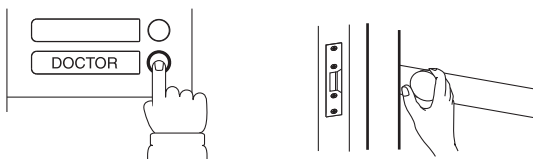


- ⚠ This function may not be operated due to the equipment being used.

5 CALLING

⚠ The unit used in the example pictures is a master monitor station.


5-1 Calling security guard stations

- When calling all of the security guard stations, press the [🛡️ GUARD] button while in the standby mode.
- When calling one of the security guard stations, press the [☰ MENU] button, select "GUARD CALL", and press the [☰ MENU] button.

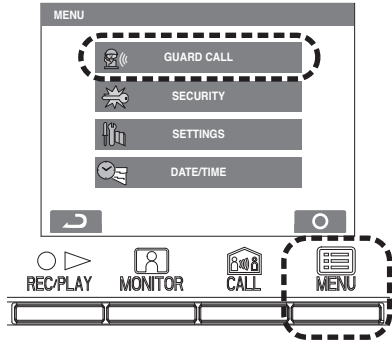

- Move the cursor to the security guard station to be called and press the [☰ MENU] button. The STATUS LED blinks and calls the indicated security guard station.


- If there is no answer, a call record will be stored in the security guard station, and notification of the call will be sent to the security guard.
- On a sub master monitor station also, the STATUS LED will blink.

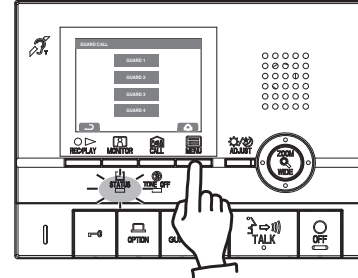


NOTES: With a sub master monitor station, all security guard stations will be called. (Selection is not possible.)

5-2 Room-to-room calling


- When you press the [🏠 CALL] button, you can call all sub master stations that are connected to the master monitor station.
 - A call will be made to all sub master stations and the STATUS LED will blink.
 - The reply of the other person is not heard.
 - On a sub master monitor station also, the STATUS LED will blink.

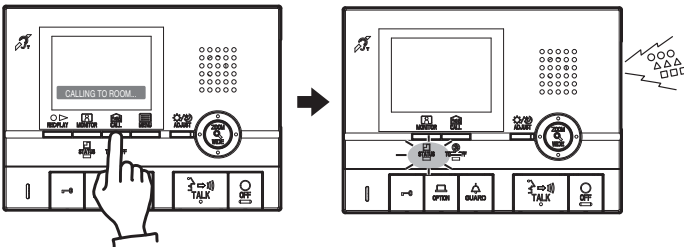

- If the other person presses the [🗣️ TALK] button, the STATUS LED lights up and communication between two people is possible.
 - Listening is possible with hearing aids with T-mode. (GT-2C-L/GT-2H-L only)

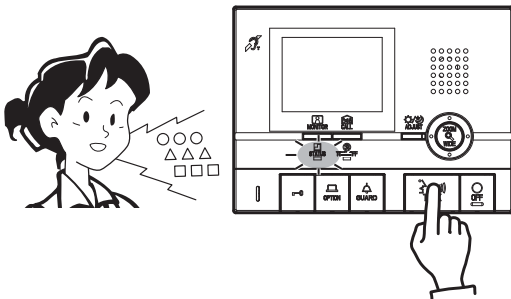

- When you are done talking, press and hold down the [⏻ OFF] button. The STATUS LED will go off.

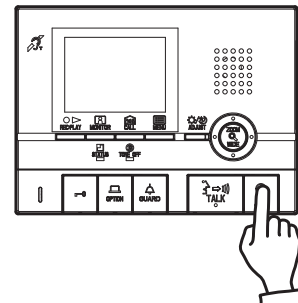


NOTES: 1. Room-to-room communication ends automatically after approximately 10 minutes. To perform room-to-room communication again, repeat from the beginning.

2. If a call is received from the entrance station during room-to-room communication, the image from the entrance station is displayed at the master monitor station and sub master monitor station where communication is taking place. Press the [⏻ OFF] button to end room-to-room communication, and press the [🗣️ TALK] button to switch to communication with other stations such as entrance stations.


6 MONITORING

⚠ The unit used in the example pictures is a master monitor station.

- 1 In the standby mode, press the [MONITOR] button to display the video image from an individual door station. Audio can heard at the same time. The STATUS LED will light up.

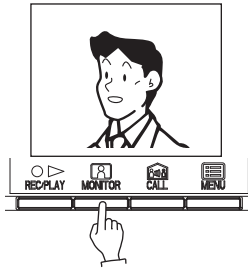

- 2 Press the [MONITOR] button again to display the video image in order from entrance 1. Audio can heard at the same time.

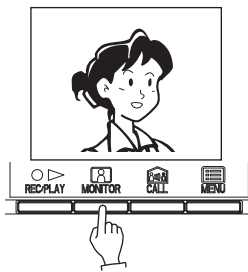

- Listening is possible with hearing aids with T-mode. (GT-2C-L/GT-2H-L only)

- NOTES:
1. If there is an operation such as a call, monitoring ends and the call operation begins.
 2. If the monitor button of a residential station at another residence is pressed, monitoring of the entrance station switches to the monitor of the residential station where the monitor button was pressed last.
 3. During monitoring, press the [TALK] button to communicate with the individual door station or entrance station being monitored.
 4. With individual door monitoring, monitoring that was initiated first is prioritized over later attempts at monitoring. (If an attempt is made to monitor from a sub master station during monitoring from a master station, an alarm sound will start beeping.)
 5. During monitoring, the display uses a wide picture display. (If the [ZOOM/WIDE] button is pressed, the display changes to the zoom picture.)
 6. When an individual door is being monitored, the illuminator LED will not light up at night until the TALK button is pressed.
 7. Monitoring will automatically end after 30 seconds.



- ⚠ 1. It will take a moment after pressing the MONITOR button for the picture to display, so please wait for the monitor picture to display before performing the next button operation.
- ⚠ 2. This function may not be usable depending on the equipment being used.

7 OPERATION DURING COMMUNICATION AND MONITORING

⚠ The unit used in the example pictures is a master monitor station.

7-1 ZOOM/WIDE switching

- Press the [ZOOM/WIDE] button when a picture is displayed.
 - Switching between zoom ⇄ wide occurs each time the button is pressed.

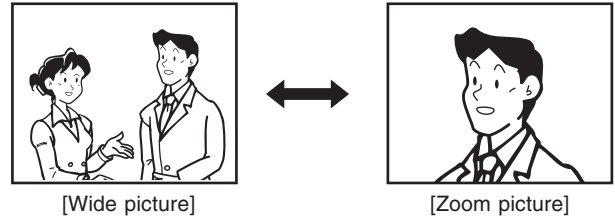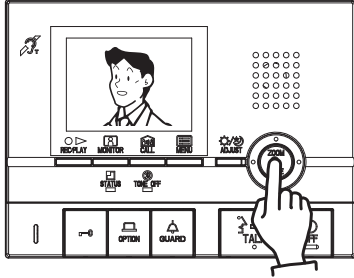


NOTES: 1. When the caller is not shown in the center of the picture, the zoom picture can be moved up, down, left, and right. (Refer to section 7-2.)
 2. For an individual door, when the display changes from the wide picture to the zoom picture, the zoom picture starts at the preset (section 7-3) position.

⚠ The wide picture may be distorted in comparison with the zoom picture due to the characteristics of the camera, but this is not a malfunction.

7-2 Pan/tilt operation

- When a zoom picture is displayed, press the [▲], [▼], [◀], or [▶] button.
 - [▲]: Up
 - [▼]: Down
 - [◀]: Left
 - [▶]: Right
 - Moving diagonally is also possible.

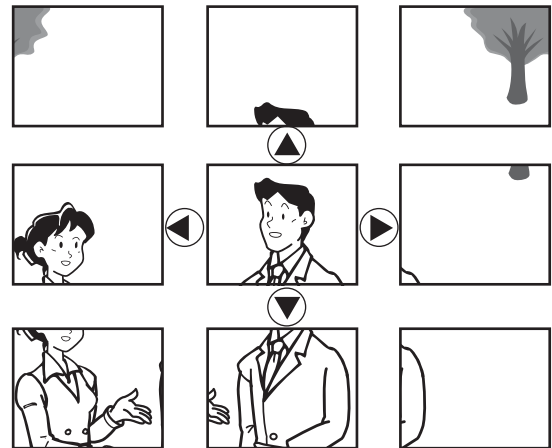

- The image range of the zoom picture and wide picture differs. The edges of the wide picture do not display with the zoom picture.
- At night, due to reduced lighting on subjects, subjects may become blurry and difficult to see if the zoom picture is moved up, down, left, or right. (The same thing occurs with moving subjects.)

7-3 Individual door zoom picture pre-set (master monitor station)

The picture can be set to display using a set zoom picture position for when a call is received from an individual door.

- When switching from the wide picture to the zoom picture, the zoom picture displays starting from the pre-set position.

- When an individual door zoom picture is displayed, press the [▲], [▼], [◀], or [▶] button. (Ex. Pressing the [▲] button moves the picture up.)
 - While viewing the picture, set the desired picture position.

- Press the [ZOOM/WIDE] button (for at least 2 seconds).
 - A beep will sound and the position setting will be completed.




NOTES: 1. To change the zoom picture position that has been set, perform the zoom picture settings again. The previous settings will be overwritten.
 2. The zoom picture position set with the master monitor station will also be displayed at the sub master monitor station. * Pre-sets cannot be set from a sub master monitor station.
 3. The picture will display according to the individual door call record setting.

7-4 Night illumination

At night, the illuminator LED lights up during an entrance station or individual door station call. Also, the LED can be made to light up during monitoring of a individual door station.

When a call is made from an entrance station or individual door station

- 1 If the call button of the entrance station or individual door station is pressed, the illuminator LED will light up.

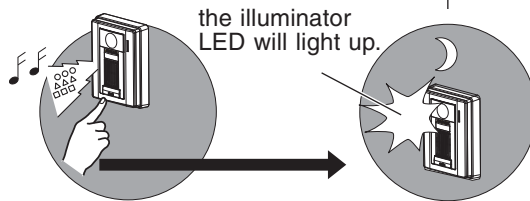


- 2 When communication ends, the illuminator LED will go out.

Lighting up the illuminator LED when monitoring an individual door station

- 1 When the [TALK] button is pressed during monitoring, communication starts and the illuminator LED will light up.

- ⚠ 1. Be aware that inside sound can be heard at the entrance.
- ⚠ 2. For entrance stations, the LED lights up when monitoring starts.

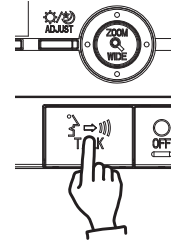

- 2 When communication ends, the illuminator LED will go out.

NOTES: 1. Distinguishing between day and night is automatically done by the entrance station or individual door station.
2. Operation will vary depending on the entrance station setting and individual door night illumination setting.

7-5 Backlight adjustment and night sensitivity adjustment

Day

When a unit is installed at an entrance or individual door where backlighting makes viewing difficult, adjustment for easier viewing is performed.

- 1 When the picture is difficult to see, press the [ADJUST] button to switch between the three modes "Backlight adjustment 1", "Backlight adjustment 2" and "No adjustment".
- 2 For an individual door, press the [ADJUST] button for at least 2 seconds to make a beep sound and to set the mode being displayed (master monitor station only).

NOTES: 1. is displayed during "Backlight adjustment 1" and "Backlight adjustment 2".
2. When display is performed again, entrance stations will display using the default setting while individual door stations will display using the mode that was last set.

Night

At night or when the area around the entrance or an individual door is dark, adjustment for easier viewing is performed.

- 1 When the picture is difficult to see, press the [ADJUST] button to switch between "Night adjustment" and "No adjustment".


NOTES: 1. is displayed during night adjustment.
2. When display is performed again, both the entrance and individual door stations will display without any previously set adjustment being applied.
3. Distinguishing between day and night is automatically done by the entrance station or individual door station.
4. Pressing the [ADJUST] button at night makes the caller's face easier to see, but moving subjects may be more difficult to see.

7-6 Switching of surveillance camera monitor in common area

When a surveillance camera is mounted in the common area

Press the [GUARD] button during calling from the entrance station, communication with the entrance, or entrance monitoring to switch to the surveillance camera video image. will display.


Press the button again to return to the entrance station video image.

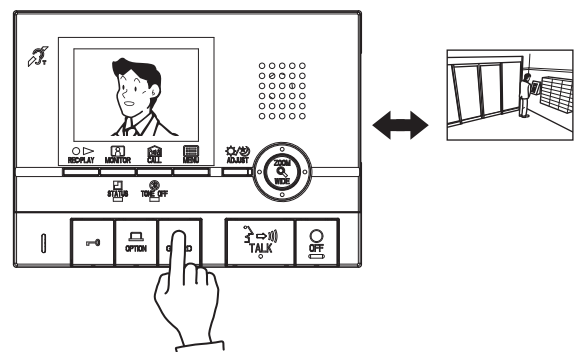


⚠ During switching between the entrance camera and surveillance camera in common area, the image on the monitor may become momentarily distorted, but this is not a malfunction.

8 RECORDING AND PLAYING (MASTER MONITOR STATION)

8-1 Automatic recording

If call is received from an entrance station or individual door station, recording starts automatically. During recording, the  symbol blinks on the screen.

- Recording starts approximately 2 seconds after the CALL button of an entrance station or individual door station is pressed. A maximum length of approximately 6 seconds (6 shots) can be recorded, with 1 image and 1 shot for each second.
- In the initial settings, pictures are automatically recorded. All six pictures are zoom pictures at a pre-set position.
- A maximum of 40 pictures can be recorded (combined total of automatic recording and manual recording pictures). When 40 pictures are exceeded, new pictures overwrite old pictures starting from the oldest recorded date. (Up to 10 protected picture cannot be overwritten.)
- Automatic recording will also start if a call is made from an entrance station or individual door station that is being monitored.
- When a call from the security guard station is not answered, 1 shot is recorded in the call record.
- If an operation with high priority is performed during recording, recording stops and operation is performed according to the order of priority.

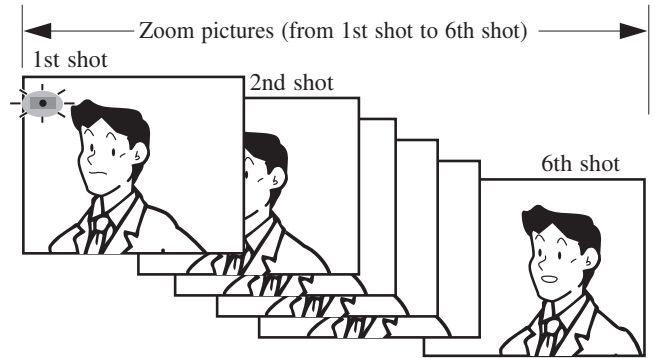


- NOTES:
1. The automatic recording function cannot be cancelled.
 2. Pictures recorded at individual door stations are recorded using the method that has been set (section 10-4). Picture recording at entrance stations is set in advance. However, if switching between zoom and wide is performed during automatic recording, the displayed picture will be recorded.
 3. The picture during monitoring is not automatically recorded. If you wish to record this picture, press the [○▷ REC/PLAY] button.

- ⚠ 1. During installation, if a zoom ↔ wide range is set in the entrance station call picture settings, the number of recorded pictures may not switch between 3 zoom pictures ↔ 3 wide pictures.
- ⚠ 2. If switching of the surveillance camera in common area is performed during recording, a distorted picture may be recorded, but this is not a malfunction.


8-2 Manual recording

- 1 Display the video image of the location to be recorded with an operation such as a [MONITOR] button operation.

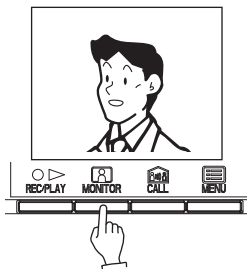

- NOTES:
1. Manual recording is not possible during automatic recording (for approximately 7 seconds after receiving a call from an entrance station or individual door station).
 2. After the end of automatic recording (approximately 7 seconds after receiving a call from an entrance station or door station), recording of another image in addition to the automatically recorded image can be performed.

- 2 Press the [○▷ REC/PLAY] button. The  symbol flashes on the screen and recording starts.

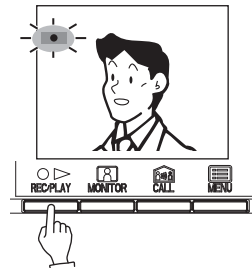


- A maximum length of approximately 6 seconds (6 shots) can be recorded, with 1 image and 1 shot for each second.
- A maximum of 40 pictures can be recorded (combined total of automatic recording and manual recording pictures). When 40 pictures are exceeded, new pictures overwrite old pictures starting from the oldest recorded date. (Up to 10 protected shots cannot be overwritten.)
- If an operation with high priority is performed during recording, recording stops and operation is performed according to the order of priority.

- ⚠ If switching of the surveillance camera in common area is performed during recording, a distorted picture may be recorded, but this is not a malfunction.

8-3 Playing recorded pictures

If there are automatically recorded pictures, such as those taken while you were out, the STATUS LED blinks with a long interval during standby mode.

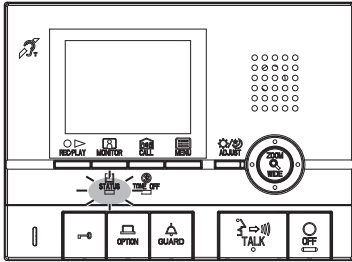

1 Press the [○▷ REC/PLAY] button in the standby mode to display the picture with the most recent date and time.


- [] displays on the screen when there are no recorded pictures.

The status is displayed.

Sequence number of image currently being displayed/total recorded images

Displays on unplayed images

Displays when image is saved

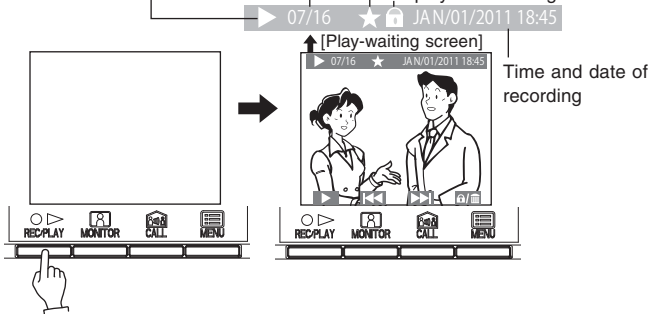

* In addition, the operations shown below are also possible in the play-waiting screen.

- [] MONITOR] button:

To display the next (more recent date/time) picture.

When the button is pressed for 1 second or more, the first picture of the set will display and then the other pictures can be checked in succession in the direction of the newer dates and times by keeping the button pressed. (If the [] MONITOR] button is pressed while the picture with the most recent date and time is displayed, the picture with the oldest date and time will display.)

- [] CALL] button:

To display the previous (older date/time) picture.


When the button is pressed for 1 second or more, the first picture of the set will display and then the other pictures can be checked in succession in the direction of the older dates and times by keeping the button pressed.

- [] MENU] button:

To save or erase an image. (Refer to sections 8-4 and 8-5.)

⚠ The recorded pictures are displayed in order based on the date set during recording.

2 Press the [○▷ REC/PLAY] button on the play-waiting screen. The recorded image is played. When the play of one image ends, the next image is displayed.

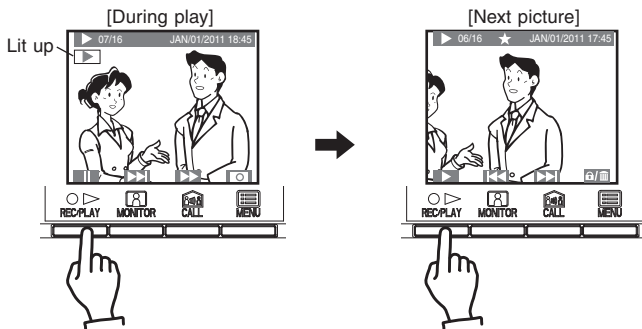

* The operations shown below are possible during play.

- [○▷ REC/PLAY] button:

To pause play.

- [] MONITOR] button:

To display the next (older date/time) picture.

- [] CALL] button:

To display the picture with the next oldest date after fast forward playing.

- [] MENU] button:

The symbols on the screen can be turned on and off.

3 When advancing the play screen frame-by-frame, press the [○▷ REC/PLAY] button during playback to pause. The play advances frame-by-frame each time the [] CALL] button is pressed.

* In addition, the operations shown below are also possible during pause.

- [○▷ REC/PLAY] button:

To return to the play screen.

- [] MONITOR] button:

The play is reversed frame by frame each time the button is pressed. When the frames of one image end, the unit returns to the play-waiting screen.

- [] CALL] button:

The play advances frame by frame each time the button is pressed.

- [] MENU] button:

The picture with the next oldest date displays on the play-waiting screen.

4 Press the [○ OFF] to end playback.

NOTES: 1. If there are no operations for at least approximately 1 minute, it will end automatically.

2. If a call is received during play, the call tone sounds and play is forcibly ended.

8-4 Saving recorded pictures

10 images can be saved from the recorded images (maximum of 40 images). Saved pictures are not overwritten.

- 1 Display the picture that you want to save in the play-waiting screen. (Refer to section 8-3.)

Press the [MENU] button to display the save/erase selection screen.




NOTES: 1. "CANNOT BE SAVED. MAX 10 IMAGES" is displayed if the number of possible saves is exceeded. Cancel unnecessary saved image.
2. Images that have had the save canceled are not erased, but they are overwritten if the number of recorded images is exceeded.

- 2 Press the [MONITOR] button.



- 3 [MONITOR] is displayed when saving is performed. If the picture has already been saved, the save is canceled.

Each time the [MONITOR] button is pressed, the operation switches between save and cancel.

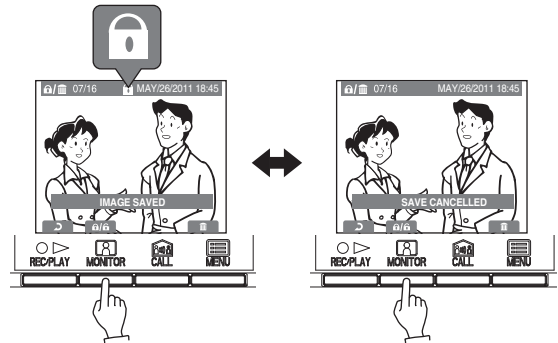


8-5 Erasing recorded pictures

It is also possible to erase saved recorded pictures. The erasure of recorded pictures is performed for each picture in turn.

- 1 Display the picture that you want to erase in the play-waiting screen. (Refer to section 8-3.)

Press the [MENU] button to display the save/erase selection screen.

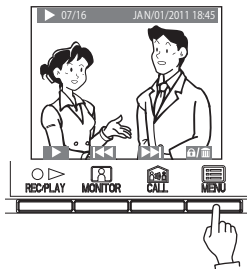

NOTES: When there are multiple recorded pictures, the next (older date) picture displays when erasing is completed.

- 2 Press the [MENU] button.



- 3 Press the [MENU] button to erase the picture. Press the [REC/PLAY] button to stop erasing.




⚠ Once a picture is erased, it cannot be restored

9 ALARMS AND RELATED INFO.

⚠ The unit used in the example pictures is a master monitor station.


9-1 OPTION button

Pressing the [OPTION] button allows for operation of connected units to be performed such as turning lights on and off.

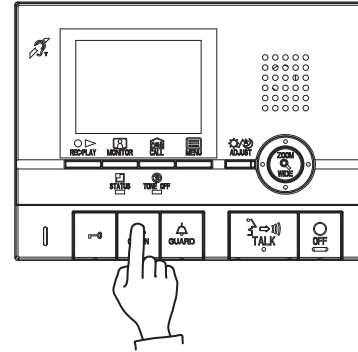


9-2 Emergency alarm

1 Press and lock the emergency alarm switch (or when there is a line-off trouble).

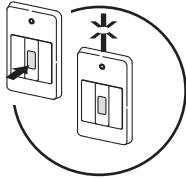


2 An alarm will sound from the residential station, and a warning signal will be sent to the security guard station. An emergency screen is displayed on the monitor.


- Only the alarm sounds at sub master monitor stations.

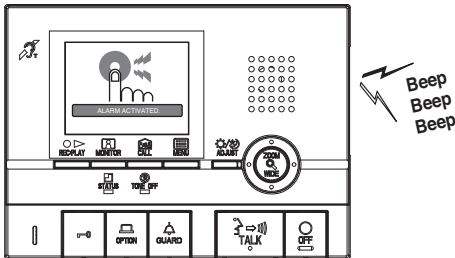


3 When there is a call from the security guard station, the warning sound will change to a call tone that will sound for the set amount of time. The STATUS LED blinks.

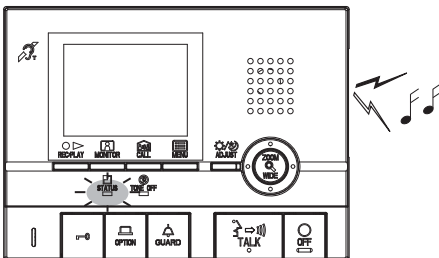

4 Press the [TALK] button to communicate with the security guard station. The STATUS LED will light up. After communication, the emergency alarm will begin to sound again.

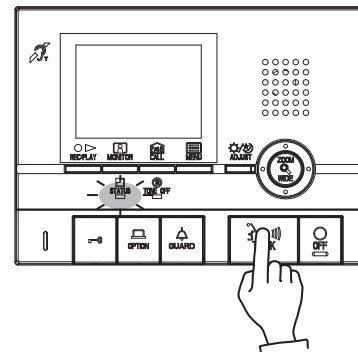


5 Release the lock position of the emergency alarm switch to return to the standby position (restore the system to normal status).

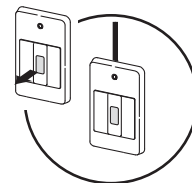


- NOTES:
1. On the residential station, the emergency alarm and call tone will be emitted at level 10 (HIGH) volume, regardless of the volume setting.
 2. The emergency alarm function can be activated even while the system is in use.
 3. Residential stations within the same residence will be unable to receive normal calls or doorbell calls while the emergency alarm is sounding. It is only possible to respond to calls from the security guard station.
 4. During the emergency alarm, the entrance station cannot make calls to the residential station or to the security guard station that are producing emergency alarms.
 5. Emergency alarms will also sound at individual door stations, and the illuminator LED will blink.

9-3 External calls

- When a separately-installed sensor is activated or the CALL button is pressed, the alarm sounds, and the warning screen displays on the monitor and blinks.
 - Only the alarm sounds at sub master monitor stations.

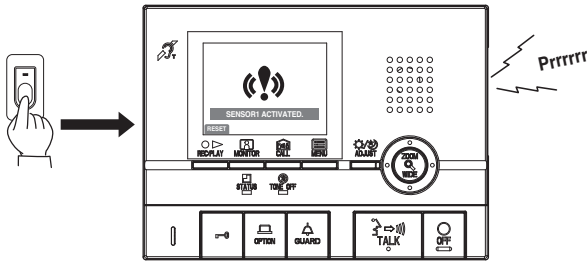

- Press the [OFF] button or [REC/PLAY] button ([OFF] button for GT-2H-L/GT-2H) to stop the alarm sound.

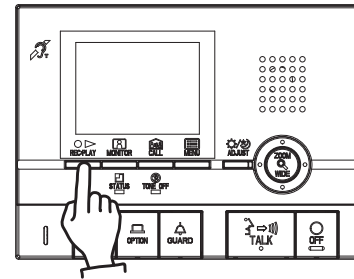


- NOTES:
- The alarm sound time is set in the external settings. (Refer to section 10-5.)
The initial setting is 10 minute.
 - When the alarm sound time is set for 1 hour or for the alarm to sound continuously, the monitor warning screen will go out after approximately 10 minutes.
 - Even if the call tone volume is set to 0 (OFF), it will sound at a level equivalent to 10 (HIGH).

9-4 PRESENCE SECURITY, ABSENCE SECURITY setting (master monitor station)


Set the security settings for individual doors and windows. By security settings, intrusions at individual doors or windows will be detected and a security alarm will sound.

- PRESENCE SECURITY**
Security setting for when resident is at home sleeping that is applied immediately after setting.
- ABSENCE SECURITY**
Security setting for when resident is away that is applied after the delay time (section 10-9) elapses after setting.

- In the standby mode, press the [MENU] button.
- Select "SECURITY" in the "MENU" screen, and press the [MENU] button.
- Select "PRESENCE SECURITY" or "ABSENCE SECURITY" in the "SECURITY" screen, and press the [MENU] button.
(Ex.: Selection of "PRESENCE SECURITY")

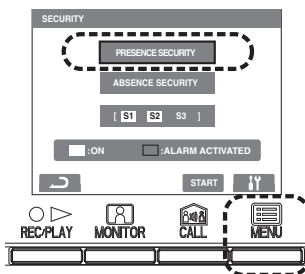


- In the "SECURITY" screen, confirm the locations that are on alert among sensors 1 through 3 (only sensors for which security settings have been performed will display). To change settings, move the cursor to the location to be changed and press the [MENU] button.
 - Locations will display according to the locations selected when settings were performed last.

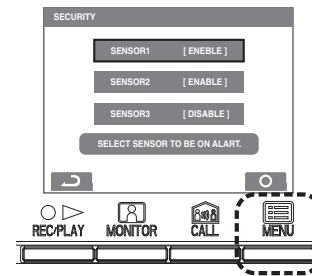


- Select "ENABLE" or "DISABLE" in the "SECURITY" screen for each sensor, and press the [MENU] button.
- Press the [REC/PLAY] button to return to the step 3 screen, move the cursor with "PRESENCE SECURITY" or "ABSENCE SECURITY" and press the [CALL] button.
- PRESENCE SECURITY is set. For "ABSENCE SECURITY", "ABSENCE SECURITY" is set after the set time elapses.
 - The STATUS LED blinks with a medium interval.
 - If there are no operations for approximately 1 minute, the screen display will end.
 - If selected locations are open, they will display in red and "CHECK STATUS SENSOR" will display on the screen.
 - To cancel settings, press the [MENU] button (cancel) at the step 3 screen.

9-5 Canceling security setting after arrival (master monitor station)

- When the ABSENCE SECURITY setting in 9-4 is set, if an individual door is opened, a screen will display and the alarm will sound.
 - At this time, operation other than an emergency alarm cannot be performed. Ex.: When a call is made from the entrance station, communication will not start. (The master monitor station is in occupied mode.)
 - Even if the call tone volume is set to 0 (OFF), it will sound at a level equivalent to 10 (HIGH).

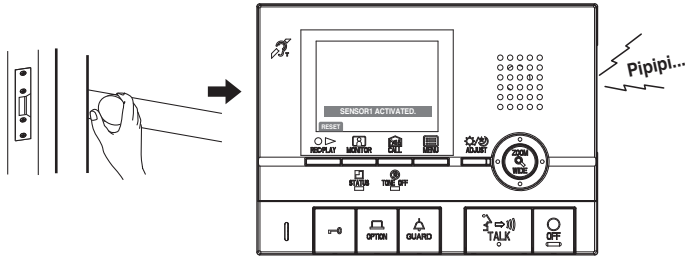


- Press the [○▷ REC/PLAY] to display the security PIN input screen. Input the security PIN by pressing the [▲], [▼], [◀], and [▶] buttons.
 - When a security PIN is not used, press the [○▷ REC/PLAY] button to restore.

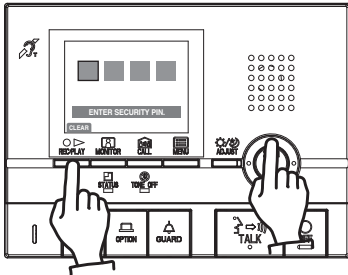

- Restoration occurs when the security PIN is correct.
 - If the security PIN is not correct, "WRONG SECURITY PIN." will display.
 - There is no limit to the number of times the PIN can be entered, but if a correct security PIN is not entered within the set delay time (10-9 DEPARTURE TIMER, ARRIVAL TIMER setting), a security alarm sounds.


9-6 Canceling security alarms (master monitor station)

- When the PRESENCE SECURITY setting in 9-4 is set, if an individual door is opened, the security screen will display and the alarm will sound. When ABSENCE SECURITY is set, the security screen will display and the alarm will sound after the DEPARTURE TIMER or ARRIVAL TIMER has elapsed.
 - Alarms will also sound at individual door stations, and the illuminator LED will blink.
 - Even if the call tone volume is set to 0 (OFF), it will sound at a level equivalent to 10 (HIGH).

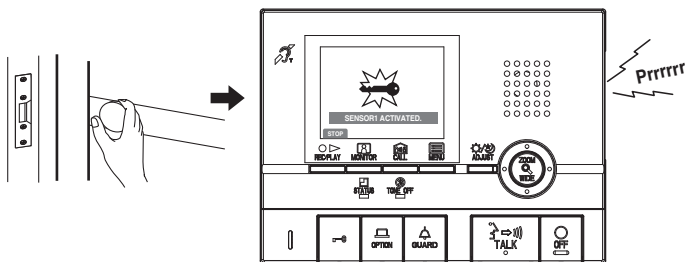

- Press the [○▷ REC/PLAY] button or the [○ OFF] button.
 - The alarm sound will stop.

- Press the [○▷ REC/PLAY] to display the security PIN input screen. Input the security PIN by pressing the [▲], [▼], [◀], and [▶] buttons.
 - When a security PIN is not used, press the [○▷ REC/PLAY] button to restore.

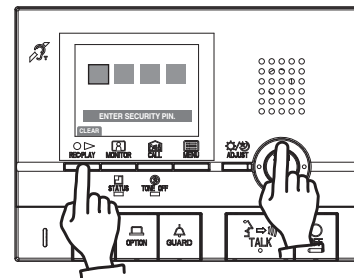


- Restoration occurs when the security PIN is correct.
 - If the security PIN is not correct, "WRONG SECURITY PIN." will display.
 - Depending on the settings at installation, an alarm may be output to a security guard station.

10 CHANGING SETTINGS (MASTER MONITOR STATION)


⚠ The screen may vary depending on the equipment being used.

10-1 Using the MENU

- 1 In the standby mode, press the [MENU] button.
- 2 Press the [▲] or [▼] button to select "SETTINGS", and press the [MENU] button.

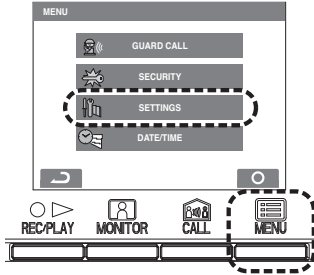

- 3 Press the [▲], [▼], [◀], and [▶] buttons in the "SETTINGS" screen to select the item to be confirmed, and press the [MENU] button.

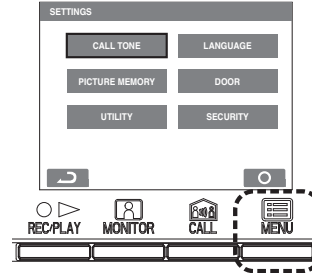


- 4 To finish changing settings, press the [OFF] button to return to the standby mode. In other cases, set by pressing the [MENU] button. Press the [REC/PLAY] button to cancel the settings and return to the previous screen.

10-2 LANGUAGE setting

The initial language setting is "ENGLISH".

- 1 After performing steps 1 and 2 in section 10-1, select "LANGUAGE" in the "SETTINGS" screen and press the [MENU] button.


- 2 Select the desired language in the "LANGUAGE" screen. Press the [MENU] button to complete the settings.

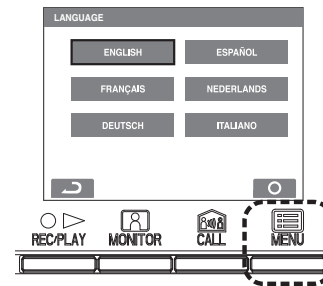

10-3 CALL TONE switching

Separate sounds can be selected for entrance stations, individual door stations, and security guard stations from 5 sound types.


- 1 After performing steps 1 and 2 in section 10-1, select "CALL TONE" in the "SETTINGS" screen and press the [MENU] button.
- 2 Select one from "ENTRANCE/DOOR/GUARD" in the "CALL TONE" screen, and press the [MENU] button.

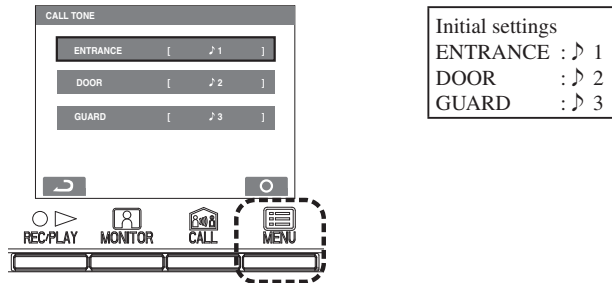

Initial settings
 ENTRANCE : 1
 DOOR : 2
 GUARD : 3


- 3 In the separate "CALL TONE" screens for "ENTRANCE/DOOR/GUARD", select the desired call tones. The selected call tone sounds, enabling you to check the sound. Press the [MENU] button to complete the settings.

- The sub master monitor station call tone will also change.

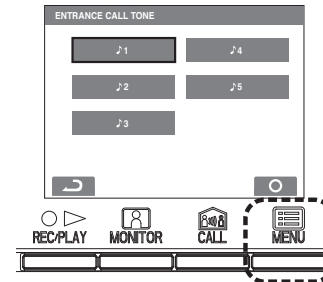

10-4 Picture memory setting for individual door call

For automatic recording at an individual door, select the recording method for recording pictures (up to 6 for each image) from the following four types. In the initial settings, all six pictures are zoom pictures at a pre-set position.

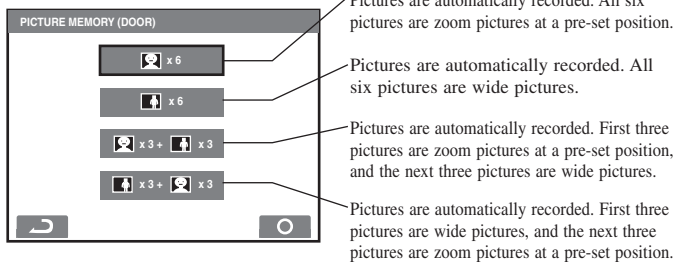

Pictures are automatically recorded. All six pictures are zoom pictures at a pre-set position.

Pictures are automatically recorded. All six pictures are wide pictures.

Pictures are automatically recorded. First three pictures are zoom pictures at a pre-set position, and the next three pictures are wide pictures.


Pictures are automatically recorded. First three pictures are wide pictures, and the next three pictures are zoom pictures at a pre-set position.

NOTES: The set picture recording method does not apply to pictures displayed during a call from the entrance station.

- 1 After performing steps 1 and 2 in section 10-1, select "PICTURE MEMORY" in the "SETTINGS" screen and press the [MENU] button.

- 2 Select the picture recording method in the "PICTURE MEMORY" screen.


Press the [MENU] button to complete the settings.

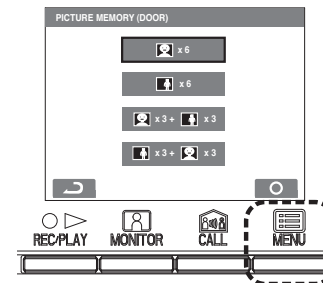


10-5 External call sound time duration setting

Select the external call sound time duration. The initial setting is "10 MIN."

- 1 After performing steps 1 and 2 in section 10-1, select "UTILITY" in the "SETTINGS" screen and press the [MENU] button.
- 2 Select "ALARM TIMER" in the "UTILITY" screen, and press the [MENU] button.

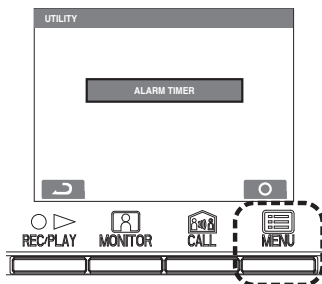

- 3 Select the sound time in the "UTILITY-CALL TIMER" screen. Press the [MENU] button to complete the settings.

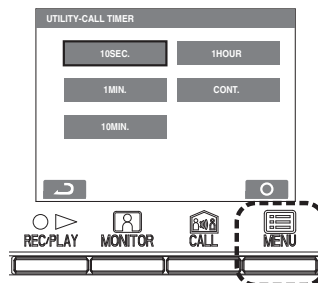


"CONT." = Continuous


10-6 Individual door call time setting

Select the individual door call time. The initial setting is "45 SEC."

- 1 After performing steps 1 and 2 in section 10-1, select "DOOR" in the "SETTINGS" screen and press the [MENU] button.
- 2 Select "CALL DURATION" in the "DOOR" screen, and press the [MENU] button.

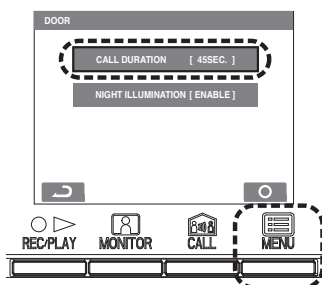


- 3 Select the call time in the "CALL DURATION" screen. Press the [MENU] button to complete the settings.

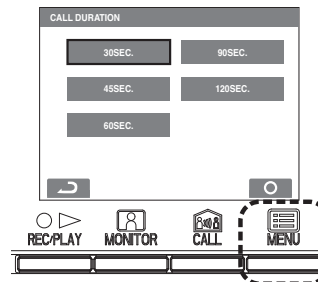


10-7 Individual door night illumination setting

Select whether the door station illuminator LED is enabled or disabled. The initial setting is "ENABLE".

- 1 After performing steps 1 and 2 in section 10-1, select "DOOR" in the "SETTINGS" screen and press the [MENU] button.
- 2 Select "NIGHT ILLUMINATION" in the "DOOR" screen, and press the [MENU] button.

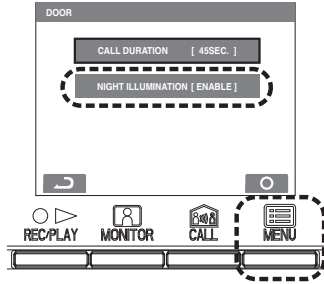

- 3 Select "ENABLE" or "DISABLE" in the "NIGHT ILLUMINATION" screen. Press the [MENU] button to complete the settings.

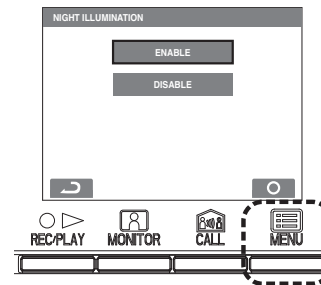


10-8 SECURITY PIN setting


The security PIN to be used can be set when performing PRESENCE SECURITY and ABSENCE SECURITY setting.

The initial setting is "DISABLE", when "ENABLE" is selected, the initial setting for the security PIN is [▲], [▶], [▼], and [◀].


- 1 After performing steps 1 and 2 in section 10-1, select "SECURITY" in the "SETTINGS" screen and press the [MENU] button.
- 2 Select "SECURITY PIN" in the "SECURITY" screen, and press the [MENU] button.

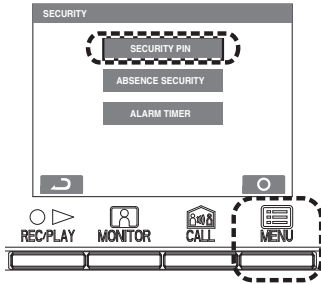


- 3 Select "RESET SETTING" on the "SECURITY PIN" screen and select whether a security PIN is used in the restoration method.
"ENABLE" = Used
"DISABLE" = Not used
- 4 When "ENABLE" is selected, select "PIN SETTING" in the "SECURITY PIN" screen, and press the [MENU] button.

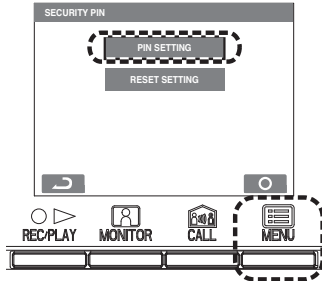


- 5 After "CHANGE SECURITY PIN?" displays in the "SECURITY PIN" screen, press the [MENU] button.

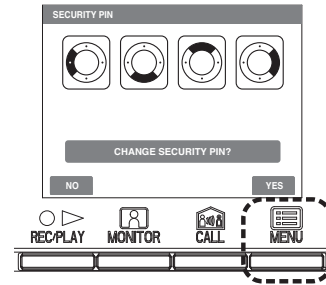

- 6 After "ENTER SECURITY PIN." is displayed, enter the security PIN with the [▲], [▼], [◀], and [▶] buttons.
 - To re-enter the security PIN from the start, press the [REC/PLAY] button.

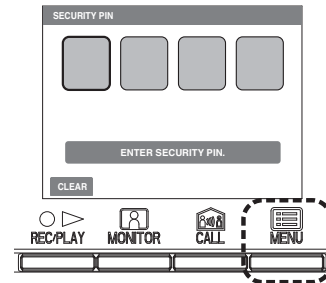

- 7 When settings for the 4 items are input, "CHANGE SETTING?" is displayed. Press the [MENU] button to complete the settings.

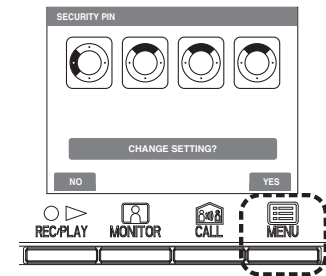


10-9 DEPARTURE TIMER, ARRIVAL TIMER setting

With ABSENCE SECURITY, the delay time from when an action causing a warning response is detected to when a warning is actually sent can be set. The initial setting is "60 SEC."


DEPARTURE TIMER = Time from when ABSENCE SECURITY is set to when user leaves

ARRIVAL TIMER = Time from when user arrives to when ABSENCE SECURITY is canceled


- 1 After performing steps 1 and 2 in section 10-1, select "SECURITY" in the "SETTINGS" screen and press the [MENU] button.
- 2 Select "ABSENCE SECURITY" in the "SECURITY" screen, and press the [MENU] button.

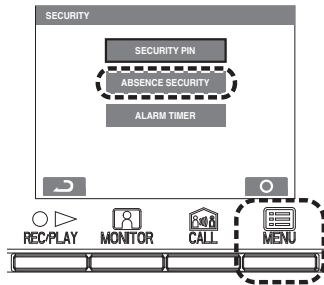

- 3 Select "DEPARTURE TIMER" or "ARRIVAL TIMER" in the "ABSENCE SECURITY" screen, and press the [MENU] button.
(Ex.: Selection of "DEPARTURE TIMER")

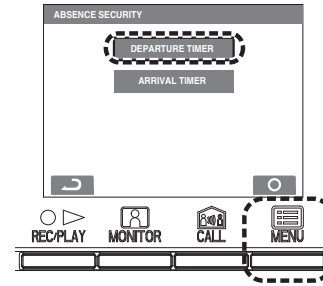

- 4 Select the delay time in the "DEPARTURE TIMER SETTING" screen, and press the [MENU] button. Repeat the same operation for the "ARRIVAL TIMER" screen.

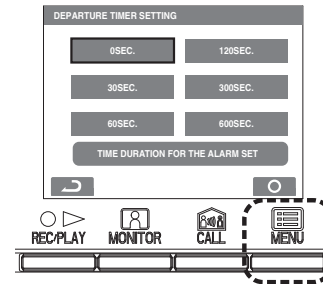


- ⚠1. Setting the "DEPARTURE TIMER" to "0 SEC." will make a security alarm sound immediately when a door or window is opened when ABSENCE SECURITY is set.
- ⚠2. Setting the "ARRIVAL TIMER" to "0 SEC." will make a security alarm sound immediately when a door or window is opened after arrival.


10-10 Security alarm sound duration time setting

Select the security alarm sound time duration. The initial setting is "10 MIN."

- 1 After performing steps 1 and 2 in section 10-1, select "SECURITY" in the "SETTINGS" screen and press the [MENU] button.
- 2 Select "ALARM TIMER" in the "SECURITY" screen, and press the [MENU] button.

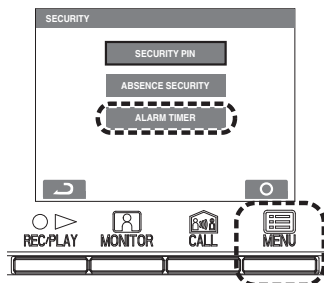

- 3 Select the sound time in the "SECURITY ALARM TIMER" screen. Press the [MENU] button to complete the settings.

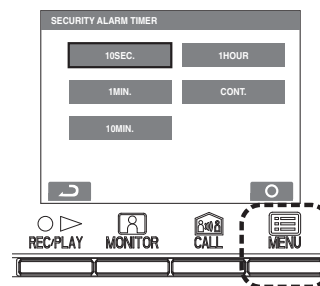

"CONT." = Continuous

11 TECHNICAL PRECAUTIONS

- Operating temperature: 0°C to +40°C (+32°F to +104°F)
- The video image may distort when the door release is activated. But this is not a unit malfunction.
- If a zoom/wide or pan/tilt operation is performed during communication with the entrance station, noise will be produced at the entrance station, but this is not a malfunction.
- Cleaning: Clean the units with a soft cloth dampened with a neutral household cleanser. Do not use any abrasive cleaner or cloth.
- If there is a system malfunction, unplug the power supply and contact a qualified technician for service.

12 SPECIFICATIONS

- Power supply: DC 24 V (from power supply)
- Current consumption: GT-2C-L: (MAX) Approx. 390mA
GT-2H-L: (MAX) Approx. 240mA
GT-2C: (MAX) Approx. 260mA
GT-2H: (MAX) Approx. 110mA
- Communication: Hands-free communication/
Press-to-talk communication
- Video monitor: 3-1/2" TFT color LCD
- Dimensions: 140 (H) × 190 (W) × 30 (D) (mm)
5-1/2 (H) × 7-1/2 (W) × 1-1/4 (D) (inches)
- Weight: GT-2C-L: Approx. 520 g (1.15 lbs.)
GT-2C: Approx. 470 g (1.04 lbs.)
GT-2H-L: Approx. 480 g (1.06 lbs.)
GT-2H: Approx. 440 g (0.97 lbs.)

Warranty

Aiphone warrants that its products have no material or workmanship defects under normal use conditions for two years after delivery to the end user. Aiphone will perform repair or replacement free of charge if the product is defective and the warranty applies to the defect. Aiphone reserves unto itself the sole right to make the final decision whether there is a defect in materials and/or workmanship and whether or not the product is under warranty. This warranty shall not apply to any Aiphone product which has been subject to misuse, neglect, accident, or to use in violation of instructions furnished, nor extended to units which have been repaired or altered outside of the factory. This warranty does not cover batteries or damage caused by batteries used in connection with the unit. Any repairs must be made at the shop or place designated in writing by Aiphone. Aiphone will not be responsible for any costs incurred during on-site service calls. Aiphone will not provide compensation for any loss or damage incurred by the breakdown or malfunction of its products during use, or for any consequent inconvenience or losses that may result.

 indicates applicability to the EU.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: • Reorient or relocate the receiving antenna • Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Increase the separation between the equipment and receiver. • Consult the dealer or an experienced radio/TV technician for help.

 **AIPHONE**®
Providing Peace of Mind
<http://www.aiphone.net/>

AIPHONE CO., LTD., NAGOYA, JAPAN
AIPHONE CORPORATION, BELLEVUE, WA, USA
AIPHONE S.A.S., LISSES-EVRY, FRANCE