

Thank You for Choosing the Energizer® Duo Charger

 
Please read this manual before you use the charger, and save it for reference.

- Batteries:** Nickel Metal Hydride (NiMH)
Rechargeable batteries
- Sizes:** AA and AAA
- Recommended :** Energizer® NiMH Batteries
- Model:** CHUSB

CHARGING

1. Load batteries into charger.


- Flip contact down to charge AAA size.

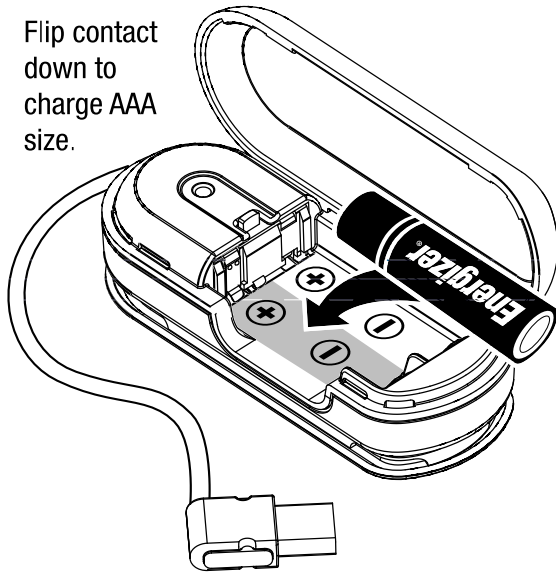

2. Plug in the charger.


- Plug into computer USB port.

 NOTE: Green LED blinking when batteries are charging

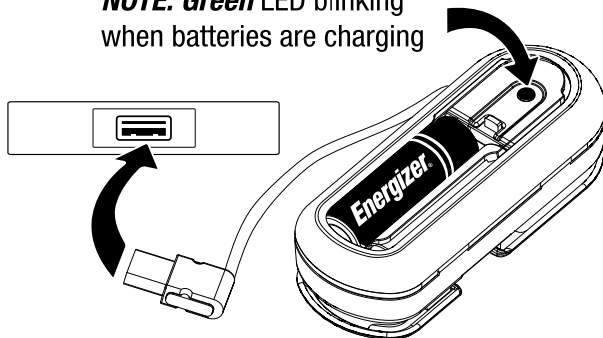

OR

 - Plug included wall adapter into standard AC outlet and then plug USB cable into adapter.

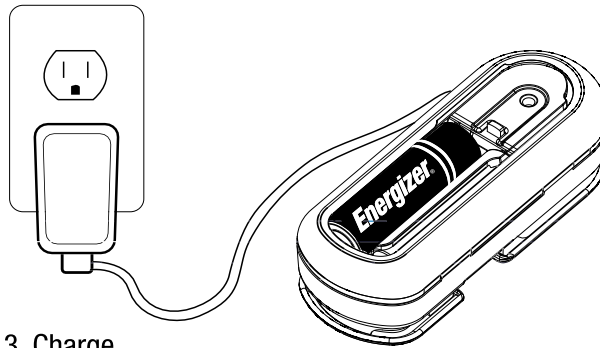


3. Charge

Note: If green LED light blinks rapidly, then a bad rechargeable or disposable battery is in the charger.

- When green LED light stays on continuously, charging is complete.
- Unplug charger and remove batteries.

FEATURES

 - See charging status on your computer with free software from

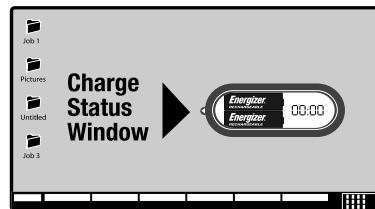

www.energizer.com/usbcharger

CHARGING TIMES

Battery Size (NiMH)	Rated Capacity (mAh)	Estimated Charging Time
AA	2500	5 hr
AA	2000	4 hr
AA	1700	3.5 hr
AAA	900	2 hr
AAA	850	2 hr

Note: Batteries will not be damaged if left in the charger for a longer time.

WARNING

To avoid personal injury and property damage from, but not limited to, the risk of electric shock or fire:

- Charge only Nickel Metal Hydride (NiMH) rechargeable batteries. Charging any other types of batteries may cause them to leak, rupture or explode.
- Do not open battery, dispose of in fire, put in backwards, mix with used or other battery types or short circuit – may ignite, explode, leak or get hot causing injury.
- Use the charger only in dry locations. Keep away from rain, snow or excessive moisture.
- Never plug battery chargers into an extension cord.
- Do not operate the charger if damaged.
- Do not disassemble, modify any part of the charger, or attempt to use the charger as a power source.
- Unplug before attempting maintenance or cleaning.

LIFETIME LIMITED WARRANTY

This Energizer Battery Charger and these Energizer Nickel-Metal Hydride Rechargeable Batteries are warranted only to the original United States or Canadian purchaser upon presentation of proof of original purchase to be free from defects in material and workmanship for as long as you own your Energizer Battery Charger and these Energizer Nickel-Metal Hydride Rechargeable Batteries and this product is manufactured by or for Energizer and such warranty is not transferable to any subsequent end user. Not applicable to damage caused by normal wear and tear, misuse, or modification. Repair or replacement of charger at Energizer's option. Call 1-800-383-7323 for return instructions. WARRANTY APPLIES TO CONSUMER USE ONLY. ALL INCIDENTAL AND CONSEQUENTIAL DAMAGES ARE EXCLUDED. SOME STATES OR PROVINCES DO NOT ALLOW THE EXCLUSION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THESE EXCLUSIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY HAVE OTHER RIGHTS WHICH VARY FROM STATE OR PROVINCE.

Questions? Visit www.energizer.com

Energizer Holdings, Inc., St. Louis, MO 63141, U.S.A.

UPN-120806