



**EFT Draft - CISCO CONFIDENTIAL**

## **CONTENTS**

### **Preface xi**

Overview	xi
Audience	xi
Organization	xi
Related Documentation	xiii
Obtaining Documentation, Obtaining Support, and Security Guidelines	xiii
Document Conventions	xiv

---

### **CHAPTER 1**

### **An Overview of the Cisco Unified IP Phone 1-1**

Understanding the Cisco Unified IP Phone 8961, 9951, and 9971	1-2
What Networking Protocols are Used?	1-10
What Features are Supported on the Cisco Unified IP Phone 8961, 9951, and 9971?	1-13
Feature Overview	1-13
Configuring Telephony Features	1-14
Configuring Network Parameters Using the Cisco Unified IP Phone	1-14
Providing Users with Feature Information	1-15
Understanding Security Features for Cisco Unified IP Phones	1-15
Overview of Supported Security Features	1-16
Understanding Security Profiles	1-19
Identifying Secure (Encrypted) Phone Calls	1-19
Establishing and Identifying Secure Conference Calls	1-19
Establishing and Identifying Secure Calls	1-20
Call Security Interactions and Restrictions	1-20
Supporting 802.1X Authentication on Cisco Unified IP Phones	1-22
Overview	1-22
Required Network Components	1-22
Best Practices—Requirements and Recommendations	1-22
Security Restrictions	1-23
Overview of Configuring and Installing Cisco Unified IP Phones	1-23
Configuring Cisco Unified IP Phones in Cisco Unified Communications Manager	1-24
Checklist for Configuring the Cisco Unified IP Phone 8961, 9951, and 9971 in Cisco Unified Communications Manager	1-25
Installing Cisco Unified IP Phones	1-28
Checklist for Installing the Cisco Unified IP Phone 8961, 9951, and 9971	1-28

**EFT Draft - CISCO CONFIDENTIAL**

Terminology Information 1-30

**CHAPTER 2**

**Preparing to Install the Cisco Unified IP Phone on Your Network 2-1**

- Understanding Interactions with Other Cisco Unified IP Telephony Products 2-1
  - Understanding How the Cisco Unified IP Phone Interacts with Cisco Unified Communications Manager 2-2
  - Understanding How the Cisco Unified IP Phone Interacts with the VLAN 2-2
- Providing Power to the Cisco Unified IP Phone 2-3
  - Power Guidelines 2-4
  - Power Outage 2-4
  - Reducing Power Consumption on the Phone 2-4
  - Power Negotiation over LLDP 2-5
  - Obtaining Additional Information About Power 2-5
- Understanding Phone Configuration Files 2-6
- Understanding the Phone Startup Process 2-7
- Adding Phones to the Cisco Unified Communications Manager Database 2-9
  - Adding Phones with Auto-Registration 2-10
  - Adding Phones with Auto-Registration and TAPS 2-11
  - Adding Phones with Cisco Unified Communications Manager Administration 2-12
  - Adding Phones Using BAT Phone Template 2-12
- Determining the MAC Address for a Cisco Unified IP Phone 2-13

**CHAPTER 3**

**Setting Up the Cisco Unified IP Phone 3-1**

- Before You Begin 3-1
  - Network Requirements 3-1
  - Cisco Unified Communications Manager Configuration 3-2
- Understanding the Cisco Unified IP Phone Components 3-2
  - Network and Computer Ports 3-3
  - Handset Rest 3-3
  - Speakerphone 3-4
  - Accessory Support on the Cisco Unified IP Phone 8961, 9951, and 9971 3-4
  - USB Port Data Information 3-5
  - External Speakers and Microphone 3-5
  - Headsets 3-5
    - Audio Quality Subjective to the User 3-6
    - Wired Headsets 3-6
    - USB Headsets 3-6
    - Analog Headsets 3-7
    - Wireless Headsets 3-8

**EFT Draft - CISCO CONFIDENTIAL**

Using Bluetooth Wireless Headsets	3-8
Handsfree Profile	3-8
Important Note about Headset Types	3-10
Using External Devices	3-11
Installing the Cisco Unified IP Phone	3-11
Connecting the Footstand	3-19
Phone Display Viewing Angle	3-20
Securing the Phone with a Cable Lock	3-20
Mounting the Phone to the Wall	3-20
Verifying the Phone Startup Process	3-21
Configuring Startup Network Settings	3-21
Configuring Security on the Cisco Unified IP Phone	3-21

**CHAPTER 4**

<b>Setting Up the Cisco Unified IP Color Key Expansion Module</b>	<b>4-1</b>
Installing a Key Expansion Module on the Cisco Unified IP Phone	4-2
Power Information	4-2
Connecting a Single KEM to the Cisco Unified IP Phone	4-3
Connecting Two or More KEMs to the Phone Using the KEM Spine Connector	4-4
Other Methods for Connecting KEMs to the Phone	4-5
Configuring the Key Expansion Module in Cisco Unified Communications Manager Administration	4-5
Key Expansion Module Settings on the Phone	4-6
Upgrading the Key Expansion Module	4-6
Removing a Key Expansion Module	4-7
Troubleshooting	4-7

**CHAPTER 5**

<b>Setting Up the Cisco Unified Video Camera</b>	<b>5-1</b>
Configuring the Cisco Unified Video Camera	5-1
Attaching the Cisco Unified Video Camera	5-2
Adjusting the Camera Settings	5-2
Adjusting the Camera View Area	5-2
Adjusting the Brightness Setting	5-3
Adjusting Auto Transmit Setting	5-3
Post-Installation Steps	5-4
Using the Cisco Unified Video Camera	5-4

**CHAPTER 6**

<b>Understanding the VoIP Wireless Network</b>	<b>6-1</b>
Understanding the Wireless LAN	6-1

**EFT Draft - CISCO CONFIDENTIAL**

- Understanding WLAN Standards and Technologies 6-2
  - 802.11 Standards for WLAN Communications 6-3
  - World Mode (802.11d) 6-4
  - Radio Frequency Ranges 6-5
  - 802.11 Data Rates, Tx Power, Ranges, and Decibel Tolerances 6-5
  - Wireless Modulation Technologies 6-6
  - AP, Channel, and Domain Relationships 6-7
  - WLANs and Roaming 6-7
- Bluetooth Wireless Technology 6-7
- Components of the VoIP Wireless Network 6-8
  - Interacting with Cisco Unified Wireless APs 6-8
  - Associating to APs 6-8
  - Voice QoS in a Wireless Network 6-9
  - Interacting with Cisco Unified Communications Manager 6-11
- Security for Voice Communications in WLANs 6-11
  - Authentication Methods 6-11
  - Authenticated Key Management 6-12
  - Encryption Methods 6-13
  - Choosing AP Authentication and Encryption Methods 6-13
- VoIP WLAN Configuration 6-15
  - Supported Access Points 6-15
  - Supported APs and Modes 6-15
  - Supported Antennas 6-16
- Configuring Wireless LAN 6-16
  - Summary of Configuring the Wireless LAN in Cisco Unified Communications Manager Administration 6-17
  - Summary of Configuring the Wireless LAN on the Cisco Unified IP Phone 6-17

**CHAPTER 7**

**Configuring Settings on the Cisco Unified IP Phone 7-1**

- Setup Menus on the Cisco Unified IP Phone 7-1
  - Displaying a Setup Menu 7-2
  - Unlocking and Locking Options 7-3
  - Editing Values 7-3
- Ethernet Setup Menu 7-4
- WLAN Setup Menu 7-7
- IPv4 Setup Menu Options 7-10
- Security Setup Menu 7-13
  - Trust List Menu 7-14
  - 802.1X Authentication and Transaction Status 7-15

**EFT Draft - CISCO CONFIDENTIAL**

VPN Configuration Menu	7-16
Connecting to VPN	7-16
VPN Configuration Settings	7-17

**CHAPTER 8**

<b>Configuring Features, Templates, Services, and Users</b>	<b>8-1</b>
Telephony Features Available for the Cisco Unified IP Phone	8-2
Park Monitoring	8-23
Setting the Service Parameters for Park Monitoring	8-24
Setting Park Monitoring Parameters in Directory Number Configuration Window	8-25
Setting Park Monitoring Parameter in Hunt Pilot Configuration Window	8-25
Configuring Product Specific Configuration Parameters	8-26
Configuring Corporate and Personal Directories	8-27
Configuring Corporate Directories	8-27
Configuring Personal Directory	8-27
Feature Buttons and Softkeys	8-28
Modifying Phone Button Templates	8-29
Modifying a Phone Button Template for All Calls	8-29
Modifying a Phone Button Template for Personal Address Book or Speed Dials	8-30
Configuring Feature Control Policies	8-31
Setting Up Services	8-32
Adding Users to Cisco Unified Communications Manager	8-33
Managing the User Options Web Pages	8-34
Giving Users Access to the User Options Web Pages	8-34
Specifying Options that Appear on the User Options Web Pages	8-36

**CHAPTER 9**

<b>Customizing the Cisco Unified IP Phone</b>	<b>9-1</b>
Customizing and Modifying Configuration Files	9-1
Creating Custom Phone Rings	9-2
Ringlist.xml File Format Requirements	9-2
PCM File Requirements for Custom Ring Types	9-3
Configuring a Custom Phone Ring	9-3
Creating Custom Background Images	9-4
List.xml File Format Requirements	9-4
PNG File Requirements for Custom Background Images	9-5
Configuring a Custom Background Image	9-5
Configuring Wideband Codec	9-6
Configuring the Idle Display	9-7
Automatically Disabling the Cisco Unified IP Phone Display	9-7

**EFT Draft - CISCO CONFIDENTIAL**

**CHAPTER 10**

**Viewing Model Information, Status, and Statistics on the Cisco Unified IP Phone 10-1**

- Model Information Screen 10-1
- Status Menu 10-2
  - Status Messages Screen 10-3
  - Ethernet Statistics Screen 10-7
  - WLAN Statistics Screen 10-9
  - Call Statistics Screen 10-11
    - Video Statistics Screen 10-13
  - Current Access Point Screen 10-15

**CHAPTER 11**

**Monitoring the Cisco Unified IP Phone Remotely 11-1**

- Accessing the Web Page for a Phone 11-2
- Enabling and Disabling Web Page Access 11-3
  - Configuring the Cisco Unified IP Phone to use HTTP/HTTPS Protocols 11-3
- Device Information 11-4
- Network Setup 11-5
- Network Statistics 11-8
- Device Logs 11-11
- Streaming Statistics 11-11

**CHAPTER 12**

**Troubleshooting and Maintenance 12-1**

- Resolving Startup Problems 12-1
  - Symptom: The Cisco Unified IP Phone Does Not Go Through its Normal Startup Process 12-2
  - Symptom: The Cisco Unified IP Phone Does Not Register with Cisco Unified Communications Manager 12-2
    - Identifying Error Messages 12-3
    - Checking Network Connectivity 12-3
    - Verifying TFTP Server Settings 12-3
    - Verifying IP Addressing and Routing 12-3
    - Verifying DNS Settings 12-4
    - Cisco CallManager and TFTP Services Are Not Running 12-4
    - Creating a New Configuration File 12-5
    - Registering the Phone with Cisco Unified Communications Manager 12-5
  - Symptom: Cisco Unified IP Phone Unable to Obtain IP Address 12-6
- Cisco Unified IP Phone Resets Unexpectedly 12-6
  - Verifying the Physical Connection 12-6
  - Identifying Intermittent Network Outages 12-6
  - Verifying DHCP Settings 12-7

## ***EFT Draft - CISCO CONFIDENTIAL***

Checking Static IP Address Settings	12-7
Verifying the Voice VLAN Configuration	12-7
Verifying that the Phones Have Not Been Intentionally Reset	12-7
Eliminating DNS or Other Connectivity Errors	12-8
Checking Power Connection	12-8
Troubleshooting Cisco Unified IP Phone Security	12-9
General Troubleshooting Tips	12-10
Resetting the Cisco Unified IP Phone	12-15
Using the Quality Report Tool	12-16
Monitoring the Voice Quality of Calls	12-16
Troubleshooting Tips	12-17
Where to Go for More Troubleshooting Information	12-17
Cleaning the Cisco Unified IP Phone	12-17

---

### **APPENDIX A**

<b>Providing Information to Users Via a Website</b>	<b>A-1</b>
How Users Obtain Support for the Cisco Unified IP Phone	A-1
Giving Users Access to the User Options Web Pages	A-1
How Users Subscribe to Services and Configure Phone Features	A-2
How Users Access a Voice Messaging System	A-2
How Users Configure Personal Directory Entries	A-3
Installing and Configuring the Cisco Unified IP Phone Address Book Synchronizer	A-3

---

### **APPENDIX B**

<b>Supporting International Users</b>	<b>B-1</b>
Installing the Cisco Unified Communications Manager Locale Installer	B-1
Support for International Call Logging	B-1

---

### **APPENDIX C**

<b>Technical Specifications</b>	<b>C-1</b>
Physical and Operating Environment Specifications	C-1
Cable Specifications	C-2
Network and Computer Port Pinouts	C-2

---

### **APPENDIX D**

<b>Basic Phone Administration Steps</b>	<b>D-1</b>
Example User Information for these Procedures	D-1
Adding a User to Cisco Unified Communications Manager	D-2
Adding a User From an External LDAP Directory	D-2
Adding a User Directly to Cisco Unified Communications Manager	D-2
Configuring the Phone	D-3

***EFT Draft - CISCO CONFIDENTIAL***

Performing Final End User Configuration Steps **D-6**

---

**APPENDIX E**

**Installing the Wall Mount for the Cisco Unified IP Phone E-1**

Installing the Wall Mount for Cisco Unified IP Phone 8961, 9951, and 9971 **E-1**

Before You Begin **E-2**

Installing the Bracket **E-2**

Installing a Wall Mount for a Phone with a Key Expansion Module **E-8**

Before You Begin **E-8**

Installing the Bracket **E-9**

---

**INDEX**