

ΙΝΟΕΧ

Numerics

802.11a standard 6-3 802.11b standard 6-3 802.11d standard 6-3 World Mode 6-4 802.11e standard 6-3 802.11g standard 6-3 802.11i standard 6-3 802.1X authentication server 1-23 authenticator 1-23 description 1-12 network components 1-23 supplicant 1-23 Troubleshooting 12-9, 12-10 802.1X Authentication 7-13 802.1X authentication and status 7-15 802.1X Authentication menu options 7-15 Device Authentication 7-15 EAP-MD5 7-15

A

ſ

Access Information web page 11-2, 11-8 accessory headsets 3-4 KEM 3-4 support 3-4 access port configuring 7-6 connecting 3-12

forwarding packets to 11-8 access to phone settings 7-2 adding Cisco Unified IP Phones manually 2-13 Cisco Unified IP Phones using autoregistration 2-11 users to Cisco Unified Communications Manager 8-34 Admin. VLAN ID 7-5 AdvanceAdhocConference service parameter 8-9 AES encryption description 6-13 agent greeting 8-2 All Calls 8-2 Alternate TFTP 7-11 Analog RJ11 headsets 3-7 anonymous call bock telephony features anonymous call block 8-3 Answer (oldest call) 8-3 AP associating 6-8 Cisco Aironet Access Point 6-8 description 6-8 Assisted Directed Call Park 8-3 audible message waiting indicator 8-14 authentication 1-16 authentication server, in 802.1X 1-23 authenticator, in 802.1X 1-23 auto answer 8-3 auto dial 8-3 automatic port synchronization 8-4 autoregistration using 2-11 auxiliary VLAN 2-3

auxiliary VLAN, description 6-9

В

background image configuring 9-5 creating 9-4 custom 9-4 List.xml file 9-4 PNG file 9-4, 9-5 barge 1-24, 8-4 call security restrictions 1-21 block external to external transfer 8-5 Bluetooth adding headset 3-9 Bluetooth technology using Bluetooth wireless headsets 3-8 BootP 1-11 Bootstrap Protocol (BootP) 1-11 Busy Lamp Field (BLF) 1-30 Busy Lamp Field (BLF) Pickup 8-5 Busy Lamp Field (BLF) speed dial 8-5

С

cable lock, connecting to phone 3-20
call

security interactions 1-21

Call Back 8-5
call display restrictions 8-5
caller ID 8-8
caller ID blocking 8-8
call forward 8-6

call forward all 8-6
call forward busy 8-6
call forward no answer 8-6
call forward no coverage 8-6
destination override 8-6

loop breakout 8-6 loop prevention 8-6 notification 8-6 call forward destination override 8-7 call park 8-6 call security restrictions using Barge 1-21 call statistics 10-11 call waiting 8-7 CAPF (Certificate Authority Proxy Function) 1-19 CAST 1-11 cell phone interference 1-2 Cisco Discovery Protocol See CDP Cisco Unified Communications Manager adding phone to database of 2-10 interacting with 6-11 interactions with 2-2 required for Cisco Unified IP Phones 3-2 Cisco Unified Communications Manager Administration adding telephony features using 8-2 Cisco Unified IP Phone adding manually to Cisco Unified Communications Manager 2-13 adding to Cisco Unified Communications Manager 2-10 cleaning 12-17 configuration checklist 1-25 configuration requirements 1-24 configuring user services 8-33 installation checklist 1-28 installation overview 1-24, 1-28 installation requirements 1-24 modifying phone button template 8-29 mounting to wall 3-20 power 2-3 registering 2-10 registering with Cisco Unified Communications Manager 2-11 resetting 12-15 technical specifications C-1

Cisco Unified IP Phone 8961, 9951, and 9971 Administration Guide for Cisco Unified Communications Manager 8.6 (SIP)

using LDAP directories 8-27 web page 11-1 Cisco Unified Video Camera 5-1 attaching to the phone 5-2 configuration 5-1 post installation 5-4 cleaning the Cisco Unified IP Phone 12-17 Clear List softkey 10-3, 10-8, 10-9 Client Matter Code (CMC) 8-9 conference 8-9 secure 1-20 configuration file creating 12-5 encrypted 1-19 modifying 9-1 overview 2-7 XmlDefault.cnf.xml 2-7 configuring LDAP directories 8-27 overview 1-24 personal directories 8-27 phone button template 8-29 user features 8-34 connecting handset 3-12 headset 3-12 to a computer 3-12 to the network **3-12** connecting IP Phones to other IP Phones (daisy chaining) 12-10 Current Access Point 10-15 Current Access Point screen 10-15 custom phone rings about 9-2 creating 9-2, 9-3, 9-5 PCM file requirements 9-3

ſ

D

data VLAN 2-3 Debug Display web page 11-3, 11-11 Default Router 7-10 Denial of Service attacks disabling SSH 9-11 Device Authentication 7-15 device authentication 1-18 Device Configuration menu displaying 7-2 Device Information web page 11-2, 11-4 DHCP 7-10 description 1-11 troubleshooting 12-7 DHCP Address Released 7-12 DHCP IP address 12-12 directed call park 8-10 directory numbers, assigning manually 2-13 direct-sequence spread spectrum (DSSS) 6-6 disabling phone display 9-7 distinctive ring 8-18 DND 8-11 DNS server troubleshooting 12-8 verifying settings 12-4 DNS Server 1-5 7-10 documentation additional i-xiii Domain Name 7-4, 7-8 Domain Name System (DNS) 7-4, 7-8 Domain Name System (DNS) server 7-10 do not disturb 8-11

Е

EAP-MD5 **7-15** Device ID **7-15** Realm **7-15**

Shared Secret 7-15 encrypted configuration files 1-19 encryption 1-16 media 1-18 signaling 1-19 EnergyWise configuration 9-8 description 2-4 enterprise parameters call forward 8-36 call forward options 8-36 user options web page defaults 8-36 error messages, used for troubleshooting 12-3 Ethernet Information web page 11-2, 11-8 Ethernet Setup menu about 7-4 Ethernet statistics 10-7 Ethernet Statistics screen 10-7 external power 2-4

F

fast dials address book 8-30 fast dial service 8-11 features configuring on phone, overview 1-15 configuring with Cisco Unified Communications Manager, overview 1-15 informing users about, overview 1-16 file authentication 1-18 file format List.xml 9-4 RingList.xml 9-2 Forced Authorization Code (FAC) 8-11

G

G.711a, G.711µ, G.722, G.729a, G.729ab, iLBC 1-1

```
G.7291-1G729a1-1G729ab1-1G729b1-1
```

Η

handset connecting 3-12 handsfree 3-8 handsfree profile 3-8 headset audio quality 3-11 Bluetooth 3-9 connecting 3-6 disabling 3-6 quality 3-11 USB 3-6 using 3-5 wired 3-6 wireless 3-8 headset port 3-12 hold **8-12** hold reversion 8-12 http 11-3 HTTP, description 1-12 https 11-3 HTTPS, description 1-12 hunt group sign out of hunt groups 8-14 Hypertext Transfer Protocol See HTTP

idle display configuring 9-7 viewing settings 9-7

XML service 9-7 image authentication 1-18 Incoming Call Toast Timer 8-39 installing Cisco Unified Communications Manager configuration 3-2 network requirements 3-1 preparing 2-10 requirements, overview 1-24 intercom 8-13 interference, cell phone 1-2 Internet Protocol (IP) 1-12 IP Address 7-10 IP address, troubleshooting 12-3 IPv4 Setup 7-4, 7-7

К

Key Expansion Module configuration 4-5 support by phone model 4-1

L

LDAP directories, using with Cisco Unified IP Phone 8-27

LEAP

ſ

description 6-12 light extensible authentication protocol, See LEAP line buttons 8-11 lines buttons for 8-11 Line Select 8-13 Line Select 8-13 Line status 1-30 List.xml file 9-4 LLDP-PoE 8-17 Locale Installer B-1 localization Installing the Cisco Unified Communications Manager Locale Installer B-1 logging, missed call 8-14

Μ

MAC address 2-14 malicious caller identification (MCID) 8-14 manufacturing installed certificate (MIC) 1-18 media encryption 1-18 meet-me conference 8-14 Message Indicators 1-30 message waiting 8-14 Message Waiting Indicator (MWI) 1-30 Message Waiting Lamp 1-30 metrics, voice quality 10-12, 11-12 MIC 1-18 missed call logging 8-14 mobile connect 8-15 mobile voice access 8-15 Mode 7-13 Model Information screen 10-1 monitoring and recording 8-21 multiple calls per line appearance 8-15 music-on-hold 8-15 mute 8-15

Ν

native VLAN 2-3 Network Configuration web page 11-2 network connectivity, verifying 12-3 networking protocol 802.1X 1-12 BootP 1-11 CAST 1-11 CDP 1-11 DHCP 1-11 HTTP 1-12

IP 1-12 RTCP 1-13 RTP 1-13 SIP 1-13 TCP 1-13 TFTP 1-14 UDP 1-14 network outages, identifying 12-6 network port configuring 7-6 connecting to 3-12 network protocol LEAP 6-12 network requirements, for installing 3-1 Network Setup configuration menu displaying 7-2 IPv4 menu options Alternate TFTP 7-11 Default Router 7-10 DHCP 7-10 DHCP Address Released 7-12 DNS Server 1-5 7-10 IP Address 7-10 Subnet Mask 7-10 TFTP Server 1 7-11 TFTP Server 2 7-12 options Admin. VLAN ID 7-5 Domain Name 7-4, 7-8 Operational VLAN ID 7-4 PC Port Configuration 7-6 PC VLAN 7-5 SW Port Configuration 7-6 overview 7-1 Network Setup menu options CDP on PC port 11-8 CDP on switch port 11-8 Network Setup web page 11-5

network statistics 11-8 Network web page 11-2, 11-8

0

onhook predialing 8-15 open authentication, description 6-11 Operational VLAN ID 7-4 options enterprise parameters user options web page defaults 8-36 orthogonal frequency division multiplexing (OFDM) 6-6

Ρ

Park Monitoring 8-15 park monitoring directory number configuration window 8-25 setting service parameters 8-24 PCM file requirements, for custom ring types 9-3 PC Port Configuration 7-6 PC VLAN 7-5 personal address book phone button template 8-30 personal directories, configuring 8-27 phone button template 8-29 modifying for personal address book or fast dials 8-30 phone display disabling 9-7 phone hardening 1-19 phone lines buttons for 8-11 phone settings access 7-2 physical connection, verifying 12-6 plus dialing 8-16 PNG file 9-4, 9-5 PoE 2-4

1

ports access 3-3 network 3-3 power EnergyWise configuration 9-8 EnergyWise description 2-4 external 2-3, 2-4 for the phone 2-3 outage 2-4 PoE 2-4 power negotiation over LLDP 2-6 power over Ethernet See PoE Power Save Plus See EnergyWise power source causing phone to reset 12-8 power injector 2-4 presence-enabled directories 8-17 privacy 8-17 Private Line Automated Ringdown (PLAR) 8-17 programmable button 1-30 description of 8-11 Programmable Feature Button 1-30 Programmable Line Key (PLK) 1-30 protected call description 1-21 protected calling description 8-17

Q

Quality of Service (QoS)6-9Quality Reporting Tool (QRT)8-18, 12-16

R

ſ

RADIUS server authentication, description 6-12

Real-Time Control Protocol See RTCP Real-Time Transport Protocol See RTP received signal strength indicator, See RSSI redial 8-18 remote port configuration 8-18 Report Quality softkey 8-18, 12-16 reset settings on phone 12-15 resetting Cisco Unified IP Phone 12-15 continuously 12-6 intentionally 12-7 RingList.xml file format 9-2 ring setting 8-18 RSSI, description 6-8

S

secure and nonsecure indication tone 8-19 secure conference 8-20 description 1-20 establishing 1-20 identifying 1-20 restrictions 1-21, 1-22 security restrictions 1-22 Secure SRST 1-19 securing the phone with a cable lock 3-20 security AES encryption 6-13 CAPF (Certificate Authority Proxy Function) 1-19 device authentication 1-18 encrypted configuration file 1-19 file authentication 1-18 image authentication 1-18 media encryption 1-18 open authentication 6-11 phone hardening 1-19 RADIUS server authentication 6-12

Cisco Unified IP Phone 8961, 9951, and 9971 Administration Guide for Cisco Unified Communications Manager 8.6 (SIP)

security profiles 1-19, 1-20 shared key authentication 6-12 signaling authentication 1-18 signaling encryption 1-19 static WEP encryption 6-13 TKIP encryption 6-13 WLAN overview 6-11 WPA authentication 6-12 Security Configuration menu (on Settings menu) options LSC 7-13 Trust List 7-13 security profiles 1-19, 1-20 Security Setup configuration menu 802.1X Authentication 7-13 overview 7-1 Security Setup configuration menu (on Settings menu) about 7-13 services configuring for users 8-33 description 8-20 subscribing to 8-33 Services URL button 8-20 shared key authentication, description 6-12 shared line 8-20 signaling authentication 1-18 signaling encryption 1-19 SIP description 1-13 Speaker button, disabling 3-4 speed dial buttons for 8-11 SRST 11-6 secure reference 1-19 SSH disable and enable 9-11 standard (ad hoc) conference 8-9 startup problems 12-1 startup process accessing TFTP server 2-9

configuring VLAN 2-9 contacting Cisco Unified Communications Manager 2-10 loading stored phone image 2-8 obtaining IP address 2-9 obtaining power 2-8 requesting configuration file 2-10 understanding 2-8 statistics call 10-11 video 10-13 network 11-8 streaming 11-11 Status menu 10-1, 10-2 status messages 10-3 Status Messages screen 10-3 Status Messages web page 11-3, 11-11 Stream 1 web page 11-3, 11-11 streaming statistics 11-11 Subnet Mask 7-10 supplicant, in 802.1X 1-23 switch Cisco Catalyst 2-2 internal Ethernet 2-2 SW Port Configuration 7-6

Т

TCP 1-13 technical specifications, for Cisco Unified IP Phone C-1 telephony features agent greeting 8-2 audible message waiting indicator 8-14 auto answer 8-3 auto dial 8-3 auto dial 8-3 barge 1-24, 8-4 block external to external transfer 8-5 Busy Lamp Field (BLF) Pickup 8-5

1

Cisco Unified IP Phone 8961, 9951, and 9971 Administration Guide for Cisco Unified Communications Manager 8.6 (SIP)

Busy Lamp Field (BLF) speed dial 8-5 Call Back 8-5 call display restrictions 8-5 caller ID 8-8 caller ID blocking 8-8 call forward 8-6 call forward destination override 8-7 call park 8-6 call waiting 8-7 conference 8-9 directed call park 8-10 distinctive ring 8-18 do not disturb (DND) 8-11 fast dial service 8-11 hold **8-12** hold reversion 8-12 intercom 8-13 malicious caller identification (MCID) 8-14 meet-me conference 8-14 message waiting 8-14 mobile connect 8-15 mobile voice access 8-15 monitoring and recording 8-21 multiple calls per line appearance 8-15 music-on-hold 8-15 mute 8-15 plus dialing 8-16 power negotiation over LLDP 8-17 presence-enabled directories 8-17 privacy 8-17 redial 8-18 remote port configuration 8-18 ring setting 8-18 secure and nonsecure indication tone 8-19 secure conference 8-20 services 8-20 Services URL button 8-20 shared line 8-20 sign out of hunt groups 8-14

ſ

Time-of-Day Routing 8-22 transfer 8-22 video mode 8-22 video support 8-22 voice messaging system 8-23 VPN 8-22 TFTP description 1-14 troubleshooting 12-3 TFTP Server 1 7-11 TFTP Server 2 7-12 **TFTP** settings IPv6 1-17 time, displayed on phone 3-2 Time-of-Day Routing 8-22 TKIP encryption description 6-13 transfer 8-22 Transmission Control Protocol See TCP Trivial File Transfer Protocol See TFTP troubleshooting DHCP 12-7 DNS 12-8 DNS settings 12-4 IP addressing and routing 12-3 network connectivity 12-3 network outages 12-6 phones resetting 12-7 physical connection 12-6 services on Cisco Unified Communications Manager 12-4 TFTP settings 12-3 VLAN configuration 12-7 Trust List menu 7-14

U

USB headsets 3-6 USB port data 3-5 User Datagram Protocol See UDP User Options web page call forward settings 8-36 description 8-34 giving users access to 8-34, A-1 users accessing voice messaging system A-2 adding to Cisco Unified Communications Manager 8-34 configuring personal directories A-3 providing support to A-1 required information A-1 subscribing to services A-2

V

video mode 8-22 video statistics 10-13 video support 8-22 VLAN assigning separate SSIDs 6-9 auxiliary, for voice traffic 2-3, 6-9 configuring 7-4 configuring for voice networks 2-2 native, for data traffic 2-3 separate voice for QoS 6-9 verifying 12-7 VLAN, interaction with 2-2 voice messaging system 8-23 voice messaging system, accessing A-2 voice quality metrics 10-12, 11-12 voice VLAN 2-3, 6-9 VPN 8-22

W

wall mounting, Cisco Unified IP Phone 3-20, E-1 WDS, wireless domain server 6-7 web page about 11-1 Access Information 11-2, 11-8 accessing 11-2 Debug Display 11-3, 11-11 Device Information 11-2, 11-4 disabling access to 11-3 Ethernet Information 11-2, 11-8 Network 11-2, 11-8 Network Configuration web page 11-2 Network Setup 11-5 preventing access to 11-3 Status Messages 11-3, 11-11 Stream 1 11-3, 11-11 WEP encryption, description 6-13 wideband codec 1-1 wired headset 3-6 wireless domain server (WDS) 6-7 wireless headset 3-8 wireless local area network, See WLAN WLAN components 6-8 security 6-11 voice quality 6-9 WLAN Setup menu 7-7 WLAN statistics 10-9 WLAN Statistics screen 10-9 World mode 6-4 supported countries 6-4 WPA encryption with TKIP, description 6-13 WPA authentication, description 6-12

X

Γ

L

XmlDefault.cnf.xml 2-7

Index

1