








Cisco Unified IP Phone 7962G and 7942G Phone Guide for Cisco Unified Communications Manager 6.1(3) (SCCP and SIP)

Americas Headquarters

Cisco Systems, Inc.
170 West Tasman Drive
San Jose, CA 95134-1706
USA
<http://www.cisco.com>
Tel: 408 526-4000
800 553-NETS (6387)
Fax: 408 527-0883

Common Phone Tasks

| | |
|--|--|
| View online help on the phone | Press  . |
| Place a call | Go off-hook before or after dialing a number. |
| Redial a number | Press Redial . Or press the Navigation button while on-hook to see your Placed Calls log. |
| Switch to the handset during a call | Pick up the handset. |
| Switch to the speaker or headset during a call | Press  or  , then hang up the handset. |
| Mute your phone | Press  . |
| Use your call logs | Press  to choose a call log. To dial, highlight a listing and go off-hook. |
| Edit a number | Press EditDial , << or >> . |
| Hold/resume a call | Press Hold or Resume . |
| Transfer a call to a new number | Press Transfer , enter the number, then press Transfer again. |
| Place an intercom call | Press intercom button , enter a number if necessary, and speak after you hear the tone. |
| Start a standard (ad hoc) conference call | Press more > Confrn , dial the participant, then press Confrn again. |



Cisco, Cisco Systems, the Cisco logo, and the Cisco Systems logo are registered trademarks or trademarks of Cisco Systems, Inc. and/or its affiliates in the United States and certain other countries. All other trademarks mentioned in this document or Website are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (0705R)

© 2008 Cisco Systems, Inc. All rights reserved.

OL-17709-01



QUICK REFERENCE



Cisco Unified IP Phone 7962G and 7942G for Cisco Unified Communications Manager 6.1(3) (SCCP and SIP)

Softkey Definitions
Phone Screen Icons
Button Icons
Common Phone Tasks










 

 


 





Softkey Definitions










 

| | |
|----------------------------|---|
| AbbrDial | Dial using a speed dial index number |
| Answer | Answer a call |
| Back | Return to the previous Help topic |
| Barge | Add yourself to a call on a shared line |
| CallBack | Receive notification when a busy extension becomes available |
| Cancel | Cancel an action or exit a screen without applying changes |
| cBarge | Add yourself to a call on a shared line and establish a conference |
| CFwdALL | Set up/cancel call forwarding |
| Clear | Delete records or settings |
| Close | Close the current window |
| Conflist | View conference participants |
| Confrn | Create a conference call |
| Delete | Remove characters to the right of the cursor when using EditDial |
| Details (SCCP only) | Open the Details record for a multiparty call in the Missed Calls and Received Calls logs |
| Dial | Dial a phone number |
| DirTrfr (SCCP only) | Transfer two calls to each other |
| DND | Turn on/off Do Not Disturb (DND) |
| EditDial | Edit a number in a call log |
| EndCall | Disconnect the current call or the current intercom call |
| Erase | Reset settings to their defaults |
| Exit | Return to the previous screen |

| | |
|----------------------------|---|
| GPickUp | Answer a call ringing in another group |
| iDivert | Send or redirect a call to a voice messaging system |
| Join (SCCP only) | Join together existing calls to create a conference |
| Links | View related Help topics |
| Main | Display the Help main menu |
| MeetMe | Host a Meet-Me conference call |
| more | Display additional softkeys |
| New Call | Make a new call |
| OPickUp | Answer a call ringing in an associated group |
| Park | Store a call using Call Park |
| PickUp | Answer a call in your group |
| QRT | Submit call problems to the system administrator |
| Redial | Redial the most recently dialed number |
| Remove | Remove a conference participant |
| Resume | Resume a call on hold |
| RmLstC | Drop the last party added to a conference call |
| Save | Save the chosen settings |
| Search | Search for a directory listing |
| Select | Select a menu item or call |
| Transfer | Transfer a call |
| Update | Refresh content |
| VidMode (SCCP only) | Choose a video display mode |
| << | Delete entered characters |
| >> | Move through entered characters |










Phone Screen Icons

Line and Call Status

| | |
|---|--|
|  | Call Forwarding enabled |
|  | Call on hold; remote call on hold |
|  | Connected call |
|  | Incoming call |
|  | Off-hook |
|  | On-hook |
|  | Shared line in use |
|  | Message waiting |
|  | Authenticated call |
|  | Encrypted call |
|  | BLF-monitored line is in-use |
|  | BLF-monitored line is idle |
|  | BLF-monitored line is ringing (BLF Pickup) |
|  | Speed-dial, call log, or directory listing (line status unknown) |
|  | Line in Do Not Disturb (BLF feature) |
|  | Intercom line in idle state |
|  | Intercom line in one-way audio call |
|  | Intercom line in two-way audio call |
| Audio or Video Mode | |
|  | Handset in use |
|  | Headset in use |

| | |
|---|---|
|  | Speakerphone in use |
|  | Video enabled (SCCP only) |
| Feature Access | |
|  | Feature assigned to button |
|  | Mobility assigned to button |
|  | Hold assigned to button |
|  | Conference assigned to button |
|  | Transfer assigned to button |
|  | Phone service URL assigned to button |
|  | URL entry in a call log is ready to edit (SIP only) |
|  | Option selected |
|  | Feature enabled |

Button Icons

| | |
|---|-------------|
|  | Messages |
|  | Services |
|  | Help |
|  | Directories |
|  | Settings |
|  | Volume |
|  | Speaker |
|  | Mute |
|  | Headset |

Contents

Getting Started 1

Using this Guide 1

Finding Additional Information 2

 Accessing Cisco Unified IP Phone 7900 Series eLearning Tutorials 2

Safety and Performance Information 2

Cisco Product Security Overview 3

Accessibility Features 3

Connecting Your Phone 4

An Overview of Your Phone 7

Understanding Buttons and Hardware 7

Understanding Lines and Calls 10

 Understanding Line and Call Icons 11

Understanding Phone Screen Features 12

 Cleaning the Phone Screen 12

Understanding Feature Buttons and Menus 13

 Accessing the Help System on Your Phone 13

Understanding Feature Availability 14

Understanding SIP vs. SCCP 15

Basic Call Handling 16

Placing a Call—Basic Options 16

Placing a Call—Additional Options 17

Answering a Call 20

Ending a Call 21

Using Hold and Resume 22

Using Mute 23

| | |
|--|-----------|
| Switching Between Multiple Calls | 23 |
| Switching an In-Progress Call to Another Phone | 24 |
| Viewing Multiple Calls | 24 |
| Transferring Calls | 25 |
| Sending a Call to a Voice Message System | 26 |
| Forwarding Calls to Another Number | 26 |
| Using Do Not Disturb | 27 |
| Making Conference Calls | 28 |
| Using Conference Features | 28 |
| Using Conference | 29 |
| Using Join | 30 |
| Using cBarge | 31 |
| Using Meet-Me | 31 |
| Viewing or Removing Conference Participants | 32 |
| Placing or Receiving Intercom Calls | 32 |
| Advanced Call Handling | 34 |
| Speed Dialing | 34 |
| Picking Up a Redirected Call on Your Phone | 35 |
| Storing and Retrieving Parked Calls | 36 |
| Logging Out of Hunt Groups | 37 |
| Using a Shared Line | 38 |
| Understanding Shared Lines | 38 |
| Using Barge to Add Yourself to a Shared-Line Call | 39 |
| Understanding Barge Features | 39 |
| Using Barge Features | 39 |
| Preventing Others from Viewing or Barging a Shared-Line Call | 40 |
| Using BLF to Determine a Line State | 41 |
| Making and Receiving Secure Calls | 42 |
| Tracing Suspicious Calls | 43 |
| Prioritizing Critical Calls | 43 |
| Using Cisco Extension Mobility | 45 |
| Managing Business Calls Using a Single Phone Number | 45 |

Using a Handset, Headset, and Speakerphone 48

Obtaining a Headset 49

Using AutoAnswer 49

Changing Phone Settings 50

Customizing Rings and Message Indicators 50

Customizing the Phone Screen 51

Using Call Logs and Directories 52

Using Call Logs 52

Directory Dialing 54

 Using Corporate Directory on Your Phone 54

 Using Personal Directory on Your Phone 55

Accessing Voice Messages 58

Using the User Options Web Pages 60

Accessing Your User Options Web Pages 60

Configuring Features and Services on the Web 61

 Using Personal Directory on the Web 61

 Using Your Personal Address Book on the Web 61

 Configuring Fast Dials on the Web 63

 Using the Address Book Synchronization Tool 64

 Setting Up Speed Dials on the Web 64

 Setting Up Phone Services on the Web 66

 Controlling User Settings on the Web 67

 Controlling Line Settings on the Web 68

 Setting Up Phones and Access Lists for Mobile Connect 70

 Using Cisco WebDialer 73

Understanding Additional Configuration Options 75

Troubleshooting Your Phone 77

General Troubleshooting 77

Viewing Phone Administration Data 78

Using the Quality Reporting Tool **78**


Cisco One-Year Limited Hardware Warranty Terms 79

Index 81

Getting Started

Using this Guide

This guide provides you with an overview of the features available on your phone. You can read it completely for a solid understanding of your phone's capabilities, or refer to the table below for pointers to commonly used sections.

| If you want to... | Then... |
|--------------------------------------|--|
| Explore your phone on your own | Press  on the phone when you need assistance. |
| Review safety information | See Safety and Performance Information , page 2. |
| Connect your phone | See Connecting Your Phone , page 4. |
| Use your phone after it is installed | Start with An Overview of Your Phone , page 7. |
| Learn what the button lights mean | See Understanding Buttons and Hardware , page 7. |
| Learn about the display | See Understanding Phone Screen Features , page 12. |
| Make calls | See Placing a Call—Basic Options , page 16. |
| Put calls on hold | See Using Hold and Resume , page 22. |
| Mute calls | See Using Mute , page 23. |
| Transfer calls | See Transferring Calls , page 25. |
| Make conference calls | See Making Conference Calls , page 28. |
| Set up speed dialing | See Speed Dialing , page 34. |
| Share a phone number | See Using a Shared Line , page 38. |
| Use your phone as a speakerphone | See Using a Handset, Headset, and Speakerphone , page 48. |
| Change the ring volume or tone | See Changing Phone Settings , page 50. |
| View your missed calls | See Using Call Logs and Directories , page 52. |
| Listen to your voice messages | See Accessing Voice Messages , page 58. |
| See softkey and icon definitions | See the Quick Reference Card in the front of this guide. |

Finding Additional Information

You can access the most current Cisco Unified IP Phone documentation on the World Wide Web at this URL:

http://www.cisco.com/en/US/products/hw/phones/ps379/tsd_products_support_series_home.html

You can access the Cisco website at this URL:

<http://www.cisco.com/>

International Cisco websites can be accessed from this URL:

http://www.cisco.com/public/countries_languages.shtml

You can access the most current Licensing Information at this URL:

http://www.cisco.com/en/US/docs/voice_ip_comm/cuipph/all_models/openssl_license/7900_ssllic.htm

Accessing Cisco Unified IP Phone 7900 Series eLearning Tutorials

(SCCP phones only.)

The Cisco Unified IP Phone 7900 Series eLearning tutorials use audio and animation to demonstrate basic calling features. You can access eLearning tutorials online (for several phone models) from your personal computer. Look for the eLearning tutorial (English only) for your phone model in the documentation list at the following location:

http://www.cisco.com/en/US/products/hw/phones/ps379/products_user_guide_list.html



Note Although eLearning tutorials for the Cisco Unified IP Phone 7962G and 7942G are not available, refer to the Cisco Unified IP Phone 7900 Series eLearning tutorials for an overview of the common IP phone features and functionality.

Safety and Performance Information

Refer to these sections for information about the impact of power outages and other devices on your Cisco Unified IP Phone.

Power Outage

Your accessibility to emergency service through the phone is dependent on the phone being powered. If there is an interruption in the power supply, Service and Emergency Calling Service dialing will not function until power is restored. In the case of a power failure or disruption, you may need to reset or reconfigure equipment before using the Service or Emergency Calling Service dialing.

Using External Devices

The following information applies when you use external devices with the Cisco Unified IP Phone:

Cisco recommends the use of good quality external devices (such as headsets) that are shielded against unwanted radio frequency (RF) and audio frequency (AF) signals.

Depending on the quality of these devices and their proximity to other devices such as mobile phones or two-way radios, some audio noise may still occur. In these cases, Cisco recommends that you take one or more of the following actions:

- Move the external device away from the source of the RF or AF signals.
- Route the external device cables away from the source of the RF or AF signals.
- Use shielded cables for the external device, or use cables with a better shield and connector.
- Shorten the length of the external device cable.
- Apply ferrites or other such devices on the cables for the external device.

Cisco cannot guarantee the performance of the system because Cisco has no control over the quality of external devices, cables, and connectors. The system will perform adequately when suitable devices are attached using good quality cables and connectors.

**Caution**

In European Union countries, use only external headsets that are fully compliant with the EMC Directive [89/336/EC].

Cisco Product Security Overview

This product contains cryptographic features and is subject to United States and local country laws governing import, export, transfer and use. Delivery of Cisco cryptographic products does not imply third-party authority to import, export, distribute or use encryption. Importers, exporters, distributors and users are responsible for compliance with U.S. and local country laws. By using this product you agree to comply with applicable laws and regulations. If you are unable to comply with U.S. and local laws, return this product immediately.

Further information regarding U.S. export regulations may be found at http://www.access.gpo.gov/bis/ear/ear_data.html.

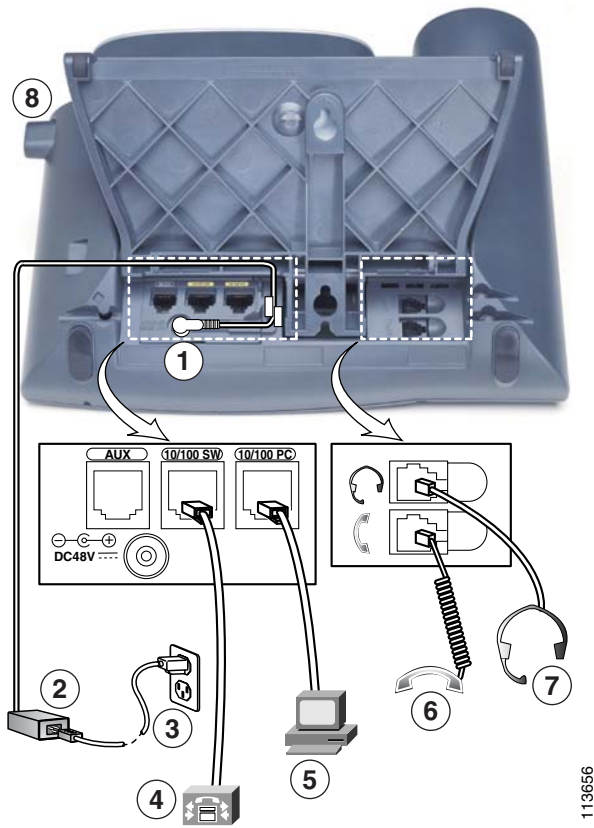
Accessibility Features

A list of accessibility features is available upon request. You can find more information about Cisco accessibility features at this URL:

www.cisco.com/go/accessibility

Connecting Your Phone

Your system administrator will likely connect your new Cisco Unified IP Phone to the corporate IP telephony network. If that is not the case, refer to the graphic and table below to connect your phone.



113656

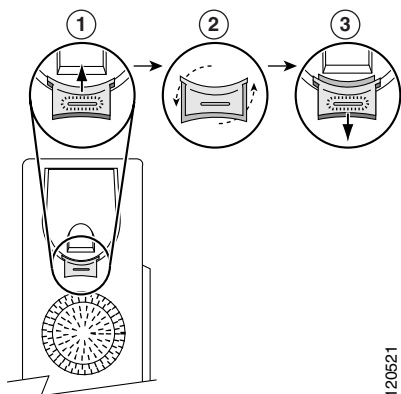
| | | | |
|---|--------------------------|---|-------------------------|
| 1 | DC adaptor port (DC48V) | 5 | Access port (10/100 PC) |
| 2 | AC-to-DC power supply | 6 | Handset port |
| 3 | AC power cord | 7 | Headset port |
| 4 | Network port (10/100 SW) | 8 | Footstand button |

Adjusting the Footstand

To change the angle of the phone base, adjust the footstand while pressing the footstand button.

Adjusting the Handset Rest

Cisco recommends adjusting the handset rest, particularly when wall mounting the phone, as this will ensure that the receiver will not readily slip out of the cradle. See the table below for instructions.



| | |
|----------|---|
| 1 | Set the handset aside and pull the square plastic tab from the handset rest. |
| 2 | Rotate the tab 180 degrees. |
| 3 | Slide the tab back into the handset rest. An extension protrudes from the top of the rotated tab. Return the handset to the handset rest. |

Registering with TAPS

After your phone is connected to the network, your system administrator might ask you to auto-register your phone using TAPS (Tool for Auto-Registered Phones Support). TAPS might be used for a new phone or to replace an existing phone.

To register with TAPS, pick up the handset, enter the TAPS extension provided by your system administrator, and follow the voice prompts. You might need to enter your entire extension, including the area code. After your phone displays a confirmation message, hang up. The phone will re-start.

Headset Information

To use a headset, connect it to the headset port on the back of your phone.

Although Cisco Systems performs some internal testing of third-party headsets for use with the Cisco Unified IP Phones, Cisco does not certify or support products from headset or handset vendors. Because of the inherent environmental and hardware inconsistencies in the locations where

Cisco Unified IP Phones are deployed, there is not a single “best” solution that is optimal for all environments. Cisco recommends that customers test the headsets that work best in their environment before deploying a large number of units in their network.

In some instances, the mechanics or electronics of various headsets can cause remote parties to hear an echo of their own voice when they speak to Cisco Unified IP Phone users.

Cisco Systems recommends the use of good quality external devices, like headsets that are screened against unwanted radio frequency (RF) and audio frequency (AF) signals. Depending on the quality of these devices and their proximity to other devices such as cell phones and two-way radios, some audio noise may still occur.

The primary reason that a particular headset would be inappropriate for the Cisco Unified IP Phone is the potential for an audible hum. This hum can be heard by either the remote party or by both the remote party and you, the Cisco Unified IP Phone user. Some potential humming or buzzing sounds can be caused by a range of outside sources, for example, electric lights, being near electric motors, large PC monitors. In some cases, a hum experienced by a user may be reduced or eliminated by using a local power cube or power injector.

Audio Quality Subjective to the User

Beyond the physical, mechanical and technical performance, the audio portion of a headset must sound good to you (the user) and to the party on the far end. Sound is subjective and Cisco cannot guarantee the performance of any headsets or handsets, but some of the headsets and handsets on the sites listed below have been reported to perform well on Cisco Unified IP Phones.

Nevertheless, it is ultimately still the customer's responsibility to test this equipment in their own environment to determine suitable performance.

For information about headsets, see:

<http://www.vxicorp.com/cisco>

<http://www.plantronics.com>

<http://www.jabra.com>

An Overview of Your Phone

The Cisco Unified IP Phone 7962G and 7942G are full-feature telephones that provide voice communication over the same data network that your personal computer uses, allowing you to place and receive phone calls, put calls on hold, speed dial numbers, transfer calls, make conference calls, and so on.

In addition to basic call-handling features, your phone can provide enhanced productivity features that extend your call-handling capabilities. Depending on configuration, your phone supports:

- Access to network data, XML applications, and web-based services.
- Online customizing of phone features and services from your User Options web pages.
- A comprehensive online help system that displays information on the phone screen.

Understanding Buttons and Hardware

You can use the graphics and table below to identify buttons and hardware on your phone.











Cisco Unified IP Phone 7962G

 









Cisco Unified IP Phone 7942G




184910

| | Item | Description | For more information, see... |
|---|---|---|--|
| 1 | Programmable buttons  | Depending on configuration, programmable buttons provide access to: <ul style="list-style-type: none"> • Phone lines and intercom lines (line buttons) and intercom lines • Speed-dial numbers (speed-dial buttons, including the BLF speed-dial feature) • Web-based services (for example, a Personal Address Book button) • Call features (for example, a Privacy, Hold, or Transfer button) Buttons illuminate to indicate status: <ul style="list-style-type: none">  Green, steady—Active call or two-way intercom call  Green, flashing—Held call  Amber, steady—Privacy in use, one-way intercom call, DND active, or logged into Hunt Group  Amber, flashing—Incoming call or reverting call  Red, steady—Remote line in use (shared line or BLF status)  Red, flashing—Remote call on hold | <ul style="list-style-type: none"> • Understanding Phone Screen Features, page 12 • Basic Call Handling, page 16 • Speed Dialing, page 34 • Using a Shared Line, page 38 • Using BLF to Determine a Line State, page 41 • Using BLF to Determine a Line State, page 41 • Placing or Receiving Intercom Calls, page 32 |
| 2 | Phone screen | Shows phone features. | Understanding Phone Screen Features, page 12 |
| 3 | Footstand button | Allows you to adjust the angle of the phone base. | Adjusting the Footstand, page 5 |
| 4 | Messages button  | Auto-dials your voice message service (varies by service). | Accessing Voice Messages, page 58 |
| 5 | Directories button  | Opens/closes the Directories menu. Use it to access call logs and directories. | Using Call Logs, page 52 |
| 6 | Help button  | Activates the Help menu. | Accessing the Help System on Your Phone, page 13 |

| | Item | Description | For more information, see... |
|----|--|---|---|
| 7 | Settings button  | Opens/closes the Settings menu. Use it to control phone screen contrast and ring sounds. | Changing Phone Settings, page 50 |
| 8 | Services button  | Opens/closes the Services menu. | Using the User Options Web Pages, page 60 |
| 9 | Volume button  | Controls the handset, headset, and speakerphone volume (off-hook) and the ringer volume (on-hook). | Using a Handset, Headset, and Speakerphone, page 48 |
| 10 | Speaker button  | Toggles the speakerphone on or off. When the speakerphone is on, the button is lit. | Using a Handset, Headset, and Speakerphone, page 48 |
| 11 | Mute button  | Toggles the microphone on or off. When the microphone is muted, the button is lit. | Using Mute, page 23 |
| 12 | Headset button  | Toggles the headset on or off. When the headset is on, the button is lit. | Using a Handset, Headset, and Speakerphone, page 48 |
| 13 | Navigation button  | Allows you to scroll through menus and highlight items. When the phone is on-hook, displays phone numbers from your Placed Calls log. | Using Call Logs, page 52 |
| 14 | Keypad | Allows you to dial phone numbers, enter letters, and choose menu items. | Basic Call Handling, page 16 |
| 15 | Softkey buttons  | Each activates a softkey option (displayed on your phone screen). | Understanding Phone Screen Features, page 12 |
| 16 | Handset light strip | Indicates an incoming call or new voice message. | Accessing Voice Messages, page 58 |

Understanding Lines and Calls




 
 






 
 


 
 
To avoid confusion about lines and calls, refer to these descriptions:

Lines—Each line corresponds to a directory number or intercom number that others can use to call you. The Cisco Unified IP Phone 7962G supports one to six lines and the Cisco Unified IP Phone 7942G supports one to two lines, depending on configuration. To see how many lines you have, look at the right side of your phone screen. You have as many lines as you have directory numbers and phone line icons: .

Calls—Each line can support multiple calls. By default, your phone supports four connected calls per line, but your system administrator can adjust this number according to your needs. Only one call can be active at any time; other calls are automatically placed on hold.

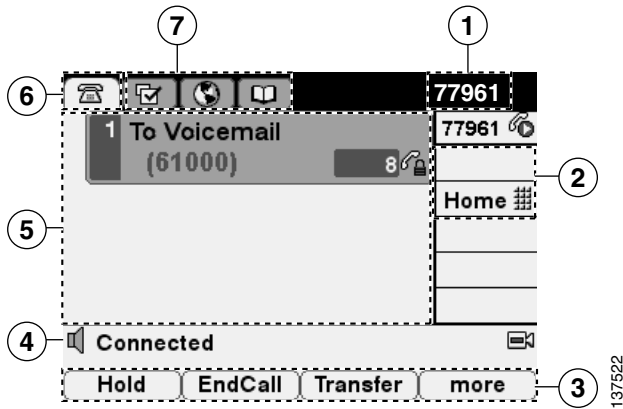
Understanding Line and Call Icons



Your phone displays icons to help you determine the call and line state.

| Icon | Line or Call State | Description |
|---|--|---|
|  | On-hook line | No call activity on this line. |
|  | Off-hook line | You are dialing a number or an outgoing call is ringing. |
|  | Connected call | You are currently connected to the other party. |
|  | Ringing call | An incoming call is ringing on one of your lines. |
|  | Call on hold | You have put the call on hold. See Using Hold and Resume, page 22 . |
|  | Remote call on hold | Another phone that shares your line has put a call on hold. See Using Hold and Resume, page 22 . |
|  | Remote-in-use | Another phone that shares your line has a connected call. See Using a Shared Line, page 38 , for details. |
|  | Reverting call | A holding call is reverting to your phone. See Using Hold and Resume, page 22 . |
|  | Authenticated call | See Making and Receiving Secure Calls, page 42 . |
|  | Encrypted call | See Making and Receiving Secure Calls, page 42 . |
|  | BLF- monitored line is idle | See Using BLF to Determine a Line State, page 41 . |
|  | BLF- monitored line is in-use | See Using BLF to Determine a Line State, page 41 . |
|  | BLF-monitored line is ringing (BLF Pickup) | See Using BLF to Determine a Line State, page 41 . |
|  | Line in Do Not Disturb (BLF) | See Using BLF to Determine a Line State, page 41 . |
|  | Idle Intercom line | The intercom line is not in use. See Placing or Receiving Intercom Calls, page 32 . |
|  | One-way intercom call | The intercom line is sending or receiving one-way audio. See Placing or Receiving Intercom Calls, page 32 . |
|  | Two-way intercom call | The recipient pressed the intercom line to activate two-way audio with the caller. See Placing or Receiving Intercom Calls, page 32 . |

Understanding Phone Screen Features

This is what your main phone screen might look like with active calls and several feature menus open:








| | | |
|---|--------------------------------|---|
| 1 | Primary phone line | Displays the phone number (directory number) for your primary phone line. When several feature tabs are open, the phone number and the time and date alternate display in this area. |
| 2 | Programmable button indicators | Programmable buttons  can serve as phone line buttons, speed-dial buttons, phone service buttons or phone feature buttons. Icons and labels indicate how these buttons are configured. For an icon reference, see “ Phone Screen Icons ” in the Quick Reference Card at the front of this guide. |
| 3 | Softkey labels | Each displays a softkey function. To activate a softkey, press the softkey button  . |
| 4 | Status line | Displays audio mode icons, status information, and prompts. |
| 5 | Call activity area | Displays current calls per line, including caller ID, call duration, and call state for the highlighted line (standard view). See “ Understanding Line and Call Icons ” section on page 11, and Viewing Multiple Calls , page 24. |
| 6 | Phone tab | Indicates call activity. Press this tab to return to the call activity area, if needed. |
| 7 | Feature tabs | Each indicates an open feature menu. See Understanding Feature Buttons and Menus , page 13. |

Cleaning the Phone Screen

Use only a soft, dry cloth to wipe the phone screen. Do not use any liquids or powders on the phone, as they can contaminate phone components and cause failures.



 




Understanding Feature Buttons and Menus

Press a feature button to open or close a feature menu.

| If you want to... | Then... |
|-------------------------------------|---|
| Open or close a feature menu | Press a feature button: <ul style="list-style-type: none">  Messages  Services  Directories  Settings  Help |
| Scroll through a list or menu | Press the Navigation button. |
| Go back one level in a feature menu | Press Exit . Pressing Exit from the top level of a menu, closes the menu. |
| Switch among open feature menus | Press a feature tab. Each feature menu has a corresponding tab. The tab is visible when the feature menu is open. |

Accessing the Help System on Your Phone

Your phone provides a comprehensive online help system. Help topics appear on the phone screen.















 

| If you want to... | Then... |
|---------------------------------|--|
| View the main menu | Press  on your phone and wait a few seconds for the menu to display. Main menu topics include: <ul style="list-style-type: none"> • About Your Cisco Unified IP Phone—Details about your phone • How do I...?—Procedures for common phone tasks • Calling Features—Descriptions and procedures for calling features • Help—Tips on using and accessing Help |
| Learn about a button or softkey | Press  , then quickly press a button or softkey. |
| Learn about a menu item | Press  ,  , or  to display a feature menu. Highlight a menu item, then press  twice quickly. |
| Get help using Help | Press  twice quickly. Select the help topic you need. |

Understanding Feature Availability

Depending on your phone system configuration, features included in this Phone Guide might not be available to you or might work differently on your phone. Contact your support desk or system administrator for information about feature operation or availability.

 
You can access many features either by using a softkey or by pressing a line button. You can configure some features but your system administrator controls most of them.

Here are some details about using softkeys and line buttons to access features:

| Feature | Softkey | Line Button Label and Icon |
|-------------------------------|----------|---|
| Call Back | CallBack | CallBack  |
| Call Forward | CFwdALL | Forward All  |
| Call Park | Park | Park  |
| Call Pickup | PickUp | PickUp  |
| Conference | Confrn | Conference  |
| Conference List | ConfList | Conference List  |
| Do Not Disturb | DND | Do Not Disturb  or Do Not Disturb  |
| End Call | EndCall | End Call  |
| Group Pickup | GPickUp | Group Pickup  |
| Hold | Hold | Hold  |
| Hunt Group | HLog | Hunt Group  or Hunt Group  |
| Malicious Call Identification | MCID | Malicious Call ID  |
| Meet Me Conferencing | MeetMe | MeetMe  |
| Mobility | Mobility | Mobility  |
| New Call | New Call | New Call  |
| Other Pickup | OPickUp | Other Pickup  |
| Quality Reporting Tool | QRT | Quality Reporting Tool  |
| Redial | Redial | Redial  |
| Remove Last Conference Party | RmLstC | Remove Last Participant  |
| Transfer | Transfer | Transfer  |
| Video Mode Command | VidMode | Video  |

Understanding SIP vs. SCCP

Your phone can be configured to work with one of two signaling protocols: SIP (Session Initiation Protocol) or SCCP (Skinny Call Control Protocol). Your system administrator determines this configuration.





Phone features can vary depending on the protocol. This Phone Guide indicates which features are protocol-specific. To learn which protocol your phone is using, you can ask your system administrator or you can choose  > **Model Information** > **Call Control Protocol** on your phone.

Basic Call Handling



You can perform basic call-handling tasks using a range of features and services. Feature availability can vary; see your system administrator for more information.

Placing a Call—Basic Options

Here are some easy ways to place a call on your Cisco Unified IP Phone.





| If you want to... | Then... | For more information, see... |
|--|---|---|
| Place a call using the handset | Pick up the handset and enter a number. | An Overview of Your Phone, page 7 |
| Place a call using the speakerphone | Press  and enter a number. | Using a Handset, Headset, and Speakerphone, page 48 |
| Place a call using a headset | Press  and enter a number. Or if  is lit, press New Call and enter a number. | Using a Handset, Headset, and Speakerphone, page 48 |
| Redial a number | Press Redial to dial the last number, or press the Navigation button (with the phone idle) to see your Placed Calls. | Using Call Logs, page 52 |
| Place a call when another call is active (using the same line) | <ol style="list-style-type: none">1. Press Hold.2. Press New Call.3. Enter a number. | Using Hold and Resume, page 22 |
| Dial from a call log | <ol style="list-style-type: none">1. Choose  > Missed Calls, Received Calls, or Placed Calls.2. Select the listing or scroll to it and go off-hook. | Using Call Logs, page 52 |

Tips

- You can dial on-hook, without a dial tone (pre-dial). To pre-dial, enter a number, then go off-hook by lifting the handset or pressing **Dial**, , or .
- When you pre-dial, your phone tries to anticipate the number you are dialing by displaying matching numbers (if available) from your Placed Calls log. This is called Auto Dial. To call a number displayed with Auto Dial, press the number, or scroll to it and go off-hook.
- If you make a mistake while dialing, press << to erase digits.

Placing a Call—Additional Options

You can place calls using special features and services that might be available on your phone. See your system administrator for more information about these additional options.







| If you want to... | Then... | For more information, see... |
|--|---|---|
| Place a call while another call is active (using a different line) | <ol style="list-style-type: none"> 1. Press  for the new line. The first call is automatically placed on hold. 2. Enter a number. | Using Hold and Resume, page 22 |
| Speed dial a number | <p>Do one of the following:</p> <ul style="list-style-type: none"> • Press  (a speed-dial button). • Use the Abbreviated Dial feature. • Use the Fast Dial feature. | Speed Dialing, page 34 |
| Dial from a corporate directory on the phone | <ol style="list-style-type: none"> 1. Choose  > Corporate Directory (exact name can vary). 2. Enter a name and press Search. 3. Highlight a listing and go off-hook. | Using Call Logs, page 52 |
| Dial from a corporate directory on your personal computer using Cisco WebDialer | <ol style="list-style-type: none"> 1. Open a web browser and go to a WebDialer-enabled corporate directory. 2. Click the number that you want to dial. | Using Cisco WebDialer, page 73 |
| Use Cisco CallBack to receive notification when a busy or ringing extension is available | <ol style="list-style-type: none"> 1. Press CallBack while listening to the busy tone or ring sound. 2. Hang up. Your phone alerts you when the line is free. 3. Place the call again. | Your system administrator |
| See if a line associated with a speed-dial, call record, or directory listing is busy before placing a call to that line | Look for Busy Lamp Field indicators. | Using BLF to Determine a Line State, page 41 |
| Make a priority (precedence) call (SCCP phones only) | Enter the MLPP access number, then enter the phone number. | Prioritizing Critical Calls, page 43 |
| Dial from a Personal Address Book (PAB) entry | <ol style="list-style-type: none"> 1. Choose  > Personal Directory to log in. 2. Choose Personal Address Book and search for a listing. | Using Personal Directory on Your Phone, page 55 |

| If you want to... | Then... | For more information, see... |
|--|---|---|
| Place a call using a billing or tracking code (SCCP phones only) | <ol style="list-style-type: none"> 1. Dial a number. 2. After the tone, enter a client matter code (CMC) or a forced authorization code (FAC). | Your system administrator |
| Place a call using your Cisco Extension Mobility profile | Log in to the Cisco Extension Mobility service on a phone. | Using Cisco Extension Mobility, page 45 |
| Make a call from a cellular phone using Mobile Voice Access | <ol style="list-style-type: none"> 1. Dial your assigned Mobile Voice access number. 2. Enter your cellular phone number (if requested) and PIN. 3. Press 1 to make a call to an enterprise IP phone. 4. Dial a desktop phone number other than your desktop phone number. <p>Note Before using Mobile Voice Access to make a call, obtain your Mobile Voice Access number and End user PIN from your system administrator.</p> | Using Cisco Extension Mobility, page 45 |

| If you want to... | Then... | For more information, see... |
|------------------------------|--|---|
| Place a call using Fast Dial | <p>Note Before using this option, your system administrator must configure this feature and assign a service URL to the line button. Contact your system administrator for more information.</p> <ol style="list-style-type: none"> 1. Press the Fast Dial line button. 2. Scroll to or press the index number to find and select an entry. <p>The system dials the specified number.</p> | <p>Configuring Fast Dials on the Web, page 63</p> <p>Using Your Personal Address Book on the Web, page 61</p> |
| Place a call using your PAB | <p>Note Before using this option, your system administrator must configure this feature and assign a service URL to the line button. Contact your system administrator for more information.</p> <ol style="list-style-type: none"> 1. Press the PAB line button. 2. Access the contact and select the number. <p>The system dials the specified number.</p> | <p>Configuring Fast Dials on the Web, page 63</p> <p>Using Your Personal Address Book on the Web, page 61</p> |

Answering a Call

You can answer a call by lifting the handset, or you can use other options if they are available on your phone.

| If you want to... | Then... | For more information, see... |
|---|---|---|
| Answer with a headset | Press  , if unlit. Or, if  is already lit, press Answer or  (flashing). Note The ringing line is automatically selected. Ask your system administrator about options to always select the primary line. | Using a Handset, Headset, and Speakerphone, page 48 |
| Answer with the speakerphone | Press  , Answer , or  (flashing). Note The ringing line is automatically selected. Ask your system administrator about options to always select the primary line. | Using a Handset, Headset, and Speakerphone, page 48 |
| Switch from a connected call to answer a new call | Press Answer , or if the call is ringing on a different line, press  (flashing). | Using Hold and Resume, page 22 |
| Answer using call waiting | Press Answer . | Using Hold and Resume, page 22 |
| Send a call to a voice message system | Press iDivert . | Sending a Call to a Voice Message System, page 26 |
| Auto-connect calls | Use AutoAnswer. | Using AutoAnswer, page 49 |
| Retrieve a parked call on another phone | Use Call Park or Directed Call Park. | Storing and Retrieving Parked Calls, page 36 |
| Use your phone to answer a call ringing elsewhere | Use Call Pickup. | Picking Up a Redirected Call on Your Phone, page 35 |



| If you want to... | Then... | For more information, see... |
|--|--|---|
| Answer a priority call (SCCP phones only) | Hang up the current call and press Answer . | Prioritizing Critical Calls, page 43 |
| Answer a call on your cellular phone or other remote destination | Set up Mobile Connect and answer your phone. When you enable Mobile Connect: <ul style="list-style-type: none"> • Your desktop and remote destinations receive calls simultaneously. • When you answer the call on your desktop phone, the remote destinations stop ringing, are disconnected, and display a missed call message. • When you answer the call on one remote destination, the other remote destinations stop ringing, are disconnected, and a missed call message is shown on the other remote destinations. | Using Cisco Extension Mobility, page 45 |

Tip



If parties on a call hear a beep tone, the call might be monitored or recorded. Ask your system administrator for more information.

Ending a Call

To end a call, hang up. Here are some more details.



| If you want to... | Then... |
|---|---|
| Hang up while using the handset | Return the handset to its cradle. Or press EndCall . |
| Hang up while using the headset | Press  . If you want to keep headset mode activate, press EndCall . |
| Hang up while using the speakerphone | Press  or EndCall . |
| Hang up one call but preserve another call on the same line | Press EndCall . If necessary, remove the call from hold first. |



Using Hold and Resume

You can hold and resume calls. When you put a call on hold, the Hold icon  appears on the right in the call information area and the corresponding line button flashes green . With a shared line, when you place a call on hold, the line button flashes green and the phone displays the hold icon. When another phone places a call on hold, the line button flashes red and the phone displays the remote hold icon.

If the Hold Reversion feature is enabled for your phone, a call that you put on hold reverts back to ringing after a certain period of time. The 'reverting' call remains on hold until you resume it or until Hold Reversion times out.

Your phone indicates the presence of a reverting call by:

- Alerting you at intervals with a single ring (or flash or beep, depending on your phone line setting).
- Briefly displaying a “Hold Reversion” message in the status bar at the bottom of the phone screen.
- Displaying the animated Hold Reversion icon  next to the caller ID for the held call.
- Displaying a flashing amber line button  (depending on the line state).

| If you want to... | Then... |
|---|---|
| Put a call on hold | <ol style="list-style-type: none">1. Make sure the call you want to put on hold is highlighted.2. Press Hold. |
| Remove a call from hold on the current line | <ol style="list-style-type: none">1. Make sure that the appropriate call is highlighted.2. Press Resume. |
| Remove a call from hold on a different line | <ol style="list-style-type: none">1. Press the appropriate line button:  or  (flashing). Doing so might cause a held call to resume automatically:<ul style="list-style-type: none">• If there is a reverting call on the line, that call will resume.• If there is more than one reverting call on the line, the oldest reverting call will resume.• If a non-reverting held call is the only call on the line, it will resume.2. If necessary, scroll to the appropriate call and press Resume. |



Tips

- Engaging the Hold feature typically generates music or a beeping tone.
- If you receive an alert for an incoming call and a reverting call at the same time, by default your phone will shift the focus of the phone screen to display the incoming call. Your system administrator can change this focus priority setting.
- If you use a shared line, Hold Reversion rings only on the phone that put the call on hold, not on the other phones that share the line.

- The duration between Hold Reversion alerts is determined by your system administrator.



Using Mute

With Mute enabled, you can hear other parties on a call but they cannot hear you. You can use Mute with the handset, speakerphone, or a headset.

| If you want to... | Then... |
|-----------------------|---|
| Toggle Microphone on | Press  . |
| Toggle Microphone off | Press  . |


Switching Between Multiple Calls

You can switch between multiple calls on one or more lines. If the call that you want to switch to is not automatically highlighted, use the Navigation button to scroll to it.

| If you want to... | Then... |
|---|---|
| Switch between connected calls on one line | <ol style="list-style-type: none"> Make sure the call that you want to switch to is highlighted. Press Resume. Any active call is placed on hold and the selected call is resumed. |
| Switch between connected calls on different lines | Press  for the line that you are switching to. If a single call is holding on the line, the call automatically resumes. If multiple calls are holding, highlight the appropriate call and press Resume . |
| Switch from a connected call to answer a ringing call | Press Answer , or if the call is ringing on a different line press  (flashing). Any active call is placed on hold and the selected call is resumed. |

Switching an In-Progress Call to Another Phone

You can switch in-progress calls between the desktop phone and your cellular phone or other remote destination.

| If you want to... | Then... |
|--|--|
| Switch an in-progress call on your desktop phone to a cellular phone | <ol style="list-style-type: none">1. Press the Mobility softkey and select Send call to mobile.2. Answer the in-progress call on your cellular phone. <p>The desktop phone line button turns red  and handset icons and the calling party number appear on the phone display. You cannot use same phone line for any other calls, but if your desk phone supports multiple lines, you can use another line to make or receive calls.</p> |
| Switch an in-progress call from a cellular phone to your desktop phone | <ol style="list-style-type: none">1. Hang up the call on your cellular phone to disconnect the cellular phone, but not the call.2. Press Resume on your desk phone within 4 seconds and start talking on the desk phone. |





Viewing Multiple Calls

Understanding how multiple calls are displayed on your phone can help you organize your call-handling efforts.

In standard viewing mode, your phone displays calls as follows for the highlighted line:

- Calls with the highest precedence and longest duration display at the top of the list.
- Calls of a similar type are grouped together. For example, calls that you have interacted with are grouped near the top, and calls on hold are grouped last.

You can use these additional methods to view multiple calls on multiple lines:

| If you want to... | Then... |
|------------------------------|--|
| View calls on another line | <ol style="list-style-type: none">1. Press .2. Immediately press the line button . |
| Switch to call overview mode | <p>Press  for the highlighted line.</p> <p>The phone switches to call overview mode, displaying one call per line. The displayed call is either the active call or the held call with the longest duration.</p> <p>To return to standard viewing mode, press , then immediately press the line button.</p> |

Transferring Calls

Transfer redirects a connected call. The *target* is the number to which you want to transfer the call.

| If you want to... | Then... |
|---|---|
| Transfer a call without talking to the transfer recipient | <ol style="list-style-type: none"> 1. From an active call, press Transfer. 2. Enter the target number. 3. Press Transfer again to complete the transfer or EndCall to cancel. <p>Note If your phone has on-hook transfer enabled, complete the transfer by hanging up.</p> |
| Talk to the transfer recipient before transferring a call (consult transfer) | <ol style="list-style-type: none"> 1. From an active call, press Transfer. 2. Enter the target number. 3. Wait for the transfer recipient to answer. 4. Press Transfer again to complete the transfer or EndCall to cancel. <p>Note If your phone has on-hook transfer enabled, complete the transfer by hanging up.</p> |
| Transfer two current calls to each other (direct transfer) without staying on the line (SCCP phones only) | <ol style="list-style-type: none"> 1. Scroll to highlight any call on the line. 2. Press Select. 3. Repeat this process for the second call. 4. With one of the selected calls highlighted, press DirTrfr. (To display DirTrfr, you might need to press more.) <p>The two calls connect to each other and drop you from the call.</p> <p>Note If you want to stay on the line with the callers, use Join instead.</p> |
| Redirect a call to a voice message system | Press iDivert . For more information, see Sending a Call to a Voice Message System, page 26 . |

Tips

- If your phone has on-hook transfer enabled, complete the call by hanging up.
- If on-hook transfer is *not* enabled on your phone, hanging up without pressing **Transfer** again places the call on hold.
- You cannot use **Transfer** to redirect a call on hold. Press **Resume** to remove the call from hold before transferring it.

Sending a Call to a Voice Message System

You can use **iDivert** to send an active, ringing, or on-hold call to your voice message system. Depending on the type of call and your phone configuration, you can also use **iDivert** to send the call to another party's voice message system.

- If the call was originally sent to someone else's phone, **iDivert** allows you to redirect the call either to your own voice message system or to the original called party's voice message system. Your system administrator must make this option available to you.
- If the call was sent to you directly (not transferred or forwarded to you), or if your phone does not support the option described above, using **iDivert** redirects the call to your voice message system.

| If you want to... | Then... |
|--|---|
| Send an active, ringing, or on-hold call to a voice message system | Press iDivert . One of two things occurs: <ul style="list-style-type: none">• The call is transferred to your voice message system.• Your phone screen displays a menu that allows you to choose between your voice message system or the voice message system of the original called party. Choose an option to redirect the call. |

Tip

If your phone displays a menu that disappears before you make your selection, you can press **iDivert** again to re-display the menu. You can also ask your system administrator to configure a longer timeout value.


Forwarding Calls to Another Number

You can use the call forwarding features to redirect incoming calls from your phone to another number.

Your system administrator might allow you to choose from two types of call forwarding features:

- Unconditional call forwarding (Call Forward All)—Applies to all calls that you receive.
- Conditional call forwarding (Call Forward No Answer, Call Forward Busy, Call Forward No Coverage)—Applies to certain calls that you receive, according to conditions.

You can access Call Forward All on your phone; other call forwarding features are accessible only on your User Options web pages. Your system administrator determines which call forwarding features are available to you.

| If you want to... | Then... |
|--|---|
| Set up Call Forward All on your primary line | Press CFwdALL or Forward All and enter a target phone number. |
| Cancel Call Forward All on your primary line | Press CFwdALL or Forward All . |
| Verify that Call Forward All is enabled on your primary line | Look for: <ul style="list-style-type: none"> • The call forward icon above the primary phone number: . • The call forwarding target number in the status line. |
| Set up or cancel call forwarding remotely, or for a non-primary line | <ol style="list-style-type: none"> 1. Log in to your User Options web pages. (See Accessing Your User Options Web Pages, page 60.) 2. Access your call forwarding settings (See Controlling Line Settings on the Web, page 68.) <p>Note When call forwarding is enabled for any line other than the primary line, your phone does not provide you with any confirmation that calls are being forwarded. Instead, you must confirm your settings in the User Options web pages.</p> |

Tips




- Enter the call forward target number exactly as you would dial it from your phone. For example, enter an access code or the area code, if necessary.
- You can forward your calls to a traditional analog phone or to another IP phone, although your system administrator might restrict the call forwarding feature to numbers within your company.
- Call forwarding is phone line specific. If a call reaches you on a line where call forwarding is not enabled, the call will ring as usual.
- Your system administrator can enable a call forward override feature that allows the person receiving your forwarded calls to reach you. With override enabled, a call placed from the target phone to your phone is not forwarded, but rings through.

Using Do Not Disturb

You can use Do Not Disturb (DND) to block incoming calls from ringing on your phone. Your system administrator enables DND for your phone.

When DND and Call Forward are both enabled on your phone, calls are forwarded and the caller does not hear a busy tone.

Your intercom lines still ring when DND is active.

| If you want to... | Then... |
|------------------------|---|
| Turn on DND | Press DND or Do Not Disturb  . “Do Not Disturb” displays on the phone, the DND  lights, and the ring tone is turned off. |
| Turn off DND | Press DND or Do Not Disturb  . |
| Customize DND settings | If your system administrator configured DND settings to appear on the User Options page, follow these steps: <ol style="list-style-type: none"> 1. Log in to your User Options web pages. See Accessing Your User Options Web Pages, page 60. 2. From the drop-down menu, choose User Options > Device. 3. You can set the following options <ul style="list-style-type: none"> • Do Not Disturb—Turn DND on/off. • DND Incoming Call Alert—Set the alert to beep only, flash only, or disable all visible and audible alert notifications. |

Tips

- When DND is active, DND blocking is applied to all the lines on your phone.
- When DND and Call Forward All are both enabled on your phone, Call Forward All takes precedence on incoming calls. That is, calls will be forwarded and the caller will not hear a busy tone.
- Intercom and Multilevel Precedence and Preemption (MLPP), park reversion and hold reversion all override DND.
- Your system administrator enables the DND feature on your phone.

Making Conference Calls

Your Cisco Unified IP Phone allows you to talk simultaneously with multiple parties in a conference call.

Using Conference Features

You can create a conference in various ways, depending on your needs and the features that are available on your phone.

- Conference—Allows you to create a standard (ad hoc) conference by calling each participant. Use the **Confrn** softkey or the **Conference** button. Conference is available on most phones.

- **Join**—Allows you to create a standard (ad hoc) conference by combining existing calls. Use the **Join** softkey or button. Join is available on SCCP phones only.
- **cBarge**—Allows you to create a standard (ad hoc) conference by adding yourself to a call on a shared line. Press a line button or use the **cBarge** softkey or button. cBarge is only available on phones that use shared lines.
- **Meet-Me**—Allows you to create or join a conference by calling a conference number. Use the **MeetMe** softkey or button.

Using Conference



Conference allows you to call each participant. Conference is available on most phones.

| If you want to... | Then... |
|---|--|
| Create a conference | <ol style="list-style-type: none"> 1. From a connected call, press Confrn or Conference. (You may need to press the more softkey to see Confrn.) 2. Enter the participant's phone number. 3. Wait for the call to connect. 4. Press Confrn or Conference again to add the participant to your call. 5. Repeat to add additional participants. |
| Add new participants to an existing conference | <p>Repeat the steps listed above.</p> <p>Your system administrator determines whether non-initiators of a conference can add or remove participants.</p> |
| See a list of participants or remove participants | See Viewing or Removing Conference Participants, page 32 . |

Using Join

(SCCP phones only)

Join allows you to combine two or more existing calls to create a conference in which you are a participant.

| If you want to... | Then... |
|---|--|
| Create a conference by joining together existing calls that are on a single phone line | <ol style="list-style-type: none">1. From an active call, highlight another call that you want to include in the conference and press Select. Selected calls display this icon .2. Repeat this step for each call that you want to add.3. Press Join. (You may need to press the more softkey to see Join.) |
| Create a conference by joining together existing calls that are on multiple phone lines | <ol style="list-style-type: none">1. From an active call, press Join. (You may need to press the more softkey to see Join.)2. Press the green flashing line button  for the call(s) that you want to include in the conference. One of the following occurs:<ul style="list-style-type: none">• The calls are joined.• A window opens on your phone screen prompting you to select the call(s) that you want to join. Highlight the call(s) and press Select, then press Join to complete the action. <p>Note If your phone does not support Join for calls on multiple lines, transfer the calls to a single line before using Join.</p> |
| Join together two existing conferences | Use the Join or DirTrfr softkeys. Check with your system administrator to see if this feature is available to you. |
| See a list of participants or remove participants | See Viewing or Removing Conference Participants, page 32 . |

Using cBarge

You can create a conference by using cBarge to add yourself to a call on a shared line.

| If you want to... | Then... |
|--|---|
| Create a conference by barging a call on a shared line | <p>Press the line button for the shared line.</p> <p>In some cases, you must highlight the call and press cBarge to complete the action.</p> <p>See Using Barge to Add Yourself to a Shared-Line Call, page 39 for more information.</p> |
| See a list of participants or remove participants | See Viewing or Removing Conference Participants, page 32 . |

Using Meet-Me

Meet-Me conferencing allows you to start or join a conference by calling the conference number.





| If you want to... | Then... |
|----------------------------|--|
| Start a Meet-Me conference | <ol style="list-style-type: none"> 1. Obtain a Meet-Me phone number from your system administrator. 2. Distribute the number to participants. 3. When you are ready to start the meeting, go off-hook to get a dial tone, then press MeetMe. 4. Dial the Meet-Me conference number. <p>Participants can now join the conference by dialing in.</p> <p>Note Participants hear a busy tone if they call the conference before the initiator has joined. In this case, participants must call back.</p> |
| Join a Meet-Me conference | <p>Dial the Meet-Me conference number (provided by the conference initiator).</p> <p>Note You will hear a busy tone if you call the conference before the initiator has joined. In this case, try your call again.</p> |
| End a Meet-Me conference | <p>All participants must hang up.</p> <p>The conference does not automatically end when the conference initiator disconnects.</p> |

Tip

If you call a secure Meet-Me conference number from a non-secure phone, your phone displays the message, “Device Not Authorized.” For more information, see [Making and Receiving Secure Calls, page 42](#).

Viewing or Removing Conference Participants

During a standard (ad hoc) conference, you can view a list of participants and remove participants.

| | |
|--|---|
| View a list of conference participants | Press ConfList or Conference List . Participants are listed in the order in which they join the conference with the most recent additions at the top. |
| Get an updated list of conference participants | While viewing the conference list, press Update . |
| See who initiated the conference | While viewing the conference list, locate the participant listed at the bottom of the list with an asterisk (*) next to the name. |
| Remove any conference participant | While viewing the conference list, highlight the participant's name and press Remove . |
| Drop the last participant added to the conference | While viewing the conference list, press RMLstC or Remove Last Participant . |
| Verify that a conference call is secure | Look for the  or  icon after "Conference" on the phone screen. |
| Verify that a participant is calling from a secure phone | Look for the  or  icon beside the participant's name on the phone screen. |
| Add more participants | See Using Conference, page 29 . |

Placing or Receiving Intercom Calls

You can make an intercom call to a target phone that auto-answers the call in speakerphone mode with mute activated. The one-way intercom call allows you to deliver a short message to the recipient. If the recipient's handset or headset is in use, the audio is sent to the device that is in use. Any current call activity that your recipient is engaged in continues simultaneously.

The target destination receives an intercom-alert tone and can then choose to:

- Listen to the caller with your microphone muted (you can hear the caller but the caller cannot hear you).
- End the intercom call by pressing the **EndCall** softkey with the intercom call in focus. Do this if you do not want to hear the message.
- Talk to the caller by pressing the active intercom button, and use either the handset, headset or speaker. The intercom call becomes a two-way connection so that you can converse with the caller.




When using the intercom feature, be aware of the following:

- From an intercom line, you can only dial other intercom lines.
- You can use only one intercom line at a time.
- When your active call is being monitored or recorded, you cannot receive or place intercom calls.

- You cannot place an intercom call on hold.

Note

If you log into your desk phone every day using your Extension Mobility profile, make sure that your system administrator configures your Extension Mobility profile to include the intercom feature.

| If you want to... | Then... |
|---|---|
| Place an intercom call to a preconfigured intercom target | Press  (intercom target line) and, after you hear the intercom-alert tone, begin speaking. |
| Place an intercom call to any intercom number | Press  (an intercom line). Enter the intercom target number or press a speed-dial number for your target. After you hear the intercom-alert tone, begin speaking. |
| Receive an intercom call | <p>When you hear the intercom-alert tone, handle the call in one of these ways:</p> <ul style="list-style-type: none"> Listen to the message in one-way audio. Speak to the caller by pressing  (active intercom line). Press EndCall with the intercom call in focus. |

Advanced Call Handling

Advanced call-handling tasks involve special features that your system administrator might configure for your phone depending on your call-handling needs and work environment.


Speed Dialing

Speed dialing allows you to enter an index number, press a button, or select a phone screen item to place a call. Depending on configuration, your phone can support several speed-dial features:

- Speed-dial buttons
- Abbreviated Dialing
- Fast Dials



-
- Note**
- To set up speed-dial buttons and Abbreviated Dial, you must access your User Options web pages. See [Accessing Your User Options Web Pages, page 60](#).
 - To set up Fast Dials, you must access the Personal Directory feature. See [Using Personal Directory on Your Phone, page 55](#).
 - Alternately, your system administrator can configure speed-dial features for you.
-


| If you want to... | Then... |
|------------------------|---|
| Use speed-dial buttons | <ol style="list-style-type: none">1. Set up speed-dial buttons. See Setting Up Speed Dials on the Web, page 64.2. To place a call, press  (a speed-dial button). <p>Note If your phone supports the Busy Lamp Field (BLF) speed-dial feature, you can see if the speed-dial number is busy before dialing. See Using BLF to Determine a Line State, page 41.</p> |
| Use Abbreviated Dial | <ol style="list-style-type: none">1. Set up Abbreviated Dialing codes. See Setting Up Speed Dials on the Web, page 64.2. To place a call, enter the Abbreviated Dialing code and press AbbrDial. |
| Use Fast Dial | <ol style="list-style-type: none">1. Create a Personal Address Book entry and assign a Fast Dials code. See Using Your Personal Address Book on the Web, page 61.2. To place a call, access the Fast Dial service on your phone. See Using Personal Directory on Your Phone, page 55. |

Picking Up a Redirected Call on Your Phone

Call PickUp allows you to answer a call that is ringing on a coworker's phone by redirecting the call to your phone. You might use Call PickUp if you share call-handling with coworkers.

| If you want to... | Then... |
|---|--|
| <p>Answer a call that is ringing on another extension within your call pickup group</p> | <ol style="list-style-type: none"> 1. Do one of the following: <ul style="list-style-type: none"> • If the PickUp button or softkey is available, press it. • If the PickUp button or softkey is not available, go off-hook to display the PickUp softkey, then press it. <p>If your phone supports auto-pickup, you are now connected to the call.</p> 2. If the call rings, press Answer to connect to the call. |
| <p>Answer a call that is ringing on another extension outside of your group</p> | <ol style="list-style-type: none"> 1. Do one of the following: <ul style="list-style-type: none"> • If the GPickUp softkey or Group PickUp button is available, press it. • If the GPickUp softkey or Group PickUp button is not available, go off-hook to display GPickUp, then press it. 2. Enter the group pickup number. <p>If your phone supports auto-pickup, you are now connected to the call.</p> 3. If the call rings, press Answer to connect to the call. |
| <p>Answer a call that is ringing on another extension in your group or in an associated group</p> | <ol style="list-style-type: none"> 1. Do one of the following: <ul style="list-style-type: none"> • If the OPickUp softkey or Other PickUp button is available, press it. • If the OPickUp softkey or Other PickUp button is not available, go off-hook to display OPickUp, then press it. <p>If your phone supports auto-pickup, you are now connected to the call.</p> 2. If the call rings, press Answer to connect to the call. |

Tips

- Depending on how your phone is configured, you might receive an audio and/or visual alert about a call to your pickup group.
- Pressing **PickUp**, **GPickUp**, or **Group PickUp** connects you to the call that has been ringing for the longest time.
- Pressing **OPickUp** or **Other PickUp** connects you to the call in the pickup group with the highest priority.
- If you have multiple lines and want to pick up the call on a non-primary line, first press  for the desired line, then press a **Call PickUp** softkey.
- If you use the BLF Pickup feature on your phone, see [Using BLF to Determine a Line State](#), page 41.







Storing and Retrieving Parked Calls

You can park a call when you want to store the call so that you or someone else can retrieve it from another phone in the Cisco Unified Communications Manager system (for example, a phone at a coworker's desk or in a conference room).

You can park a call by using these methods:

- **Call Park**—Use the **Park** softkey to store the call. Your phone displays the call park number where the system stored your call. You must record this number and then use the same number to retrieve the call.
- **Directed Call Park**—Use the **Transfer** softkey to direct the call to an available directed call park number that you dial or speed dial. To retrieve the call from a directed call park number, dial the park retrieval prefix, then dial or speed dial the same directed call park number. You can use a Directed Call Park button to speed-dial the directed call park number and to monitor whether a directed call park number is occupied or available.

| If you want to... | Then... |
|--------------------------------------|---|
| Store an active call using Call Park | <ol style="list-style-type: none">1. During a call, press Park. (You may need to press the more softkey to see Park.)2. Note the call park number displayed on your phone screen.3. Hang up. |
| Retrieve a parked call | Enter the call park number from any Cisco Unified IP Phone in your network to connect to the call. |

| If you want to... | Then... |
|--|---|
| Direct and store an active call at a directed call park number | <ol style="list-style-type: none"> <li data-bbox="364 190 1220 224">1. During a call, press Transfer. <li data-bbox="364 228 1220 370">2. Press the Directed Call Park  with the park-unoccupied icon  to speed dial the directed call park number. A Directed Call Park  (flashing) with park-occupied icon  indicates the directed call park number is not available. <li data-bbox="364 375 1220 412">3. Press Transfer again to finish storing the call. |
| Retrieve a parked call from a directed call park number | From any Cisco Unified IP Phone in your network, enter the park retrieval prefix and dial the directed call park number. Or after entering the park retrieval prefix, press the  (flashing) with  to connect to the call. |


Tips

- You have a limited time to retrieve a parked call before it reverts to ringing at the original number. See your system administrator for details.
- Your system administrator can assign Directed Call Park buttons to available line buttons on your Cisco Unified IP Phone 7962G that has a Cisco Unified IP Phone 7914 Expansion Module (the Cisco Unified IP Phone 7942G does not support the Cisco Unified IP Phone 7914 Expansion Module).
- You can dial directed call park numbers if you do not have Directed Call Park buttons. However, you will not be able to see the status of the directed call park number.

Logging Out of Hunt Groups

If your organization receives a large number of incoming calls, you might be a member of a hunt group. A hunt group includes a series of directory numbers that share the incoming call load. When the first directory number in the hunt group is busy, the system hunts for the next available directory number in the group and directs the call to that phone.

When you are away from your phone, you can prevent hunt group calls from ringing your phone by logging out of hunt groups.

| If you want to... | Then... |
|--|--|
| Log out of hunt groups to temporarily block hunt group calls | Press HLog or Hunt Group . Your phone screen displays, “Logged out of Hunt Group.” |
| Log in to receive hunt group calls | Press HLog or Hunt Group . When logged in, the Hunt Group button  is lit. |

Tip

Logging out of hunt groups does not prevent non-hunt group calls from ringing your phone.


Using a Shared Line

Your system administrator might ask you to use a shared line if you:

- Have multiple phones and want one phone number
- Share call-handling tasks with coworkers
- Handle calls on behalf of a manager

Understanding Shared Lines

Remote-in-Use Icon

The Remote-in-Use icon  appears when another phone that shares your line has a connected call. You can place and receive calls as usual on the shared line, even when the Remote-in-Use icon appears.

Sharing Call Information and Barging

Phones that share a line each display information about calls that are placed and received on the shared line. This information might include caller ID and call duration. (See the [Privacy](#) section for exceptions.)

When call information is visible in this way, you and coworkers who share a line can add yourselves to calls using either **Barge** or **cBarge**. See [Using Barge to Add Yourself to a Shared-Line Call, page 39](#).

Privacy

If you do not want coworkers who share your line to see information about your calls, enable the Privacy feature. Doing so also prevents coworkers from barging your calls. See [Preventing Others from Viewing or Barging a Shared-Line Call, page 40](#).



Note

The maximum number of calls that a shared line supports can vary by phone.

Using Barge to Add Yourself to a Shared-Line Call

You can use barge features (cBarge or Barge) to add yourself to calls on your shared line. (Calls must be non-private calls. See [Understanding Shared Lines, page 38.](#))

Understanding Barge Features

cBarge and Barge

Depending on how your phone is configured, you can add yourself to a call on a shared line using either cBarge or Barge:

- cBarge converts the call into a standard conference, allowing you to add new participants. (See [Making Conference Calls, page 28](#) for information about standard conferences.)
- Barge allows you to add yourself to the call but does not convert the call into a conference or allow you to add new participants.

 


Single-button and Multi-touch Barge

Your system administrator determines whether the barge feature on your phone (cBarge or Barge) operates as a single-button or multi-touch feature.

- Single button barge allows you to press a line button to barge a call (SCCP phones only).
- Multi-touch barge allows you to view call information before barging.

Using Barge Features

The table below describes how to use barge features (cBarge or Barge) to add yourself to a call on a shared line.







| If you want to... | Then... |
|---|---|
| See if the shared line is in use | Look for the remote-in-use icon  next to a red line button  . |
| Add yourself to a call on a shared line | Press the red line button  for the shared line. One of the following occurs: <ul style="list-style-type: none"> • You are added to the call. • A window opens on your phone screen prompting you to select the call that you want to barge. Press Barge or cBarge to complete the action. (You may need to press the more softkey to display Barge or cBarge.) |
| View conference participants (if you used cBarge) | See Viewing or Removing Conference Participants, page 32. |

Tips

- When you barge a call, other parties might hear a beep tone announcing your presence. With cBarge, other parties hear a brief audio interruption and the phone screen changes to display conference details.
- If a phone that is using the shared line has Privacy enabled, call information and barge softkeys will not appear on the other phones that share the line.
- If a phone that is using the shared line has Privacy disabled and it is configured with Private Line Automated Ringdown (PLAR), the barge and cBarge features will still be available.
- You will be disconnected from a call that you have joined using Barge if the call is put on hold, transferred, or turned into a conference call.

Preventing Others from Viewing or Barging a Shared-Line Call

If you share a phone line, you can use the Privacy feature to prevent others who share the line from viewing or barging (adding themselves to) your calls.









 


 


| If you want to... | Then... |
|---|---|
| Prevent others from viewing or barging calls on a shared line | <ol style="list-style-type: none">1. Press Private .2. To verify that Privacy is on, look for the Privacy-enabled icon  next to an amber line button . |
| Allow others to view or barge calls on a shared line | <ol style="list-style-type: none">1. Press Private .2. To verify that Privacy is off, look for the Privacy-disabled icon  next to an unlit line button . |

Tips

- If the phone that shares your line has Privacy enabled, you can make and receive calls using the shared line as usual.
- The Privacy feature applies to all shared lines on your phone. Consequently, if you have multiple shared lines and Privacy is enabled, coworkers will not be able to view or barge calls on any of your shared lines.

Using BLF to Determine a Line State

Busy Lamp Field features (BLF) allow you to view the state of a phone line that is associated with a speed-dial button, call log, or directory listing on your phone. If you use BLF Pickup, you can answer a ringing call for the line that you are monitoring. Your system administrator determines which BLF features are configured for your phone.

| If you want to... | Then... |
|---|---|
| See the state of a line listed in a call log or directory | Look for one of these indicators next to the line number: <ul style="list-style-type: none">  Line is in-use.  Line is idle.  BLF indicator unavailable for this line.  Line is in Do Not Disturb state. |
| See the state of a speed-dial line | Look for one of these indicators next to the line number: <ul style="list-style-type: none">  +  Line is in-use.  +  Line is idle.  BLF indicator unavailable for this line.  +  Line is in Do Not Disturb state.  +  (flashing)—Line is ringing (BLF Pickup only). |
| Use BLF Pickup to answer a call ringing on a coworker's phone | Press the BLF Pickup button  while the line is ringing. The call is redirected to the next available line on your phone. (If you want to specify a line, first press a line button, then press the BLF button.) If your phone supports auto-pickup, the call connects automatically. Otherwise, the call rings on your phone for you to answer. Note If you press the BLF Pickup button when the monitored line is <i>not</i> ringing, your phone will speed dial the line number. |

Tips




- Your phone might play an audible indicator to alert you when a call is ringing on the monitored line (BLF Pickup only).
- BLF Pickup answers the oldest ringing call first (if the line that you are monitoring has more than one ringing call).

Making and Receiving Secure Calls

Depending on how your system administrator has configured your phone system, your phone might support making and receiving secure calls.

Your phone is capable of supporting these types of calls:

- *Authenticated* call—The identities of all phones participating in the call have been verified.
- *Encrypted* call—The phone is receiving and transmitting encrypted audio (your conversation) within the Cisco IP network. Encrypted calls are also authenticated.
- *Non-secure* call—At least one of the participating phones or the connection does not support these security features, or the phones cannot be verified.

| If you want to... | Then... |
|---|---|
| Check the security level of a call or conference | Look for a security icon in the top right corner of the call activity area, next to the call duration timer:  Authenticated call or conference  Encrypted call or conference  Non-secure call or conference |
| Determine if secure calls can be made in your company | Contact your system administrator. |



Note There are interactions, restrictions, and limitations that affect how security features work on your phone. For more information, ask your system administrator.

Tracing Suspicious Calls

(SCCP phones only.)

If you are receiving suspicious or malicious calls, your system administrator can add the Malicious Call Identification (MCID) feature to your phone. This feature enables you to identify an active call as suspicious, which initiates a series of automated tracking and notification messages.

| If you want to... | Then... |
|---|---|
| Notify your system administrator about a suspicious or harassing call | Press MCID or Malicious Call ID . Your phone plays a tone and displays the message, “MCID successful”. |

Prioritizing Critical Calls





(SCCP phones only.)

In some specialized environments, such as military or government offices, you might need to make and receive urgent or critical calls. If you have the need for this specialized call handling, your system administrator can add Multilevel Precedence and Preemption (MLPP) to your phone.

Keep these terms in mind:

- *Precedence* indicates the priority associated with a call.
- *Preemption* is the process of ending an existing, lower priority call while accepting a higher priority call that is sent to your phone.

| If you... | Then... |
|--|---|
| Want to choose a priority (precedence) level for an outgoing call | Contact your system administrator for a list of corresponding precedence numbers for calls. |
| Want to make a priority (precedence) call | Enter the MLPP access number (provided by your system administrator) followed by the phone number. |
| Hear a special ring (faster than usual) or special call waiting tone | You are receiving a priority (precedence) call. An MLPP icon on your phone screen indicates the priority level of the call. |



| If you... | Then... |
|---|---|
| Want to view priority level of a call | <p>Look for an MLPP icon on your phone screen:</p> <ul style="list-style-type: none">  Priority call  Medium priority (immediate) call  High priority (flash) call  Highest priority (flash override) or Executive Override call <p>Higher priority calls are displayed at the top of your call list. If you do not see an MLPP icon, the priority level of the call is normal (routine).</p> |
| Want to accept a higher-priority call | Answer the call as usual. If necessary, end an active call first. |
| Hear a continuous tone interrupting your call | You or the other party are receiving a call that must preempt the current call. Hang up immediately to allow the higher priority call to ring through. |

Tips

- When you make or receive an MLPP-enabled call, you will hear special ring tones and call waiting tones that differ from the standard tones.
- If you enter an invalid MLPP access number, a verbal announcement will alert you of the error.
- An MLPP-enabled call retains its priority and preemptive status when you:
 - Put the call on hold
 - Transfer the call
 - Add the call to a three-way conference
 - Answer the call using PickUp
- MLPP overrides the Do Not Disturb (DND) feature.

Using Cisco Extension Mobility

Cisco Extension Mobility (EM) allows you to temporarily configure a Cisco Unified IP Phone as your own. Once you log in to EM, the phone adopts your user profile, including your phone lines, features, established services, and web-based settings. Your system administrator must configure EM for you.

| If you want to... | Then... |
|-------------------|--|
| Log in to EM | <ol style="list-style-type: none"> 1. Choose  > EM Service (name can vary). 2. Enter your user ID and PIN (provided by your system administrator). 3. If prompted, select a device profile. |
| Log out of EM | <ol style="list-style-type: none"> 1. Choose  > EM Service (name can vary). 2. When prompted to log out, press Yes. |

Tips

- EM automatically logs you out after a certain amount of time. Your system administrator establishes this time limit.
- Changes that you make to your EM profile from your User Options web pages take effect immediately if you are logged in to EM on the phone; otherwise, changes take effect the next time you log in.
- Changes that you make to the phone from your User Options web pages take effect immediately if you are logged out of EM; otherwise, changes take effect after you log out.
- Local settings controlled by the phone are not maintained in your EM profile.

Managing Business Calls Using a Single Phone Number

With Mobile Connect and Mobile Voice Access installed, you can use your cellular phone to handle calls associated with your desktop phone number. A *smartphone* is a mobile phone with personal computer capabilities such as web browsing, email, address book, and calendar.

| If you want to... | Then... |
|---|---|
| Configure Mobile Connect | Use the User Options web pages to set up remote destinations and create access lists to allow or block calls from specific phone numbers from being passed to the remote destinations. See Setting Up Phones and Access Lists for Mobile Connect , page 70. |
| Answer a call using your cellular phone | See Answering a Call , page 20. |
| Switch an in-progress call between your desk phone and cellular phone | See Switching an In-Progress Call to Another Phone , page 24. |

| If you want to... | Then... |
|--|---|
| Put a call that has been picked up on a smartphone on hold | <ol style="list-style-type: none"> 1. Press the Enterprise Hold softkey (exact softkey name can vary) on the smartphone. The other party is placed on hold. 2. Press the Resume softkey (exact softkey name can vary) on the smartphone. See Switching an In-Progress Call to Another Phone, page 24. |
| Transfer a call that has been picked up on a smartphone to another number | <ol style="list-style-type: none"> 1. Press the Enterprise Transfer softkey (exact softkey name can vary) on the smartphone. 2. Dial your enterprise access code for transferring calls to initiate a new call. The other party is placed on hold. 3. Press the Enterprise Transfer softkey to complete the call transfer. |
| Initiate a conference call on a call that has been picked up on a smartphone | <ol style="list-style-type: none"> 1. Press the Enterprise Conference softkey (exact softkey name can vary) on the smartphone. 2. Dial your enterprise access code for conferencing to initiate a new call. The other party is placed on hold. 3. Press the Enterprise Conference softkey to complete the conference set-up and include both callers in the conference. |
| Connect to Mobile Voice Access | <ol style="list-style-type: none"> 1. From any phone, dial your assigned Mobile Voice Access number. 2. Enter the number you are calling from, if prompted, and your PIN. |
| Turn on Mobile Connect from your cellular phone | <ol style="list-style-type: none"> 1. Dial your assigned Mobile Voice access number. 2. Enter your cellular phone number (if requested) and PIN. 3. Press 2 to enable Mobile Connect. 4. Choose whether to turn Mobile Connect on for all configured phones or just one: <ul style="list-style-type: none"> - All phones—Enter 2. - One phone—Enter 1 and enter the number you want to add as a remote destination, followed by #. |









| If you want to... | Then... |
|--|--|
| Make a call from your cellular phone | See Placing a Call—Additional Options , page 17. |
| Turn off Mobile Connect from your cellular phone | <ol style="list-style-type: none"> 1. Dial your assigned Mobile Voice access number. 2. Enter your cellular phone number (if requested) and PIN. 3. Press 3 to disable Mobile Connect. 4. Choose whether to turn Mobile Connect off for all configured phones or just one: <ul style="list-style-type: none"> – All phones—Enter 2. – One phone—Enter 1 and enter the number you want to remove as a remote destination, followed by #. |


Tips

- When calling Mobile Voice Access, you need to enter the number you are call from in addition to the PIN if any of the following are true:
 - The number you are calling from is not one of your remote destinations.
 - The number is blocked by you or your carrier (shown as “Unknown Number”).
 - The number is not accurately matched in the Cisco Unified Communications Manager database; for example, if your number is 510-666-9999, but it is listed as 666-9999 in the database, or your number is 408-999-6666, but it is entered as 1-408-999-6666 in the database.
- If you incorrectly enter any requested information (such as cellular phone number or PIN) three times in a row, the Mobile Voice Access call disconnects, and you are locked out for a period of time. Contact your system administrator if you need assistance.

Using a Handset, Headset, and Speakerphone

You can use your phone with a handset, headset, or speakerphone.

| If you want to... | Then... |
|--|---|
| Use the handset | <p>Lift it to go off-hook; replace it to go on-hook.</p> <p>The ringing line is automatically selected. Ask your system administrator about options to always select the primary line.</p> |
| Use a headset | <p>Press  to toggle headset mode on and off. You can use a headset with all of the controls on your phone, including  and .</p> <p>If you use AutoAnswer, see Using AutoAnswer, page 49.</p> <p>If you use a headset that supports wideband, you might experience improved audio sensitivity if you enable the wideband setting on your phone (this setting is disabled by default). To access the setting, choose  > User Preferences > Audio Preferences > Wideband Headset. If the Wideband Headset setting is disabled (shows as dimmed), then this setting is not user controllable.</p> <p>Check with your system administrator to be sure your phone system is configured to use wideband. If the system is not configured for wideband, you may not detect any additional audio sensitivity even when using a wideband headset. To learn more about your headset, refer to the headset documentation or ask your system administrator for assistance.</p> |
| Use the speakerphone | <p>Press  to toggle speakerphone mode on or off.</p> <p>Many of the actions you can take to dial a number or answer a call will automatically trigger speakerphone mode, assuming that the handset is in its cradle and  is not lit.</p> |
| Switch to the headset or speakerphone (from the handset) during a call | <p>Press  or , then hang up the handset.</p> |




| If you want to... | Then... |
|--|--|
| Switch to the handset (from the speakerphone or headset) during a call | Lift the handset (without pushing any buttons). |
| Adjust the volume level for a call | Press  during a call or after invoking a dial tone. This action adjusts the volume for the handset, speakerphone, or headset, depending on which device is in use. Press Save to preserve the volume level for future calls. |

Obtaining a Headset

Your phone supports four- or six-wire headset jacks. For information about purchasing headsets, see [Headset Information, page 5](#).

Using AutoAnswer

When AutoAnswer is enabled, your phone answers incoming calls automatically after a few rings. Your system administrator configures AutoAnswer to use either the speakerphone or a headset. You might use AutoAnswer if you receive a high volume of incoming calls.

| If you... | Then... |
|--------------------------------------|--|
| Use AutoAnswer with a headset | Keep headset mode active (in other words, keep  illuminated) even when you are not on a call. To keep headset mode active, do one of the following: <ul style="list-style-type: none"> • Press EndCall to hang up. • Press New Call or Dial to place new calls. If your phone is set up to use AutoAnswer in headset mode, calls will be answered automatically only if  is illuminated. Otherwise, calls ring normally and you must manually answer them. |
| Use AutoAnswer with the speakerphone | Keep the handset in the cradle and headset mode inactive ( unlit). Otherwise, calls ring normally and you must manually answer them. |

Tip



AutoAnswer is disabled when Do Not Disturb is active.

Changing Phone Settings

You can customize your Cisco Unified IP Phone by adjusting the ring tone, background image, and other settings.








Customizing Rings and Message Indicators

You can customize how your phone indicates an incoming call and a new voice mail message. You can also adjust the ringer volume for your phone.


| If you want to... | Then... |
|---|---|
| Change the ring tone per line | <ol style="list-style-type: none">1. Choose  > User Preferences > Rings.2. Choose a phone line or the default ring setting.3. Choose a ring tone to play a sample of it.4. Press Select and Save to set the ring tone, or press Cancel. |
| Change the ring pattern per line (flash-only, ring once, beep-only, etc.) | <ol style="list-style-type: none">1. Log in to your User Options web pages. (See Accessing Your User Options Web Pages, page 60.)2. Access your call ring pattern settings. (See Controlling Line Settings on the Web, page 68.) <p>Note Before you can access this setting, your system administrator might need to enable it for you.</p> |
| Adjust the volume level for the phone ringer | Press  while the handset is in the cradle and the headset and speakerphone buttons are off. The new ringer volume is saved automatically. |
| Change the way that the voice message light on your handset works | <ol style="list-style-type: none">1. Log in to your User Options web pages. (See Accessing Your User Options Web Pages, page 60.)2. Access your message indicator settings. (See Controlling Line Settings on the Web, page 68.) <p>Note Typically, the default system policy is to indicate a new voice message by displaying a steady light on the handset light strip.</p> |

Customizing the Phone Screen

You can adjust the characteristics of your phone screen.






| If you want to... | Then... |
|---|--|
| Change the phone screen contrast | <ol style="list-style-type: none"> 1. Choose  > User Preferences > Contrast. 2. To make adjustments, press Up, Down or  . 3. Press Save, or press Cancel. <p>Note If you accidentally save a very light or very dark contrast and cannot see the phone screen display:</p> <p>Press  and then press 1, 4 on the keypad.</p> <p>Next, press  to change the contrast until you can see the phone screen display, and then press Save.</p> |
| Change the background image | <ol style="list-style-type: none"> 1. Choose  > User Preferences > Background Images. 2. Scroll through available images and press Select to choose an image. 3. Press Preview to see a larger view of the background image. 4. Press Exit to return to the selection menu. 5. Press Save to accept the image or press Cancel. <p>Note If you do not see a selection of images, then this option has not been enabled on your system.</p> |
| Change the language on your screen | <ol style="list-style-type: none"> 1. Log in to your User Options web pages. (See Accessing Your User Options Web Pages, page 60.) 2. Access your user settings. (See Controlling User Settings on the Web, page 67.) |
| Change the line text label | <ol style="list-style-type: none"> 1. Log in to your User Options web pages. (See Accessing Your User Options Web Pages, page 60.) 2. Access your line label settings. (See Controlling Line Settings on the Web, page 68.) |
| Adjust contrast for your Cisco Unified IP Phone Expansion Module 7914 (SCCP phones with Expansion Modules only) | <ol style="list-style-type: none"> 1. Choose  > User Preferences > Contrast. 2. To make adjustments, press Up, Down or  . 3. Press Save, or press Cancel. <p>Note The Cisco Unified IP Phone 7942G does not support the Cisco Unified IP Phone 7914 Expansion Module.</p> |





Using Call Logs and Directories

This section describes how you can use call logs and directories. To access both features, use the Directories button .

Using Call Logs

Your phone maintains call logs. Call logs contain records of your missed, placed, and received calls. Your phone administrator determines whether missed calls are logged in your missed calls directory for a given line appearance on your phone.

| If you want to... | Then... |
|--|---|
| View your call logs | Choose  > Missed Calls, Placed Calls, or Received Calls . Each stores up to 100 records. |
| Display details for a single call record | <ol style="list-style-type: none">1. Choose  > Missed Calls, Placed Calls, or Received Calls.2. Highlight a call record.3. Press Details. Doing so displays information such as called number, calling number, time of day, and call duration (for placed and received calls only). |
| Erase all call records in all logs | Press  , then press Clear . |
| Erase all call records in a single log | <ol style="list-style-type: none">1. Choose  > Missed Calls, Placed Calls, or Received Calls.2. Highlight a call record.3. Press Clear. (You may need to press the more softkey to display Clear.) |
| Erase a single call record | <ol style="list-style-type: none">1. Choose  > Missed Calls, Placed Calls, or Received Calls.2. Highlight a call record.3. Press Delete. |

| If you want to... | Then... |
|--|---|
| Dial from a call log (while not on another call) | <ol style="list-style-type: none"> 1. Choose  > Missed Calls, Placed Calls, or Received Calls. 2. Highlight a call record. <p>Note If the Details softkey appears, the call is the primary entry of a multiparty call. See the Tip section below.</p> <ol style="list-style-type: none"> 3. If you need to edit the displayed number, press EditDial followed by << or >>. To delete the number, press EditDial followed by Delete. (You may need to press the more softkey to display Delete.) 4. Go off-hook to place the call. |
| Dial from a call log (while connected to another call) | <ol style="list-style-type: none"> 1. Choose  > Missed Calls, Placed Calls, or Received Calls. 2. Highlight a call record. <p>Note If the Details softkey appears, the call is the primary entry of a multiparty call. See the Tip section below.</p> <ol style="list-style-type: none"> 3. If you need to edit the displayed number, press EditDial followed by << or >>. To delete the number, press EditDial followed by Delete. (You may need to press the more softkey to display Delete.) 4. Press Dial. 5. Choose a menu item to handle the original call: <ul style="list-style-type: none"> • Hold—Puts the first call on hold and dials the second. • Transfer—Transfers the first party to the second and drops you from the call. (Press Transfer again after dialing to complete the action.) • Conference—Creates a conference call with all parties, including you. (Press Confrn or Conference again after dialing to complete the action.) • EndCall—Disconnects the first call and dials the second. |
| See if the line in the call log is busy before placing a call to that line | Look for Busy Lamp Field indicators. See Using BLF to Determine a Line State, page 41 . |
| Place a call from a URL entry in a call log (SIP phones only) | <ol style="list-style-type: none"> 1. Choose  > Missed Calls, Placed Calls, or Received Calls. 2. Highlight the URL entry that you want to dial. 3. If you need to edit the entry, press EditDial. 4. The  icon appears to indicate that you can begin editing characters in the URL entry. 5. Press Dial. |

Tip

(SCCP phones only)

To view the complete call record of a multiparty call (for example, of call that has been forwarded or transferred to you), highlight the call record and press **Details**. The Details record shows two entries for each missed or received multiparty call. The entries are listed in reverse chronological order:

- The first logged entry is the name/number of the last completed call of a multiparty call received on your phone.
- The second logged entry is the name/number of the first completed call of a multiparty call received on your phone.


Directory Dialing


Depending on configuration, your phone can provide corporate and personal directory features:

- **Corporate Directory**—Corporate contacts that you can access on your phone. Your system administrator sets up and maintains your Corporate Directory.
- **Personal Directory**—If available, personal contacts and associated speed-dial codes that you can configure and access from your phone and User Options web pages. Personal Directory is comprised of Personal Address Book (PAB) and Fast Dials:
 - PAB is a directory of your personal contacts.
 - Fast Dials allows you to assign codes to PAB entries for quick dialing.

Using Corporate Directory on Your Phone

You can use a corporate directory to place calls to coworkers.

| If you want to... | Then... |
|---|---|
| Dial from a corporate directory (while not on another call) | <ol style="list-style-type: none">1. Choose  > Corporate Directory (exact name can vary).2. User your keypad to enter a full or partial name and press Search.3. To dial, select the listing, or scroll to the listing and go off-hook. |


| If you want to... | Then... |
|---|---|
| Dial from a corporate directory (while on another call) | <ol style="list-style-type: none"> 1. Choose  > Corporate Directory (exact name can vary). 2. Use your keypad to enter a full or partial name and press Search. 3. Scroll to a listing and press Dial. 4. Choose a menu item to handle the original call: <ul style="list-style-type: none"> • Hold—Puts the first call on hold and dials the second. • Transfer—Transfers the first party to the second and drops you from the call. (Press Transfer again after dialing to complete the action.) • Conference—Creates a conference call with all parties, including you. (Press Confrn or Conference again after dialing to complete the action.) • EndCall—Disconnects the first call and dials the second. |
| See if the phone line in the directory is busy | Look for Busy Lamp Field (BLF) indicators. See Using BLF to Determine a Line State, page 41 . |

Tip




Use the numbers on your keypad to enter characters on your phone screen. Use the Navigation button on your phone to move between input fields.

Using Personal Directory on Your Phone

The Personal Directory feature set contains your Personal Address Book (PAB) and Fast Dials. This section describes how to set up and use Personal Directory on your phone. Alternately, see [Using Personal Directory on the Web, page 61](#).

| If you want to... | Then... |
|---|---|
| Access Personal Directory (for PAB and Fast Dial codes) | <ol style="list-style-type: none"> 1. Choose  > Personal Directory (exact name can vary). 2. Enter your Cisco Unified Communications Manager user ID and PIN, then press Submit. |
| Search for a PAB entry | <ol style="list-style-type: none"> 1. Access Personal Directory, then choose Personal Address Book. 2. Enter search criteria and press Submit. 3. You can choose Previous or Next to move through listings. 4. Highlight the PAB listing that you want and press Select. |


| If you want to... | Then... |
|--|---|
| Dial from a PAB entry | <ol style="list-style-type: none"> 1. Search for a listing. 2. Highlight the listing and press Select. 3. Press Dial. (You may need to press the more softkey to see Dial.) 4. Enter the participant's phone number. 5. Highlight the number that you want to dial and press OK. 6. Press OK again to dial the number. |
| Delete a PAB entry | <ol style="list-style-type: none"> 1. Search for a listing. 2. Highlight the listing and press Select. 3. Press Delete. 4. Choose OK to confirm the deletion. |
| Edit a PAB entry | <ol style="list-style-type: none"> 1. Search for a listing. 2. Highlight the listing and press Edit to modify a name or email address. 3. If necessary, choose Phones to modify a phone number. 4. Press Update. |
| Add a new PAB entry | <ol style="list-style-type: none"> 1. Access Personal Directory, then choose Personal Address Book. 2. Access the Search page by choosing Submit. (You do not need to input search information first.) 3. Press New. 4. Use your phone keypad to enter a name and e-mail information. 5. Choose Phones and use the keypad to enter phone numbers. Be sure to include any necessary access codes such as a 9 or 1. 6. Choose Submit to add the entry to the database. |
| Assign a Fast Dial code to a PAB entry | <ol style="list-style-type: none"> 1. Search for a PAB entry. 2. Highlight the listing and press Select. 3. Press Fast Dial. 4. Highlight the number that you want to dial and press Select. 5. Highlight the Fast Dial code that you want to assign to the number and press Select. |

| If you want to... | Then... |
|--|--|
| Add a new Fast Dial code (not using a PAB entry) | <ol style="list-style-type: none"> 1. Choose  > Personal Directory > Personal Fast Dials. 2. Press Fast Dial. 3. Highlight a Fast Dial code that is unassigned and press Select. 4. Press Assign. 5. Enter a phone number. 6. Press Update. |
| Search for Fast Dial codes | <ol style="list-style-type: none"> 1. Choose  > Personal Directory > Personal Fast Dials. 2. You can choose Previous or Next to move through listings. 3. Highlight the listing that you want and press Select. |
| Place a call using a Fast Dial code | <ol style="list-style-type: none"> 1. Search for a Fast Dial code. 2. Highlight the listing you want and press Select. 3. Press Dial. 4. Choose OK to complete the action. |
| Delete a Fast Dial code | <ol style="list-style-type: none"> 1. Search for a Fast Dial code. 2. Highlight the listing you want and press Select. 3. Press Remove. |
| Log out of Personal Directory | <ol style="list-style-type: none"> 1. Choose  > Personal Directory (exact name can vary). 2. Choose Logout. |

Tips




- Your system administrator can provide you with the user ID and PIN that you need to log in to Personal Directory.
- Personal Directory automatically logs you out after a certain amount of time. This time limit can vary. Ask your system administrator for more information.
- Use the numbers on your keypad to enter characters on your phone screen. Use the Navigation button on your phone to move between input fields.

Accessing Voice Messages

To access voice messages, use the  button.



Note Your company determines the voice message service that your phone system uses. For the most accurate and detailed information, refer to the documentation that came with your voice message system.

| If you want to... | Then... |
|---|---|
| Set up and personalize your voice message service | Press  and follow the voice instructions. If a menu appears on your screen, choose an appropriate menu item. |
| Check for your new voice messages | <p>Look for:</p> <ul style="list-style-type: none"> • A steady red light on your handset. (This indicator can vary. See Customizing Rings and Message Indicators, page 50.) • A flashing message waiting icon  and text message on your phone screen. <p>Note The red light and message waiting icon display only when you have a voice message on your primary line, even if you receive voice messages on other lines.</p> <p>Listen for:</p> <ul style="list-style-type: none"> • A stutter tone from your handset, headset, or speakerphone when you place a call. <p>Note The stutter tone is line-specific. You hear it only when using the line with the waiting messages.</p> |
| Listen to your voice messages or access the voice messages menu | <p>Press .</p> <p>Depending on your voice message service, doing so either auto-dials the message service or provides a menu on your screen.</p> <p>If connecting to a voice message service, the line that has a voice message is selected by default. If more than one line has a voice mail, then the first available line is selected. Ask your system administrator about options to always connect to the voice message service on the primary line.</p> |
| Send a call to a voice message system | Press iDivert . For more information, see Sending a Call to a Voice Message System, page 26. |

Using the User Options Web Pages

Your Cisco Unified IP Phone is a network device that can share information with other network devices in your company, including your personal computer. You can use your computer to log in to your Cisco Unified CM User Options web pages, where you can control features, settings, and services for your Cisco Unified IP Phone. For example, you can set up speed-dial buttons from your User Options web pages.

Accessing Your User Options Web Pages

This section describes how to log in and select a phone device.

| If you want to... | Then do this... |
|--|--|
| Log in to your User Options web pages | <ol style="list-style-type: none"><li data-bbox="319 669 1166 732">1. Obtain a User Options URL, user ID, and default password from your system administrator.<li data-bbox="319 738 1130 776">2. Open a web browser on your computer, enter the URL, and log on.<li data-bbox="319 782 1159 820">3. If prompted to accept security settings, click Yes or Install Certificate. <p data-bbox="360 826 1204 915">The Cisco Unified Communications Manager User Options main web page displays. From this page you can choose User Options to access User Settings, Directory features, a Personal Address Book, and Fast Dials.</p> <p data-bbox="360 922 1089 959">Or, to access phone-specific options, select a device (see below).</p> |
| Select a device after logging in | <ol style="list-style-type: none"><li data-bbox="319 972 1173 1036">1. After you have logged in to your User Options web pages, choose User Options > Device. <p data-bbox="360 1042 825 1079">The Device Configuration page displays.</p> <ol style="list-style-type: none"><li data-bbox="319 1086 1204 1175">2. If you have multiple devices assigned to you, choose the appropriate device (phone model, Extension Mobility profile, or Remote Destination profile) from the Name drop-down menu. <p data-bbox="311 1182 1180 1247">Note Toolbar buttons located at the top of the Device Configuration page are specific to the selected device type.</p> |
| Select a configuration option after logging in | <ol style="list-style-type: none"><li data-bbox="319 1253 1180 1349">1. After you have logged in to your User Options web pages, choose User Options to access User Settings, Directory, Personal Address Book, Fast Dials, and Mobility Settings.<li data-bbox="319 1356 1170 1416">2. To return to the Device Configuration page from another page, choose User Options > Device. |

Configuring Features and Services on the Web

The topics in this section describe how to configure features and services from your User Options web pages after logging in. See [Accessing Your User Options Web Pages, page 60](#).

Using Personal Directory on the Web

The Personal Directory feature set that you can access on your computer consists of:

- A Personal Address Book (PAB)
- Fast Dials
- Cisco Unified Communications Manager Address Book Synchronizer



Note You can also access PAB and Fast Dials from your phone. See [Using Personal Directory on Your Phone, page 55](#).

Using Your Personal Address Book on the Web

This section describes how to use your PAB from your User Options web pages.

| If you want to... | Then do this after you log in... |
|------------------------|---|
| Add a new PAB entry | <ol style="list-style-type: none"> 1. Choose User Options > Personal Address Book. 2. Click Add New. 3. Enter information for the entry. 4. Click Save. |
| Search for a PAB entry | <ol style="list-style-type: none"> 1. Choose User Options > Personal Address Book. 2. Specify search information and click Find. |
| Edit a PAB entry | <ol style="list-style-type: none"> 1. Search for a PAB entry. 2. Click a name or nickname. 3. Edit the entry as needed and click Save. |

| If you want to... | Then do this after you log in... |
|------------------------------|---|
| Delete a PAB entry | <ol style="list-style-type: none"> 1. Search for a PAB entry. 2. Select one or more entries. 3. Click Delete Selected. |
| Assign a line button for PAB | <p>Note Before you can assign a line button for PAB, your system administrator must configure the phone to display services. Contact your system administrator for more information.</p> <ol style="list-style-type: none"> 1. Choose User Options > Device. 2. Click Service URL. 3. Choose the Personal Address Book service from the Button drop-down list box. 4. Enter a phone label for the button. 5. Click Save. 6. Click Reset and then click Restart to refresh the phone configuration. <p>You can now press the line button to access PAB codes.</p> |

Configuring Fast Dials on the Web

This section describes how to assign Fast Dials from your User Options web pages.

| If you want to... | Then do this after you log in... |
|---|---|
| Assign a line button for Fast Dial | <p>Note Before you can assign a line button for Fast Dial, your system administrator must configure the phone to display services. Contact your system administrator for more information.</p> <ol style="list-style-type: none"> 1. Choose User Options > Device. 2. Click Service URL. 3. Choose the Fast Dial service from the Button drop-down list box. 4. Enter a phone label for the button. 5. Click Save. 6. Click Reset and then click Restart to refresh the phone configuration. <p>You can now press the line button to access Fast Dial codes.</p> |
| Assign a Fast Dial code to a PAB entry | <ol style="list-style-type: none"> 1. Create a PAB entry. See Using Your Personal Address Book on the Web, page 61. 2. Choose User Options > Fast Dials. 3. Click Add New. 4. Use the Search Options area to find the appropriate PAB entry. 5. Click a phone number in the Search Results area. 6. Change the Fast Dial code, if desired. 7. Click Save. |
| Assign a Fast Dial code to a phone number (without using a PAB entry) | <ol style="list-style-type: none"> 1. Choose User Options > Fast Dials. 2. Click Add New. 3. Change the Fast Dial code, if desired. 4. Enter a phone number. 5. Click Save. |
| Search for a Fast Dial entry | <ol style="list-style-type: none"> 1. Choose User Options > Fast Dials. 2. Specify search information and click Find. |

| If you want to... | Then do this after you log in... |
|-------------------------------|---|
| Edit a Fast Dial phone number | <ol style="list-style-type: none"> 1. Choose User Options > Fast Dials. 2. Search for the Fast Dial entry that you want to edit. 3. Click on a component of the entry. 4. Change the phone number. 5. Click Save. |
| Delete a Fast Dial entry | <ol style="list-style-type: none"> 1. Search for a Fast Dial. 2. Select one or more entries. 3. Click Delete Selected. |

Tips

- You can create up to 500 Fast Dial and PAB entries.
- You can create a new Fast Dial entry without using a PAB entry. Such Fast Dial entries are labeled “raw” in the User Options web pages and do not display a configurable text label.

Using the Address Book Synchronization Tool

You can use the Address Book Synchronization Tool (TABSynch) to synchronize your existing Microsoft Windows Address Book (if applicable) with your PAB. Entries from your Microsoft Windows Address Book will then be accessible on your Cisco Unified IP Phone and User Options web pages. Your system administrator can give you access to TABSynch and provide detailed instructions.

Setting Up Speed Dials on the Web

Depending on configuration, your phone can support several speed-dial features:

- Speed-dial buttons
- Abbreviated Dialing
- Fast Dials






Note For help using speed-dial features, see [Speed Dialing, page 34](#).

| If you want to... | Then do this after you log in... |
|----------------------------|--|
| Set up speed-dial buttons | <ol style="list-style-type: none"> 1. Choose User Options > Device. 2. Choose a phone from the Name drop-down menu. 3. Click Speed Dials. 4. Enter a number and label for a speed-dial button (programmable button) on your phone. 5. Click Save. <p>Note Your phone uses the ASCII Label field.</p> |
| Set up Abbreviated Dialing | <ol style="list-style-type: none"> 1. Choose User Options > Device. 2. Choose a phone from the Name drop-down menu. 3. Click Speed Dials. 4. Enter a number and label for an Abbreviated Dialing code. 5. Click Save. |
| Set up Fast Dials | <p>See Configuring Fast Dials on the Web, page 63.</p> <p>You can also set up Fast Dials on your phone. See Using Personal Directory on Your Phone, page 55.</p> |

Setting Up Phone Services on the Web

Phone services can include special phone features, network data, and web-based information (such as stock quotes and movie listings). You must first subscribe to a phone service before accessing it on your phone.

| If you want to... | Then do this after you log in... |
|--------------------------|--|
| Subscribe to a service | <ol style="list-style-type: none">1. Choose User Options > Device.2. Choose a phone from the Name drop-down menu.3. Click Phone Services.4. Click Add New.5. Choose a service from the drop-down list and click Next.6. Change the service label and/or enter additional service information, if available (optional).7. Click Save. |
| Search for services | <ol style="list-style-type: none">1. Select a device.2. Click Phone Services.3. Click Find. |
| Change or end services | <ol style="list-style-type: none">1. Search for services.2. Select one or more entries.3. Click Delete Selected. |
| Change a service name | <ol style="list-style-type: none">1. Search for services.2. Click on the service name.3. Change the information and click Save. |

| If you want to... | Then do this after you log in... |
|---|--|
| Add a service to an available programmable phone button  | <ol style="list-style-type: none"> 1. Choose User Options > Device. 2. Choose a phone from the Name drop-down menu. 3. Click Service URL. <p>Note If you do not see this option, ask your system administrator to configure a service URL button for your phone.</p> <ol style="list-style-type: none"> 4. Choose a service from the Button Service drop-down list. 5. If you want to rename the service, edit the label fields. <p>Note Your phone uses the ASCII Label field if the phone does not support double-byte character sets.</p> <ol style="list-style-type: none"> 6. Click Save. 7. Click Reset to reset your phone (necessary to see the new button label on your phone). |
| Access a service on your phone | Choose  () > Services . |

Controlling User Settings on the Web

User settings include your password, PIN, and language (locale) settings.

| If you want to... | Then do this after you log in... |
|--|--|
| Change your password | <ol style="list-style-type: none"> 1. Choose User Options > User Settings. 2. In the Browser Password area, enter information. 3. Click Save. |
| Change your PIN | <ol style="list-style-type: none"> 1. Choose User Options > User Settings. 2. In the Phone PIN area, enter information. 3. Click Save. |
| Change the language (locale) for your User Options web pages | <ol style="list-style-type: none"> 1. Choose User Options > User Settings. 2. In the User Locale area, choose an item from the Locale drop-down list. 3. Click Save. |
| Change the language (locale) for your phone screen | <ol style="list-style-type: none"> 1. Choose User Options > User Settings. 2. Choose an item from the User Locale drop-down list. 3. Click Save. |

Tip

Your PIN and password allow you to access different features and services. For example, use your PIN to log in to Cisco Extension Mobility or Personal Directory on your phone. Use your password to log in to your User Options web pages and Cisco WebDialer on your personal computer. For more information, ask your system administrator.

Controlling Line Settings on the Web

Line settings affect a specific phone line (directory number) on your phone. Line settings can include call-forwarding, voice message indicators, ring patterns, and line labels.

You can set up other line settings directly on your phone:

- Set up call forwarding for your primary phone line—see [Forwarding Calls to Another Number, page 26](#).
- Change rings, display, and other phone-model specific settings—see [Changing Phone Settings, page 50](#).

| If you want to... | Then do this after you log in... |
|--|--|
| Set up call forwarding per line | <ol style="list-style-type: none">1. Choose User Options > Device.2. Choose a phone from the Name drop-down menu.3. Click Line Settings.4. If you have more than one directory number (line) assigned to your phone, choose a line from the Line drop-down menu.5. In the Incoming Call Forwarding area, choose call forwarding settings for various conditions.6. Click Save. |
| Change the voice message indicator (lamp) setting per line | <ol style="list-style-type: none">1. Choose User Options > Device.2. Choose a phone from the Name drop-down menu.3. Click Line Settings.4. If you have more than one directory number (line) assigned to your phone, choose a line from the Line drop-down menu.5. In the Message Waiting Lamp area, choose from various settings. <p>Note Typically, the default message waiting setting prompts your phone to display a steady red light from the handset light strip to indicate a new voice message.</p> <ol style="list-style-type: none">6. Click Save. |

| If you want to... | Then do this after you log in... |
|--|---|
| Change the audible voice message indicator setting per line | <ol style="list-style-type: none"> 1. Choose User Options > Device. 2. Choose a phone from the Name drop-down menu. 3. Click Line Settings. 4. If you have more than one directory number (line) assigned to your phone, choose a line from the Line drop-down menu. 5. In the Audible Message Waiting Indicator area, choose from various settings. <p>Note Typically, the default message waiting setting prompts your phone to display a steady red light from the handset light strip to indicate a new voice message.</p> <ol style="list-style-type: none"> 6. Click Save. |
| Change or create a line text label that appears on your phone screen | <ol style="list-style-type: none"> 1. Choose User Options > Device. 2. Choose a phone from the Name drop-down menu. 3. Click Line Settings. 4. If you have more than one directory number (line) assigned to your phone, choose a line from the Line drop-down menu. 5. In the Line Text Label area, enter a text label. 6. Click Save. <p>Note Your phone uses the ASCII Label field if the phone does not support double-byte character sets.</p> |

Setting Up Phones and Access Lists for Mobile Connect

When using Cisco Mobile Connect, you must add your cellular and other phones that you want to use to make and receive calls using the same directory numbers as your desk phone. These phones are called *remote destinations*. You can also define access lists to restrict or allow calls from certain numbers to be sent to your cellular phone.

| If you want to... | Then do this after you log in... |
|-----------------------|---|
| Create an access list | <ol style="list-style-type: none">1. Choose User Options > Mobility Settings > Access Lists.2. Click Add New.3. Enter the following information:<ul style="list-style-type: none">- Name—Identifies the access list.- Description—Describes the access list.4. Choose one of these options:<ul style="list-style-type: none">- Blocked Access List—Creates list for numbers to be blocked- Allowed Access List—Creates list for numbers that will be permitted5. Click Save. |

 
| If you want to... | Then do this after you log in... |
|--------------------------------|--|
| Add members to an access list. | <ol style="list-style-type: none"><li data-bbox="395 191 672 217">1. Create an access list.<li data-bbox="395 233 1147 259">2. Click Add Member to add phone numbers or filters to the list.<li data-bbox="395 276 1251 363">3. Select an option from the Filter Mask drop-down list box. You can filter a directory number, calls with restricted caller ID (Not Available), or calls with anonymous caller ID (Private).<li data-bbox="395 380 1247 678">4. If you select a directory number from the Filter Mask drop-down list box, enter a phone number or filter in the DN Mask field. You can use the following wild cards to define a filter:<ul style="list-style-type: none"><li data-bbox="448 477 1193 565">– X (upper or lower case)—Matches a single digit. For example, 408555123X matches any number between 4085551230 and 4085551239.<li data-bbox="448 581 1233 639">– !—Matches any number of digits. For example, 408! matches any number starts with 408.<li data-bbox="448 656 959 678">– #—Used as a single digit for exact match.<li data-bbox="395 695 986 721">5. To add this member to the access list, click Save.<li data-bbox="395 737 817 763">6. To save the access list, click Save. |

| If you want to... | Then do this after you log in... |
|------------------------------|---|
| Add a new remote destination | <ol style="list-style-type: none"> 1. Choose User Options > Mobility Settings > Remote Destinations. 2. Select the device from the Name drop-down list box. 3. Click Remote Destinations. 4. Click Add New. 5. Enter the following information: <ul style="list-style-type: none"> - Name—Enter a name for the cellular (or other) phone. - Destination Number—Enter your cellular phone number. - Answer Too Soon Timer—Enter the amount of time before you can pick up a call on the remote destination (in milliseconds). - Answer Too Late Timer—Enter the amount of time after which it is too late to pick up a call on the remote destination (in milliseconds). - Delay Before Ringing Timer—Enter the amount of time before the call rings on the remote destination (in milliseconds). - Remote Destination Profile—Select a remote destination profile, which contains the settings that apply to all of your remote destinations. - Allowed Access List—Select a phone number or rule that allows your cellular phone to ring when a call comes in to your desktop phone. You can select an allowed access list or blocked access list, but not both. - Blocked Access List—Select a phone number or rule for which your cellular phone does not ring when a call comes in to your desktop phone. You can select an allowed access list or blocked access list, but not both. - Mobile Phone—Select to allow your cellular phone can accept a call sent from your desktop phone. - Enable Mobile Connect—Select to allow your cellular phone to ring simultaneously with your desktop phone. - Smart Client Installed—Select to indicate that the remote destination you are setting up is a smartphone. 6. Click Save. |

Using Cisco WebDialer

Cisco WebDialer allows you to make calls on your Cisco Unified IP Phone to directory contacts by clicking items in a web browser. Your system administrator must configure this feature for you.

| If you want to... | Then... |
|---|--|
| Use WebDialer with your User Options directory | <ol style="list-style-type: none"> <li data-bbox="395 375 1255 431">1. Log in to your User Options web pages. See Accessing Your User Options Web Pages, page 60. <li data-bbox="395 444 1130 472">2. Choose User Options > Directory and search for a coworker. <li data-bbox="395 485 888 513">3. Click the number that you want to dial. <li data-bbox="395 526 1255 583">4. If this is your first time using WebDialer, set up preferences on the Make Call page. <li data-bbox="395 596 1237 652">5. Click Dial. (See the last row in this table to learn how to suppress this page in the future, if desired.) The call is now placed on your phone. <li data-bbox="395 665 1089 722">6. To end a call, click Hangup or hang up from your phone. |
| Use WebDialer with another online corporate directory (not your User Options directory) | <ol style="list-style-type: none"> <li data-bbox="395 756 1184 813">1. Log in to a WebDialer-enabled corporate directory and search for coworkers. <li data-bbox="395 826 888 854">2. Click the number that you want to dial. <li data-bbox="395 867 1016 894">3. When prompted, enter your user ID and password. <li data-bbox="395 907 1255 964">4. If this is your first time using WebDialer, set up preferences on the Make Call page. <li data-bbox="395 977 1237 1034">5. Click Dial. (See the last row in this table to learn how to suppress this page in the future, if desired.) The call is now placed on your phone. <li data-bbox="395 1047 1089 1104">6. To end a call, click Hangup or hang up from your phone. |

| If you want to... | Then... |
|---|--|
| Log out of WebDialer | Click the logout icon in the Make Call or Hang Up page. |
| Set up, view, or change WebDialer preferences | <p data-bbox="338 230 651 263">Access the Make Call page.</p> <p data-bbox="338 269 1205 334">The Make Call page appears the first time that you use WebDialer (after you click the number that you want to dial.)</p> <p data-bbox="338 341 934 373">The Make Call page contains the following options:</p> <ul data-bbox="352 380 1205 672" style="list-style-type: none"> <li data-bbox="352 380 1135 444">• Preferred language—Determines the language used for WebDialer settings and prompts. <li data-bbox="352 451 1205 672">• Use preferred device—Identifies the Cisco Unified IP Phone (Calling device) and directory number (Calling line) that you will use to place WebDialer calls. If you have one phone with a single line, the appropriate phone and line are automatically selected. Otherwise, choose a phone and/or line. If you have more than one phone, it will be specified by device type and MAC address. (To display the MAC address on your phone, choose  > Network Configuration > Host Name.) <p data-bbox="338 678 1205 743">Note If you have an Extension Mobility profile, you can select your Extension Mobility logged-in device from the Calling device menu.</p> <ul data-bbox="352 750 1205 855" style="list-style-type: none"> <li data-bbox="352 750 1205 855">• Do not display call confirmation—If selected, prompts WebDialer to suppress the Make Call page. This page appears by default after you click a phone number in a WebDialer-enabled online directory. |

Understanding Additional Configuration Options

Your system administrator can configure your phone to use specific button and softkey templates along with special services and features, if appropriate. This table provides an overview of some configuration options that you might want to discuss with your phone system administrator based on your calling needs or work environment.



Note

You can locate Phone Guides and other documents listed in this table on the web:
http://www.cisco.com/en/US/products/hw/phones/ps379/tsd_products_support_series_home.html

| If you... | Then... | For more information... |
|--|---|---|
| Need to handle more calls on your phone line | Ask your system administrator to configure your line to support more calls. | Talk to your system administrator or phone support team. |
| Need more than one phone line | Ask your system administrator to configure one or more additional directory numbers for you. | Talk to your system administrator or phone support team. |
| Need more speed-dial buttons | First make sure that you are using all of your currently available speed-dial buttons. If you need additional speed-dial buttons, try using Abbreviated Dialing or subscribing to the Fast Dial service. Another option is to attach the Cisco Unified IP Phone Expansion Module 7914 to your Cisco Unified IP Phone 7962G. | See: <ul style="list-style-type: none"> • Speed Dialing, page 34 • <i>Cisco Unified IP Phone Expansion Module 7914 Phone Guide (7962G SCCP phone only)</i>. The Cisco Unified IP Phone 7942G does not support the Cisco Unified IP Phone 7914 Expansion Module) |
| Work with (or work as) an administrative assistant | Consider using: <ul style="list-style-type: none"> • Cisco Unified Communications Manager Assistant • A shared line | See: <ul style="list-style-type: none"> • Using a Shared Line, page 38 • Cisco Unified Communications Manager Assistant User Guide |
| Want to use one extension for several phones | Request a shared line. This allows you to use one extension for your desk phone and lab phone, for example. | See Using a Shared Line, page 38 . |


| If you... | Then... | For more information... |
|---|---|--|
| Share phones or office space with coworkers | Consider using: <ul style="list-style-type: none"> • Call Park to store and retrieve calls without using the transfer feature • Call Pickup to answer calls ringing on another phone • A shared line to view or join coworkers' calls • Cisco Extension Mobility to apply your phone number and user profile to a shared Cisco Unified IP Phone | Ask your system administrator about these features and see: <ul style="list-style-type: none"> • Advanced Call Handling, page 34 • Using a Shared Line, page 38 • Using Cisco Extension Mobility, page 45 |
| Answer calls frequently or handle calls on someone's behalf | Ask your system administrator to set up the AutoAnswer feature for your phone. | See Using AutoAnswer, page 49 . |
| Need to make video calls (SCCP phones only) | Consider using Cisco Unified Video Advantage, which enables you to make video calls using your Cisco Unified IP Phone, your personal computer, and an external video camera. | Contact your system administrator for additional assistance and see the <i>Cisco Unified Video Advantage Quick Start Guide</i> and <i>User Guide</i> . |
| Determine the state of a phone line associated with a speed-dial button, call log, or directory listing on your phone | Ask your administrator to set up the Busy Lamp Field (BLF) feature for your phone. | See Using BLF to Determine a Line State, page 41 . |
| Want to temporarily apply your phone number and settings to a shared Cisco Unified IP Phone | Ask your system administrator about the Cisco Extension Mobility Service. | See Using Cisco Extension Mobility, page 45 . |

Troubleshooting Your Phone

This section provides troubleshooting information for your Cisco Unified IP Phone.





General Troubleshooting

This section provides information to help you troubleshoot general problems with your phone. For more information, see your system administrator.

| Symptom | Explanation |
|---|--|
| You cannot hear a dial tone or complete a call | One or more of the following factors might apply: <ul style="list-style-type: none"> You must log into the Extension Mobility service. You must enter a client matter code (CMC) or forced authorization code (FAC) after dialing a number. (SCCP phones only) Your phone has time-of-day restrictions that prevent you from using some features during certain hours of the day. |
| The Settings button is unresponsive | Your system administrator might have disabled  on your phone. |
| The softkey that you want to use does not appear | One or more of the following factors might apply: <ul style="list-style-type: none"> You must press more to reveal additional softkeys. You must change the line state (for example, go off-hook or have a connected call). Your phone is not configured to support the feature associated with that softkey. |
| Barge fails and results in a fast busy tone | You cannot barge an encrypted call if the phone you are using is not configured for encryption. When your barge attempt fails for this reason, your phone plays a fast busy tone. |
| You are disconnected from a call that you joined using Barge | You will be disconnected from a call that you have joined using Barge if the call is put on hold, transferred, or turned into a conference call. |
| Cisco CallBack fails | The other party might have call forwarding enabled. |

Viewing Phone Administration Data

Your system administrator might ask you to access administration data on your phone for troubleshooting purposes.

| If you are asked to... | Then... |
|---|--|
| Access network configuration data | Choose  > Network Configuration and select the network configuration item that you want to view. |
| Access status data | Choose  > Status and select the status item that you want to view. |
| Access phone model information | Choose  > Model Information . |
| Access phone call and voice quality information | Choose  > Status > Call Statistics . |

Using the Quality Reporting Tool

Your system administrator may temporarily configure your phone with the Quality Reporting Tool (QRT) to troubleshoot performance problems. You can press **QRT** or **Quality Reporting Tool** to submit information to your system administrator. Depending on configuration, use the QRT to:

- Immediately report an audio problem on a current call.
- Select a general problem from a list of categories and choose reason codes.

Cisco One-Year Limited Hardware Warranty Terms

There are special terms applicable to your hardware warranty and various services that you can use during the warranty period. Your formal Warranty Statement, including the warranties and license agreements applicable to Cisco software, is available on Cisco.com at the following URL:

http://www.cisco.com/en/US/docs/general/warranty/English/1Y1DEN__.html

Index

A

Abbreviated Dialing [64](#)
Address Book Synchronization Tool [64](#)
answering calls, options for [20](#)
ASCII label field support [65](#)
audible message waiting indicator [58](#)
audio problems [78](#)
audio, quality of [6](#)
authenticated calls [42](#)
Auto Dial [16](#)
AutoAnswer [49](#)

B

barge
 and privacy [40](#)
 and shared lines [38](#)
 using [39](#)
BLF [41](#)
BLF Pickup [41](#)
Busy Lamp Field
 see BLF [41](#)
button [33](#)

C

call activity area, viewing [12](#)

call forwarding [26](#)
 configuring from web page [68](#)
call logs
 dialing from a URL entry in [53](#)
 erasing [52](#)
 viewing and dialing from [52](#)
call park [36](#)
call pickup, using [35](#)
call waiting [20](#)
caller ID [12](#)
call-handling, advanced [34](#)
call-handling, basic [16](#)
calls
 answering [20](#)
 barging [39](#)
 blocking [27](#)
 compared to lines [10](#)
 conference features for [28](#)
 ending [21](#)
 forwarding [26, 68](#)
 handling multiple [23](#)
 holding and resuming [22](#)
 icons for [11](#)
 maximum per line [10](#)
 multiple parties on [28](#)
 multiple, switching between [23](#)
 muting [23](#)

- parking [36](#)
- placing [16](#)
- prioritizing [43](#)
- redirecting while ringing [35](#)
- reporting problems with [78](#)
- secure [42](#)
- storing and retrieving [36](#)
- transferring [25](#)
- using DND [27](#)
- viewing [12, 23](#)
- viewing multiple [24](#)
- Cisco Unified Communications Manager
 - Address Book Synchronizer [64](#)
- Cisco Unified IP Phone
 - adjusting height of [5](#)
 - connecting [4](#)
 - description of [7](#)
 - feature configuration for [14, 75](#)
 - illustration of [7](#)
 - online help for [13](#)
 - registering [5](#)
 - securing handset rest [5](#)
 - web-based services for [60](#)
- Cisco Unified IP Phone Expansion Module 7914 [51, 75](#)
- Cisco Unified Video Advantage [76](#)
- Cisco WebDialer [73](#)
- Client Matter Code [18](#)
- CMC [18](#)
- conference calls
 - Meet-Me [31](#)
 - types of [28](#)
- configuration
 - options [75](#)

- corporate directory
 - dialing from web page with [17](#)
 - using from web page [73](#)
 - using on phone [17](#)
- customization
 - messages [58](#)

D

- Details softkey, viewing multiparty calls with [53, 54](#)
- device configuration page [60](#)
- dialing, options for [16](#)
- direct transfer [25](#)
- directed call park [36](#)
- directory
 - corporate [54](#)
 - dialing from web page with [17](#)
 - personal [54](#)
 - using from web page [73](#)
 - using on phone [17, 52](#)
- divert calls to voice message system [26, 58](#)
- DND [27](#)
- Do Not Disturb [27](#)

E

- encrypted calls [42](#)
- ending a call, options for [21](#)
- Extension Mobility
 - log in [45](#)
 - log out [45](#)
- extension numbers, viewing [12](#)

F

FAC [18](#)

Fast Dial service
dialing with [17](#)

Fast Dials
configuring from web page [63](#)

feature buttons
help [9](#)

messages [9](#)

services [10](#)

settings [10](#)

feature menus, using [14](#)

features, availability of [14, 75](#)

footstand
adjusting [5](#)
button, identifying [9](#)

Forced Authorization Code [18](#)

forwarding calls, options for [26](#)

G

GPickUp [35](#)

group call pickup, using [35](#)

H

handset
light strip [10](#)
securing in cradle [5](#)
using [48](#)

hanging up, options for [21](#)

headset
answering calls with [20](#)

audio quality [6](#)
button, identifying [10](#)
hanging up with [21](#)
mode [48](#)
obtaining [49](#)

headset performance, general [5](#)

help button, description of [9](#)

help, using [13](#)

hold
and switching calls [23](#)
and transferring [25](#)
using [22](#)

hold reversion indicators, reverting calls [22](#)

hunt groups, logging out [37](#)

I

icons
for call states [11](#)
for lines [11](#)

idle [11](#)

installing, Cisco Unified IP Phone [4](#)

intercom calls [32](#)

intercom line [11, 33](#)

K

keypad
description of [10](#)

L

language (locale) settings [67](#)

- line buttons, identifying **9**
- lines
 - and call forwarding **68**
 - and call states **11**
 - description of **10**
 - icons **11**
 - ring patterns for **68**
 - text label for **68**
 - using BLF **41**
 - viewing **12**
 - voice message indicator setting for **68**
- logging out of hunt groups **37**

M

- Malicious Call Identification (MCID), using **43**
- Meet-Me conferences **31**
- menus, using **14**
- messages
 - indicator for **50, 58**
 - listening to **58**
- messages button, description of **9**
- missed calls, records of **52**
- MLPP, using **43**
- multiparty calls
 - identifying in call logs **53**
 - viewing details of **53, 54**
- multiple calls, handling **23**
- mute button, description of **10**
- mute, using **23**

N

- navigation button, description of **10**
- network configuration data, locating **77**

O

- o **58**
- on-hook dialing **16**
- online help, using **13**
- OPickUp **35**
- other call pickup, using **35**

P

- PAB **54**
 - using from web page **61**
- park retrieval prefix **37**
- password, changing **67**
- Personal Address Book
 - See PAB **55**
- Personal Address Book (PAB)
 - dialing from **17**
- Personal Address Book, see PAB
- Personal Directory
 - using from web page **61**
- phone lines
 - buttons for **9**
 - description of **10**
 - viewing **12**
- phone screen
 - adjusting contrast of **51**
 - changing language of **51**
 - cleaning **12**

- features of [12](#)
- phone services
 - configuring
 - see also User Options web pages
- PickUp [35](#)
- PIN, changing [67](#)
- placed calls, records of [52](#)
- placing calls, options for [16](#)
- prioritizing calls [43](#)
- privacy
 - and shared lines [38](#)
 - using [40](#)
- programmable buttons
 - description of [9](#)
 - labels for [12](#)

Q

- QRT [78](#)
- QRT, using [78](#)
- Quality Reporting Tool [78](#)

R

- received calls, records of [52](#)
- redial [16](#)
- Remote-in-Use icon for shared lines [38](#)
- resume, using [22](#)
- ring patterns, changing [68](#)
- ringer
 - customizing [50](#)
 - indicator for [10](#)

S

- safety, warnings [2](#)
- secure calls [42](#)
- security
 - levels of [42](#)
 - making and receiving secure calls [42](#)
 - verifying non-secure calls [42](#)
- services button, description of [10](#)
- services, subscribing to [66](#)
- settings button, description of [10](#)
- settings, customizing [50](#)
- shared lines
 - and Remote-in-Use icon [38](#)
 - description of [38](#)
 - with barge [39](#)
 - with privacy [40](#)
- softkey buttons
 - description of [10](#)
 - labels for [12](#)
- sound
 - See audio, quality of [6](#)
- speakerphone
 - answering calls with [20](#)
 - button, identifying [10](#)
 - hanging up with [21](#)
 - mode [48](#)
- speed dial [34](#)
 - buttons, identifying [9](#)
 - configuring [64](#)
 - labels [12](#), [64](#)
 - using [17](#)
- status data, locating [77](#)
- status line, viewing [12](#)

subscriptions, for phone services [66](#)

suspicious calls, tracing [43](#)

switching calls [23](#)

T

Tabs, phone and feature [12](#)

TABSynch [64](#)

TAPS, using [5](#)

telephony features

 audible message waiting indicator [58](#)

text, entering on phone [14](#)

Tool for Auto-Registered Phones Support [5](#)

transferring, options for [25](#)

troubleshooting [77](#)

 See also QRT [77](#)

Two-way [11](#)

U

URL dialing, from call log [53](#)

User Options web pages

 accessing [60](#)

 configuring features and services with [61](#)

 subscribing to phone services with [66](#)

V

voice message indicator [58](#)

 changing setting for [68](#)

voice message service [58](#)

volume button, description of [10](#)

W

warnings, safety [2](#)

web-based services

 configuring [60](#)

 see also User Options web pages

WebDialer [17, 73](#)

whisper [11](#)



Americas Headquarters
Cisco Systems, Inc.
170 West Tasman Drive
San Jose, CA 95134-1706
USA
www.cisco.com
Tel: 408 526-4000
800 553-NETS (6387)
Fax: 408 527-0883

Asia Pacific Headquarters
Cisco Systems, Inc.
168 Robinson Road
#28-01 Capital Tower
Singapore 068912
www.cisco.com
Tel: +65 6317 7777
Fax: +65 6317 7799

Europe Headquarters
Cisco Systems International
BV
Haarlerbergpark
Haarlerbergweg 13-19
1101 CH Amsterdam
The Netherlands
www-europe.cisco.com
Tel: 31 0 800 020 0791
Fax: 31 0 20 357 1100

**Cisco has more than 200 offices worldwide. Addresses, phone numbers, and fax numbers are listed on the
Cisco Website at www.cisco.com/go/offices.**

CCDE, CCENT, Cisco Eos, Cisco Lumin, Cisco Nexus, Cisco StadiumVision, Cisco TelePresence, Cisco WebEx, the Cisco logo, DCE, and Welcome to the Human Network are trademarks; Changing the Way We Work, Live, Play, and Learn and Cisco Store are service marks; and Access Registrar, Aironet, AsyncOS, Bringing the Meeting To You, Catalyst, CCDA, CCDP, CCIE, CCIP, CCNA, CCNP, CCSP, CCVP, Cisco, the Cisco Certified Internetwork Expert logo, Cisco IOS, Cisco Press, Cisco Systems, Cisco Systems Capital, the Cisco Systems logo, Cisco Unity, Collaboration Without Limitation, EtherFast, EtherSwitch, Event Center, Fast Step, Follow Me Browsing, FormShare, GigaDrive, HomeLink, Internet Quotient, IOS, iPhone, iQuick Study, IronPort, the IronPort logo, LightStream, Linksys, MediaTone, MeetingPlace, MeetingPlace Chime Sound, MGX, Networkers, Networking Academy, Network Registrar, PCNow, PIX, PowerPanels, ProConnect, ScriptShare, SenderBase, SMARTnet, Spectrum Expert, StackWise, The Fastest Way to Increase Your Internet Quotient, TransPath, WebEx, and the WebEx logo are registered trademarks of Cisco Systems, Inc. and/or its affiliates in the United States and certain other countries.



All other trademarks mentioned in this document or website are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (0809R)
The Java logo is a trademark or registered trademark of Sun Microsystems, Inc. in the U.S. or other countries.

© 2008 Cisco Systems, Inc. All rights reserved.