

Kodak

Model K630



AA/AAA Charger:

Kodak Ni-MH Mini Charger

Operating Instructions

4F8368

Please read these instructions for safe operation.

- Charges one or two AA or AAA Ni-MH rechargeable batteries.

Recommended Temperature Ranges for Use

| | |
|--------------------|-----------------------------|
| Ni-MH Batteries: | |
| Operating | 32° - 122° F (0° - 50° C) |
| Charging (approx.) | 32° - 104° F (0° - 40° C) |
| Storage | -4° - 86° F (-20° - 30° C) |
| Charger: | |
| Operating | 32° - 104° F (0° - 40° C) |
| Storage | -4° - 140° F (-20° - 60° C) |

Using the batteries outside the above temperatures may shorten battery life and decrease efficiency.


Operating Instructions

CHARGE INDICATOR LIGHTS

One or both lights are on (steady) during charging, depending on whether you are charging 1 or 2 batteries.

HOW TO CHARGE

1. Place 1 or 2 AA or AAA size batteries into the charger so that the + (positive) and - (negative) ends (terminals) of the batteries correspond to the same + and - markings in the charger.

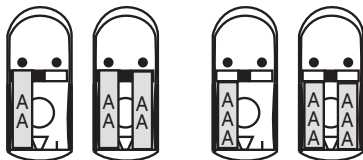

2. Plug the charger into an electrical receptacle (outlet). The charge indicator lights are illuminated and battery charging begins. (NOTE: Do not insert or remove batteries during this charging process.) The charge indicator lights will remain on during charging. They will turn off only when the charger is unplugged or the batteries are removed.

3. The charging cycle time depends on battery type. See specification chart.

TIPS

- For best performance, use only Kodak Ni-MH batteries.
- Charge the batteries before using (unless using pre-charged batteries).
- Do not use charged and discharged batteries together.

IMPORTANT SAFETY INSTRUCTIONS—Save These Instructions

- **DANGER—TO REDUCE THE RISK OF FIRE OR ELECTRICAL SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS.**

⚠CAUTION: Do not disassemble this product; there are no user-serviceable parts inside. Refer servicing to qualified service personnel.

⚠WARNING: Do not expose this product to liquid, moisture, or extreme temperatures. KODAK AC adapters and battery chargers are intended for indoor use only. The use of controls, adjustments, or procedures other than those specified herein may result in exposure to shock and/or electrical or mechanical hazards.

⚠Do not charge non-rechargeable batteries.

- For connection to a supply not in the U.S.A., use an attachment plug adapter of the proper configuration for the power outlet. This battery charger is intended to be correctly oriented in a vertical or floor mount position.

Specifications

| | | |
|------------------------------------------|--------------------------------------------|----------|
| Model No. | K630 | |
| Voltage | 120 V AC | |
| Input | 60 Hz 6 W | |
| Output | 1.4 V DC | |
| LED Indication | ON steady — charging | |
| Battery/Charge time (hours), approximate | Ni-MH AA (2500 mAh) | 18.5 hrs |
| | Ni-MH AA (2100 mAh) | 15.5 hrs |
| | Ni-MH AA (1700 mAh) | 13.5 hrs |
| | Ni-MH AAA (900 mAh) | 14 hrs |
| Ni-MH AAA (850 mAh) | 13 hrs | |
| Dimensions (L x W x H) | 4.1" x 1.7" x 2.5" (105 x 44 x 63.5 mm) | |
| Weight | 123 g +/- 10% | |

Please dispose of this product in accordance with all applicable regulations. Disposal may be regulated. For disposal or recycling information, please contact your local authorities.

Guarantee: This battery charger and batteries are guaranteed against defects in material and workmanship for one year after date of purchase. Please call toll free: 1-800-820-5525 (between the hours of 9:00 a.m. and 5:00 p.m.).

Support

Internet:

www.kodak.com/go/support

www.kodak.com/go/contact

Kodak

Made in China for
EASTMAN KODAK COMPANY
Rochester, New York 14650 U.S.A.
© Eastman Kodak Company, 2008.
MC/MR/TM: Kodak. 4F8368

www.kodak.com/go/batteries