

SONY®

VAIO® 505 SuperSlim Notebook User Guide

PCG-N505VE/PCG-N505VX



Notice to Users


© 1999 Sony Electronics Inc. All rights reserved. This manual and the software described herein, in whole or in part, may not be reproduced, translated, or reduced to any machine-readable form without prior written approval.

SONY ELECTRONICS INC. PROVIDES NO WARRANTY WITH REGARD TO THIS MANUAL, THE SOFTWARE, OR OTHER INFORMATION CONTAINED HEREIN AND HEREBY EXPRESSLY DISCLAIMS ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE WITH REGARD TO THIS MANUAL, THE SOFTWARE, OR SUCH OTHER INFORMATION. IN NO EVENT SHALL SONY ELECTRONICS INC. BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL, OR SPECIAL DAMAGES, WHETHER BASED ON TORT, CONTRACT, OR OTHERWISE, ARISING OUT OF OR IN CONNECTION WITH THIS MANUAL, THE SOFTWARE, OR OTHER INFORMATION CONTAINED HEREIN OR THE USE THEREOF.

Sony Electronics Inc. reserves the right to make any modification to this manual or the information contained herein at any time without notice. The software described herein is governed by the terms of a separate user license agreement.

This product contains software owned by Sony and licensed by third parties. Use of such software is subject to the terms and conditions of license agreements enclosed with this product. Some of the software may not be transported or used outside the United States. Software specifications are subject to change without notice and may not necessarily be identical to current retail versions.

Updates and additions to software may require an additional charge. Subscriptions to online service providers may require a fee and credit card information. Financial services may require prior arrangements with participating financial institutions.

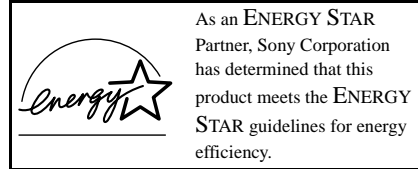

The International ENERGY STAR Office Equipment Program is an international program that promotes energy saving through the use of computers and other office equipment. The program backs the development and dissemination of products with functions that effectively reduce energy consumption. It is an open system in which business proprietors can participate voluntarily. The targeted products are office equipment such as computers, displays, printers, facsimiles and copiers. Their standards and logos are uniform among participating nations. ENERGY STAR is a U.S. registered mark.

Sony, i.LINK, **Memory Stick**, the **Memory Stick** logo, VAIO and the VAIO logo are trademarks of Sony Corporation. Windows, Windows NT, and the Windows 98 logo are registered trademarks of Microsoft Corporation. Intel and Pentium are trademarks of Intel Corporation.

All other trademarks are trademarks of their respective owners

Owner's Record

The model number and serial number are located on the bottom of your Sony VAIO® 505 SuperSlim Notebook. Record the serial number in the space provided here. Refer to the model and serial number when you call your Sony Service Center.

Model Number: PCG-N505VE/
PCG-N505VX

Serial Number: _____

Safety Information

WARNING

- To prevent fire or shock hazard, do not expose your notebook computer to rain or moisture.
- To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.
- Never install modem or telephone wiring during a lightning storm.
- Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.
- Never touch uninsulated telephone wire or terminals unless the telephone line has been disconnected at the network interface.
- Use caution when installing or modifying telephone lines.
- Avoid using the modem during an electrical storm.
- Do not use the modem or a telephone to report a gas leak in the vicinity of the leak.
- A socket outlet should be as close as possible to the unit and easily accessible.

! For CD-ROM: The use of optical instruments with the CD-ROM drive will increase eye hazard.

! For DVD-ROM: As the laser beam used in the DVD-ROM drive is harmful to the eyes, do not attempt to disassemble the drive cabinet. Refer servicing to qualified personnel only.

AVERTISSEMENT

- Pour prévenir tout risque d'incendie ou d'électrocution, garder cet appareil à l'abri de la pluie et de l'humidité.
- Pour prévenir tout risque d'électrocution, ne pas ouvrir le châssis de cet appareil et ne confier son entretien qu'à une personne qualifiée.
- L'appareil doit être le plus près possible d'une prise murale pour en faciliter l'accès.

Regulatory Information.

Declaration of Conformity

Trade Name: SONY

Model No: PCG-N505VE/
PCG-N505VX

Responsible Party:
Sony Electronics Inc.

Address:
1 Sony Drive
Park Ridge, NJ 07656

Telephone No.: 201-930-6970

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ❑ Reorient or relocate the receiving antenna.
- ❑ Increase the separation between the equipment and the receiver.
- ❑ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ❑ Consult the dealer or an experienced radio/TV technician for help.

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

Only peripherals (computer input/output devices, terminals, printers, etc.) that comply with FCC Class B limits may be attached to this computer product. Operation with non-compliant peripherals is likely to result in interference to radio and television reception.

All cables used to connect peripherals must be shielded and grounded. Operation with cables, connected to peripherals, that are not shielded and grounded, may result in interference to radio and television reception.

FCC Part 68

This equipment complies with Part 68 of the FCC rules. On the bottom of this equipment is a label that contains, among other information, the FCC equivalence number (REN) for this equipment. If requested, this information must be provided to the telephone company.

This modem uses the USOC RJ-11 telephone jack.

The REN is used to determine the quantity of devices which may be connected to the telephone line. Excessive RENs on the telephone line may result in the devices not ringing in response to an incoming call. In most, but not all areas, the sum of the RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to the line, as determined by the total RENs, contact the telephone company to determine the maximum REN for the calling area.

If the terminal equipment causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. But if advance notice is not practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.

The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the operations of the equipment. If this happens, the telephone company will provide advance notice in order for you to make the necessary modifications in order to maintain uninterrupted service.

If trouble is experienced with this equipment, please contact 1-888-4SONYPC (1-888-476-6972), or write to the Sony Customer Information Center, One Sony Drive, Park Ridge, NJ 07656 for repair and/or warranty information. If the trouble is causing harm to the telephone network, the telephone company may request that you remove the equipment from the network until the problem is resolved.

Repair of this equipment should be made only by a Sony Service Center or Sony authorized agent. For the Sony Service Center nearest you, call 1-888-4SONYPC (1-888-476-6972).

This equipment cannot be used on public coin service provided by the telephone company. Connection to Party Line Service is subject to state and possible provincial tariffs. (Contact the state or provincial utility service commission, public service commission, or corporation commission for information.)

Telephone Consumer Protection Act of 1991 (United States)

The Telephone Consumer Protection Act of 1991 makes it unlawful for any person to use a computer or other electronic device to send any message via a telephone facsimile machine unless such message clearly contains, in a margin at the top or bottom of each transmitted page or on the first page of the transmission, the date and time it is sent and an identification of the business, other entity, or individual sending the message, and the telephone number of the sending machine or such business, other entity, or individual.

In order to program this information into your facsimile machine, see your fax software documentation.

Telephone Consumer Guidelines (Canada)

Please refer to your telephone directory under 'Privacy Issues' and/or 'Terms of Service.' For more detailed information, please contact:

CRTC

Terrasses de la Chaudière, Tour centrale
1 promenade du Portage, 5 étage Hull PQ
K1A 0N2.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

DISPOSAL OF LITHIUM ION BATTERY

You can return your unwanted lithium ion batteries to your nearest Sony Service Center or Factory Service Center.



In some areas the disposal of lithium ion batteries in household or business trash may be prohibited.

For the Sony Service Center nearest you call 1-888-476-6972 in the United States or 1-800-961-7669 in Canada.

! Do not handle damaged or leaking lithium ion batteries.

! Ne pas manipuler les batteries au lithium-ion qui fuient ou sont endommagées.

! Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Discard used batteries according to the manufacturer's instructions.

! Une batterie non conforme présente un danger d'explosion. La remplacer seulement par une batterie identique ou de type équivalent recommandé par le fabricant. Évacuer les batteries usées selon les directives du fabricant.

! The battery pack used in this device may present a fire or chemical burn hazard if mistreated. Do not disassemble, heat above 212°F (100°C) or incinerate. Dispose of used battery promptly. Keep away from children.

! La manutention incorrecte du module de batterie de cet appareil présente un risque d'incendie ou de brûlures chimiques. Ne pas démonter, incinérer ou exposer à une température de plus de 100°C. Évacuer promptement la batterie usée. Garder hors de portée des enfants.

INDUSTRY CANADA NOTICE

NOTICE: The Industry Canada label identifies certified equipment. This certification means that the equipment meets certain telecommunications network protective, operational and safety requirements as prescribed in the appropriate Terminal Equipment Technical Requirements document(s). The Department does not guarantee the

equipment will operate to the user's satisfaction.

Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection.

The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations.

Repairs to certified equipment should be coordinated by a representative designated by the supplier. Equipment malfunctions or any repairs or alterations made by the user to this equipment may give the telecommunications company cause to request that the user disconnect the equipment.

Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines and internal metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas.

Caution: Users should not attempt to make such connections themselves, but should contact the appropriate electric inspection authority, or electrician, as appropriate.

NOTICE: The Ringer Equivalence Number (REN) assigned to each terminal device provides an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the Ringer Equivalence Numbers of all the devices does not exceed 5. The Ringer Equivalence Number for this equipment is 0.3.

AVIS DE L'INDUSTRIE CANADA

AVIS: L'étiquette d'Industrie Canada identifie le matériel homologué.

Cette étiquette certifie que le matériel est conforme aux normes de protection, d'exploitation et de sécurité des réseaux de télécommunications, comme le prescrivent les documents concernant les exigences techniques relatives au matériel terminal. Le Ministère n'assure toutefois pas que le matériel fonctionnera à la satisfaction de l'utilisateur.

Avant d'installer ce matériel, l'utilisateur doit s'assurer qu'il est permis de le raccorder aux installations de l'entreprise locale de télécommunication. Le matériel doit également être installé en suivant une méthode acceptée de raccordement. L'abonné ne doit pas oublier qu'il est possible que la conformité aux conditions énoncées ci-dessus n'empêche pas la dégradation du service dans certaines situations.

Les réparations de matériel homologué doivent être coordonnées par un représentant désigné par le fournisseur. L'entreprise de télécommunications peut demander à l'utilisateur de débrancher un appareil à la suite de réparations ou de modifications effectuées par l'utilisateur ou à cause de mauvais fonctionnement.

Pour sa propre protection, l'utilisateur doit s'assurer que tous les fils de mise à la terre de la source d'énergie électrique, des lignes téléphoniques et des canalisations d'eau métalliques, s'il y en a, sont raccordés ensemble. Cette précaution est particulièrement importante dans les régions rurales.

Avertissement: L'utilisateur ne doit pas tenter de faire ces raccordements lui-même; il doit avoir recours à un service d'inspection des installations électriques, ou à un électricien, selon le cas.

AVIS: L'indice d'équivalence de la sonnerie (IES) assigné à chaque dispositif terminal indique le nombre maximal de terminaux qui peuvent être raccordés à une interface.

La terminaison d'une interface téléphonique peut consister en une combinaison de quelques dispositifs, à la seule condition que la somme d'indices d'équivalence de la sonnerie de tous les dispositifs n'excède pas 5.

Contents

| | |
|--|----|
| Welcome..... | 1 |
| Features | 1 |
| Unpacking Your Notebook Computer | 2 |
| Manuals..... | 2 |
| Software CDs..... | 3 |
| Recovery CDs | 3 |
| Other | 3 |
| Locating Controls and Connectors..... | 5 |
| Front..... | 5 |
| Back | 6 |
| Left | 6 |
| Right..... | 7 |
| Bottom | 7 |
| Connecting a Power Source | 8 |
| Using the AC Adapter..... | 8 |
| Using Battery Power..... | 9 |
| Starting Your Computer | 12 |
| Shutting Down Your Computer | 13 |
| Configuring Microsoft® Windows® 98 Second Edition..... | 14 |
| Registering Your Computer | 15 |
| Using the Keyboard..... | 16 |
| Combinations and Functions with the Windows 98 Key | 18 |
| Replacing a key top..... | 19 |
| Indicators..... | 20 |
| Combinations and Functions with the Fn Key | 21 |
| Using the Touchpad | 22 |
| Using Smart Pad | 23 |
| Using the Floppy Disk Drive | 24 |
| Using PC Cards..... | 26 |

| | |
|--|----|
| Using Smart Connect | 29 |
| Using Infrared Communication Devices | 30 |
| Using Power Saving Modes..... | 32 |
| Normal Mode | 32 |
| System Idle Mode | 32 |
| System Suspend Mode | 33 |
| System Hibernation Mode..... | 33 |
| Connecting Peripheral Devices | 35 |
| Connecting a Phone Line | 36 |
| Connecting the i.LINK Port Replicator | 37 |
| Connecting a Printer..... | 39 |
| Connecting an External Display | 41 |
| Connecting a Desktop Computer or Serial Device | 43 |
| Connecting the CD-ROM Drive | 45 |
| Connecting an i.LINK device | 48 |
| Connecting a Universal Serial Bus (USB) Device | 50 |
| Connecting an External Display..... | 51 |
| Connecting External Speakers..... | 53 |
| Adding Memory..... | 54 |
| Getting Help..... | 55 |
| Troubleshooting | 57 |
| Power Management..... | 63 |
| Using the System and Application Recovery CDs | 64 |
| Using the System Recovery CD(s)..... | 64 |
| Using the Application Recovery CD(s)..... | 66 |
| Hard Drive Partition..... | 66 |
| About the Software on Your Computer..... | 67 |
| About Your Recovery CDs | 73 |
| For Answers to Your Software Questions | 74 |
| Sony Service Center | 76 |
| Specifications..... | 77 |
| Index..... | 79 |

Welcome

Congratulations on your purchase of the Sony VAIO® 505 SuperSlim Notebook. Sony has combined leading-edge technology in audio, video computing and communications to provide you with state-of-the-art personal computing.

Features



For a complete description of the specifications of your VAIO 505 SuperSlim Notebook, see page 77.




- ❑ **Exceptional performance:** Your notebook includes a fast Intel® Celeron™ or Intel® Pentium® II processor* and a V.90 compatible modem.†
- ❑ **Portability:** The high-capacity lithium-ion battery provides hours of use without AC power.
- ❑ **Sony audio and video quality:** High-quality MPEG1 video, which supports full-screen display (10.4" Poly-Si TFT) and enables you to take advantage of today's advanced multimedia applications, games, and entertainment software.
- ❑ **Windows® 98 Second Edition:** Your system includes the latest operating system from Microsoft.
- ❑ **Communications:** Access popular online services, send e-mail, browse the Internet, and use fax features.

* Model PCG-N505VE has a Celeron processor, and model PCG-N505VX has a Pentium II processor.


† Actual upload and download speeds may vary due to line conditions, ISP support, and government regulations.

Checking Your Notebook Computer

Check the following hardware items from the box:

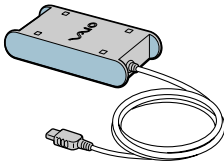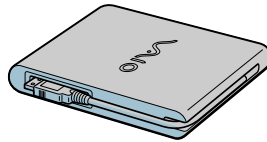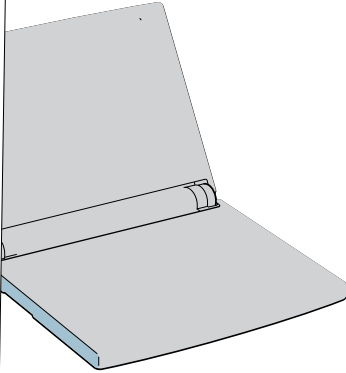

Phone cable

 

Manuals

- ❑ The VAIO® 505 SuperSlim™ Notebook User Guide (this manual) contains information on how to get the most from your computer, find help and solve common problems. It also includes product specifications.
- ❑ *Read Me First* contains frequently Asked Questions, the most up-to-date information on your computer and software information.
- ❑ The *Consumer Description* explains ergonomic considerations and your computer's environment.
- ❑ *The Microsoft® Windows® XP Started* manual explains how to use the Windows operating system.

* PCGA-BP51 (shown here) is supplied with PCG-N505VE.

Software CDs

- ❑ Microsoft® Works Suite CDs

Recovery CDs

- ❑ System Recovery CD(s)
- ❑ Application Recovery CD(s)



To use these recovery CDs, you need to purchase the PCGA-CD5 or PCGA-CD51 CD-ROM drive.


Other

 
 

- ❑ Setting up your VAIO® 505 SuperSlim™ Notebook (poster)
- ❑ Packet containing special product offers

Locating Controls and Connectors


This section describes how to start using your computer and how to use your computer's internal and external devices, such as the touchpad and floppy disk drive.

Front

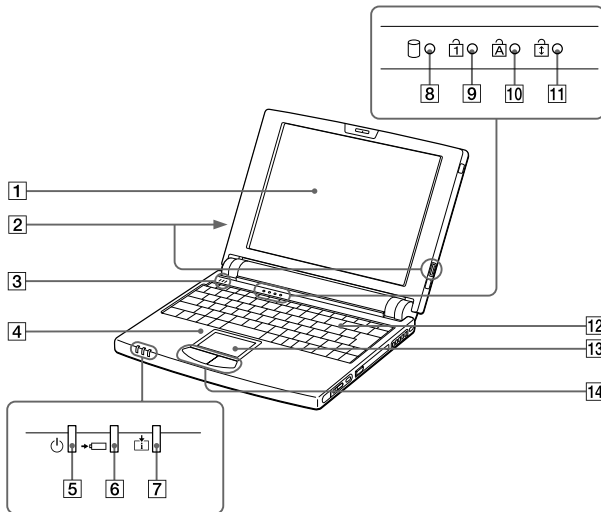


- | | | | |
|----------|--|-----------|---|
| 1 | LCD screen (pages 21, 58) | 8 |  Hard disk drive indicator (page 20) |
| 2 | External speaker connectors (page 21) | 9 |  Num Lock indicator (page 20) |
| 3 | Microphone | 10 |  Caps Lock indicator (page 20) |
| 4 | Speaker (pages 21, 60) | 11 |  Scroll Lock indicator (page 20) |
| 5 |  Power indicator (pages 12, 20) | 12 | Keyboard (page 16) |
| 6 |  Battery indicator (pages 10, 20) | 13 | Touchpad (page 22) |
| 7 |  Information indicator (page 20) | 14 | Left/right button (page 22) |

Back

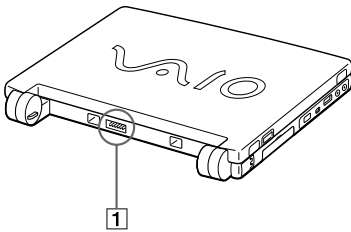


- 1 Battery connector (page 9)

Left

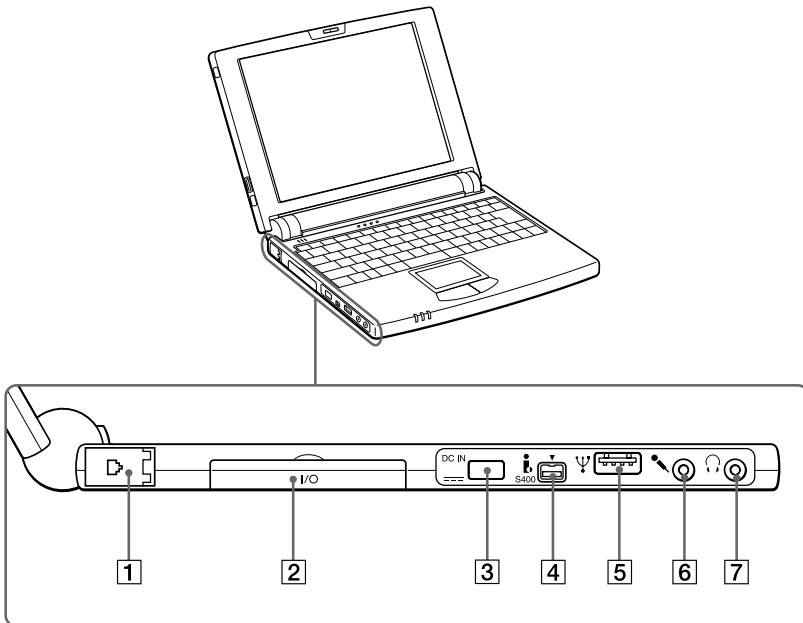

- | | | | |
|---|---|---|-------------------------|
| 1 | Phone line jack (page 36) | 5 | USB connector (page 50) |
| 2 | I/O i.LINK [®] port replicator connector (page 37) | 6 | Microphone connector |
| 3 | DC In connector (page 8) | 7 | Headphone connector |
| 4 | S400 i.LINK (IEEE-1394) (page 48) | | |


Right

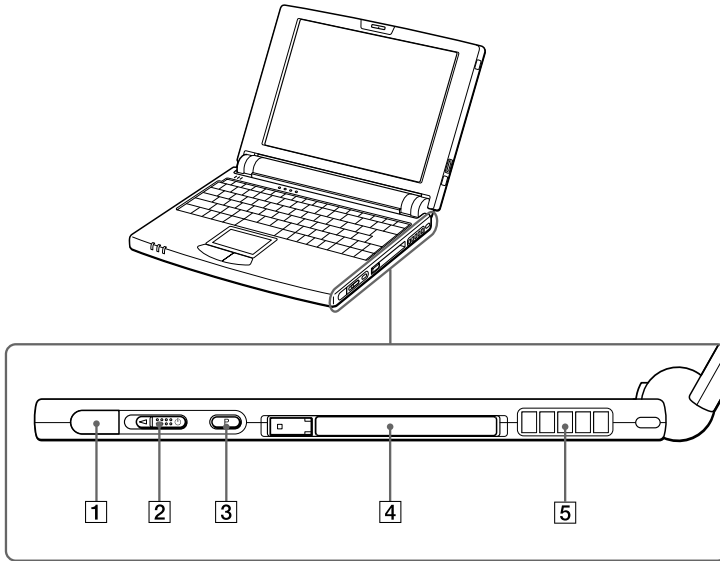

- | | | | |
|----------|--|----------|------------------------|
| 1 | Infrared port (page 30) | 4 | PC card slot (page 26) |
| 2 | Power Switch (page 12) | 5 | Fan * |
| 3 | Programmable Power Key (see the online document <i>Customizing Your VAIO® 505 SuperSlim™</i> Notebook) | | |

* Do not block air flow through the fan unit. Blocking this unit may result in a system malfunction.

Bottom

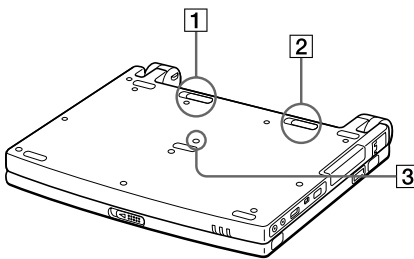


- | | | | |
|----------|----------------------------------|----------|--------------|
| 1 | Battery release lever (page 11) | 3 | Reset switch |
| 2 | Battery lock lever (pages 9, 11) | | |

Connecting a Power Source

You can use either AC power or a rechargeable battery pack as a power source.


Using the AC Adapter

- 1 Plug the cable attached to the AC adapter into the DC In connector on the computer.
- 2 Plug one end of the power cord into the AC adapter.
- 3 Plug the other end of the power cord into an AC outlet.

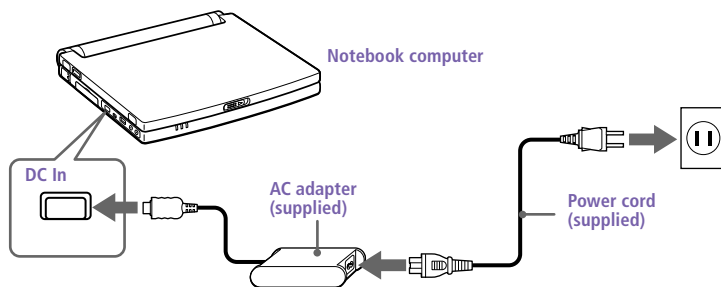

Using Battery Power


PCG-N505VE comes with the PCGA-BP51 battery pack, and PCG-N505VX comes with the PCGA-BP52 battery pack. You can use a battery pack as a source of power. The battery pack that comes with your computer is not fully charged at the time of purchase. Follow the steps below to insert and charge the battery pack.

 You can also purchase the high-capacity PCGA-BP52 battery pack as a separate option.


See "Using Power Saving Modes" on page 32 for power management information.

To insert the battery pack

- 1 Move the lock lever on the bottom of the computer to the **UNLOCK** position.

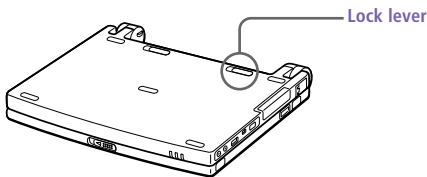

- 2 Align the grooves and tabs on the battery with the tabs and notches on the back of the computer, and then slide the battery toward the computer until it clicks into place.

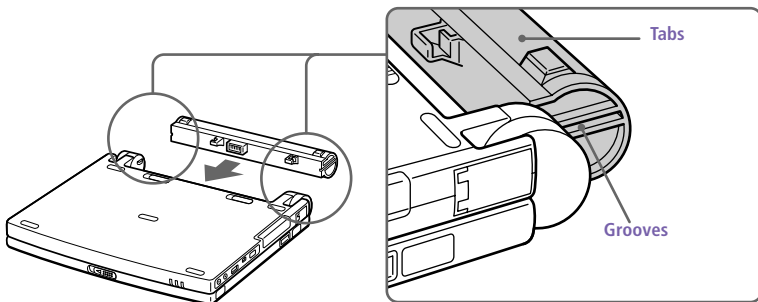



- 3 Slide the lock lever into the **LOCK** position to secure the battery on the computer.

To charge the battery pack

- 1 Connect the AC adapter to the computer.
- 2 Insert the battery pack.

 The computer automatically charges the battery (the battery indicator light flashes in a double blink pattern as the battery charges). When the battery is 85% full, the battery indicator light turns off. This process takes approximately one and one half hours. To charge the battery completely, continue charging for an additional hour.

The  battery indicator light on the front of the computer indicates the status of the battery pack.

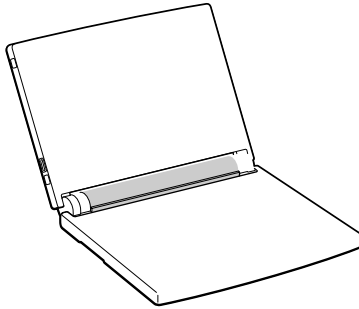

Battery Indicator Light Status

Meaning

| | |
|--------------|--------------------------------------|
| On | The computer is using battery power. |
| Single blink | The battery is running out of power. |
| Double blink | The battery is charging. |
| Off | The computer is using AC power. |



Both the battery and power indicators blink when the battery is running out of power.

Keep the battery pack in the computer while it is directly connected to AC power. The battery pack continues to charge while you are using the computer.

If your battery level falls to less than 10 percent, you should either attach the AC adapter to recharge the battery or shut down your computer and insert a fully charged battery.

You can extend battery life by changing the power management modes in the PowerPanel utility. See "Using Power Saving Modes" on page 32.

You can also charge the battery with the battery charger PCGA-BC5 (not supplied). See the manual that comes with the battery charger for more information of its use.


The battery pack supplied with your computer is a lithium ion battery and can be recharged at any time. Charging a partially discharged battery does not affect battery life.

The battery indicator light is on while you use the battery pack as a power source. When battery life is nearly depleted, the battery indicator starts flashing.

For some software applications and some peripheral devices, your computer may not enter System Hibernation mode when the battery life is low. To avoid loss of data when using battery power, you should save your data frequently and manually activate a power management mode, such as System Suspend or System Hibernation.

To remove the battery pack

- 1 Turn off the computer and close the cover.
- 2 Slide the lock lever to the **UNLOCK** position.
- 3 Slide the release lever to the **UNLOCK** position and slide the battery away from the computer.

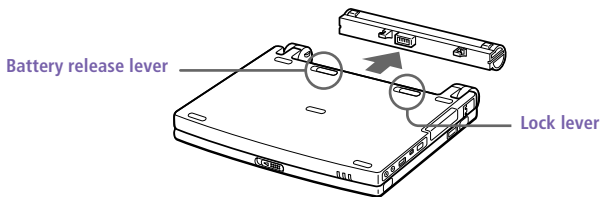


You may lose data if you remove the battery pack while the computer is on and not connected to the AC adapter or if you remove the battery while the computer is in System Suspend mode.

You can remove the battery pack without turning the off the computer when your computer is connected to the AC adapter. Before inserting or removing the battery pack, close the cover.

Starting Your Computer

- 1 Slide the LCD lock lever in the direction of the arrow, and lift the cover.

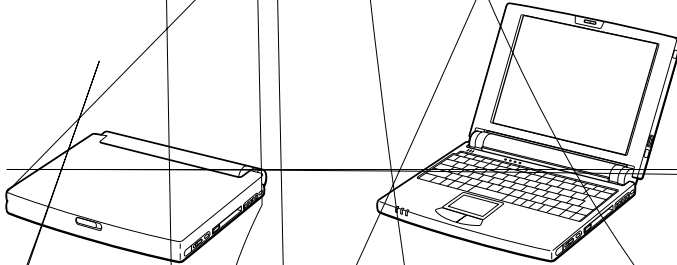

- 2 Slide the power switch on the right side toward the front of the computer until the green power indicator light turns on.



If you hold the power switch in the On position for more than four seconds, the computer turns off.

- 3 If necessary, adjust the brightness controls for the LCD display. To decrease the brightness, press **Fn+F5** and then the down or left arrow key. To increase the brightness, press **Fn+F5** and then the up or right arrow key.


Shutting Down Your Computer

! To avoid potential loss of data, follow these steps to shut down your computer.


- 1 Click the Start button on the Windows® 98 taskbar.
- 2 Click Shut Down at the bottom of the Start menu to display the Shut Down Windows dialog box.



- 3 Select Shut down.
- 4 Click OK.

 Respond to any prompts warning you to save documents.

- 5 Wait for your computer to turn off automatically. The power indicator turns off.
- 6 Turn off any peripherals connected to your computer.

 If you are unable to shut down your computer using the steps described above, press the Ctrl+Alt+Delete keys at the same time to restart the computer. If you are unable to restart the computer in this way, you can slide the power switch forward and hold for four seconds. This operation may result in data loss.

During a period of inactivity, you can conserve battery life by using System Suspend mode. See "Controlling Power Management" in the online document *Customizing Your VAIO® N505 SuperSlim Pro™* Notebook.

Configuring Microsoft® Windows® 98 Second Edition

The first time you turn on your computer, you need to complete a few steps to configure the Windows operating system that is already installed on your computer.



You must configure Windows 98 before you can use the computer.

First, ensure you have a phone cable connected to your computer and phone jack. Then follow the on-screen instructions to guide you through the configuration process. The following is an overview of the process. For details on the benefits of registration, see “Registering Your Computer” on page 15.

- 1 Entering information:
 - Enter your name and follow the online instructions to register.
 - Enter the information to use your modem to connect to the Internet.
 - Read and accept the License Agreement.
 - Enter the product ID number located on the Certificate of Authenticity on the cover of the Microsoft® Windows 98 *Getting Started* manual.
- 2 Windows® 98 Second Edition setup: Click the Finish button on the Windows 98 Setup Wizard screen.
- 3 Selecting your computer settings: If necessary, change the Time Zone, Date and Time on the Date/Time Properties screen.
- 4 You may sign up for Internet access with a Sony preferred Internet Service Provider.

Registering Your Computer

You can take advantage of Sony's commitment to quality customer support and receive the following benefits by registering your computer with Sony:

- ❑ **Sony Customer Support** – Talk to a Support Representative to troubleshoot problems you may be having with your computer.
- ❑ **Extended Limited Warranty** – Protect your investment. Extend your Warranty nine months for a total of 12 months from the original date of purchase when you register your computer.
- ❑ **Express service** – Provides convenient resolution of problems.

If you have not already registered, follow these steps to use your notebook computer's online registration service. You may sign up with a Sony preferred Internet Service Provider.




You must connect your phone line before using any online services, including the online registration service. See "Connecting a Phone Line" on page 36.

- 1 Click the Registration icon on the VAIO desktop.
- 2 Enter the information requested on the first online registration form. Press the Tab key to move from box to box.
- 3 Click the Next button to advance to the next form.
- 4 Complete the remaining forms by clicking the Next button each time you complete a form.



The computer automatically transfers your registration information using your built-in modem and a toll-free telephone number.

Using the Keyboard

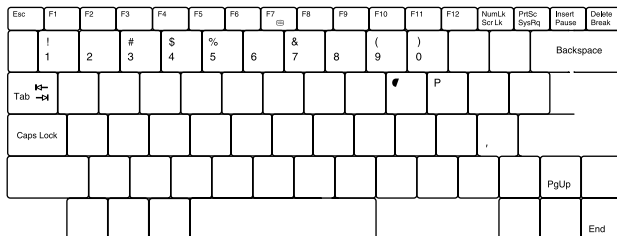







Your keyboard is very similar to a typewriter's, but the keyboard has additional keys that perform specific computer-related tasks.



| Key | Description |
|---------------------|---|
| Numeric keypad area | Contains the keys found on a typical calculator. Use the numeric keypad area to type numbers or to perform mathematical calculations such as addition and subtraction. Note that you must press the Num Lock key to activate the numeric keypad. (When you do so, the Num Lock light will be on.) |
| Navigation keys | Several keys are devoted to moving the cursor on the screen (the four arrow keys which also function as the Home, End, Page Up, and Page Down keys). |
| Correction keys | The Insert, Back Space, and Delete keys enable you to make corrections in your documents. |
| Function keys | The twelve function keys along the top of the keyboard are used to perform designated tasks. For example, in many applications, F1 is the Help key. The task associated with each function key may vary from one application to the next. Escape Key |

| <i>Key</i> | <i>Description</i> |
|---|--|
| Escape key | The Esc (Escape) key is used to cancel commands |
| Print Screen key | The Print Screen key takes an electronic snapshot of the screen and places it in the Windows Clipboard. You can then paste the screen shot into a document and print it. |
| Operator keys | Several keys are always used with at least one other key: Ctrl, Alt, and Shift. When held down with another key, the Ctrl (Control) and Alt (Alternate) keys offer another way to give commands. For example, in many applications, instead of choosing the Save command from a menu, you can hold down Ctrl and press S (referred to as Ctrl+S). The Shift key operates the same way as on a typewriter; it is used to produce capital letters or special symbols such as @ and \$. |
| Windows 98 key  | The key with the Windows logo displays the Windows 98 Start menu; it is the equivalent of clicking the Start button on the task bar. See “Combinations and Functions with the Windows 98 Key” on page 18. |
| Fn key | The Fn key is used in combination with other keys to issue commands. The Fn keys at the left and right sides both work the same. See “Combinations and Functions with the Fn Key” on page 21. |
| Applications key  | The Applications key displays a shortcut menu of context-sensitive choices; pressing this key is the equivalent of clicking the right mouse button. |

Combinations and Functions with the Windows 98 Key


| <i>Combinations</i> | <i>Functions</i> |
|---|--|
|  + F1 | Displays Windows Help. |
|  + Tab | Switches the selected button on the taskbar. |
|  + E | Displays Windows Explorer. |
|  + F | Displays the Windows Find: All Files window to find a file or folder. This is the equivalent of selecting Find and then Files or Folders from the Start menu. |
|  + Ctrl + F | Displays the Windows Find: Computer window where you can locate other computers. This is the equivalent of selecting Find and then Computer from the Start menu. |
|  + M | Minimizes all displayed windows. |
| Shift +  + M | Returns all minimized windows to their previous size. |
|  + R | Displays the Run window. This is the equivalent of selecting Run from the Start menu. |

Replacing a key top


If the enter key or the space bar key comes off, replace the key top in the position shown below. If any other key top comes off, replace it in its original location and push it down until it clicks.

To replace a key top


Remove the wire from the key top, then attach it to the hook on the unit. Align the center of the key top and press it from the top.

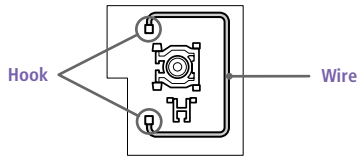


 


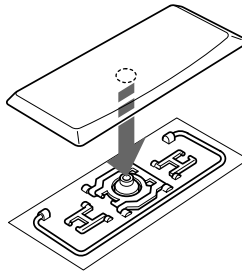


Enter Key

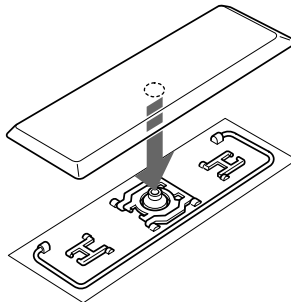

Space key




Indicators


| <i>Indicators</i> | <i>Functions</i> |
|--|---|
| Power  | Green light indicates the computer is turned on. Amber light indicates the computer is in System Idle mode. Amber flash indicates the computer is in System Suspend mode. Turns off when the computer is in System Hibernation mode or powered off. |
| Battery  | Indicates the status of the battery attached at the rear of the computer. |
| Information  | Turns on when the PPK Timer is set. Turns off when the PPK Timer is not set or the PPK Timer setting is inactive (such as when the computer's power is off or in System Hibernation mode). |
| <i>Light</i> | <i>On</i> <i>Off</i> |
| Hard disk  | Data is being read from or written to the hard drive. Do not enter System Suspend mode or turn off the computer when this indicator light is on. The hard drive is not being accessed. |
| Num Lock  | The number keys in the numeric keypad are active. The character keys in the keypad area are active. |
| Caps Lock  | The letters appear in uppercase as you type. The Shift key lowers the case of typed letters when Caps Lock is on. Letters appear in lower case as you type (unless you hold down the Shift key). |
| Scroll Lock  | The screen scrolls differently. (Exactly how it scrolls depends on the specific application. It has no effect in many applications.) Information moves across the display normally. |


Combinations and Functions with the Fn Key

Combinations/ Feature

Fn+ (ESC)
System Suspend

 Fn+  (F3)
Speaker switch

Fn+  (F4)
Speaker volume

Fn+  (F5)
Brightness control

 
 
 
 
Fn+ / (F7)
Switch to the
external display




Fn+ (F12)
System Hibernation

Functions

Puts the system into System Suspend mode, a power management state. To return the system to the active state, press any key or press the power switch on your computer.

Toggles the built-in speaker off and on.

   Adjusts the built-in speaker or the external speakers volume. To increase volume, press Fn+F4, then  or . To decrease volume, press Fn+F4, then  or .


Adjusts the brightness of the LCD. To increase light intensity, press Fn+F5 and then . To decrease light intensity, press Fn+F5 and then  or .

Toggles through the LCD, external display (connected to the Monitor connector on the port replicator) and both LCD and external display.

Provides for the lowest level of power consumption. When you execute so,n

Using the Touchpad

The keyboard contains a cursor-pointing device called a touchpad. You can point to, select, drag, and scroll objects on the screen using the built-in touchpad.

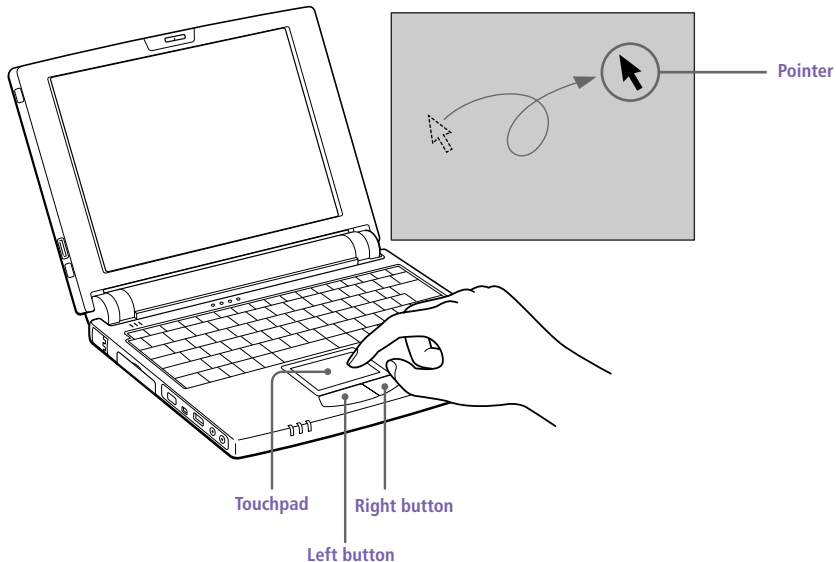

| <i>Actions</i> | <i>Descriptions</i> |
|----------------|--|
| Point | Slide one finger on the touchpad to place the pointer on an item or object. |
| Click | Press the left button once. |
| Double-click | Press the left button twice. |
| Right-click | Press the right button once. In many applications, this action displays a shortcut menu of context-sensitive choices. |
| Drag | Slide one finger while pressing the left button. |
| Scroll | Move your finger along the right edge of the touchpad to scroll vertically. Move your finger along the bottom edge to scroll horizontally. (The scroll function is available only with applications that support a touchpad scroll feature.) |



See Mouse Help for information on touchpad features, such as clicking both buttons simultaneously, adjusting touchpad speed, Web Assist, Tap Off, and Easy Launcher functions. To access Mouse Help, press the Start button, select Settings, and then select Control Panel. Click the Mouse icon in the Control Panel and click the Help button.


Using Smart Pad

Smart Pad is an application that lets you create memos by writing on the touchpad using your finger.

To use Smart Pad

- 1 Click the Start button on the Windows 98 taskbar.
- 2 Point to Programs, point to Smart Utilities, and then click Smart Pad.
- 3 Press the F10 key.

Smart Pad enters tablet mode. In this mode the touchpad corresponds with the Smart Pad screen. This means that what you write on the touchpad appears on the screen in the corresponding location. For example, when you write letters on the left corner of the touchpad, the letters appear on the left corner of the screen.

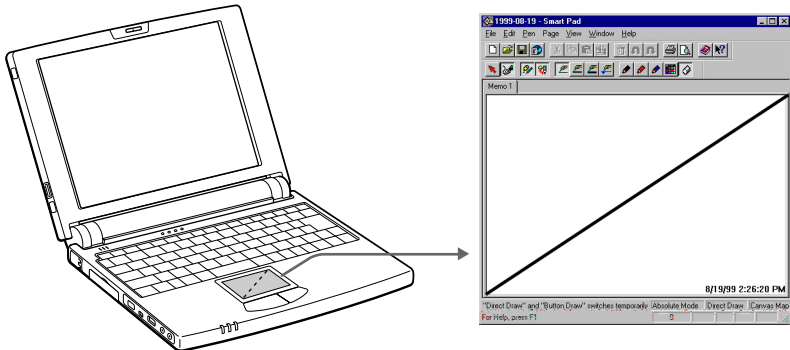

- 4 To write, move your finger slowly on the touchpad.
As you write, the letters you wrote on the touchpad appear on the screen.
- 5 To finish Smart Pad, press the F10 key to return to the normal mode (the relative coordinate mode) . Click File, then click Exit.




To learn more about Smart Pad, click Help on the Smart Pad screen to display the online help file.


Using the Floppy Disk Drive


You can connect the floppy disk drive to the Ψ (USB) connector on your computer:

To connect the floppy disk drive

 You do not need to shut down the computer before connecting or disconnecting the floppy disk drive.

Plug the USB cable into the Ψ (USB) connector on the computer and the other end into the USB connector on the floppy disk drive. The VAIO logo on the disk drive should be facing up.

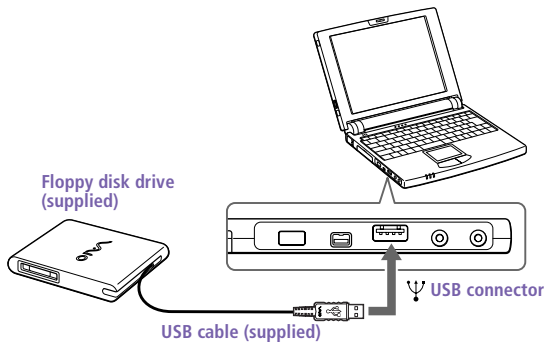


 The supplied floppy disk drive should be used only with PCG-N505. You cannot use this floppy disk drive with another computer.

To use another USB device, such as a USB mouse, simultaneously, connect the supplied i.LINK port replicator (PCGA-UPR5) to your computer (page 37), then plug another USB device into the USB connector on the i.LINK port replicator.

To insert a diskette

- 1 Hold the diskette with the label side facing up.
- 2 Gently push the diskette into the drive until it clicks into place.

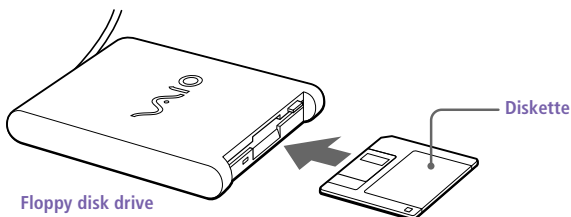


To remove a diskette

- When you finish using the diskette, wait until the LED indicator turns off and then press the Eject button to remove the diskette.



Do not press the Eject button while the LED indicator is on, as this may damage the diskette.

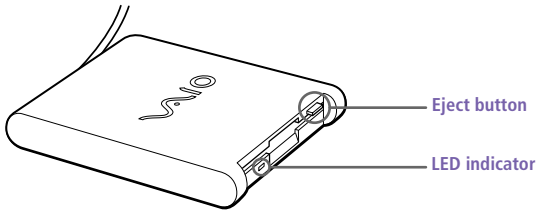

If the diskette does not come out by pressing the Eject button, disconnect the floppy disk drive from the computer.

To remove the floppy disk drive

Wait until the LED indicator turns off, and then unplug the USB cable from the computer.


To carry the floppy disk drive

Fold the floppy disk cable into the compartment on the side of the floppy disk drive.



Using PC Cards

Your computer includes a PC card slot. PC cards allow you to connect portable external devices, such as a CD-ROM drive.


 The PC card slot can accommodate one Type I or Type II PC card. This slot is compatible with 16 bit card and Card Bus. ZV (Zoomed Video) port is not available.

Some PC cards may require that you disable idle devices when using the PC card. You can use Sony Notebook Setup to disable devices. See "Displaying the Sony Notebook Setup Screen" in the online document *Customizing Your VAIO® 505 SuperSlim Notebook* for details.


Be sure to use the most recent software driver provided by the PC card manufacturer.

If an "!" mark appears on the Device Manager tab in the System Properties dialog box, remove the software driver and then reinstall it.


To insert a PC card

 You do not need to shut down the computer before inserting or removing a PC card.


- 1 Pull the PC card release button up away from the computer and push it in towards the computer.

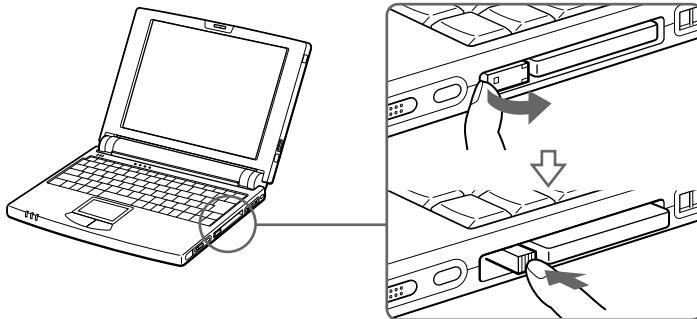


2 Remove the PC card slot protector.

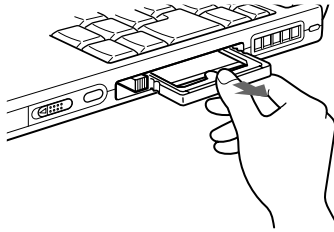

3 Insert the PC card into the PC card slot, front label facing up. Gently push the card into the slot until the card is fixed into the connector. The release button comes out. Pull the release button, then push it down towards the slot.

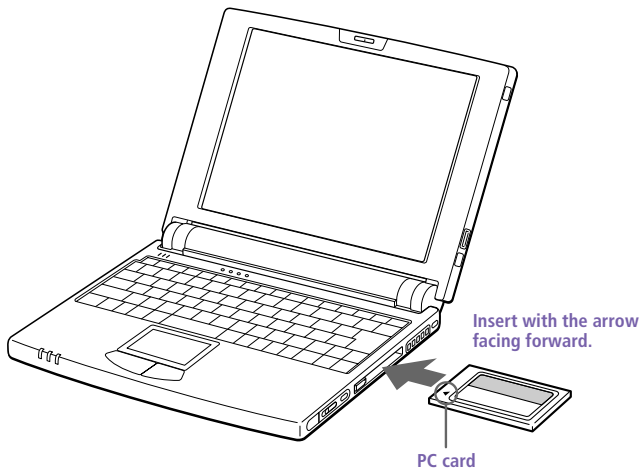

 Do not force a card into the slot, as this may damage the connector pins.

If you have difficulty inserting a card, check that you are inserting the card with the correct orientation.

While the card is inserted, your computer may not enter the System Hibernation power management mode. It may enter the System Suspend mode.


It is recommended that you remove the card when your computer enters the System Hibernation mode by pressing the Fn + F12 keys or by using the PowerPanel utility, and when it is set to enter the System Hibernation mode automatically while using a battery as the source of power.

See the manual that came with your PC card for more information on its use.

To remove a PC card

Follow the steps below when you remove the PC card while your computer is on. If the card is not removed properly, your system may not work well. When your computer is off, skip steps 1 to 5.


- 1 Click the Start button on the Windows 98 taskbar.
- 2 Point to Settings and click Control Panel.
- 3 Double-click PC card.
- 4 From the list that displays, click the PC card you want to remove, then click the Stop button.
- 5 Click OK when “You may safely remove the device” appears.
- 6 Press the PC card release button.
- 7 Grasp the card and pull it out.

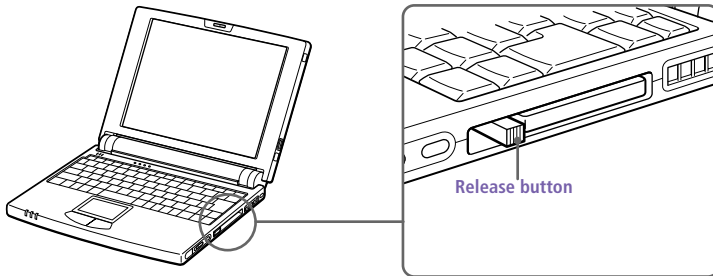

- 8 Insert the PC card slot protector into the empty slot.

Using Smart Connect

The pre-installed Smart Connect software allows you to use an i.LINK cable (not supplied) to connect your VAIO 505 SuperSlim notebook to another VAIO computer that also has Smart Connect. You can then use one computer to copy, delete, and edit files on the other computer. You can also print from a printer attached to either computer. See the Smart Connect online help for more information.

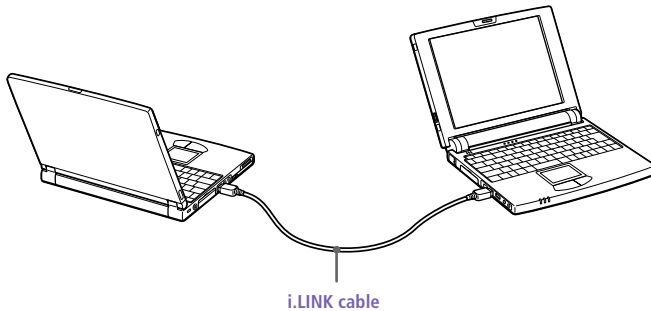


i.LINK cables compatible with your VAIO 505 SuperSlim notebook include cables with the following part numbers: VMC-IL4415 (a 1.5 meter cable with a 4-pin connector at each end), VMC-IL4435 (a 3.5 meter cable with a 4-pin connector at each end), VMC-IL4615 (a 1.5 meter cable with a 4-pin connector at one end and a 6-pin connector at the other), and VMC-IL4635 (a 3.5 meter cable with a 4-pin connector at one end and a 6-pin connector at the other).

Using Infrared Communication Devices

Your computer includes an infrared port, located on the right side of the computer. You can use this port to communicate with other infrared-equipped devices with compatible protocols, such as a digital still camera or other computers.


To use infrared communication with a digital still camera

Align the infrared ports on the computer and the digital camera so that they are in a direct line.

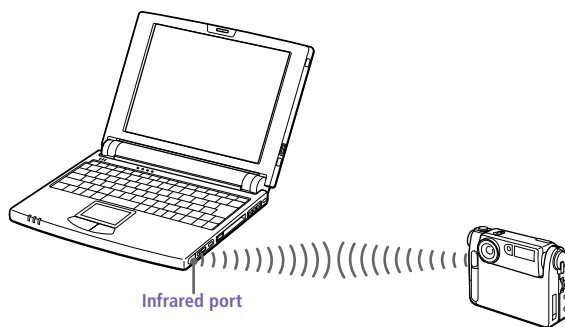

To use infrared communication with another computer

Align the infrared ports on the two computers so that they are in a direct line.

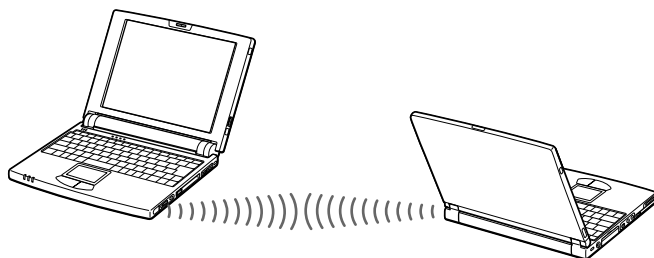

Infrared communication capability can be turned on and off. By default, it is not enabled when your system is shipped. To enable infrared use, click the Infrared icon in the Windows Control Panel, and select the Enable infrared communication checkbox on the Options tab.

You can disable infrared communication when you are not using it to conserve battery life.

Use the Infrared icon in the Windows Control Panel to enable and disable infrared communication. Do not use the icon in the taskbar.

Check the Status tag of the Infrared Monitor in the Windows Control Panel to determine if the infrared device is detected.


If the two devices are too far apart or too close together, data transfer may be interrupted or there may be noise in the transmission.

Do not cover the infrared ports with your hand or any other objects.

Avoid direct sunlight, fluorescent light, or flashing incandescent light near the infrared ports.

See the manual that came with your digital still camera or other infrared communication device for more information on installation and use.

The active area of infrared transmission extends about $39\frac{3}{8}$ inches (1m) with a radius of 15 degrees.

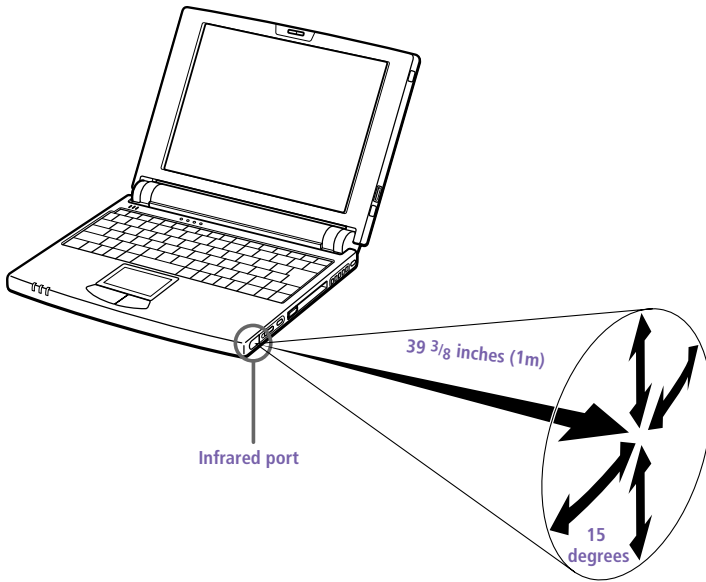

Using Power Saving Modes

When you use a battery as the source of power for your computer, you can take advantage of power management settings to conserve battery life. In addition to the normal operating mode, which allows you to turn off specific devices, your computer has three distinct power saving modes: System Idle, System Suspend, and System Hibernation. When using battery power, you should be aware that the computer automatically enters System Hibernation mode when the remaining battery charge drops below 5%, regardless of the power management setting you select.



If your battery level falls to less than 10%, you should either attach the AC adapter to recharge the battery or shut down your computer and insert a fully charged battery.

Normal Mode

This is the normal state of your computer when it is in use. The green power indicator light is on in this mode. To save power, you can turn off a specific device such as the LCD or the hard disk.



For details, see "Controlling Power Management" in the online document *Customizing Your VAIO® 505 SuperSlim Notebook*.

System Idle Mode

This mode is convenient if you do not need to use your computer for a brief period. The hard disk and video display enter a low power state, and the CPU clock and processor stop. The power indicator light is tan in this mode.

To activate System Idle mode

Press Fn+S. You can also use the PowerPanel utility to enter System Idle mode.

To return to normal mode

Press any key.

System Suspend Mode

The computer saves the current state of the system in RAM and switches off power to the CPU. The tan power indicator light flashes in this mode.

To activate System Suspend mode

Press Fn+Esc. You can also use the PowerPanel utility to enter System Suspend mode.

To return to normal mode

Press any key.

System Hibernation Mode

The state of the system is saved on the hard drive and power is turned off. The power indicator light is off in this mode.

To activate System Hibernation mode

Press Fn+F12. You can also use the PowerPanel utility to enter System Hibernation mode.

To return to normal mode

Turn on the computer by sliding the power switch forward. The computer returns to its previous state.



When returning from System Hibernation mode, the system status stored on the hard disk is erased and the computer starts normally if you slide the power switch forward and hold for more than four seconds.

- ❑ **Time to return to normal mode:**
System Idle requires less time than System Suspend, and System Suspend requires less time than System Hibernation.
- ❑ **Power consumption:**
System Idle uses more power than System Suspend, and System Suspend uses more power than System Hibernation.

Connecting Peripheral Devices

You can add functionality to your computer by connecting any of these peripherals:

- ❑ Phone line (page 36)
- ❑ Port replicator (page 37)
 - ❑ Printer (page 39)
 - ❑ External display (page 41)
 - ❑ Desktop computer or serial device (page 43)
- ❑ CD-ROM drive (page 45)
- ❑ i.LINK device (page 48)
- ❑ Universal Serial Bus (USB) device (page 50)
- ❑ External display (page 51)
- ❑ External speakers (page 53)




Turn off the computer before connecting peripherals. In normal use, you should turn on the peripherals before turning on the computer. You can connect USB devices while the computer is on.

Connect the AC adapter only after connecting all cables.


Connecting a Phone Line

You need to connect a phone line to take advantage of online services, the Internet, and Sony Customer Support.


 In order to register your Sony VAIO 505 SuperSlim notebook and use Sony Customer Support, you must connect your computer to receive the extended warranty.

to register your software online, you must connect to a phone line. Also, you must register


- 1 Open the phone line jack cover. The cover opens only to a 45 degree angle.

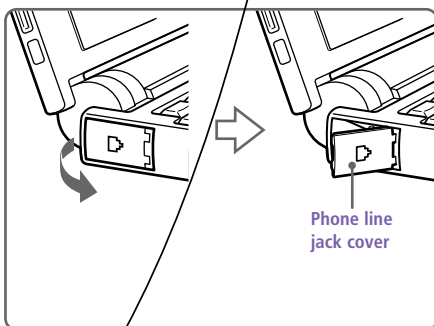

- 2 Plug one end of the phone cable into the phone line jack cover. Make sure you insert the phone cable from the rear of the computer and that the modular jack clicks into place.
- 3 Plug the other end into the wall jack.

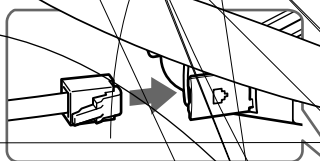


Phone cable (supplied)

 Your computer does not work with party lines, cannot be connected to a coin-operated telephone, and may not work with multiple phone lines or a private branch exchange (PBX). Some of these connections might result in excess electrical current and could cause a malfunction in the internal modem.

Connecting the i.LINK Port Replicator

You can use the PCGA-UPR5 i.LINK port replicator (supplied with PCG-N505VX only) to connect peripheral devices such as a printer or external display. The port replicator has five ports, including an i.LINK port.

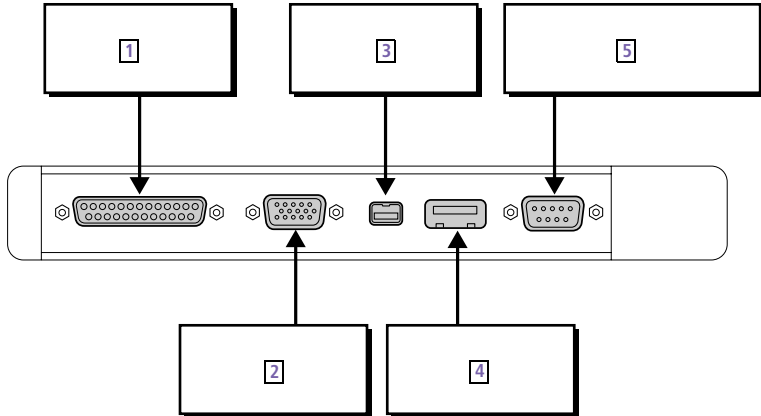

1 Printer (page 39)

2 External Display (page 41)


3 i.LINK device (page 48)

4 USB device (page 50)

5 Serial (page 43)

to attach the replicator connector.


- 1 Turn off the computer.
- 2 Open the replicator connector on the computer.

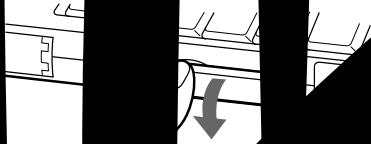


- 3 Plug the replicator connector into the replicator.

Turn on the computer.

- 3 Fold the port replicator cable into the compartment on the side of the port replicator.

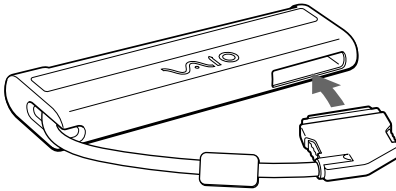



 You cannot use the optional PCGA-PR5 port replicator with your computer.

Connecting a Printer

You can use the port replicator to connect a Windows 98-compatible printer or other parallel port device to your computer.

To connect a printer


- Use the  symbol to locate the Printer connector on the port replicator. Plug the printer cable (supplied with the printer) into this connector.

 Turn off your computer and the printer, unplug the AC adapter and the power cord before connecting the printer.

Connect the power cord after connecting all other cables.

Turn on the peripherals, then turn on your computer.

If you connect the printer which is not compatible with the Windows 98, your computer and the printer may not work properly.

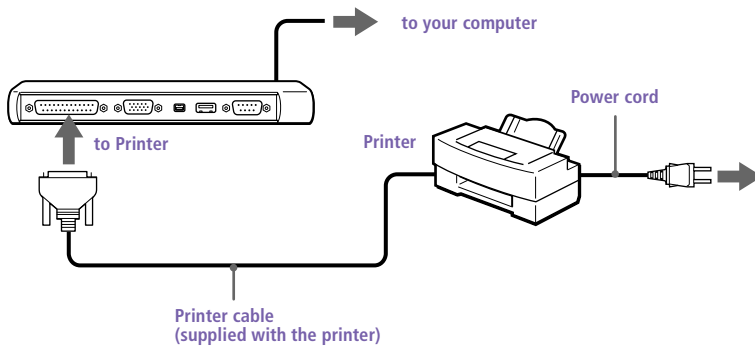


See the manual that came with your printer for more information on installation and use.

Before using the printer, you may need to change the Printer setting in the Sony Notebook Setup software. See "Displaying the Sony Notebook Setup Screen" in the online document *Customizing Your VAIO® 505 SuperSlim Notebook*.

Connecting an External Display

You can use the port replicator to connect an external display to your notebook computer. For example, you can use the computer with any of the following:

- ❑ Computer display (monitor) (page 41)
- ❑ Projector (page 42)

 Turn off your computer and the peripherals; unplug the AC adapter and the power cord before connecting the external display.

Connect the power cord after connecting all of the other cables.


Turn on the peripherals, then turn on your computer.


Some Computer displays or projectors may not be used as a monitor with the LCD on your computer display at the same time.


You can toggle the display mode between the LCD on your computer and the external display. See "To select a display" on page 42 or "Combinations and Functions with the Fn Key" on page 21.

The optional display adapter PCGA-DA5 allows you to connect a display directly to the port replicator connector, eliminating the need for the port replicator. See "Connecting an External Display" on page 41.

To connect a computer display

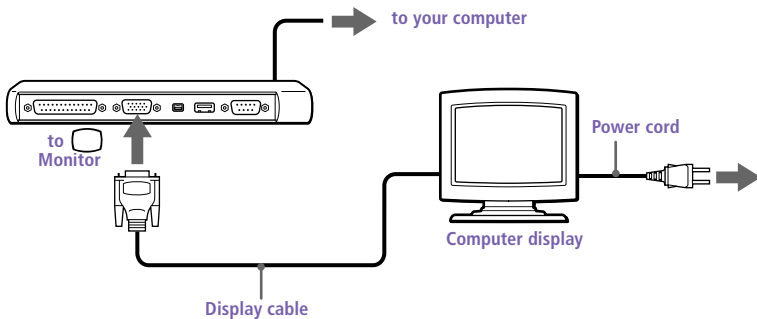

- ❑ Use the  symbol on the port replicator to locate the Monitor connector. Plug the display cable into this connector.
- ❑ If necessary, plug one end of the display power cord into the display, and the other end into an AC outlet.




 See the manual that came with your computer display for more information on installation and use.

To connect a projector

You can use a projector as an external display, such as the Sony LCD Projector.

- 1 Use the  symbol to locate the Monitor connector. Plug the RGB signal cable into this connector.
- 2 Use the  symbol to locate the Headphone connector. Plug the audio cable into this connector.

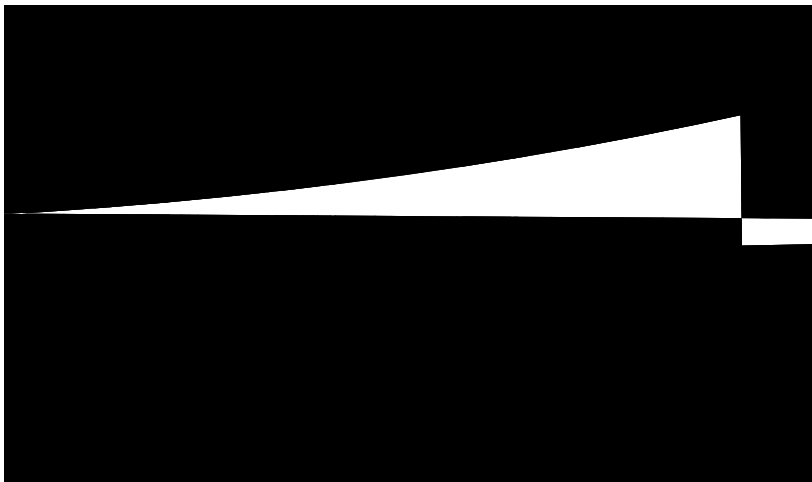

See the manual that came with your projector for more information on installation and use.

 
To select a display


When you connect an external display to the monitor connector, you can press Fn+F7 to toggle the output between the Liquid Crystal Display (LCD), the external monitor, or both devices. See “Selecting the Display Mode” in the online document *Customizing Your VAIO® 505 SuperSlim Notebook* for more information.


Connecting a Desktop Computer or Serial Device

You can use the port replicator to connect your notebook computer to another computer, or to connect other peripherals, such as the Sony Digital Still Camera.

To connect a desktop computer

- Use the  symbol to locate the Serial connector. Plug a null-modem cable (not supplied) into this port on the port replicator and into the serial port on the desktop computer.

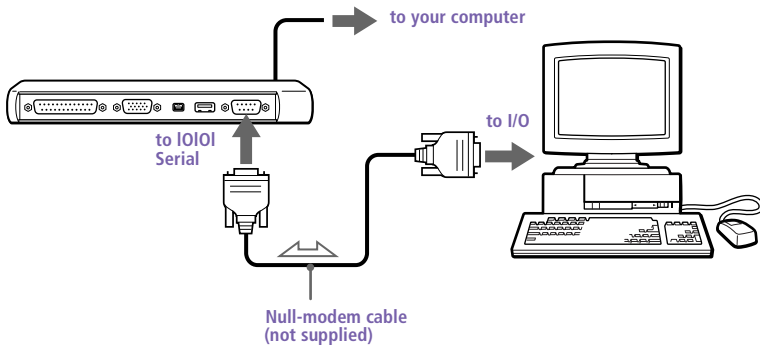

-  Turn off your computer and the peripherals, unplug the AC adapter and the power cord before connecting the null-modem cable.

Connect the power cord after connecting all other cables.


Turn on the peripherals, then turn on your computer.


Be sure to use a null modem cable, which is a specially-designed crossed wire serial cable that allows two computers to be connected to each other. You cannot transfer data if you connect the straight cable.

To transfer data between computers, the software which supports the connection by serial cable should be installed on both your computer and the computer to which you want to transfer data.

To connect a digital still camera

- ❑ If your digital video camera recorder includes a **Memory Stick** slot, you can copy images from it to your computer via a **Memory Stick** card. Copy images to the **Memory Stick** card, insert the card into the optional **Memory Stick/PC Adapter**, and then insert the adapter into the PC card slot on your computer.
- ❑ Use the IOIO symbol to locate the Serial connector. Plug the connecting cable into this port on the port replicator and into the Digital I/O connector on the digital still camera.

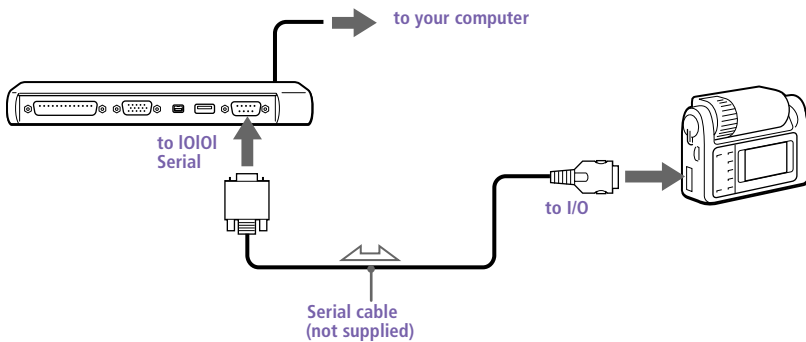


 The Sony Digital Still Camera is pictured here; other cameras may connect differently.

See the manual that came with your digital camera or other serial device for more information on installation and use.

If you use a digital camera that has an infrared data communication system or other infrared communication device, see "Using Infrared Communication Devices" on page 30.

Connecting the CD-ROM Drive

You can use the optional PCGA-CD51 CD-ROM drive with your notebook computer.

 Procedures for connecting a CD-ROM drive may vary, depending on the CD-ROM drive.


See the manual that came with your CD-ROM drive for more information on use.

To play audio CDs, you need to connect the optional PCGA-CD51 CD-ROM. If you play an audio CD in the optional PCGA-CD5 CD-ROM drive, connect a headphone or an external speaker and change the settings as below.


To change the settings:

- 1 Click the Start button, select Settings, and click Control Panel.
- 2 Click the Multimedia icon.
- 3 Click the CD tab and make sure the “Enable digital CD audio for the CD-ROM device” box has no check mark.


To connect the CD-ROM drive

 You can connect a PCGA-CD51 CD-ROM drive while the computer is on, unless you want to use the System and Application Recovery CDs. Turn off your computer before using the System and Application Recovery CDs.

- 1 Remove the PC card slot protector from the PC card slot. See “Using PC Cards” on page 26 for details.
- 2 Remove the PC card from the bottom side of the CD-ROM drive.

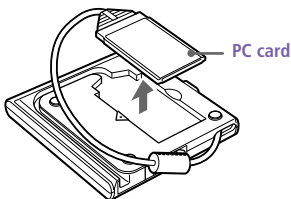

- 3 Insert the PC card into the PC card slot with the SONY logo facing up. See “Using PC Cards” on page 26 for details.

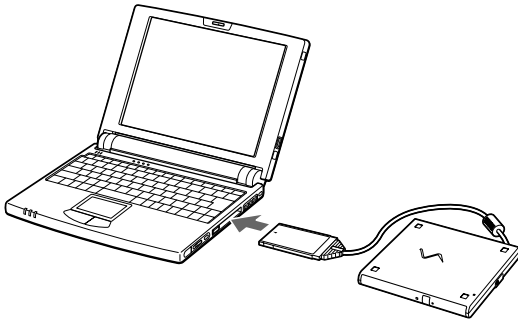


A protective cover is attached to the lens of the CD-ROM drive at the factory. Before using the CD-ROM drive, remove the protective cover.

To insert a CD-ROM disc

- 1 Press the Eject button. The disc tray slides out.

- 2 Place the CD-ROM disc in the tray with the label side facing up. Push the disc onto the hub until the disc clicks into place.

- 3 Close the tray by pushing it gently. The BUSY indicator on the CD-ROM drive flashes while your computer is reading data from the disc.

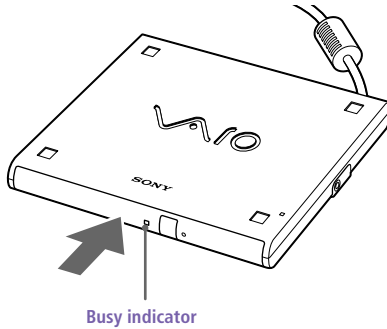

To remove the CD-ROM drive


- Remove the PC card from the computer. See “Using PC Cards” on page 26 for details.



Before removing the PC card, make sure there is no disc in the tray.

If the disc tray does not eject using the eject button, use the pin located on the bottom of the CD-ROM drive to manually eject the tray. To manually eject the tray, insert the pin into the emergency eject hole on the front of the CD-ROM drive. See the manual that came with your CD-ROM drive for more information of its use.

C

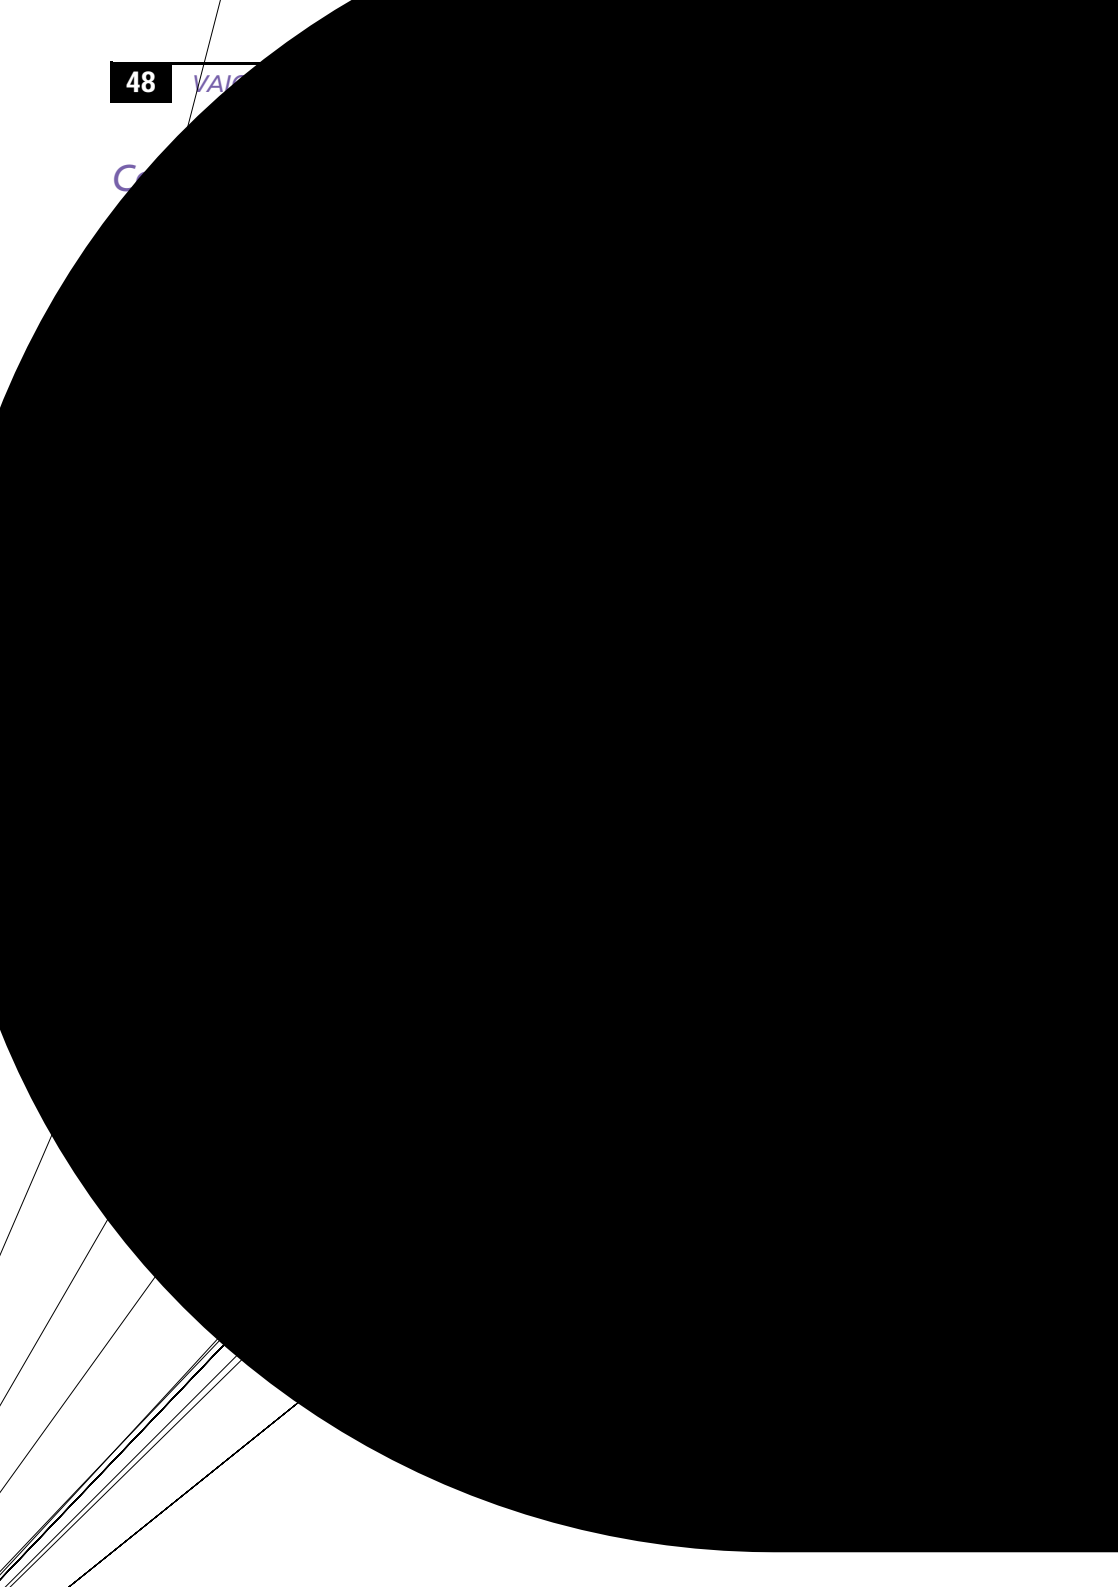

See the manual that came with your digital video camera recorder for more information on installation and use.

You can only connect one digital video camera recorder at a time. The software limits the use of more than one digital video camera recorder or i.LINK device at the same time.

The i.LINK connector does not supply power to external devices. If the external device requires power from the i.LINK connector, you cannot use the device with your computer.

The VAIO 505 SuperSlim notebook supports transfer rates up to 400 Mbps; however, the actual transfer rate varies according to the transfer rate of the external device.

The i.LINK features available may vary depending on the software applications you use. See the documentation that came with your software for more information.


See page 29 for a list of i.LINK cables compatible with your VAIO 505 SuperSlim notebook. Be sure to use 400 Mbps rate cables.

Connecting a Universal Serial Bus (USB) Device

You can connect a USB device, such as a USB mouse, to your computer.

To connect a USB device

Use the Ψ symbol to locate the USB connector on the right side of the computer. Plug one end of the USB cable into this port and the other end into the USB mouse.

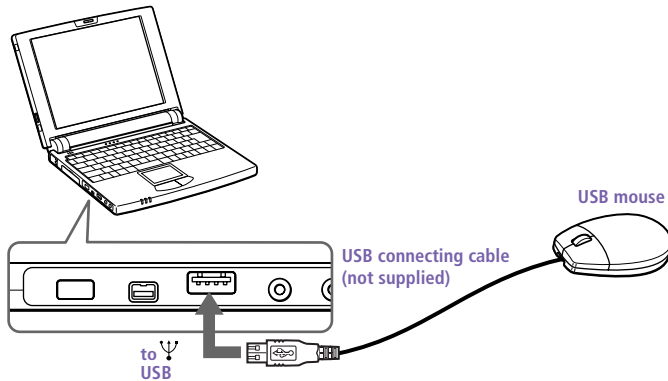


You can connect the optional Sony USB mouse (PCGA-UMS1). The driver for PCGA-UMS1 is preinstalled on your computer.

To use the supplied floppy disk drive simultaneously, connect the optional i.LINK port replicator (PCGA-UPR5) to your computer, and then plug the USB device into the USB connector on the i.LINK port replicator.

Connecting an External Display

You can connect an external display to your notebook computer. For example, you can use the computer with a computer display (monitor) or projector.

 Turn off your computer and the peripherals; unplug the AC adapter and the power cord before connecting the external display.

Connect the power cord after connecting all the other cables.


Turn on the peripherals, then turn on your computer.


Some computer displays or projectors may not be used as a monitor with the LCD on your computer display at the same time.

The optional i.LINK port replicator allows you to connect an external display eliminating the need for the display adapter. See "Connecting the i.LINK Port Replicator" on page 37.

To connect a computer display


Use the I/O port replicator connector on the left side of the computer. Plug the optional PCGA-DA5 display adapter into this connector. If necessary, plug one end of the display's power cord into the display, and the other end into an AC outlet.

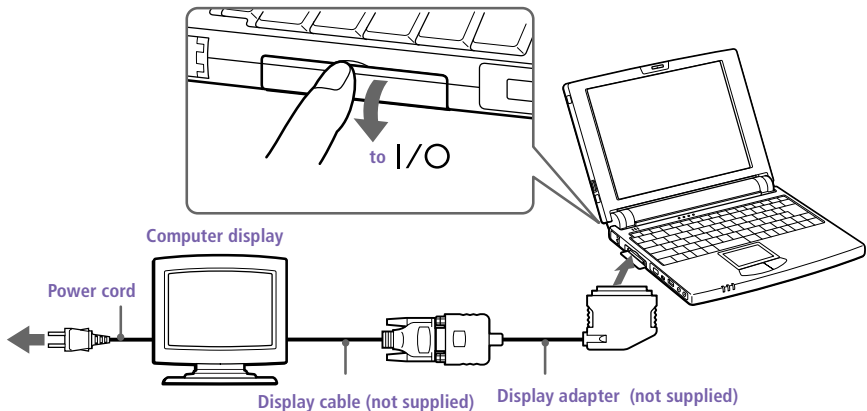

 See the manual that came with your computer display for more information on installation and use.

To connect a projector

You can use a projector, such as the Sony LCD Projector, as an external display.

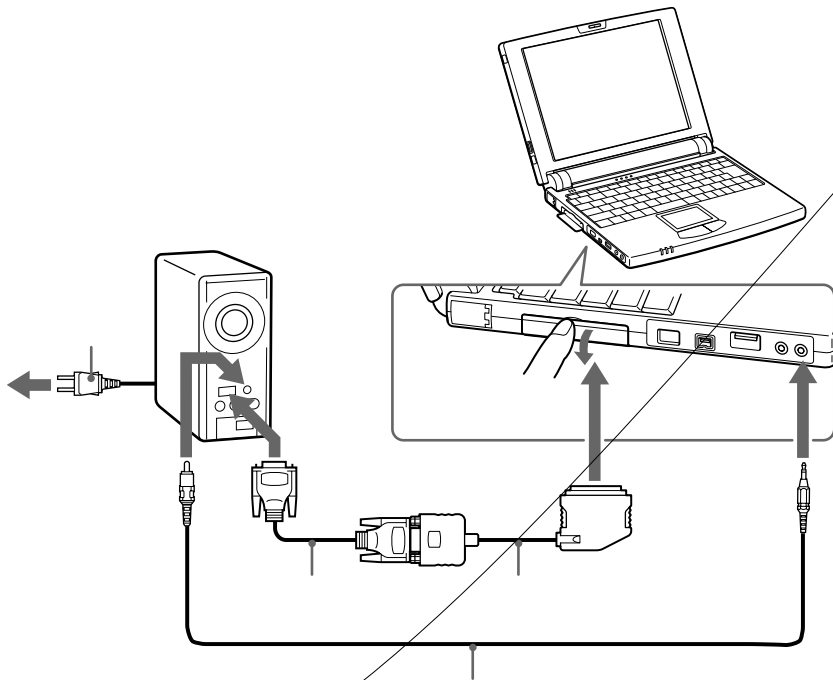

See the manual that came with your projector for more information on installation and use.

To remove the display adapter

Press both sides of the display adapter connector and unplug it from the computer.

To select a display


When you connect an external display to your computer, you can press **Fn+F7** to toggle the output between the Liquid Crystal Display (LCD), the external monitor, or both devices.




See "Selecting the Display Mode" in the online document *Customizing Your VAIO® 505 SuperSlim Notebook* for more information.

Connecting External Speakers

You can use the optional PCGA-SP51 stereo speakers or other speakers designed for computer use with your computer. See the manual that came with your speakers for more information.

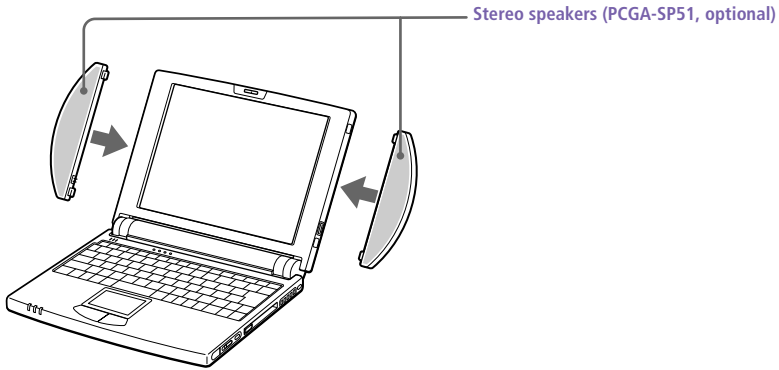

 You cannot use the optional PCGA-SP5 stereo speakers.

Turn down the internal speakers volume before you connect the external speakers.

To adjust the speaker volume, press Fn+F4. See "Combinations and Functions with the Fn Key" on page 20 for details.

Do not place diskettes on the speakers; the speaker's magnetic field may damage the data on the diskettes.

The internal speaker does not work when the external speakers are connected.

Adding Memory

In the future you may want to install memory modules to expand the functionality of your computer. You can increase memory to 128 MB by installing optional memory modules. To upgrade memory, contact your nearest Sony Authorized Service Center or check www.ita.sel.sony.com/support/pc/pcdoc.html. For the location of a service center near you, call 1-888-4SONYPC.

Getting Help

Sony provides several support options for your Sony computer. When you have questions about your computer and the preinstalled software, check these sources for answers, in the following sequence:

-
- | | | |
|-------|---|--|
| 1 | <i>VAIO® 505 SuperSlim Notebook Read Me First</i> | Contains Frequently Asked Questions, the most up-to-date information on using your computer, and software support information. |
| <hr/> | | |
| 2 | <i>VAIO® 505 SuperSlim Notebook User Guide</i> | The User Guide (this manual) contains information on how to get the most from your computer, find help, and solve common problems. It also contains product specifications. |
| <hr/> | | |
| 3 | <i>Customizing Your VAIO® 505 SuperSlim Notebook</i> | The electronic document contains additional information on customizing your notebook computer. You can access this guide from the Windows Start menu by selecting Programs/VAIO/Documentation. |
| <hr/> | | |
| 4 | Manuals and online help files that may accompany your preinstalled software | Most of the manuals for preinstalled software are located on your hard disk drive as online help files. You can access the online help files from the Help menu in the specific application. A printed manual is available for some applications. |
| <hr/> | | |
| 5 | Knowledge Database | Provides instant access to information on commonly encountered problems. Enter a description of your problem and the Knowledge Database searches for the corresponding solutions online. You can access the Sony Knowledge Database at: http://www.sony.com/pcsupport |
-

-
- 6 **Sony Fax-on-Demand** This service provides you with answers to commonly asked questions. You can use this automated service to request a list of available topics and then select the topics that you want to receive. To contact the Sony fax-on-demand service, call 1-888-4SONYPC (1-888-476-6972). (Requires a fax machine or your fax software.)
-
- 7 **Calling Sony Customer Support** You can call and speak with a Sony Customer Support Representative without using your computer by calling 1-888-4SONYPC (1-888-476-6972). Software support is available free of charge for 90 days after the original date of purchase.
-

Troubleshooting

This section describes how to solve common problems you may encounter when using your computer. Many problems have simple solutions, so try these suggestions before you call Sony Customer Support.



When you reconnect devices, be sure to turn off the computer as described in “Shutting Down Your Computer” on page 13. Turning off the computer using other methods may result in data loss.

My computer does not start

- ❑ Check that the computer is plugged into a power source and that it is turned on. Check that the power indicator on the front panel of the computer indicates that the power is on.
- ❑ Check that the battery is inserted properly and that it is charged.
- ❑ Make sure there is no diskette in the floppy disk drive.
- ❑ Confirm that the AC adapter and all cables are connected firmly, as described in “Connecting Peripheral Devices” on page 35.
- ❑ If you plugged the computer into a power strip or UPS, make sure the power strip or UPS is turned on and working.
- ❑ If you are using an external display, check that it is plugged into a power source and turned on. Check that the brightness control is adjusted correctly. See the manual that came with your display for details.
- ❑ Moisture condensation may have occurred. Do not use the computer for at least one hour and then turn on the computer.
- ❑ If the above procedures do not work, press the reset switch on the bottom of the computer using a small pin, and then restart the computer.

When I turn on my computer, the message “Operating system not found” appears and Windows does not start

- ❑ Check the floppy disk drive to see if a non-bootable diskette is in the drive.
- ❑ If a non-bootable diskette is in the drive, turn off the computer, remove the diskette, and then turn on the computer again. Confirm that Windows starts properly. If Windows still does not start, follow the procedure below to initialize the BIOS.

- ❑ If the floppy disk drive is empty or contains a bootable diskette, use the following procedure to initialize the BIOS:
 - 1 Remove the floppy disk drive, port replicator, PC card, and any other peripheral devices from the computer.
 - 2 Turn the computer off and then turn it on again.
 - 3 Turn on the computer and press the F2 key when the Sony logo appears. The BIOS setup menu screen appears.
 - 4 Press the arrow keys to select the Exit menu.
 - 5 Press the arrow keys to select Get Default Values and then press the Enter key. The message “Load default configuration now?” appears.
 - 6 Check that Yes is selected, then press the Enter key.
 - 7 Press the arrow keys to select Exit (Save Changes) and then press the Enter key. The message “Save configuration changes and exit now?” appears.
 - 8 Check that Yes is selected, then press the Enter key. The computer restarts.

When I turn on my computer, the message “No system disk or disk error. Replace and press any key when ready” appears and the computer does not start.

Remove the diskette from the floppy disk drive by pressing the Eject button and then press any key.

When I turn on my computer, the message “C:\WINDOWS” appears and Windows does not start

- ❑ Enter “win”, then press the Enter key. When the message “MS-DOS is activated. Do you want to return to Windows and restart applications?” appears, press the Enter key again. Windows starts.
- ❑ When shutting down your computer, follow the procedure in “Shutting Down Your Computer” on page 13. Windows should start automatically the next time you turn on your computer.

My LCD does not display anything

- ❑ Check that the computer is plugged into a power source and that it is turned on. Check that the power indicator on the front panel of the computer is on.
- ❑ Check that the battery pack is inserted properly and that it is charged.

- ❑ The computer may be in LCD (Video) Standby mode. Press any key to activate the display.
- ❑ The video output may be directed to an external display attached to the port replicator. Press Fn+F7 until video output appears on the LCD.

The screen image on my external display is not centered or sized properly

Use the controls on your external display to adjust the image. See the manual supplied with your display for more information.

My computer "locks up"

- ❑ Try restarting the computer. On the Windows taskbar, click the Start button, click Shut Down, and then click Restart the computer.
- ❑ If you cannot restart as described in the preceding step, you can restart the computer by pressing Ctrl+Alt+Delete.
- ❑ If the previous step does not work, slide the power switch toward the front and hold it for four seconds. This turns off the power.
- ❑ If your computer locks up while playing a CD-ROM, stop the CD-ROM, and restart the computer by pressing Ctrl+Alt+Delete.



Pressing Ctrl+Alt+Delete or turning off the computer with the power switch may result in data loss in files that are currently open.

My software program "locks up" or crashes

Contact the software publisher or designated provider for technical support.

I cannot print

Try changing the printer port mode. In Sony Notebook Setup, select the Printer/FDD tab. If the printer port mode is set to ECP, change it to bi-directional. If the printer port mode is set to bi-directional, change it to ECP. See "Displaying the Sony Notebook Setup Screen" in the online document *Customizing Your VAIO® 505 SuperSlim Notebook* for details on using Sony Notebook Setup.

I cannot play a CD-ROM

- ❑ Make sure the label of the CD-ROM is facing up.
- ❑ If the CD-ROM requires software, make sure the software is installed according to the program's instructions.
- ❑ Moisture condensation may have occurred. Disconnect the CD-ROM drive and disconnect the power to the drive for at least one hour.
- ❑ Make sure the CD-ROM drive is properly connected. See "Connecting the CD-ROM Drive" on page 45.
- ❑ Clean the CD-ROM.
- ❑ Check the speaker volume.

When I click an application icon a message appears, such as "You must insert the application CD into your CD-ROM drive," and the software does not start

- ❑ Some titles require specific files that are located on the application's CD-ROM. Insert the disc and try starting the program again.
- ❑ Make sure you place the disc in the tray with the label side facing up.

My floppy disk drive cannot write to a diskette

- ❑ The diskette is write-protected. Disable the write-protect feature or use a diskette that is not write-protected.
- ❑ Check that the diskette is properly inserted into the floppy disk drive.

My speaker has no sound

- ❑ The built-in speaker is turned off. Press Fn+F3 to turn on the speaker.
- ❑ The speaker volume is set to the minimum level. Press Fn+F4, and then press \uparrow or \rightarrow to increase the volume. If you connect the external speakers, turn up the volume.
- ❑ If your computer is powered by the battery, check that the battery is connected properly and that it is charged.
- ❑ If you are using an application that has its own volume control, check that the volume is turned up.
- ❑ Check the volume controls in Windows 98.
- ❑ If you have connected a headphone or an audio cable to the Headphone connector, disconnect the cable.
- ❑ If you connect the external speakers, assure that the speakers are properly connected.

When I press Fn+F3, I see the message “Sound Disabled”

Use the following procedure to enable sound:

- 1 Click Start, select Settings, and click Control Panel.
- 2 Click the System icon.
- 3 Click the Device Manager tab.
- 4 Click Sound, video & game controllers.
- 5 Double-click Yamaha DS-XG PCI Audio CODEC (WDM).
- 6 Uncheck the “Disable in this hardware profile” box.
- 7 Click Okay. Sound is now enabled.

My modem does not work

- Check that the phone line is plugged into the line jack. See “Connecting a Phone Line” on page 36 for details.
- Check that the phone line is working. You can check the line by plugging in an ordinary phone and listening for a dial tone.
- Check that the phone number the program is dialing is correct.
- Check that the software you are using is compatible with the notebook computer modem. (All preinstalled programs are compatible.) Call the software publisher or Sony Customer Support.

My modem connection is slow

The computer’s modem uses K56flex™ technology/V.90. Many factors influence modem connection speed, including telephone line noise or compatibility with telephone equipment (such as fax machines or other modems). If you think your modem is not connecting properly to other PC-based modems, fax machines, or your Internet Service Provider, check the following:

- Have your phone company check that your phone line is free from any line noise.
- If your problem is fax-related, check that there are no problems with the fax machine you are calling and that it is compatible with fax modems.
- If you are having a problem connecting with your Internet Service Provider, check that the ISP is not experiencing technical problems.
- If you have a second phone line available, try connecting the modem to that line.

I cannot use DV devices and messages appear on the screen

- ❑ Check that the DV device is turned on and that the cables are properly connected.
- ❑ If you are using multiple i.LINK devices, the combination of the connected devices may cause unstable operation. In this case, turn off the power to all connected devices and disconnect unused devices. Check the connection, then turn on the power again.

My computer does not shut down

It is best to shut down your computer using the Shut Down command on the Windows 98 Start menu. Using other methods, including those listed here, may result in loss of unsaved data. If the Shut Down command does not work properly, follow these steps:

- ❑ Restart the computer by pressing Ctrl+Alt+Delete. If this does not work, slide the power switch forward and hold it for four seconds.
- ❑ Unplug the computer from the AC adapter and remove the battery pack from your computer.

My PC card is not working

- ❑ Make sure the PC card is compatible with Windows 98.
- ❑ Use the Sony Notebook Setup utility to disable devices you are not currently using.

The device, which is connected to the i.LINK connector on the optional i.LINK port replicator, does not work properly.

Use the i.LINK connector on your computer.

The i.LINK device, which is connected to the computer, is not recognized, or a message appears.

Disconnect the i.LINK device once, then reconnect it.

The key top comes off

Replace the key top to its original location, and press it until it clicks. If the enter key or the space bar key comes off, see “Replacing a key top” on page 19 for details. If you take off the key top intentionally, or press it excessively when you replace it, it may cause a malfunction. Handle the keys with care.

Power Management

The operating system may become unstable if a lower power state such as system hibernation is initiated and then changed before the operating system completely enters the lower power state. To restore the computer to its normal operating stability, close all open applications, button forward and hold it there for four seconds or more to completely shut down the computer.

Using the System and Application Recovery CDs

The following sections describe how to use the System Recovery and Application Recovery utilities. You need to connect the optional PCGA-CD5 or PCGA-CD51 CD-ROM drive to use the System and Application Recovery CDs.

Using the System Recovery CD(s)

You can reinstall software titles that shipped with your computer if they are corrupted or accidentally erased. You may not need to recover the entire contents of your hard drive. If you experience a problem with your computer, reinstalling an individual device driver or software title may correct the problem. Use the Application Recovery CDs to reinstall individual applications or device drivers. See “Using the Application Recovery CD(s)” on page 66.

The System Recovery CD contains a backup copy of all the software originally installed on your hard disk drive. **It can be used only to recover the hard disk of the notebook computer you purchased.**

The System Recovery utility gives you three options:

- ❑ **Full Restore without Format** restores all the software titles that originally came with your computer without formatting the hard disk.
- ❑ **Full Restore with Format** formats the hard disk drive and then restores all the original software.
- ❑ **Operating System Only** restores the Windows 98 operating system, the notebook computer utility programs, and the device drivers that shipped with your computer.

! If you choose the Full Restore with Format or Operating System Only option, your hard disk will be formatted, which removes all the information on the hard disk drive. You will lose any software you have installed and any other files you have created since you started to use your computer. This means you will have to reinstall any applications that were not included with the computer when you purchased it. If you choose the Full Restore without Format option, you may need to reinstall applications that were not included with the computer when you purchased it. If you have any questions on using the System Recovery CD, contact Sony Customer Support.

To use the System Recovery CD(s)



The optional PCGA-CD5 or PCGA-CD51 CD-ROM drive must be connected to the computer to use the System Recovery CD.

You need to complete the Windows[®] 98 registration process when you use the System Recovery CD. Make sure you have the product ID number located on the cover of your Microsoft Windows 98 Getting Started manual. You will need this number to complete the recovery process.

- 1 Insert the Sony System Recovery CD in the CD-ROM drive.
- 2 Shut down your computer as described in “Shutting Down Your Computer” on page 13.
- 3 Wait four seconds and turn on your computer.
- 4 Click OK to signify you have read and accept the Microsoft End-User License Agreement.
- 5 When the System Recovery menu appears, follow the on-screen instructions to complete the recovery process.



Your system may include one or two System Recovery CDs. If you have two System Recovery CDs, insert the first CD to run the System Recovery program. You are prompted to insert the second CD once the information from the first CD has been installed.

The recovery process takes 30 to 60 minutes to complete.

If your computer does not start from the Recovery CD

- 1 Slide the power switch forward and hold it for more than four seconds to turn off the computer.
- 2 Turn on the computer and press the F2 key when the Sony logo appears. The BIOS setup menu screen appears.
- 3 Press the arrow keys to select the Exit menu.
- 4 Press the arrow keys to select Get Default Values and then press the Enter key. The message “Load default configuration now?” appears.
- 5 Check that Yes is selected, then press the Enter key.
- 6 Press the arrow keys to select Exit (Save Changes) and then press the Enter key. The message “Save configuration changes and exit now?” appears.
- 7 Check that Yes is selected, then press the Enter key. The computer restarts from the Recovery CD.

Using the Application Recovery CD(s)

The Application Recovery CDs allow you to reinstall individual applications and device drivers if they are corrupted or accidentally erased. Reinstalling an individual device driver or software title may correct a problem you are experiencing with your computer, and you may not need to recover the entire contents of your hard drive. If you do need to reinstall all the software titles that shipped with your computer, use the System Recovery CD. See “Using the System Recovery CD(s)” on page 64.



You must be in Windows to run the Application Recovery CDs. The application will not run from DOS. If you have any questions on using the Application Recovery CDs, contact Sony Customer Support.

Some applications on the Application Recovery CDs must be decompressed before the installation process begins. Your screen does not change while the files are decompressed. The time to decompress an application varies and may be as long as 30 minutes.

To use the Application Recovery CD(s)

- 1 Turn on your computer. If your computer is already on, close all applications.
- 2 When the Windows desktop appears, insert the first Sony Application Recovery CD in the CD-ROM drive. The Application Recovery utility loads automatically.
- 3 When the Application Recovery menu appears, follow the on-screen instructions to complete the recovery process.

Your system may include one or two Application Recovery CDs. If you have two Application Recovery CDs, insert the first CD to run the Application Recovery program. You may be prompted to insert the second CD, depending on the application you wish to restore.

Hard Drive Partition

In order to improve the performance of your computer's DVgate™ Motion software, the hard disk drive on your computer has been formatted with two partitions, C and D. DVgate Motion saves files to the D partition. This prevents large video captures from consuming the available space on your C partition. To maintain optimum performance of DVgate Motion, you should defragment your D partition regularly. See the DVgate Motion online help for more information.

About the Software on Your Computer

Your VAI0 505 SuperSlim notebook is ready to help you work, play, learn, and communicate as soon as you turn it on. This section gives you an overview of the activities you can perform with your software titles. For support information, see “For Answers to Your Software Questions” on page 74.

Adobe Acrobat® Reader

Adobe Systems Inc.

Acrobat Reader software allows you to view, navigate, and print electronic documents in Adobe Portable Document Format (PDF), an open file format that is intended to preserve the fidelity of documents created on all major computer platforms.

Adobe PhotoDeluxe® Business Edition

Adobe Systems Inc.

Create amazing photo effects with Adobe PhotoDeluxe. Without learning complex software, you can enhance, restore, and be creative with your photos. Includes built-in guided activities, stock photos, clip art and templates to assist you.

America Online®

America Online

America Online is a popular Internet online service. Stay in touch with family and friends with Easy-to-Use E-mail, manage your personal finances, get the latest news and sports scores, and chat with thousands of others who share your interests.

AT&T WorldNet® Service

AT&T

Fast, reliable Internet access from AT&T WorldNet Service. AT&T WorldNet Service provides web-based e-mail, a personalized start page from Excite, easy access to the Excite search engine, free web pages, online and live agent technical support, instant messaging, and special shopping discounts at Market Square.

CompuServe® 2000

CompuServe, Inc.

The all new CompuServe 2000 delivers a powerful tool for Internet users who want serious and timely information, in-depth research, and professional communities backed by state-of-the-art technologies, including high-speed access and powerful e-mail messaging.

DVgate™ Motion

Sony Electronics

Connect a digital video camera recorder to the i.LINK connector and capture your own video clips. You can edit the clips from your video, add others, and combine clips into new movie segments.

DVgate™ Still

Sony Electronics

Connect a digital video camera recorder to the i.LINK connector and capture your own still images. You can save your images in a variety of popular file formats.

EarthLink Sprint TotalAccess™

EarthLink Network, Inc.

An Internet Service Provider that supplies access, information, and assistance to its customers, introducing them to the Internet. Member benefits include e-mail, a Personal Start Page, a free 6 MB web site, a member newsletter, and 24-hour technical support.

eMail inChorus™

Softlink, Inc.

This communications tool turns your e-mail into multimedia e-mail. With eMail inChorus™, in minutes you can send your colleagues and friends presentations and e-mails narrated with your pre-recorded voice and illustrated with graphics and animated annotation.

McAfee VirusScan®

Network Associates, Inc.

Protect your computer from viruses. VirusScan can detect viruses from floppy disks, Internet downloads, e-mail attachments, intranets, shared files, CD-ROMs, and online services.
popular file formats.

Media Bar™*Sony Electronics*

Media Bar software is your all-in-one solution for audio/video playback. Media Bar software handles all common computer multimedia formats and controls selected Sony devices. In addition to audio/video library cataloging and playlist management, Media Bar software includes digital video quality control and effects features. Media Bar software seamlessly integrates a variety of new media formats with an easy-to-use software interface.

Microsoft® Internet Explorer for Windows® 98*Microsoft Corporation*

Internet Explorer delivers the web the way you want it. It is safe, easy to use, and you can personalize how you access the web. Outlook Express and other tools in Internet Explorer also help you have a great experience when you are on the web.

Microsoft® Money 99*Microsoft Corporation*

Microsoft Money 99 is personal finance software that lets you perform your financial tasks, everything from paying bills to planning for the future, in a smarter, faster way. With Money's online services, you can pay bills and bank from the comfort of home.

Microsoft® Outlook® 98*Microsoft Corporation*

Outlook 98 is Microsoft's premier messaging and collaboration client. It combines the leading support for Internet standards-based messaging systems with integrated calendar, contact, and task-management features.

Microsoft® Word 97*Microsoft Corporation*

The world's leading word processor allows you to create professional-looking letters, school reports, and other documents using ready-to-use templates, automatic formatting and spelling and grammar checkers.

Microsoft® Works Suite 99*Microsoft Corporation*

Microsoft Works Suite is an integrated program for creating spreadsheets, databases, calendars, and more. The Works Calendar reminds you of important dates.

MindSpring Internet Desktop*MindSpring Enterprises, Inc.*

The MindSpring Internet Desktop offers you access to different areas of the Internet from one convenient program. With a single click on the MindSpring Internet Desktop, you can easily search the Internet, send and receive e-mail, access news and weather, and more.

Netscape Communicator™*Netscape Communications*

Netscape Communicator is an all-in-one Internet tool that makes it easy to browse the web, send Internet e-mail, chat, read newsgroups and compose great web documents.

PictureGear™*Sony Electronics*

This image management software displays images from your hard drive, a Sony Digital Still Camera, or a Sony Mavica® Camera. The images appear in a convenient light-table format, so that you can easily view the contents of an entire folder.

Prodigy Internet™*Prodigy Communications Corporation*

An online service that helps you find what you need online faster and smarter. Prodigy delivers powerful online content such as sports scores, stock quotes, news, and easy access to Excite, plus quality customer service, all at a competitive price.

Quicken® Basic 99*Intuit, Inc.*

Quicken is a fast, easy way to organize your finances. Quicken works just like your checkbook, so it is easy to learn and use. Quicken manages all your finances, bank accounts, credit cards, investments, and loans. You can even pay your bills online.

Smart Capture*Sony Electronics*

Smart Capture is a fun new way to send multimedia messages via e-mail. Smart Capture manages the i.LINK connection between your computer and a Sony Digital Handycam® camcorder that supports the i.LINK interface. It allows you to capture compressed video or still images that you can save or share via e-mail. A smart solution to computer, digital audio/video and network convergence.

Smart Connect*Sony Electronics*

Smart Connect allows you to use an i.LINK cable (not supplied) to connect your VAIO computer to another VAIO computer that supports Smart Connect. You can then use one computer to copy, delete, and edit files on the other computer. You can also print from a printer attached to either computer.

Smart Label*Sony Electronics*

This tool allows you to record your voice and play it back at any time to remind you of important information, such as telephone numbers or appointments. It can also be used as a normal text memo pad. It can record a voice memo up to 60 seconds long. You can combine this with pictures and/or text to create online that you can use between your computer and

Smart Capture Sony Electronics Smart Connect Sony Electronics Smart Label Sony Electronics

Smart Write*Sony Electronics*

A word processor that allows you to create documents that incorporate pictures and sound. With Smart Write, you can record your voice right into the page and draw directly onto your documents with a computer “pencil.”

WinFax® Basic Edition*Symantec Corporation*

WinFax Basic software incorporates an easy-to-use interface that allows you to send and receive faxes easily. Upgrade to WinFax Pro to receive additional features.

About Your Recovery CDs

Application Recovery CD(s)

Sony Electronics

This program allows you to reinstall individual applications and device drivers. Use it to restore corrupted or accidentally erased files.

System Recovery CD(s)

Sony Electronics

This program allows you to restore the software titles that shipped with your computer if they become corrupted or are erased accidentally. It can be used only to restore the hard disk of the Sony computer you purchased.

For Answers to Your Software Questions

Acrobat® Reader, Adobe PhotoDeluxe® Business Edition (Adobe Systems Incorporated)

| | |
|---------|--|
| website | http://www.adobe.com/ |
| phone | 206-628-2746 (fee-based support) |
| fax | 206-628-5737 |
| e-mail | techdocs@adobe.com |
| hours | M-F, 6 AM-5 PM PT |

America Online® (America Online)

| | |
|---------|---|
| website | http://www.aol.com/ |
| phone | 800-827-3338 |
| hours | 7 days a week, 24 hours a day |

AT&T WorldNet® Service (AT&T)

| | |
|---------|---|
| website | http://www.worldnet.att.net |
| phone | 800-400-1447 |
| e-mail | worldnet@attmail.com |
| hours | 7 days a week, 24 hours a day |

CompuServe® 2000 (CompuServe, Inc.)

| | |
|---------|---|
| website | http://www.compuserve.com/ |
| phone | 800-848-8990 |

EarthLink Network TotalAccess™ (EarthLink Network, Inc.)

| | |
|---------|---|
| website | http://help.earthlink.net/techsupport/ |
| phone | 800-395-8410 |
| e-mail | support@earthlink.net |
| hours | 7 days a week, 24 hours a day |

eMail inChorus™ (Softlink, Inc.)

| | |
|---------|---|
| website | http://www.sonk.com |
| phone | 408-970-3370 |
| e-mail | support@sonk.com |

McAfee VirusScan (Network Associates, Inc.)

| | |
|---------|---|
| website | http://support.mcafee.com |
| phone | 408-988-3832 |
| e-mail | cybr@nai.com |
| hours | M-F 9AM-5PM Central Time |

Mindspring Internet Desktop (MindSpring)

| | |
|---------|---|
| website | http://help.mindspring.com/support |
| phone | 800-719-4660 |

Netscape Communicator™ (Netscape Communications Corporation)

| | |
|---------|---|
| website | http://www.netscape.com/ |
| phone | 888-4SONYPC (888-476-6972)* |
| hours | 7 days a week, 24 hours a day |

* Support from 1-888-4SONY PC is free of charge for 90 days after the original date of purchase.

Prodigy Internet™ (Prodigy Communications Corporation)

| | |
|---------|---|
| website | http://www.prodigy.com/ |
| phone | 800-213-0992 |
| hours | 7 AM - 3 AM ET |

Quicken® Basic (Intuit Inc.)

| | |
|---------|---|
| website | http://www.intuit.com/support |
| phone | 900-555-4688 |
| hours | 7 days a week, 24 hours a day |

Windows 98 Second Edition Operating System, Word, Works, Money, Outlook, Internet Explorer (Microsoft Corporation)

| | |
|---------|---|
| website | http://www.microsoft.com/support/ |
| phone | 888-4SONYPC (888-476-6972)* |
| hours | 7 days a week, 24 hours a day |

* Support from 1-888-4SONY PC is free of charge for 90 days after the original date of purchase.

WinFax® Basic Edition (Symantec Corporation)

| | |
|---------|---|
| website | http://www.symantec.com/techsupp/ |
| phone | 800-798-0850 |
| fax | 800-554-4403 in North America 541-984-2490 outside North America |

Sony Service Center

For the Sony Service Center nearest you, call 1-888-4SONYPC (1-888-476-6972).

Specifications

| <i>Model</i> | <i>PCG-N505VX</i> | <i>PCG-N505VE</i> |
|--|---|--------------------------------------|
| <i>Processor</i> | 333 MHz* Pentium II | 333 MHz* Celeron |
| <i>Hard Disk Drive</i> | 6.4 GB† | |
| <i>Standard RAM</i> | 64 MB SDRAM, expandable to 128 MB | 64 MB SDRAM, expandable to 128 MB |
| <i>LCD Screen</i> | 10.4" Poly-Si TFT | |
| <i>L2 Cache Memory</i> | 256 KB (on CPU) | 128 KB (on CPU) |
| <i>MPEG</i> | MPEG1 Digital Video supports full-screen playback | |
| <i>Graphics</i> | NM2200 (NMG5) | |
| <i>Sound Capabilities</i> | Yamaha YMF744B | |
| <i>Modem</i> | K56flex™ and V.90 compatible modem** | |
| <i>Infrared</i> | Supports 4 mbps, 1.1 mbps, and 115 kbps IrDA Standard | |
| <i>Expansion Capabilities</i> | One PCMCIA type II Card Card bus support | |
| <i>Built-in Capabilities</i> | Microphone Mono speaker Touchpad | |
| <i>Telecommunication Capabilities</i> | Data/fax send/receive | |
| <i>Connection Capabilities on N505 SuperSlim Pro</i> | Phone line (RJ-11) i.LINK port replicator i.LINK (IEEE-1394) (S400) 1 USB port Microphone In DC In Headphone | |
| <i>Connection Capabilities on i.LINK Port Replicator</i> | i.LINK (IEEE-1394)(S400) Printer Serial USB VGA monitor | |
| <i>Supplied Accessories</i> | USB floppy disk drive Rechargeable battery AC adapter and power cord i.LINK port replicator (PCG-N505VX only) Phone cable | |
| <i>Service</i> | 90-day limited express service ^{††} Extendible to one year from original date of purchase upon registration | |
| <i>Limited Warranty</i> | 90-day parts/labor standard ^{††} Extendible to one year from original date of purchase upon registration | |
| <i>Power Requirements</i> | 40 watts maximum (19.5V DC/AC100-240V) | |
| <i>Power Management</i> | Energy Star Compliant Advanced Configuration and Power Interface (ACPI) | |

| <i>Model</i> | <i>PCG-N505VX</i> | <i>PCG-N505VE</i> |
|------------------------------|---|-------------------|
| <i>Battery</i> | Lithium-ion | |
| <i>Dimensions</i> | 0.78" (h) x 10.2" (w) x 8.2" (d) (19.8mm x 259mm x 208mm) ^{††} | |
| <i>Weight</i> | 3.1 lbs (1.36 kg) | 2.7 lbs (1.20 kg) |
| <i>Operating Temperature</i> | 41° F to 95° F (+5° C to 35° C) | |
| <i>Operating Humidity</i> | 20% to 80% (not condensed), provided that humidity is less than 65% at 95° F (35° C), hygrometer reading of less than 84° F (29° C) | |
| <i>Storage Temperature</i> | -4° F to 140° F (-20° C to 60° C), temperature gradient less than 50° F (10° C) | |
| <i>Storage Humidity</i> | 10% to 90% (not condensed) provided that humidity is less than 20% at 140° F (60° C), hygrometer reading of less than 95° F (35° C) | |

*MHz denotes microprocessor internal clock speed; other factors may affect application performance.

[†]GB means one billion bytes when referring to hard drive capacity. Accessible capacity may vary.

**Maximum speed for faxing is 14.4 kbps. Your modem is capable of downloading at 56 kbps using K56flex Technology or V.90. Your online service or Internet Service Provider, however, may not support this technology or operate at this speed.

^{††}Certain restrictions apply.

^{†††}Height measured at the thinnest point. Height at the thickest point is 0.87" (22.2mm).

Specifications are subject to change without notice.

Index

A

- AC adapter **8**
- AC power **8**
- adding
 - hardware **35**
 - peripherals **35**
 - printers **39**
- adjusting
 - brightness **21**
- Alt key **17**
- Application Recovery CDs **66**
- Applications key **17**
- attaching port replicator **38**

B

- battery pack **9**
 - charging **10**
 - connector **6**
 - indicator light status **10**
 - indicator lights **5, 10, 20**
 - inserting **9**
 - loading **9**
 - power status **10**
 - rechargeable **8**
 - removing **11**
- battery power **8**
- brightness
 - adjusting **12, 21**
- built-in speaker **5, 21**
 - volume **21**
- buttons
 - Finish **14**
 - left **5**
 - right **5**
 - Start (Windows 98) **13**

C

- camera **44**
- cameras
 - digital video recorder **48**
 - Sony Digital Still **44**
- canceling commands **17**
- Caps Lock **5**
 - indicator light **20**
- CD-ROM discs
 - inserting **46**
- CD-ROM drive
 - closing lid **47**
 - connecting **26, 45**
 - troubleshooting **60**
 - using **45**
- charge status indicator light **10**
- charging battery pack **10**
- choosing
 - power source **8**
- coin-operated telephones **36**
- computer
 - lithium ion battery **v**
 - setting up **5**
 - starting **12**
 - troubleshooting **57–62**
 - unpacking **2**
- connecting
 - CD-ROM drive **26, 45**
 - coin-operated telephones **36**
 - digital still camera **44**
 - digital video camera recorder **48**
 - floppy disk drive **24**
 - monitor **41**
 - multiple phone lines **36**
 - network **26**

- parallel devices **39**
- party phone lines **36**
- PBX **36**
- phone line **36**
- port replicator **37, 38**
- power source **8**
- printer **39**
- projector **42**
- serial device **44**
- connectors
 - battery **6**
 - DC In **6, 8**
 - infrared **7, 30**
 - monitor **37**
 - parallel **39**
 - parallel port **37**
 - port replicator **6**
 - printer **37, 39**
 - Serial port **37**
 - USB **24**
- correction keys **16, 17**
- Ctrl key **17**
- cursor-movement keys **16**
- customer assistance
 - support options **55**
- D**
- DC In **6, 8**
- digital still camera **30**
 - connecting **44**
- digital video camera recorder **48**
- diskettes
 - ejecting **25**
 - inserting into drive **24**
 - troubleshooting **60**
- display
 - connector **37**
 - options **42**
 - selecting **42**
- disposal of lithium ion battery **v**
- drives **45**
 - CD-ROM **45**
 - floppy disk **24**
- DV In/Out **6, 48**
- E**
- Eject button **25**
- ejecting
 - diskettes **25**
- electronic
 - documentation **55**
- Energy Star **ii**
- Escape key **17**
- Express Service technical support **15**
- external devices
 - display **41, 51**
 - See also monitor
- F**
- faxes
 - laws governing **v**
- Finish button **14**
- floppy disk drive
 - connecting **24**
 - disconnecting **25**
 - troubleshooting **60**
- Fn key **17**
 - combination commands **21**
- function keys **16, 17**
- H**
- hard drive
 - indicator light **5, 20**
- headphone
 - connector **42**
- help **55**
- I**
- i.LINK **6, 37, 48**
- IEEE-1394 **6, 37, 48**
- indicator lights
 - battery **5, 10, 20**
 - Caps Lock **5, 20**
 - charge status **10**
 - hard drive **5, 20**
 - Information **5, 20**
 - Num Lock **5, 20**
 - power **5**
 - Scroll Lock **5, 20**
- infrared communication devices **30**

other computers **30**

infrared port **7, 30**

infrared transmission

active distance **31**

troubleshooting **31**

input devices **iv**

Insert key **16, 17**

inserting

battery pack **9**

diskettes into drive **24**

installing

hardware **35**

peripherals **35**

interference **iv**

internal speaker

See speakers

K

Keyboard **5**

keyboard **5, 16–??, 21**

L

LCD

lock lever **12**

selecting to display output **42**

troubleshooting **58, 59**

left button **5**

lever

LCD **12**

Limited Warranty **15**

Liquid Crystal Display screen

See LCD

lithium ion battery

disposal **v**

safety precautions **v**

loading

battery pack **9**

M

mega-bass switch **21**

memory

adding **54**

Memory Stick card slot **6**

microphone **5**

modem

laws governing **v**

troubleshooting **61**

monitor **37**

connecting **41**

connector **42**

selecting **42**

switching among **21**

mouse help **22**

multiple phone lines **36**

N

navigation keys **16**

Num Lock **5**

indicator light **20**

numeric keypad area **16**

O

online

help **55**

support options **55**

operator keys **17**

output devices **iv**

adding **39**

P

parallel port **37, 39**

party phone lines **36**

PBX **36**

PC card

inserting **26**

release button **26**

removing **28**

slot **6, 26**

slot protector **27**

troubleshooting **62**

Type II **26**

phone

connecting line **36**

jack **36**

laws governing **v**

port replicator **6**

connecting **37, 38**

power

indicator light **5**

switch **12**

Power Management **63**

power saving modes **21, 32**

- System Hibernation **21, 33**
- System Idle **21, 32**
- System Suspend **21, 33**
- Video Standby **21**
- power sources **8**
 - connecting **8**
- Print Screen key **17**
- printer
 - connecting **39**
 - connector **37, 39**
 - port **39**
- projector **42**
- R**
- radio interference **iv**
- rechargeable battery pack **8, 9**
- recharging battery pack **10**
- Recovery CDs **66**
- registering
 - your computer **15**
- removing
 - battery pack **11**
 - diskettes **25**
 - floppy disk drive **25**
- restoring data **66**
- right button **5**
- S**
- screen
 - See LCD
- Scroll Lock **5**
 - indicator light **20**
- selecting
 - display **42**
 - LCD **42**
 - monitor **42**
 - power source **8**
- Serial connector **37, 44**
- serial devices
 - connecting **44**
 - digital still **44**
- setting up
 - Windows **98 14**
- Shift key **17**
- Shut Down Windows dialog box **13**
- Smart Connect **29**
- Smart Pad **23**
- Sony Fax-on-Demand service **56**
- Sony Online Support
 - options **55**
- speakers
 - built-in **5**
- Start button **13**
- starting
 - computer **12**
- startup problems **13**
- switching
 - display **21**
 - monitor **21**
- System Hibernation mode **21, 33**
- System Idle mode **21, 32**
- System Recovery CD(s) **64**
- System Suspend mode **21, 33**
- T**
- technical support
 - support options **55**
- touchpad **5, 22**
- troubleshooting **57–62**
 - startup **13, 57**
- turning on
 - computer **12**
- TV
 - interference **iv**
- U**
- unpacking the computer **2**
- USB connector **24, 50**
- USB device **50**
- V**
- video camera recorder **48**
- Video Standby mode **21**
- W**
- warranty **15**
- Windows **98**
 - Certificate of Authenticity **14**
 - Control Panel **31**
 - Explorer **18**
 - Find window **18**
 - Finish button **14**

Help **18**
key **17**
key combinations **18**
License Agreement **14**
setup **14**
Setup Wizard screen **14**
Start button **13**
taskbar **13, 59**