

Quick Start Guide



 
Initial Setup

1 Check supplied items

- AC adapter*¹
- Power cord
- VGA adapter*²
- Extended battery pack*²




- Wireless router*²



*1 The USB port on the AC adapter is intended exclusively for battery charging. Do not use it for any other purpose.
*2 Not supplied with all models. Availability depends on your computer's specifications.

! Features and specifications may vary and are subject to change without notice.


2 Connect AC adapter

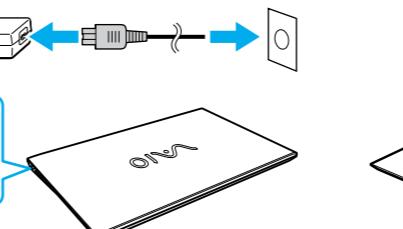

Plug the power cord and the AC adapter into an AC outlet and the computer.

! Be sure to connect the AC adapter to your computer when using it for the first few times to ensure the battery becomes fully charged.

3 Turn on your VAIO® computer

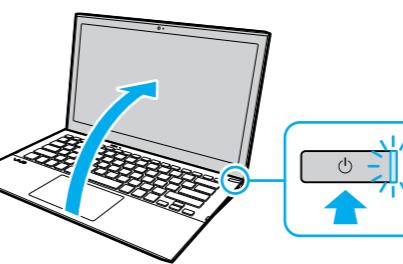

Press and hold down the power button until the power indicator light turns on.

! The startup process will take a few minutes. No action is required until the setup window appears. On the touch screen equipped models, the LCD screen lid opens smoothly and easily until about 105 degrees. Beyond this angle, the hinge becomes stiff.

4 Connect to the Internet

Connect to the Internet to automatically activate Windows.

1 Open the charms by pointing to the top right corner of the screen, then move the pointer down and click the **Settings** charm.

2 Click (the network icon).

3 Select the desired network (SSID) and click **Connect**.

! For details on the security key and other settings, refer to the manual of the network device or the information from your Internet service provider.

! On the wireless router supplied models, you can connect your computer to the Internet with a LAN cable. Refer to the manual of the wireless router for detailed information.

5 Complete important tasks

■ Perform Windows Update and VAIO Update

- Click the **Search** charm and **Settings**, then search **Windows Update**.
- Click the **Search** charm and **Apps**, then search **VAIO Update**.

■ Create your Recovery Media

Press the **ASSIST** button to start **VAIO Care**, then click **Advanced Tools**.

! Recovery Media are not supplied with your computer. Refer to the supplied **Recovery, Backup and Troubleshooting Guide** before creating the Recovery Media.

■ Register your computer

Press the **ASSIST** button to start **VAIO Care**, then click **About your VAIO**.

6 Locate User Guide

An introductory version of the **User Guide** is available on your computer. To update to the complete version, connect to the Internet and follow the steps below.

1 Open the charms by pointing to the top right corner of the screen, then move the pointer down and click the **Search** charm.

2 Click **Apps**, enter "VAIO Manual" in the search box, and then click the icon.

The **User Guide** appears.

3 Close the **User Guide**, and after a while, open again by following the same steps.

The complete version will be available.

! Be sure to use **VAIO Update** before updating.

7 Sign in with Microsoft account

To download and use apps from Windows Store, you need to use a Microsoft account instead of a local account. You can create a Microsoft account by following the steps below.

1

Open the charms by pointing to the top right corner of the screen, then move the pointer down and click the **Search** charm.

2

Click **Apps**, enter "VAIO Manual" in the search box, and then click the icon.

The **User Guide** appears.

3

Follow the on-screen instructions.

! When app updates are available, a number appears on the **Store** tile on the **Start** screen. Click the tile to start **Store** and update Windows Store apps.

Parts and Controls

A

Internal dual microphones

Built-in camera*¹ / indicator

LCD screen / touch screen*²

B

□ DC IN port

■ Charge indicator

Air exhaust vent

C (Bottom)

Battery off button*³

Extended battery pack connector cover

Extended battery pack attachment holes

E

Touch pad / NFC embedded touchpad*²
Press the button left of the touchpad to click.

SD memory card slot (SVP112)

*1 The shape of the built-in camera depends on the model.

*2 On selected models only.

*3 The battery off button is under the extended battery pack connector cover.

Care and Handling Tips

Computer Handling

Do not exert pressure on your computer, especially the LCD/touch screen or the AC adapter cable.

HDD Care

If your computer is equipped with a built-in hard disk drive, avoid moving the computer when it is turned on, is in the process of powering on, or is shutting down.

Ventilation

Place your computer on hard surfaces such as a desk or table. Proper air circulation around vents is important to prevent overheating.

Liquid Damage

Protect your computer from contact with liquids.

Support websites

- <http://esupport.sony.com/U/VAIO/Japan>
- <http://www.sony.ca/support/Canada/English>
- <http://fr.sony.ca/support/Catalogue/Francais>
- <http://esupport.sony.com/LA/VAIO/Canada>
- <http://esupport.sony.com/B/VAIO/Brazil>



4 - 4 7 2 - 8 7 7 - 1 1

