

Acer

Aspire 5110/5100/3100
TravelMate 5510/5210
Extensa 5410/ 5010
Service Guide

Revision History

Please refer to the table below for the updates of Aspire 5110/5100/3100 and TravelMate 5510/5210 and Extensa 5410/5010 service guide.

Date	Chapter	Updates
April 26, 2007		New model name added

Conventions

The following conventions are used in this manual:

SCREEN MESSAGES	Denotes actual messages that appear on screen.
NOTE	Gives bits and pieces of additional information related to the current topic.
WARNING	Alerts you to any damage that might result from doing or not doing specific actions.
CAUTION	Gives precautionary measures to avoid possible hardware or software problems.
IMPORTANT	Reminds you to do specific actions relevant to the accomplishment of procedures.

Preface

Before using this information and the product it supports, please read the following general information.

1. This Service Guide provides you with all technical information relating to the BASIC CONFIGURATION decided for Acer's "global" product offering. To better fit local market requirements and enhance product competitiveness, your regional office MAY have decided to extend the functionality of a machine (e.g. add-on card, modem, or extra memory capability). These LOCALIZED FEATURES will NOT be covered in this generic service guide. In such cases, please contact your regional offices or the responsible personnel/channel to provide you with further technical details.
2. Please note WHEN ORDERING FRU PARTS, you should check the most up-to-date information available on your regional web or channel. For whatever reason, if a part number change is made, it will not be noted in the printed Service Guide. For ACER-AUTHORIZED SERVICE PROVIDERS, your Acer office may have a DIFFERENT part number code to those given in the FRU list of this printed Service Guide. You MUST use the list provided by your regional Acer office to order FRU parts for repair and service of customer machines.

Table of Contents

Chapter 1 System Specification 1

Features	1
Platform	1
System Memory	1
Display	1
Graphics	1
TV-Tuner	1
Audio	2
Storage Subsystem	2
Communication	2
Special Keys and Controls	2
I/O Interface	3
Power Subsystem	3
Dimensions and Weight	3
Environment	4
Block Diagram	5
Outlook Tour	6
Front View	6
Closed Front View	7
Left View	8
Right View	8
Rear View	9
Base View	10
Using the Keyboard	11
Lock keys and Embedded Numeric Keypad	11
Windows keys	12
Hotkeys	12
Special keys	13
Indicators	14
Easy-launch Buttons	15
Touchpad	16
Touchpad Basics	16
Acer Empowering Technology	18
Empowering Technology Password	18
Acer eDataSecurity Management (for selected models)	18
Acer eLock Management	20
Acer ePerformance Management	21
Acer eRecovery Management	22
Acer eSettings Management	23
Acer ePower Management	24
Acer ePresentation Management	26
Using the System Utilities	27
Acer GridVista (dual-display compatible)	27
Launch Manager	28

Norton AntiVirus	29
How do I check for viruses?	29
Hardware Specification and Configuration	30
BIOS Setup Utility	41
Invoking BIOS Setup	41

Chapter 2 System Utilities 41

Information	42
Main	43
Advanced	45
Security	46
Boot	48
Exit	49
DOS Flash SOP	50

Chapter 3 Machine Disassembly and Replacement 53

General Information	54
Before You Begin	54
Disassembly Procedure Flowchart	55
Disassembly Procedure	57
Removing the Battery Pack	57
Removing the HDD Module	57
Removing the RAM Module/Mini PCI Card/Thermal Module/CPU	58
Removing the ODD Module	60
Removing the LCD Module from the Main Unit	61
Removing the Keyboard	62
Disassembling the Main Unit	63
Disassembling the LCD Module	68

Chapter 4 Troubleshooting 71

System Check Procedures	72
External Diskette Drive Check	72
External CD-ROM Drive Check	72
Keyboard or Auxiliary Input Device Check	72
Memory Check	73
Power System Check	73
Check the Power Adaptor	73
Check the Battery Pack	74
Touchpad Check	74
Power-On Self-Test (POST) Error Message	76
Index of Error Messages	76
POST Code	79
Index of Symptom-to-FRU Error Message	80

Intermittent Problems	84
Undetermined Problems	85

Chapter 5 Jumper and Connector Location 86

Main Board	86
Top Side	86
Bottom Side	88
Switch Board	90
Top Side	90
Bottom Side	91

Chapter 6 FRU (Field Replacement Unit) List 92

Parts	93
Exploded Diagram	102