

HIBERNATION/STANDBY <i>Hibernation</i> is a state of no power consumption. When your Notebook enters the Hibernation mode, the memory contents are saved to the hard disk and your Notebook is powered off. <i>Standby</i> puts your Notebook in low power mode. It is still on, but the display appears blank.	POWER BUTTON FUNCTIONALITY When your Notebook is on, pressing the Power button places your Notebook in Hibernation mode. <ul style="list-style-type: none"> Press and release the Power button once to enter Hibernation mode. Press and hold down the Power button (about four seconds) to shut down your Notebook. 	STANDBY (SLEEP)/PANEL TOGGLE ON/OFF To put your Notebook on Standby: <ul style="list-style-type: none"> Press the Fn+F4 keys <i>or</i> Click the Start button on the Windows taskbar, then Shut Down, then Standby. To wake your Notebook press any key. One of the Power Saving measures include turning the LCD off when not in use, with the notebook still running. To turn off the panel, press the Fn+F6 keys. Repeat to turn on the panel. 	POWER-ON PASSWORD Sets a password to secure the information stored on the hard disk. <ul style="list-style-type: none"> Turn on your Notebook. After the Compaq logo is displayed, a cursor appears in the upper right corner of the screen for a few seconds. While the cursor is visible, press the F10 key. Select the Security option. Move to Set Supervisor Password, press Enter and follow the on-screen instructions. 	TO SHUT DOWN YOUR NOTEBOOK <ul style="list-style-type: none"> Close all programs. On the Windows taskbar, click Start, then click Shut Down. Select the Shut Down option. Click the OK button. After a few seconds, your Notebook turns off. TO TURN ON YOUR NOTEBOOK <ul style="list-style-type: none"> Press the Power button. 	BATTERY To determine the amount of remaining battery power, follow these steps: <ul style="list-style-type: none"> Double-click the Battery Charge or the AC Power icon located on the Windows taskbar. Check the battery lights or status panel gauge, depending on your Notebook type. 	FIXING A LOW-BATTERY CONDITION A battery having less than 10 percent of its power remaining is in a low battery condition. When your Notebook loses all battery power, it enters Hibernation mode. You must allow your Notebook to finish saving and shut off automatically before trying to correct the low battery condition.	SCROLL BUTTON The Scroll button is the equivalent of the Up and Down buttons of the Scroll bar on the side of your display screen. To view other areas of a document or browser window, press the Scroll bar in the desired direction.	INTERNET ZONE BUTTONS The Internet Zone buttons, located above your Notebook's keyboard, automatically connect you to the Internet. These buttons allow you one-touch access to your most frequently used Internet activities. <ul style="list-style-type: none"> My Presario Instant connection to Compaq for getting the most out of your computer and the Internet. 	MORE INTERNET ZONE BUTTONS <ul style="list-style-type: none"> Instant Internet Access Connects you to a personalized Web page filled with local weather, news, sports and more. Instant E-mail One touch access for sending and reading e-mail. Retail Central Instant connection to your computer store and other consumer companies. Digital Audio Launches Windows Media Player to play MP3 music.
---	--	--	--	---	--	---	--	--	--

TOUCHPAD
Just as the mouse, the TouchPad lets you draw lines or point to items on the Windows desktop. Try dragging the pointer across the screen by gently dragging your finger across the TouchPad.

Rear Components



- External Monitor (VGA) Port
- Security Slot

Left Side Components


- USB Port
- CD/DVD/CD-RW Drive Port
- PC Card Slot (Type II)
- PC Card Eject Button
- Ethernet Port
- Modem Port
- 1394 Port
- USB Port

Right Side Components


- IR Port
- AC Adapter Connector

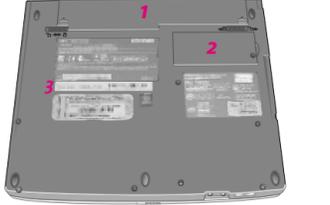Underside Components


- Battery
- Memory Compartment
- Model and Serial Number

QUICKRESTORE SUPPORT
Compaq enables you to restore your system at any time with the QuickRestore method. QuickRestore provides various options:

- Selective Restore** allows you to select specific Compaq drivers or applications you want to reinstall without reformatting your hard disk.
- User Backup** allows you to back up all information and files on the C:\ drive partition and store them in a separate hard disk partition.*
- User Restore** restores the C:\ drive partition from your last User Backup.*
- Factory Restore** restores your Notebook to its original factory-installed software state. **NOTE:** All data files and installed applications will be overwritten. Back up your data files first.*
- Make Emergency Diskette** creates a diskette that contains specific information about your Notebook's configuration.*

*The Recovery CD is required.

PROGRAMING INTERNET BUTTONS
Reprogram the Internet Zone buttons to reflect your personal preferences.

- At the Windows taskbar, click **Start**, select **Settings**, then **Control Panel**.
- Click on the **Easy Access Buttons** icon.
- Follow the on-screen instructions.

RESETTING YOUR NOTEBOOK
If the system becomes unstable, you can reset your Notebook by pressing and holding the Power key down for **4 seconds**.

External CD, DVD or CD-RW Drive


- CD or DVD Media Eject Button
- CD or DVD Manual Eject Hole

*A DVD or CD-RW are available on select models.
External Diskette Drive


- Eject Button

KNOW YOUR NOTEBOOK.

USING THE DISKETTE DRIVE
Connecting the Diskette Drive:

- To use the diskette drive, connect the cable of the diskette drive to any one of the USB port on the left side of your Notebook.

Inserting and Ejecting a Diskette:

- To insert a diskette into the diskette drive, hold the diskette with the label facing up and the arrow on the diskette pointing towards the drive, and gently push the diskette into the drive. To remove a diskette, press the Eject button on the diskette drive.

ADJUSTING BRIGHTNESS/CONTRAST
If your display is too faint/bright, the brightness controls may be set improperly. You can adjust the brightness by pressing **Fn + F7** to decrease it or **Fn + F8** to increase it.

CHANGING THE DISPLAY RESOLUTION
On the taskbar, click **Start**, **Settings**, then **Control Panel**.

- Double-click **Display**, the dialog box opens. Click **Settings**.
- Under Screen area, click the **Resolution Slider**, and drag it to the desired resolution.
- Click **OK** to accept settings.

USING SCANDISK
Examines your hard drive for surface errors and file/folder problems.

- At the Windows taskbar, click **Start**, **Programs** then **Accessories**.
- Click **System Tools**, then **ScanDisk**.
- Select the drive(s) to check and the type of test you want to run.
- Click **Start** to begin. Click **Close** when finished.

CHECKING THE HARD DISK SPACE
You can view a chart of the available hard drive space.

- At the desktop level, click **My Computer**.
- Right-click on the hard disk icon of your choice.
- In the drop-down menu, click **Properties**.
- View the hard disk space information.

INSTALLING SOFTWARE FROM DISK/CD
To initiate the installation process, insert the disk/CD into the respective drive. Click **Next**.

- Follow the on-screen installation instructions.

if a diskette or CD won't install:

- Close all programs, click **Start**, **Settings**, and **Control Panel** from the taskbar.
- Double-click the **Add/Remove Programs** icon.
- The properties window is displayed. Click **Install**.

CONNECTING THE CD/DVD DRIVE
To connect the CD or DVD drive to your Notebook, complete the following steps:

- Turn off your Notebook.
- Connect the cable of the CD or DVD drive to the CD or DVD drive port on the left side of your Notebook.

INSERTING/REMOVING A DISC
To load a disc into the disc drive:

- Press the **Eject** button on the drive.
- Remove a disc from its protective case, holding the disc by its center hole and outer edge to avoid touching the surface.

To load a disc into the disc drive:

- Press the **Eject** button on the drive.
- Remove a disc from the tray, gently pushing down on the center spindle while pulling up on the outer edges.
- Push the tray back into the drive until it locks into place.

USING THE DVD PLAYER
Your Notebook's DVD drive lets you watch all of your favorite movies anytime, anywhere. The DVD Player is simple and fun to use. Insert a DVD into the DVD drive. After a few seconds, the DVD Player* Control Panel opens and playback begins.
*Only available on models that include a DVD drive.
PLAYING AUDIO CDs

- Insert the CD into the drive (CD play should start automatically).

If CD play does not start:

- On the Windows taskbar, click **Start**, **Programs**, **Accessories**, **Entertainment**, and **CD Player**.
- Once the CD Player opens, click the **Play** button.
- To stop playing the CD, click the **Stop** button.
- To eject the CD, click **Eject**.

HOW TO MUTE AUDIO

- Press **Fn+F5** keys to mute the audio.
- Repeat to unmute.

Welcome!

Congratulations!
As the owner of a new Presario Notebook computer, you have joined the world-wide community of mobile computer users. This card offers information to guide you through a successful Notebook setup.

STEP 1: What's in the Box?

Before you start, check that your box contains the following items:

1. 800 Series Internet Notebook
2. Adapter
3. Battery
4. Power Cord*
5. Modem Cord*
6. Getting Started and Documentation Suite CD
7. Documentation Portfolio (not shown)
8. Diskette Drive (not shown)
9. CD/DVD/CD-RW Drive (not shown)



*Country-specific






STEP 2: Features at a Glance

1. Display Release Latch
2. Display
3. Power Button
4. Keyboard
5. TouchPad
6. Speakers
7. Left TouchPad Button
8. Scroll Button
9. Right TouchPad Button



STEP 3: Setup

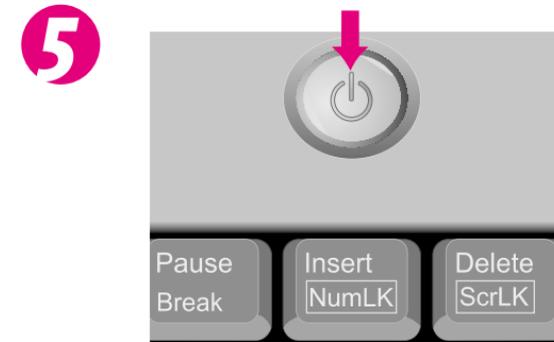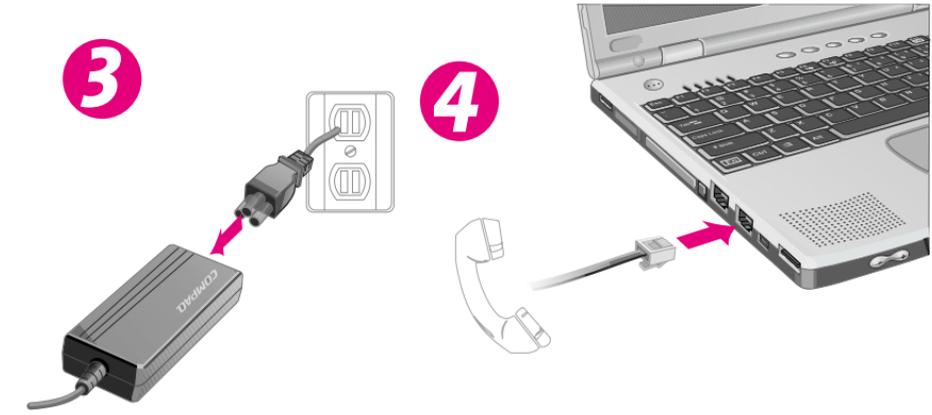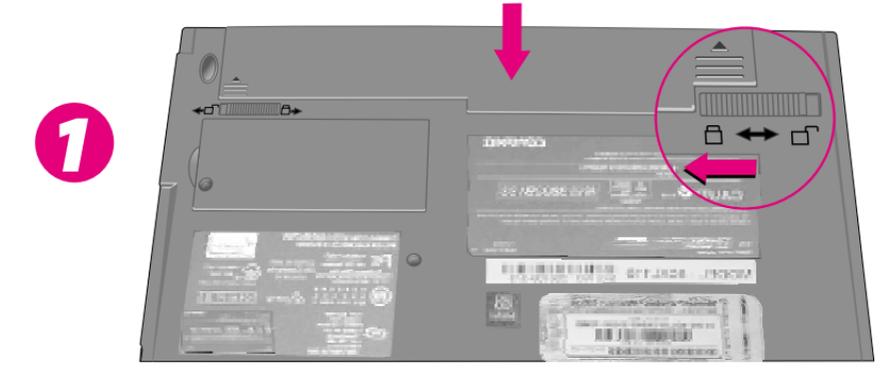



WARNING: Misuse of your personal computer or failure to establish a safe and comfortable workstation may result in discomfort or serious injury. Refer to your *Safety and Comfort User's Guide* for more information on choosing a workspace and creating a safe and comfortable work environment. To reduce the risk of electrical shock, connect your computer only to a grounded outlet.



CAUTION: When inserting a disc into the CD/DVD drive, be sure to press the disc over the center guide on the CD/DVD tray until the disc snaps into place. You can damage the disc or your computer if the disc is not installed properly. Refer to your *Using Your CD/DVD Drive User's Guide* for further information.

Safety & Comfort Guide

This guide describes proper workstation setup, posture, and health and work habits of computer users. In addition, it contains product safety information applicable to all Compaq products.

Warranty Information


Located in your Documentation Portfolio, your warranty details the Compaq commitment to service during the warranty period. Keep the warranty certificate in a safe place for future reference.

Adding Memory/Upgrading Your Notebook

The Compaq Presario 800 Series Mobile Internet PC features one memory expansion slot, located on the bottom of the unit and accessible through the memory expansion door.

To install a memory expansion board: All memory expansion boards are asymmetrically keyed (notched) to ensure correct positioning and can be used in either memory expansion slot.

- With the computer turned off, locate and remove (unscrew) the memory expansion hatch on the bottom of your Notebook.
- Insert the memory expansion board into an empty memory expansion slot at a 45-degree angle.
- Push the memory expansion board down until the board is seated in the plastic retention clips. Close the memory expansion hatch.
- Run Computer Setup. The memory is checked and displayed on start-up.

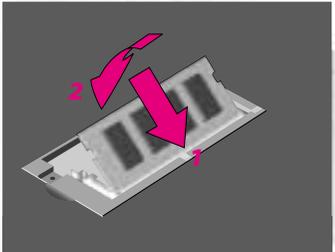

Troubleshooting

If you encounter minor problems with your Notebook, display, or software, refer to the following list of general suggestions before taking further action.

- Ensure that your Notebook is plugged into the AC adapter and that the adapter is plugged into a working electrical outlet.
- Ensure that your Notebook is turned on and the Power light or icon is lit.
- Adjust the brightness and contrast controls of the display.
- Remove any diskettes from the drive before turning on your Notebook.

Additional troubleshooting solutions can be found on your Beyond Setup Guide.

Serial and Model Numbers

Located on the underside of your Notebook. Write these numbers in the space below for quick reference in case you need to call for technical assistance.

MODEL NUMBER _____

SERIAL NUMBER _____

MS C.O.A. NUMBER _____
(Microsoft Certificate of Authenticity)

Adding Options

Some options are not available in all regions. Compaq provides all of the necessary options and accessories for your Notebook, such as:

- Compaq Memory
- AC Adapter
- Carrying Case
- Battery
- Auto Adapter
- Wireless PC Card
- Port Replicator
- CD-RW Drive

For more detailed information on purchasing these or other options, refer to the Options Catalog or visit the Compaq website at <http://www.compaq.com>.

Where to Find Additional Information*

Consult the extensive list of Compaq common solutions in the *Beyond Setup Guide*.

Topic:	See this source
Technical Support	www.Compaq.com/consumersupport Compaq Knowledge Center** (?-Help button or icon)
	See warranty for support numbers and information.
Frequently Asked Questions	<i>Beyond Setup Guide</i> Documentation
Additional Support for Your Notebook	http://www.compaq.com/support

* This document is to be used as an immediate reference only.
** Compaq Knowledge Center is not available in all regions.



Getting Started



Compaq
Presario
800 Series
Mobile
Internet PC