

7-Hour Ni-Cd/12-Hour Ni-MH Portable AA Battery Charger

Cat. No. 23-418

Your RadioShack Nickel Cadmium (NiCd) and Nickel Metal Hydride (NiMH) AA Battery Charger is designed to charge up to two each of both types of batteries or up to four of one type (such as RadioShack Cat. No. 23-125, 23-149, or 23-525).

Its features include:

Two Charging Indicators — an indicator lights during charging for each battery type, and turns off when charging is complete.

Reverse Polarity Protection — protects the charger and batteries against damage from incorrectly installed batteries.

Overcurrent Protection — protects the charger from damage if you try to charge bad batteries.

OPERATION

1. To charge two NiCd or NiMH AA batteries, install both into one of the two charging compartments as indicated by the polarity symbols (+ and -) marked inside the compartment, then set the **NiCd/Ni-MH** switch to the appropriate setting.

Note: Both batteries must be installed in the same compartment.

To charge four NiCd or Ni-MH AA batteries, install two batteries into each compartment as indicated by the polarity symbols (+ and -) marked inside each compartment, then set **NiCd/Ni-MH** switch to the appropriate setting.

*illus of
battery
installation*

Caution: Do not mix battery types.

2. Plug the charger into a standard AC outlet. The red indicator lights when you are charging NiCd batteries, and the green indicator lights if you are charging NiMH batteries.

*illus of
charger
with outlet*

To fully charge completely discharged batteries, it takes 7 hours for NiCd batteries and 12 hours for Ni-MH batteries.

3. When the batteries finish charging, unplug the charger from the outlet, then remove the batteries from the charger. The indicator turns off.

© 1998 Tandy Corporation.
All Rights Reserved.

RadioShack is a registered trademark used by Tandy Corporation.

SAFETY INSTRUCTIONS

To enjoy your Ni-Cd/ NiMH AA Battery Charger for a long time.

- Do not expose the charger to rain or excessive moisture.
- Never operate the charger if it has received a sharp blow or been dropped or damaged in any way. Have it repaired by qualified service personnel.
- Do not disassemble the charger. Have it serviced by qualified service personnel only. Incorrect assembly can result in a risk of electric shock or fire.
- To reduce the risk of electric shock, unplug the charger from the outlet before attempting any maintenance or cleaning.

SPECIFICATIONS

Input	AC 120V, 60 Hz
Output	2.8 DC, 140 mA
Dimensions.....	16 ¥ 2 ⁵ / ₁₆ ¥ 2 ⁵ / ₁₆ (122 ¥ 58 ¥ 58 mm)

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow the limitations on how long an implied warranty lasts or the exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. RadioShack Customer Relations, Dept. W, 100 Throckmorton St., Suite 600, Fort Worth, TX 76102

We Service What We Sell

3/97

RadioShack
A Division of Tandy Corporation
Fort Worth, Texas 76102