

This convenient guide will lead you through the start-up process and will also offer some valuable tips.

 
What's in the Box

Check to see that all of the following items are in the box:


- | | | |
|--|--|--|
| ☐ LifeBook notebook | ☐ International Limited Warranty and Registration booklet | ☐ Genuine Windows Vista® recovery and utility disc |
| ☐ Lithium ion battery, pre-installed | ☐ Microsoft® associated product materials | ☐ Genuine Windows® XP Professional recovery disc (For Genuine Windows Vista® Business Operating System) |
| ☐ AC adapter with power cord and core | ☐ Microsoft® application CDs | |
| ☐ Phone/modem (RJ-11) telephone cable | ☐ End User License Agreement | |
| ☐ Drivers and Applications Restore (DAR) disc | | |
| ☐ User's Guide | | |

Depending upon your configuration, the following items may also be shipped with your notebook:


- | | |
|--|---|
| ☐ CyberLink PowerDirector disc | ☐ ExpressCard Hybrid (Digital/Analog) TV Tuner (For Genuine Windows Vista® Home Premium operating system only) |
| ☐ CyberLink MakeDVD disc (Only with Genuine Windows Vista® Home Premium) | |
| ☐ Additional Lithium ion battery | |
| ☐ Webcam Software disc | |
| ☐ Remote Control, Remote Control manual, batteries, and USB IR receiver (for Genuine Windows Vista® Home Premium operating system only) | |

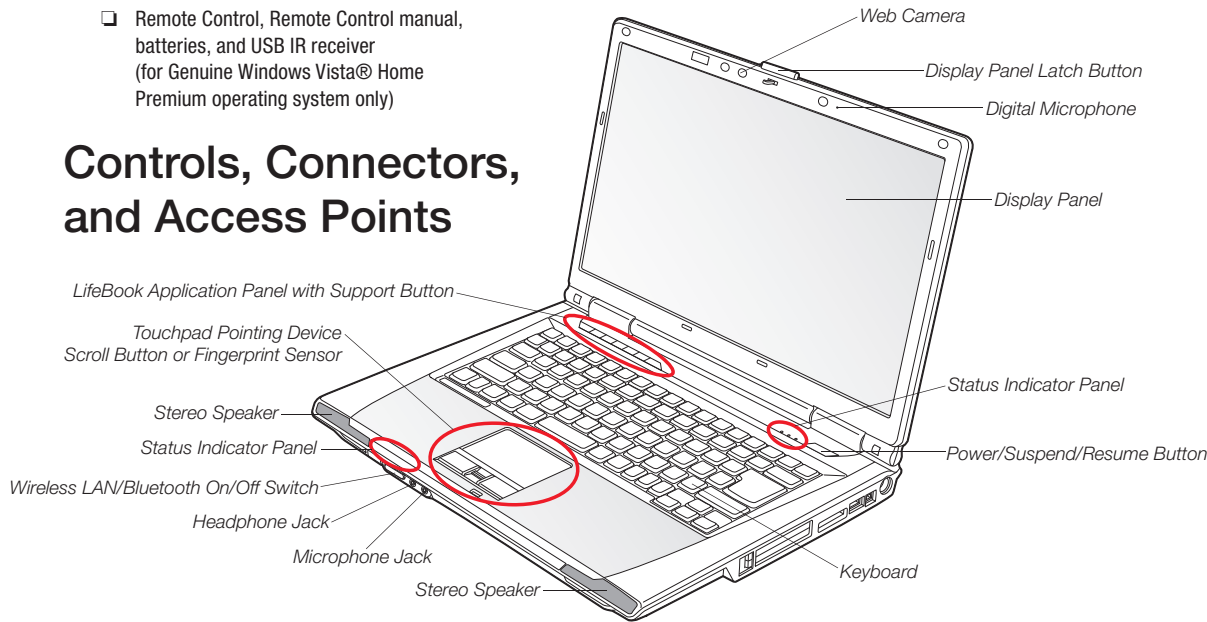


RIGHT PANEL

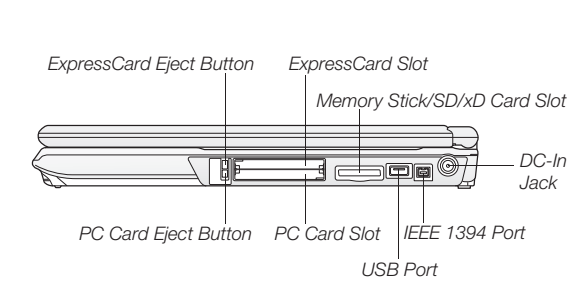 


LEFT PANEL

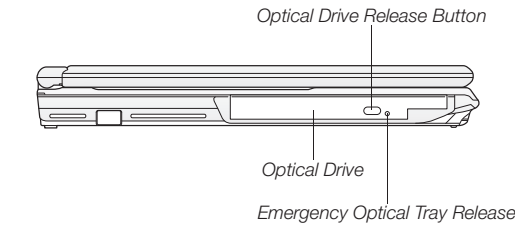 








BACK PANEL

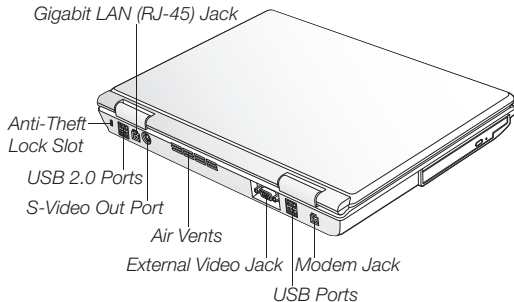 

BOTTOM PANEL

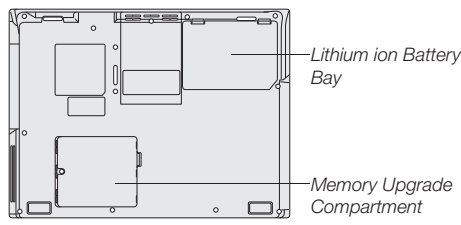 

Initial Start Up

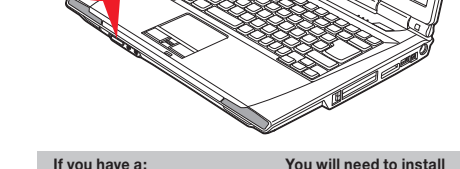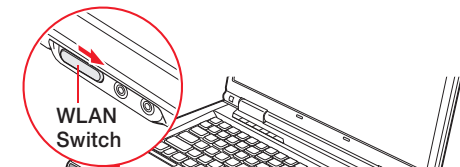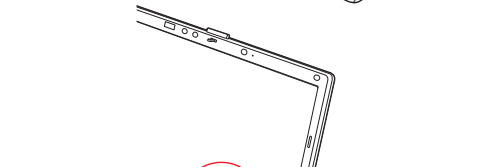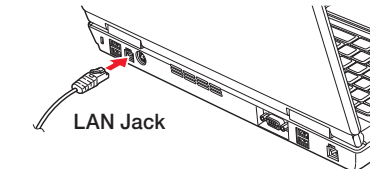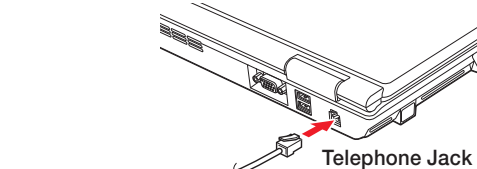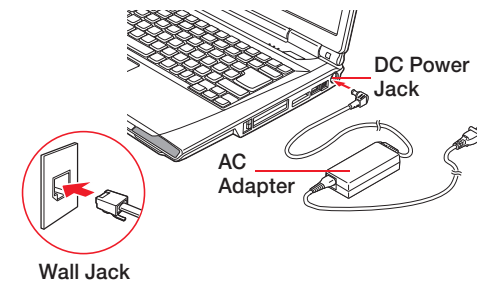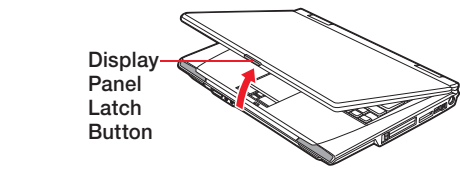       

If you have a:	You will need to install the following software:
Webcam	Arcsoft WebCam Companion
Dual-Layer Multi-Format DVD Writer	CyberLink PowerDirector

1. Open the Display Panel

- Ensure that your LifeBook is on a hard level surface and that the air vents are not blocked.
- Lift the display, being careful not to touch the screen.
- Adjust the display until it is at a comfortable viewing angle.

2. Connect AC Power

- Plug the AC adapter into your notebook.
- Plug the power cord into the AC adapter.
- Connect the power cord to an electrical outlet.

3. Connect to Internet or Network

- Connect either a phone cord to the modem jack or an Ethernet cable to the LAN jack on your notebook and to a wall jack or to an Ethernet router.

Important:

- During the setup procedure, do not disconnect the power supply, press any buttons, or use any peripheral devices such as a remote control.
- You should not attach any external devices and do not put a DVD/CD in your drive until you have gone through the initial power on sequence.

4. Booting the System

i The Lithium ion battery is not charged upon purchase. Initially you will need to connect either the AC adapter or the Auto/Airline adapter to use your notebook.

i Be careful when you select the language. The only way to change the language is to do a recovery process.

- Press the Suspend/Resume/Power button (above the keyboard) to turn on the notebook. When you do this for the first time, it will display a Fujitsu logo on the screen. If you do nothing the system will load the operating system, and then the Windows Welcome will begin.

5. Installing Click Me!

- Check to be sure the WLAN switch is on.

For Genuine Microsoft® Windows® XP: The first time you boot up your system, you will see an icon called Click Me! in the Start menu.

For Genuine Windows Vista®: In addition to an icon on the desktop, a dialog box will automatically open that prompts you to run Click Me!. If you choose not run ClickMe! at this time, the ClickMe! icon will appear on your desktop.

- When you click the Click Me! icon, your system will automatically build the icon tray in the bottom right of the screen. These icons provide links to utilities that you will frequently access.



6. Register

For Genuine Microsoft® Windows® XP:

- After the operating system has initialized, enter the information as prompted to personalize your notebook and configure your modem to dial.

For Genuine Windows Vista®:

- Accept the Microsoft® Windows® Licensing Agreement and the Fujitsu End User License Agreement to proceed.
- Select your User ID and Password during the "Welcome Screen."
- Keep a record of your User ID and password stored in a secure place.
- THE SCREEN WILL GO DARK FOR APPROXIMATELY TWO MINUTES.
- Do not attempt to turn power on or off during this stage.

7. Registering Your LifeBook notebook

- Register your notebook with Fujitsu Service and Support via our website at us.fujitsu.com/computers.
- You will need to be set up with an Internet Service Provider (ISP) to register online.

8. Install Additional Software

- Close any open programs, applications or utilities Insert software application disc into media drive.
- Open the application folder, select the set-up icon, and load desired software, as shown in the table.
- Restart your computer.

9. If you purchased the TV Tuner Option

- Please see the TV Tuner User's Guide for detailed instructions.

10. Access your User's Guide

- To take advantage of all the features of your new Fujitsu LifeBook notebook, it is highly recommended that you read your electronic User's Guide. It contains important detailed information about your new computer. You can access your User's Guide by selecting its icon from the screen desktop.
- If you are using Genuine Windows Vista®, Click [Allow] in the User Account Control (UAC) box.
- Click [Continue]
- Select "I Agree" and click [Continue] in the License Agreement box.
- Select "User's Guide" from the "Utilities/Applications" category.
- Click [Install Selected Subsystems]
- The User's Guide will be copied to your hard drive in the C:\Fujitsu\Manual directory. Shortcuts to the Users Guide will be placed on your desktop and in the Start menu.



11. Restoring your System

- If the need arises, you can safely recover back to the factory image by following a straight-forward procedure in your User's Guide.

Common Indicators

Status Display Panel

The Status Indicators represent specific components of your Fujitsu LifeBook notebook. The LEDs below each symbol tell you how each of those components are operating.

Power Indicator
The Power indicator glows blue when your system is turned on.

Battery Charge/DC-In Indicator
Orange, solid: AC adapter and battery are available and system is charging.

Green, solid: AC adapter and battery are available and system is fully charged, or AC adapter is plugged in but battery is not installed.

Orange, blinking: AC adapter and battery are available and waiting to charge battery (battery is out of thermal range).

Off: AC adapter is not plugged in.

Battery Level Indicator
If the battery is installed while the power is off, the battery level indicator will display the charge levels for five seconds after it blinks orange.

Caution If the AC adapter is not connected or the battery pack is not fully charged when the computer is switched to stand by mode, the indicator will blink.

Batteries subjected to shocks, vibrations or extreme temperature can be permanently damaged.

 
A shorted battery is damaged and MUST be replaced.

Hard Drive/Optical Drive Access Indicator
The Hard Drive/Optical Drive Access indicator glows green when your internal hard drive is being accessed. Note that flickering is normal.

NumLk Indicator
The NumLk indicator states that the integral keyboard is set in ten-key numeric keypad mode.

CapsLock Indicator
The CapsLock indicator states that your keyboard is set to type in all capital letters.

ScrLk Indicator
The ScrLk indicator states that your scroll lock is active.

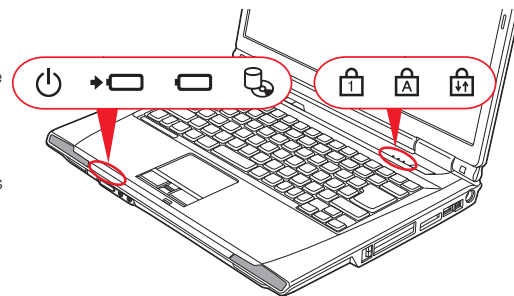

Quick Tips

It takes approximately 4 hours to charge a fully discharged single battery with unit off or in suspend mode.

Optimizing Battery Life

- Set power management setting to Maximize Battery Life.
- Adjust display brightness levels to lowest comfortable setting.
- Remove PC Cards and Express-Cards when not needed.
- Utilize Suspend mode when not using your notebook.
- Read the Power Management section in your electronic User's Guide for additional features.

Adjusting Display Brightness

- Fn + F6 to decrease brightness
- Fn + F7 to increase brightness

Adjusting Volume

- Fn + F8 to decrease volume
- Fn + F9 to increase volume

* Mono microphone jack or stereo microphone/line in jack depending on configuration.

** Stereo headphone/Optical Digital Audio out jack or stereo headphone/Line Out/Optical Digital Audio out jack.

Caution: Your system is configured with Trusted Platform Module (TPM)

Before you activate TPM, be sure you fully understand how it works by following the directions included on the TPM applications CD. If you choose to enable TPM, your TPM password will be critical to the operation of your computer and MUST be remembered.

Drivers

Look for the latest drivers on the Drivers and Applications Restore CD. Right-click the FDU icon and select "update", or download them at us.fujitsu.com/computers.

SAVE THESE INSTRUCTIONS

All repairs must be accomplished by an Authorized Repair Technician.

 


Warning



DECLARATION OF CONFORMITY according to FCC Part 15 Responsible Party Name: Fujitsu Computer Systems Corporation Address: 1250 E. Arques Avenue, M/S 122 Sunnyvale, CA 94085 Telephone: (408) 746-6000 Declares that product: Base Model Configuration: LifeBook A6120 notebook Complies with Part 15 of the FCC Rules. This device complies with Part 15 of the FCC rules. Operations are subject to the following two conditions: (1) This device may not cause harmful interference, (2) This device must accept any interference received, including interference that may cause undesired operation.

IMPORTANT SAFETY INSTRUCTIONS
This unit requires an AC adapter to operate. Use only UL Listed I.T.E. Class II Adapters with an output rating of 19 VDC, with a current of 4.22 A (80 W).



When using your notebook equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

- Do not use this product near water for example, near a bathtub, washbowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool.
- Avoid using the modem during an electrical storm. There may be a remote risk of electric shock from lightning.
- Do not use the modem to report a gas leak in the vicinity of the leak.
- Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.
- To reduce the risk of fire, use only No. 26 AWG or larger UL Listed or CSA Certified Telecommunication Line Cord.
- For TV tuner use: To protect from overvoltages and transients on the Cable Distribution System, be sure that the outer shield of the coaxial cable is connected to earth (grounded) at the building premise as close to the point of cable entrance as practicable, as required per NEC Article 820.93, ANSI/NFPA 70: 2005. If you have questions about your CATV installation, contact your service provider.

For Authorized Repair Technicians Only



Warning

DANGER OF EXPLOSION IF LITHIUM (CLOCK) BATTERY IS INCORRECTLY REPLACED. REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE RECOMMENDED BY THE MANUFACTURER. DISPOSE OF USED BATTERIES ACCORDING TO THE MANUFACTURER'S INSTRUCTION.



Caution

FOR CONTINUED PROTECTION AGAINST RISK OF FIRE, REPLACE ONLY WITH THE SAME TYPE AND RATING FUSE.

System Disposal



LAMP(S) INSIDE THIS PRODUCT CONTAIN MERCURY AND MUST BE RECYCLED OR DISPOSED OF ACCORDING TO LOCAL, STATE, OR FEDERAL LAWS.

Recycling your battery

Over time, the batteries that run your mobile computer will begin to hold a charge for a shorter amount of time; this is a natural occurrence for all batteries. When this occurs, you may want to replace the battery with a fresh one*. If you replace it, it is important that you dispose of the old battery properly because batteries contain materials that could cause environmental damage if disposed of improperly.



Fujitsu is very concerned with environmental protection, and has enlisted the services of the Rechargeable Battery Recycling Corporation (RBRC)**, a non-profit public service organization dedicated to protecting our environment by recycling old batteries at no cost to you.

RBRC has drop-off points at tens of thousands of locations throughout the United States and Canada. To find the location nearest you, go to www.RBRC.org or call 1-800-822-8837.

If there are no convenient RBRC locations near you, you can also go to the EIA Consumer Education Initiative website (<http://EIAE.org/>) and search for a convenient disposal location. Remember—protecting the environment is a cooperative effort, and you should make every effort to protect it for current and future generations.

* To order a new battery for your Fujitsu mobile computer, go to the Fujitsu shopping site at www.shopfujitsu.com in the US or www.fujitsu.ca/products/notebooks in Canada.

** RBRC is an independent third party to which Fujitsu provides funding for battery recycling; RBRC is in no way affiliated with Fujitsu.



Popular Accessories

- Memory Modules
- 1 GB SDRAM, DDR2-6667
 - 2 GB SDRAM, DDR2-6667
- Main Lithium ion Battery
Auto/Airline Adapter
Additional AC Adapter
USB Universal Docking Station/w Video
USB 2.0 Docking Station
External USB Floppy Disk Drive
USB Optical Mouse
Wireless Keyboard and Mouse
Remote Control for Genuine Windows Vista® Premium
- Carrying Cases
- Diplomat
 - Workstation Plus
 - Mobile Lite Wheeled Case
 - Mobile Max Wheeled Case
- Notebook Guardian™ Lock

Record your notebook serial number here:
Serial # _____
(see bottom of computer)

Fujitsu Computer Systems Corporation
1250 E. Arques Avenue M/S 122
Sunnyvale, CA 94085

Fujitsu, the Fujitsu logo, and LifeBook are registered trademarks of Fujitsu Limited. Microsoft, Windows, and Genuine Windows Vista are registered trademarks of Microsoft Corporation in the United States and/or in other countries. All other trademarks mentioned herein are the property of their respective owners. Product description data represents Fujitsu design objectives and is provided for comparative purposes; actual results may vary based on a variety of factors. Specifications are subject to change without notice.

©2007 Fujitsu Computer Systems Corporation. All rights reserved.

- Have questions or need help?
- Visit our website at us.fujitsu.com/computers
 - Call us anytime at 1.800.8FUJITSU
 - Email us at 8fujitsu@us.fujitsu.com

- Want more information on Fujitsu products?
- Visit our website at www.shopfujitsu.com
 - Call us anytime at 1.800.FUJITSU

Fujitsu Extended Service Plans available.

Visit us.fujitsu.com/computers to purchase any of these accessories or to get more information.



Getting Started

Get Started with your
LifeBook® A6120 Notebook

This guide will lead you through the start-up process for your new LifeBook notebook and will also provide some valuable tips. To learn about all the exciting features that your new LifeBook notebook has to offer, please see the User's Guide that can be accessed after completing the start-up procedure.



THE POSSIBILITIES ARE INFINITE