



CAR FM RADIO

Adjust the frequency of car FM radio to the same one as transmitter for receiving signals.

④ To adjust car FM radio

Pi.PYLE

PiFM7



Car Stereo

Wireless FM Transmitter

Transfer Your Music Into Your Car Radio




SKETCH-MAP

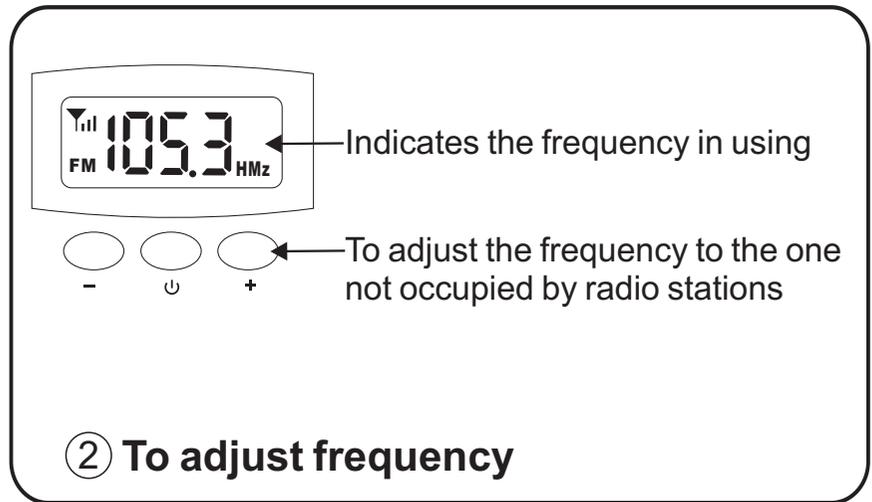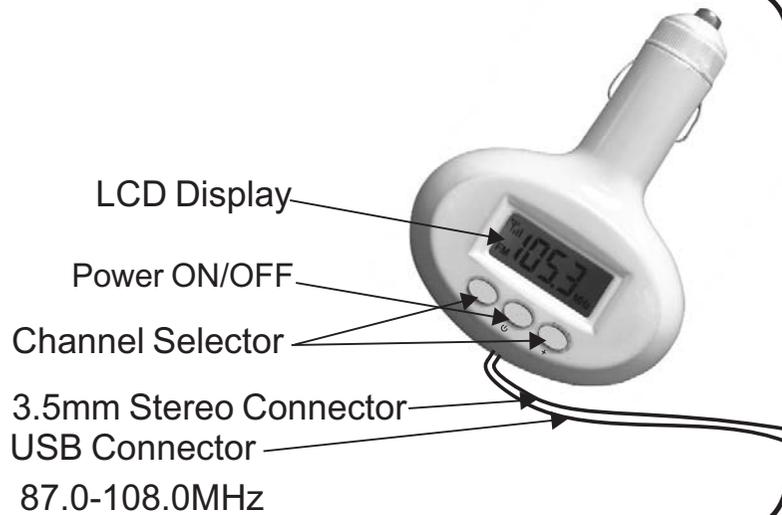

OPERATION

LCD will light when power on

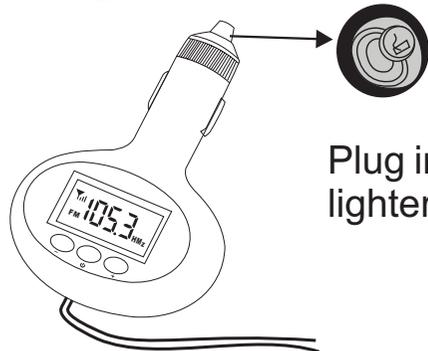

Plug into car cigarette lighter socket

① To switch on power

