



OWNER'S INSTRUCTIONS

AW0593L

AW0693L


AW0893L

AW1093L

AW1293L

AW1893L

 Window-type Room Air Conditioner (Cool)

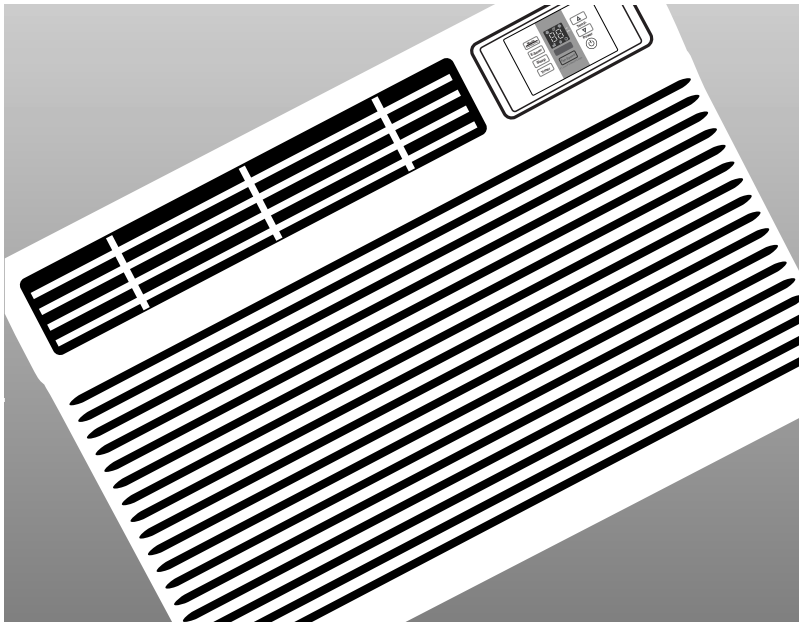

Safety Precautions

The following safety precautions must be taken when installing and using your air conditioner.

1 The air conditioner must be plugged into its own specific power source, which must be installed in compliance with national wiring, earthing and safety regulations.

Depending on national regulations and your specific installation, you may need to install:

- ◆ A circuit breaker

For further information on electrical requirements, contact a professional electrician.

This device must be installed according to the national electrical rules.

2 Make sure that the unit is correctly ventilated at all times; do NOT place clothing or other materials over it.

3 NEVER spill liquids of any kind into the unit. Should this happen, unplug the unit and contact your installation specialist.

4 Do NOT insert anything between the air outlet blades, as it may damage the inner fan and you may get hurt. Keep children away from the unit.

5 If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

6 Do NOT attempt to repair the unit yourself. If it is damaged in any way, contact:

- ◆ An authorized service center
- ◆ The dealer from whom you purchased the air conditioner.

7 Do NOT place any blocking objects in front of the unit.

8 If the remote control will not be used for a long time, remove the batteries.

9 Before throwing out the device, it is necessary to pull back the battery cells and get rid of them safely.

10 The appliance is not intended for use by young children or infirm person without supervision; young children should be supervised to ensure that they do not play with the appliance.

11 Do NOT use an extension cord with this product.

CAUTION



The manufacturer does not assume responsibility for accidents or injury caused by an incorrectly installed air conditioner. If you are unsure about installation, contact an installation specialist.

Contents


◆ PREPARING YOUR AIR CONDITIONER	
▪ Safety Precautions	2
▪ Description of Each Component	4
▪ Remote Control - Buttons and display	5
▪ Getting Started	6
▪ Inserting the Remote Control Batteries	7
 <i>USING THE CONTROL PANEL ON THE UNIT</i>	
◆ OPERATING YOUR AIR CONDITIONER	
▪ Cooling Your Room	9
▪ Airing Your Room	10
▪ Removing Excess Humidity	11
◆ PROGRAMMING YOUR AIR CONDITIONER	
▪ Setting the On Timer	12
▪ Setting the Off Timer	13
▪ Setting the Sleep Timer	14
▪ Selecting Energy Saving mode	15
 <i>USING THE WIRELESS REMOTE CONTROL</i>	
◆ OPERATING YOUR AIR CONDITIONER	
▪ Cooling Your Room	17
▪ Airing Your Room	18
▪ Removing Excess Humidity	19
◆ PROGRAMMING YOUR AIR CONDITIONER	
▪ Setting the On Timer	20
▪ Setting the Off Timer	21
▪ Setting the Sleep Timer	22
▪ Selecting Energy Saving mode	23
▪ Adjusting the Air Flow Direction Horizontally	24
▪ Adjusting the Air Flow Direction Vertically	24
◆ RECOMMENDATIONS FOR USE	
▪ Temperature and Humidity Ranges	25
▪ Cleaning Your Air Conditioner	26
▪ Solving Common Problems	27
▪ Technical Specifications	27

Description of Each Component

  * The design and shape are subject to change.

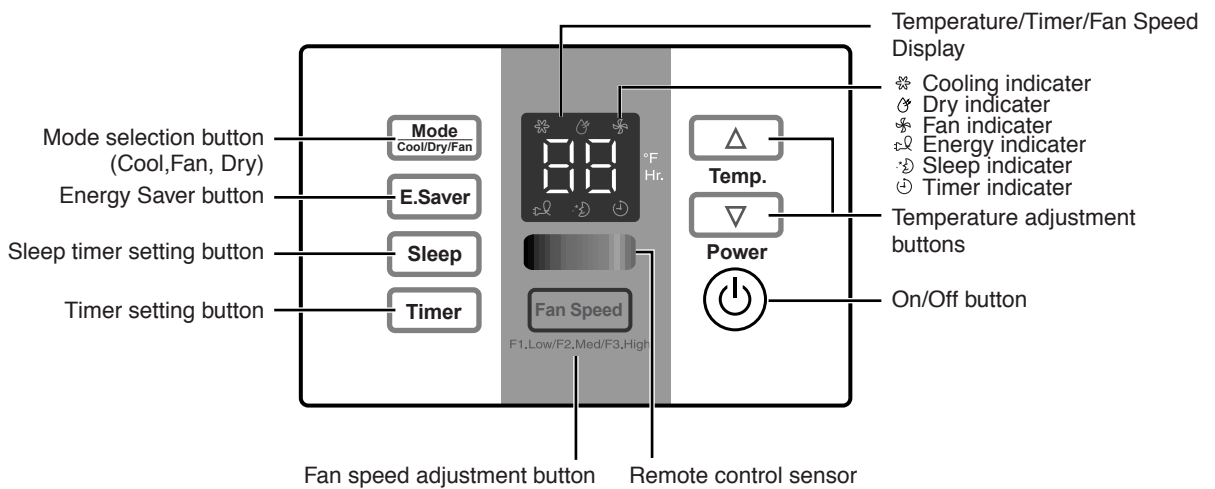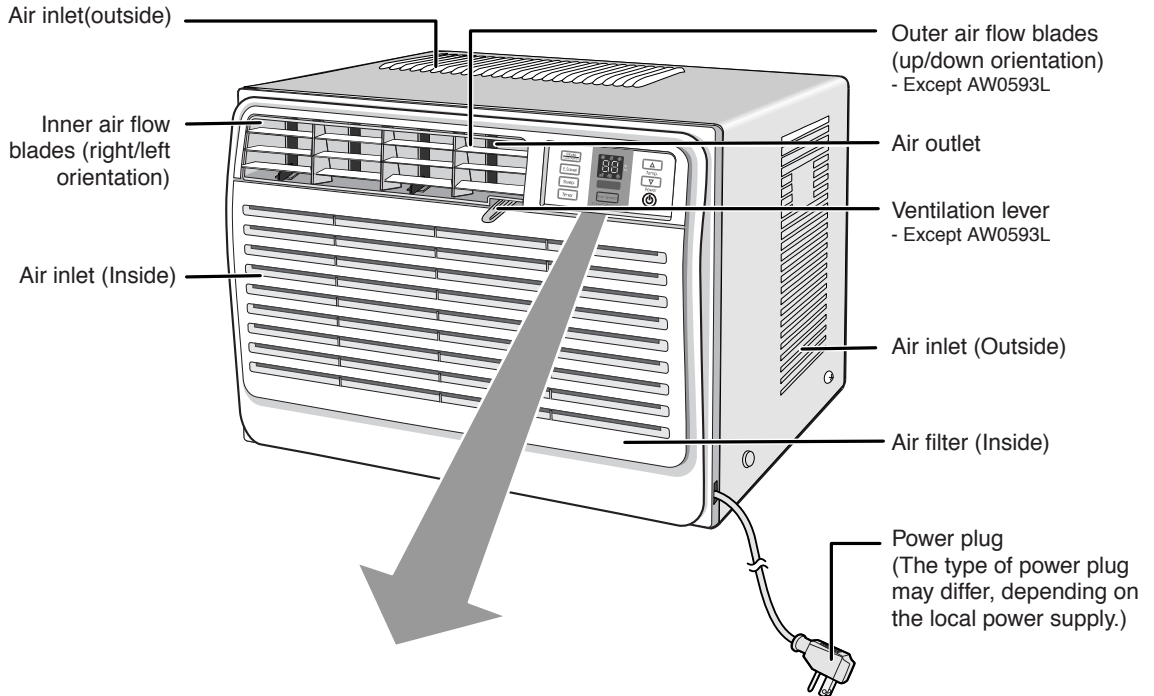

Remote Control - Buttons and display

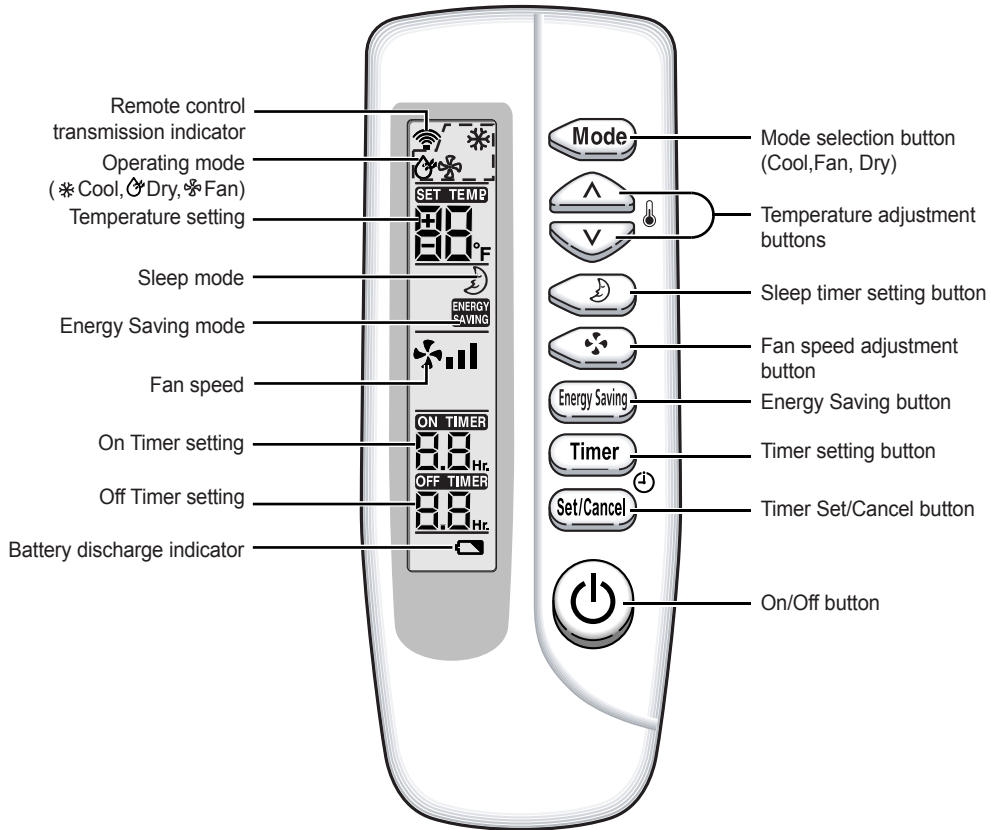 

Getting Started

You have just purchased a Samsung window-type room air conditioner which should be installed following your installation manual.

Your Owner's Instructions contain much valuable information on using your air conditioner. Please take the time to read them as they will help you take full advantage of the unit's features.

The booklet is organized as follows.

 
◆ *The following figures are shown on pages 4 and 5:*

- *Description of Each Component*
- *Remote control (buttons & display)*

They will help you find the buttons and understand the symbols displayed.

◆ *In the main part of the document, you will find a series of step-by-step procedures for each function available.*

The illustrations in the step-by-step procedures use four different symbols:

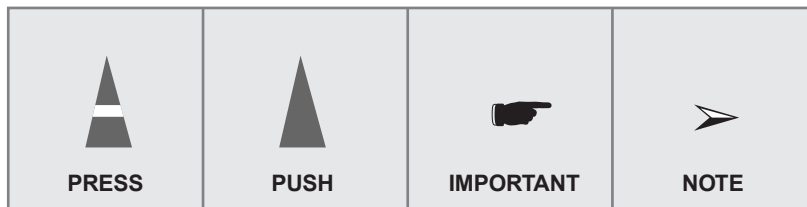

Inserting the Remote Control Batteries

You must insert or replace the remote control batteries when :

- ☒ **You purchase the air conditioner**
- ☒ **The remote control does not work correctly**



 
 
- ☒ Use two AAA, LR03 1.5V batteries.
- ☒ Do not use old batteries or different kinds of batteries together.
- ☒ Batteries may be completely discharged after 12 months, even if they have not actually been used.

1 Push the battery cover on the rear of the remote control with your thumb in the direction of the arrow and remove it.


2 Insert the two batteries, taking care to respect the polarities :

- ☒ + on the battery with + on the remote control.
- ☒ - on the battery with - on the remote control.

3 Close the cover by sliding it back until it clicks into place.

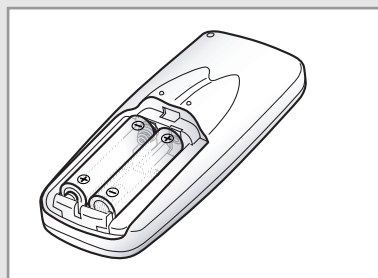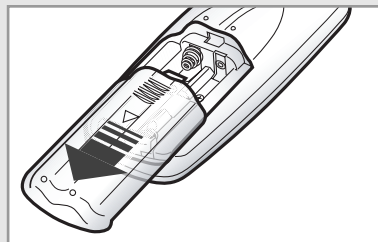


Using the Control Panel on the Unit

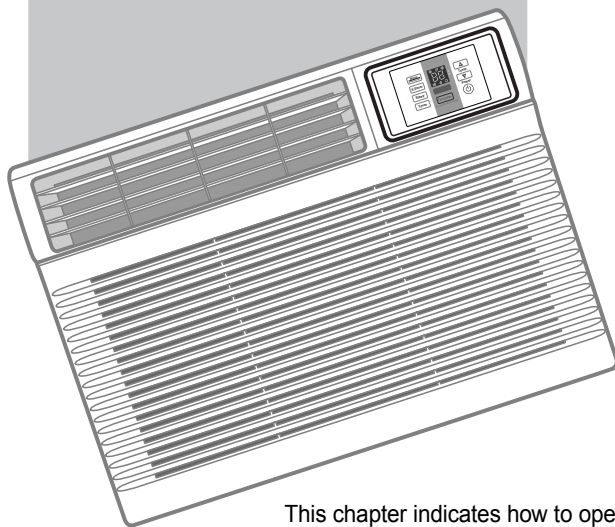 

This chapter indicates how to operate and program your air conditioner with the control panel on the unit.


Cooling Your Room

You must select the Cool mode if you wish to lower the temperature in your room. You can also set the Fan speed.

- 1 Press the  (On/Off) button.

Result:


- ◆ The air conditioner starts up in the cool mode.
- ◆ The unit beeps twice.

 The air conditioner is fitted with a protection mechanism to prevent the unit from being damaged when it is started immediately after being:


- ◆ Plugged in
- ◆ Stopped

It will start up normally after three minutes.

 

- 2 If the temperature is not displayed on the control panel:

Press the  button on the unit one or more times until the temperature is displayed.


 
Result:

- ◆ The unit beeps each time you press the  button.
- ◆ The air conditioner starts up in the Cool mode.


 You can change modes at any time.

- 3 To adjust the temperature, press the  or  buttons on the unit one or more times until the desired temperature is displayed. The temperature can be set between 64° F and 86° F.

Result:

- ◆ Each time you press the  or  buttons:
 - The temperature is adjusted by 1° F and displayed on the control panel
 - The unit beeps
- ◆ The air conditioner starts cooling, if the room temperature is higher than the selected temperature.
- ◆ If the room temperature reaches the set temperature, the air conditioner stops cooling, but the fan is still operating.

 
 
 
- 4 To set the fan speed:

◆ Press the  button on the unit one or more times until the desired fan speed (F1, F2 or F3) is displayed.

F1:Low
F2:Medium
F3:High




- 5 To control the direction of the air flow, refer to page 24.

Control Panel

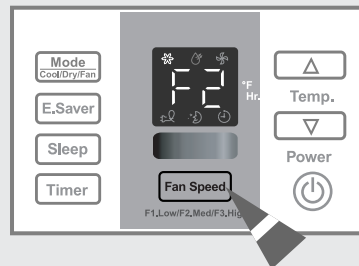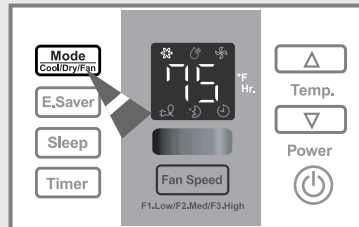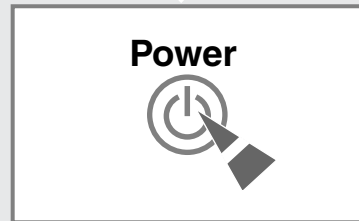


Airing Your Room

   Control Panel

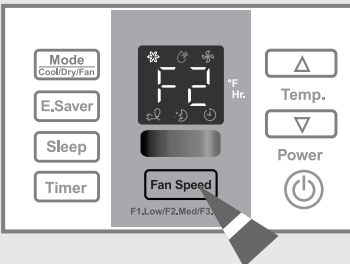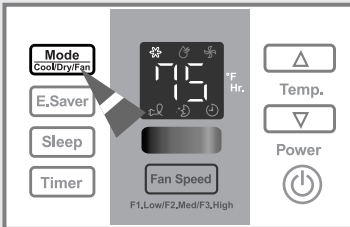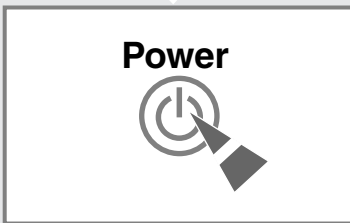

 
If you want to provide air circulation without cooling, you can use the Fan mode.

- 1 If necessary, press the  (On/Off) button.


Result:

- ◆ The air conditioner starts up in the cool mode.
- ◆ The unit beeps twice.

- 2 If the fan speed (F1, F2 or F3) is not displayed on the control panel:

- ◆ Press the  button on the unit one or more times until the fan speed (F1, F2 or F3) is displayed.

Result:

- ◆ The unit beeps each time you press the  button.
- ◆ The air conditioner starts up in the Fan mode.




You can change modes at any time.

When the air conditioner is in the Fan mode, the temperature cannot be set or displayed.

F1:Low
F2:Medium
F3:High

- 3 To set the fan speed:


- ◆ Press the  button on the unit one or more time until the desired fan speed (F1, F2 or F3) is displayed.


F1:Low
F2:Medium
F3:High

- 4 To control the direction of the air flow, refer to page 24.

Removing Excess Humidity



If the atmosphere in your room is very humid or damp, you can remove excess humidity without lowering the room temperature too much.

- 1 If necessary, press the  (On/Off) button.
Result: ♦ The air conditioner starts up in the Cool mode.
♦ The unit beeps twice.

 
 

 
 The air conditioner is fitted with a protection mechanism to prevent the unit from being damaged when it is started immediately after being:

- ♦ Plugged in
- ♦ Stopped

It will start up normally after three minutes.

 
 
 
- 2 If the temperature is not displayed on the control panel: press the  button the unit one or more times until the temperature is displayed.
Result: ♦ The unit beeps each time you press the  button.
♦ The air conditioner starts up in the cool mode.

➤ You can change modes at any time.

- 3 To adjust the temperature, press the  or  buttons one or more times until the required temperature is displayed. Possible temperatures are between 64°F and 86°F inclusive.
Result: ♦ Each time you press the  or  buttons:
 - The temperature is adjusted by 1°F
 - The unit beeps
 - ♦ The air conditioner starts removing the excess humidity; the quantity of air is adjusted automatically.


- 4 To control the direction of the air flow, refer to page 24.


Control Panel

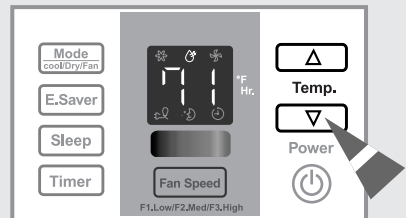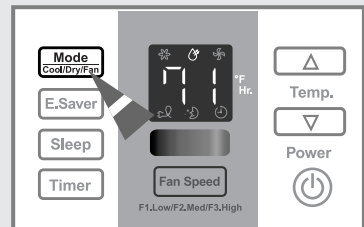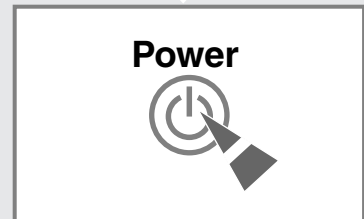


Setting the On Timer

 The On Timer enables you to switch on the air conditioner automatically after a given time. You can select the On Timer only when the air conditioner is off. You can select the On timer when the air conditioner operates in the Cool or Dry mode.

 - 1 Check that the air conditioner has been switched off; if necessary, press the  (On/Off) button.

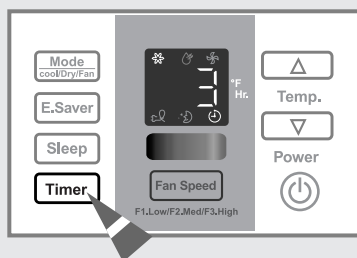

- 2 Set the operating time by pressing the  button on the unit one or more times until the desired time is displayed. The operating time can be set between 1 and 24 hours.

Result: ♦ Each time you press the  button:

 
- The time is adjusted by 1 hour and displayed on the control panel
- The unit beeps
- ♦ The operating time is displayed and decreases automatically to indicate the remaining time.
- ♦ The air conditioner starts up in the Cool mode automatically when the operating time reaches zero.

➤ You can select the fan speed, temperature and Energy saving mode after setting the On timer and Off timer mode. However, when you change the mode, the On timer and Off timer mode is cancelled.

To Cancel the On Timer


- 1 To cancel the timer, press the  button on the unit one or more times until "--" is displayed.


- 2 Press the  (On/Off) button on the unit.

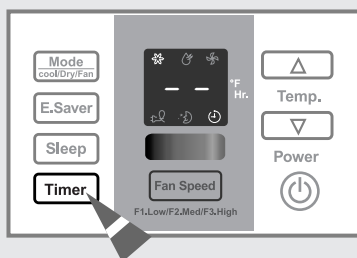


Setting the Off Timer

 The Off Timer enables you to switch off the air conditioner automatically after a given time. You can select the On timer only when the air conditioner is on. You can select the Off timer when the air conditioner operates in the Cool or Dry mode.



- 1 Check that the air conditioner has been switched on; if necessary, press the  (On/Off) button.

- 2 Set the operating time by pressing the  button on the unit one or more times until the desired time is displayed. The operating time can be set between 1 and 24 hours.



- Result:**
- ◆ Each time you press the  button:
 - The time is adjusted by 1 hour and displayed on the control panel
 - The unit beeps
 - ◆ The operating time is displayed and decreases automatically to indicate the remaining time.
 - ◆ The air conditioner switches off automatically when the operating time reaches zero.

  
➤ You can select the fan speed, temperature and Energy saving mode after setting the On timer and Off timer mode. However, when you change the mode, the On timer and Off timer mode is cancelled.

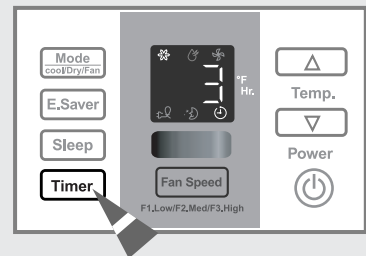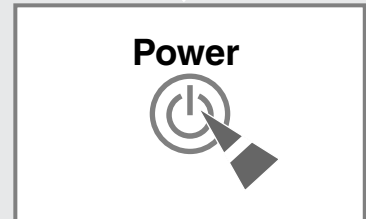Control Panel





To Cancel the Off Timer

 - 1 To cancel the timer, press the  button on the unit one or more times until "--" is displayed.
- 2 Press the  (On/Off) button on the unit.

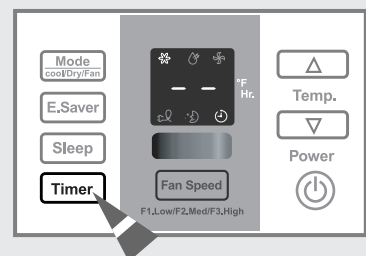

Setting the Sleep Timer

  Control Panel

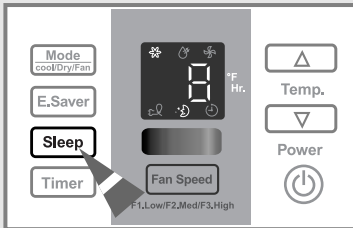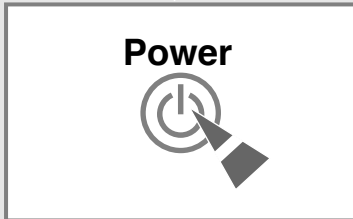

The Sleep Timer can be used when your are cooling your room to switch the air conditioner off automatically after 8 hours.

 
➤ **If you wish to switch the unit off at a specific time, refer to page 13.**

- 1 Make sure that you have selected the Cool mode.

- 2 Press the **[Sleep]** button on the unit.

- Result:**
- ◆ Each time you press a button, the unit beeps.
 - ◆ The "8" will be displayed.
 - ◆ The remaining time is displayed and decreased by 1 hour automatically to indicate the remaining time.
 - ◆ The air conditioner will be controlled as illustration below

Cooling When the temperature has been increased by 2°F (after 1 hour), it is maintained for 7 hours.

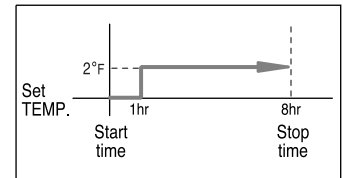


To Cancel the Sleep Timer

To cancel the timer, press:

- ◆ The **[Sleep]** button on the unit.

- Result:**
- ◆ The unit beeps.
 - ◆ The SLEEP indicator is no longer displayed.
 - ◆ The air conditioner operates in the mode selected last.

 ➤ If you select the Energy Saving mode in the Sleep Timer mode, the Sleep Timer will be cancelled and the air conditioner will start up in the Energy Saving mode.

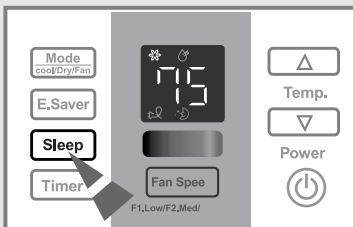

Selecting Energy Saving Mode

If the wish to save energy when using your air conditioner, select the energy saving mode.

- 1 To select the energy saving mode, press the **[E.Saver]** button on the unit one or more times until the Energy Saver indicator lights up.

Result:

- ◆ The fan and compressor cycle on and off together.
- ◆ The fan will continue to run for a short time after the compressor cycles off.

 
- If you would like the air conditioner to run in the Dry mode, do not press the **[E.Saver]** button. You cannot use the Dry mode in the energy saving mode.

- 2 To stop the energy saving mode, press the the **[E.Saver]** button on the unit again.


Result: The fan runs at all times, while the compressor cycles on and off.

- If you select the Sleep Timer in the Energy Saving Mode, the Energy Saving will be cancelled and the air conditioner will start up in the Sleep Timer mode.


Control Panel

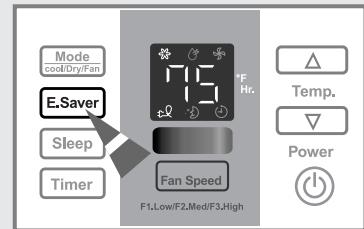

Control Panel

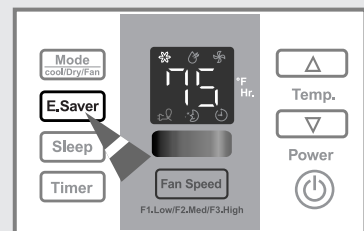 

Using the Wireless Remote Control

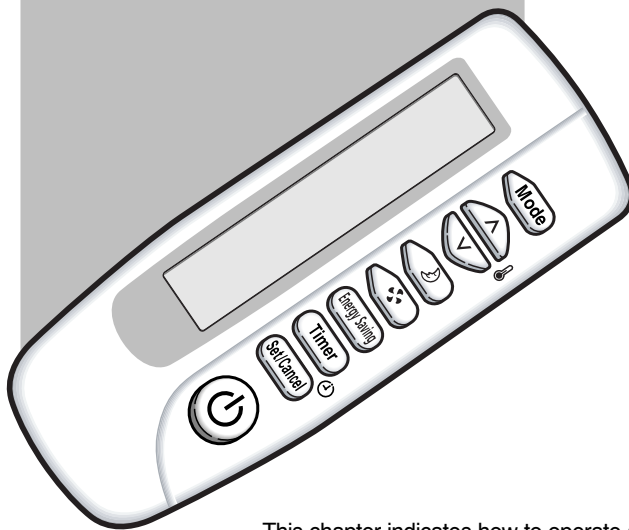 


This chapter indicates how to operate and program your air conditioner with the wireless remote control.

Cooling Your Room

You must select the Cool mode if you wish to adjust the:

- ◆ Cooling temperature
- ◆ Fan speed when cooling

1 If necessary, press the  (On/Off) button.

Result:

 
 
- ◆ The air conditioner starts up in the Cool mode.
- ◆ The unit beeps.




The air conditioner is fitted with a protection mechanism to prevent the unit from being damaged when it is started immediately after being:

- ◆ Plugged in
- ◆ Stopped

It will start up normally after three minutes.


2 If the  is not displayed at the top of the remote control, press the  button on the remote control one or more times until it appears.

Result:

- ◆ The unit beeps each time you press the  button.
- ◆ The air conditioner runs in the Cool mode.

 



You can change modes at any time.




3 To adjust the temperature, press the  buttons one or more times until the required temperature is displayed.


Possible temperatures are between 64°F and 86°F inclusive.

Result:





- ◆ Each time you press the  buttons:
 - The temperature is adjusted by 1°F
 - The unit beeps
- ◆ The air conditioner starts cooling, if the room temperature is higher than the selected temperature.
- ◆ If the room temperature reaches the set temperature, the air conditioner stops cooling, but the fan is still operating.

   4 Select the fan speed by pressing the  button one or more times until the required setting is displayed:

-  Low
-  Medium
-  High


Result: Each time you press the  button, the unit beeps.

    
5 To control the direction of the air flow, refer to page 24.

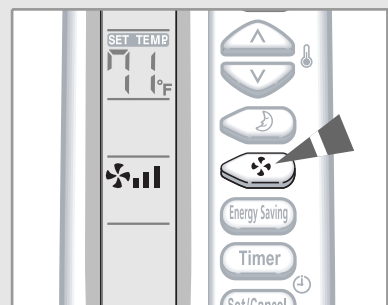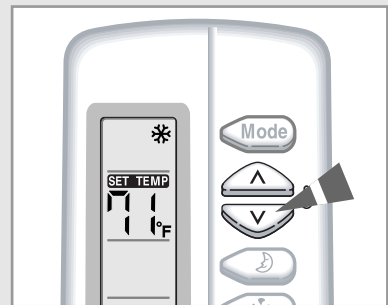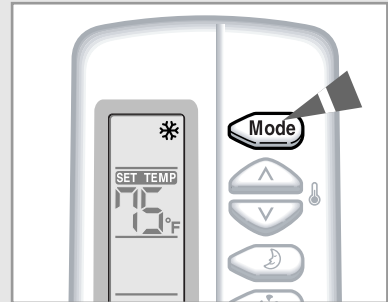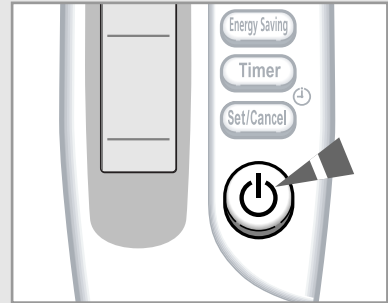

Airing Your Room

 
If the atmosphere in your room is stale, you can air the room using the Fan feature.

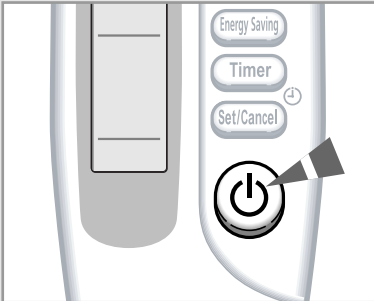



- 1 If necessary, press the  (On/Off) button.

 
Result:

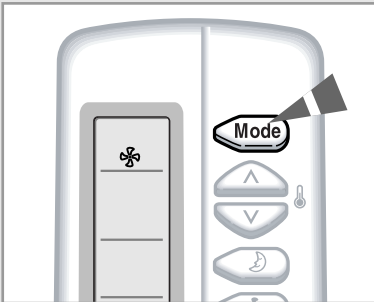- ◆ The air conditioner starts up in the Cool mode.
- ◆ The unit beeps.

 



- 2 If the  is not displayed at the top of the remote control, press the  button on the remote control one or more times until it appears.




Result:


- ◆ The unit beeps each time you press the  button.
- ◆ The air conditioner runs in the Fan mode.
- ◆ The temperature is set automatically.

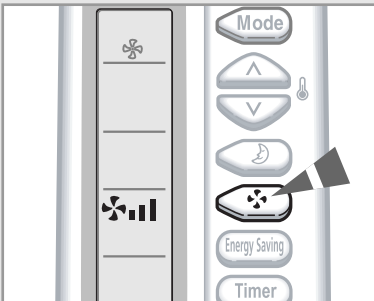➤ You can change modes at any time.



- 3 Select the fan speed by pressing the  button one or more times until the required setting is displayed:


 Low
 Medium
 High

Result: Each time you press the  button, the unit beeps.

- 4 To control the direction of the air flow, refer to page 24.

Removing Excess Humidity

If the atmosphere in your room is very humid or damp, you can remove excess humidity without lowering the room temperature too much.

- 1 If necessary, press the  (On/Off) button.

Result:



- ◆ The air conditioner starts up in the Cool mode.
- ◆ The unit beeps.




The air conditioner is fitted with a protection mechanism to prevent the unit from being damaged when it is started immediately after being:

- ◆ Plugged in
- ◆ Stopped

It will start up normally after three minutes.


- 2 If the  is not displayed at the top of the remote control, press the  button on the remote control one or more times until it appears.

Result:

- ◆ The unit beeps each time you press the  button.
- ◆ The air conditioner runs in the Dry mode.




You can change modes at any time.

 
 
 
- 3 To adjust the temperature, press the  buttons one or more times until the required temperature is displayed.

Possible temperatures are between 64°F and 86°F inclusive.


Result:

- ◆ Each time you press the  buttons:
 - The temperature is adjusted by 1°F
 - The unit beeps
- ◆ The air conditioner starts removing the excess humidity; the quantity of air is adjusted automatically.

- 4 To control the direction of the air flow refer to page 24.

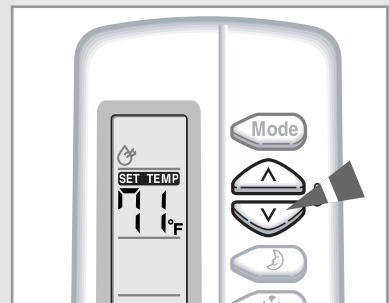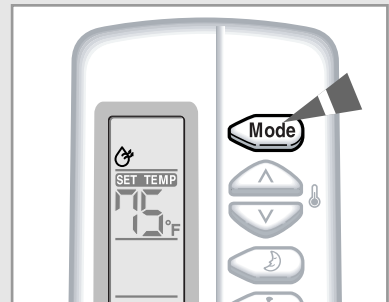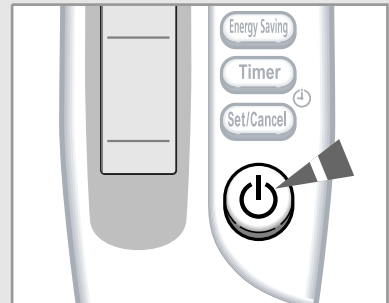

Setting the On Timer

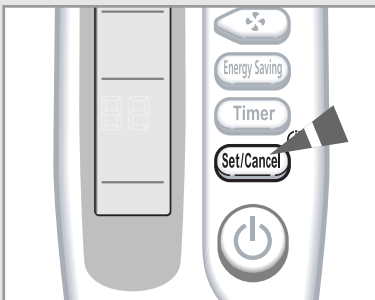 

The On Timer enables you to switch on the air conditioner automatically after a given time. You can select the On timer only when the air conditioner is off. You can select the On timer when the air conditioner operates in the Cool or Dry mode.

- 1 To set the operating time, press the **Timer** button one or more times until the required time is displayed. Possible time is between 1 hour and 24 hours inclusive.

- 2 Press the **Set/Cancel** (Set/Cancel) button to complete the setting.

Result:

- ◆ The remaining time is displayed.
- ◆ Blinking of the timer indicator stops.
- ◆ The air conditioner will switch on automatically when the counter displayed on the remote control reaches the set time and disappears the On timer setting.



You can select the fan speed, temperature and Energy saving mode after setting the On timer and Off timer mode. However, when you change the mode, the On timer and Off timer mode is cancelled.

To Cancel the On Timer

- 1 To cancel the On Timer, press the **Set/Cancel** button one or more times until the timer setting disappears.

- 2 Press the **Set/Cancel** (Set/Cancel) button.



If you want to turn on the air conditioner before the timer reaches the setting time, press the **On/Off** button.

Setting the Off Timer

The Off Timer enables you to switch off the air conditioner automatically after a given time. You can select the On timer only when the air conditioner is off. You can select the Off timer when the air conditioner operates in the Cool or Dry mode.

- 1 To set the operating time, press the **Timer** button one or more times until the required time is displayed. Possible time is between 1 hour and 24 hours inclusive.

- 2 Press the **Set/Cancel** (Set/Cancel) button to complete the setting.

Result:

- ◆ The remaining time is displayed.
- ◆ Blinking of the timer indicator stops.
- ◆ The air conditioner will switch off automatically when the counter displayed on the remote control reaches the set time and disappears the Off timer setting.

- You can select the fan speed, temperature and Energy saving mode after setting the On timer and Off timer mode. However, when you change the mode, the On timer and Off timer mode is cancelled.

 


To Cancel the Off Timer

- 1 To cancel the Off Timer, press the **Timer** button one or more times until the timer setting disappears.

- 2 Press the **Set/Cancel** (Set/Cancel) button.


- If you want to turn off the air conditioner before the timer reaches the setting time, press the **⏻** (On/Off) button.

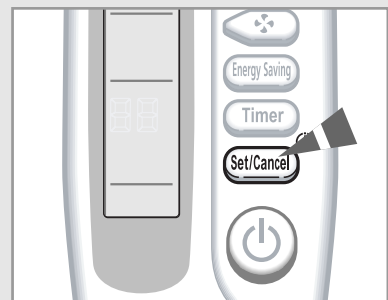


Setting the Sleep Timer


The Sleep Timer can be used when you are cooling to switch the air conditioner off automatically after a period of 8 hours.

 ➤ If you wish to switch the unit off at a specific time, refer to page 21.

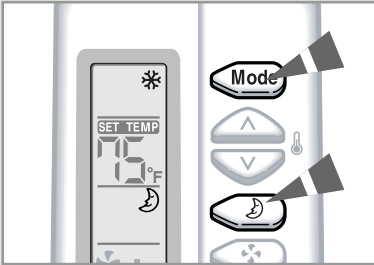


1 Make sure that you have selected the Cool mode.

 2 Press the  button on the remote control.


- Result:**
- ◆ Each time you press a button, the unit beeps.
 - ◆ The  indicator is displayed.
 - ◆ The remaining time is displayed and decreased by 1 hour automatically to indicate the remaining time.
 - ◆ The air conditioner will be controlled as illustrations below.

 
Cooling When the temperature has been increased by 2°F (after 1 hour), it is maintained for 7 hours.

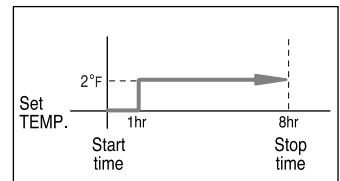


To Cancel the Sleep Timer

To cancel the timer press:

- ◆ The  button on the remote control.


- Result:**
- ◆ The unit beeps.
 - ◆ The  indicator is no longer displayed.
 - ◆ The air conditioner operates in the mode selected last.

 ➤ If you select the Energy Saving mode in the Sleep Timer mode, the Sleep Timer will be cancelled and the air conditioner will start up in the Energy Saving mode.

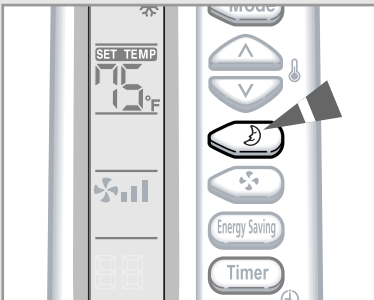


Selecting Energy Saving Mode


If you wish to save energy when using your air conditioner, select the energy saving mode.

- 1 To select the energy saving mode, press the  button on the remote control one or more times until the Energy Saving indicator lights up.

Result:

 
 
- ◆ The fan and compressor cycle on and off together.
- ◆ The fan will continue to run for a short time after the compressor cycles off.

- If you would like the air conditioner to run in Dry mode, do not press the  button. You cannot use the Dry mode in the Energy Saving mode.


- 2 To stop the energy saving mode, press the  button on the remote control again.

Result: The fan runs at all times, while the compressor cycles on and off.

- If you select the Sleep Timer in the Energy Saving mode, the Energy Saving will be cancelled and the air conditioner will start up in the Sleep Timer mode.

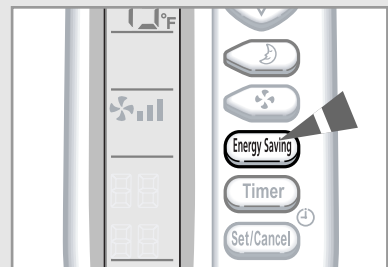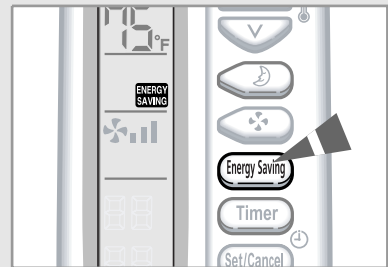

 
Adjusting the Air Flow Direction Horizontally

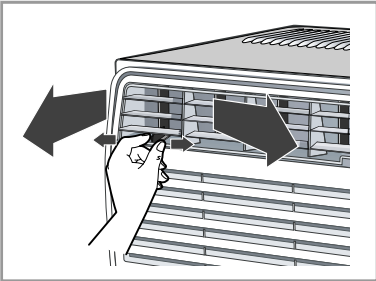

Depending on the position of the unit in your room, you can adjust the orientation of the inner air flow blades on the unit.

Adjust the air flow blades to the desired position by pushing them side to side.

 Adjusting the Air Flow Direction Vertically

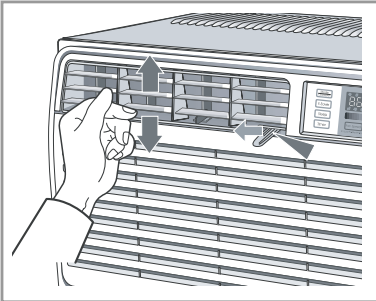

The outer air flow blades can be adjusted to control the vertical air flow direction. (Except AW0593L)

RECOMMENDA	When...	Adjust the blades to face...
	Cooling	Upwards.

Adjust the air flow blades to the desired position, by pushing them upwards or downwards.

- If you orient the air flow blades downwards and the unit operates in Cool mode for long periods of time, dew may:
 - Form on the surface of the blades
 - Drip from the blades

Temperature and Humidity Ranges

The following table indicates the temperature and humidity ranges within which the air conditioner can be used.

Mode	Indoor Temperature	Outdoor Temperature	Indoor Humidity
Cooling	70°F to 90°F approx.	70°F to 110°F approx.	80% or less

If the air conditioner is used at... Then...


Higher temperature	The automatic protection feature may be triggered and the air conditioner stopped.
--------------------	--


Lower temperature	A water leakage or some other malfunction may happen if the heat exchanger freezes.
-------------------	---

Higher humidity levels	Water may condense on and drip from the surface of the unit if it is used for long periods.
------------------------	---


Cleaning Your Conditioner

Be sure to clean the air filter periodically to maintain the air conditioner in the best condition for a long period of time.

 **When cleaning the air conditioner, turn it off and pull out the power plug.**

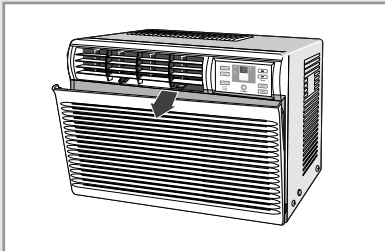 


 - 1 Open the front grille by pulling the tabs on both sides of the grille. Then lift it up slightly to open the front grille completely.

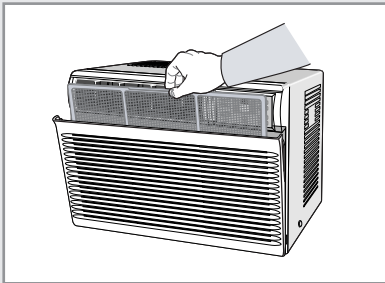

- 2 Grab the tabs on the filter and pull it up and out.

 - 3 Remove all dust on the air filter with a vacuum cleaner or brush.

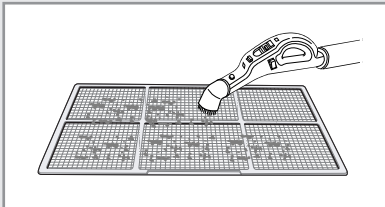


 
- 4 When you have finished, insert the air filter back into its original position.

- 5 Wipe the surface of the unit with a neutral detergent and then wipe it again with dry cloth.
(Be sure not to use benzene, solvent or other chemical products.)

➤ If you...	Then...
Will not be using the air conditioner for a long period of time	<ul style="list-style-type: none">◆ Set the fan going for a few hours to dry the inside of the air conditioner thoroughly.◆ Switch the air conditioner off and unplug it from the wall socket.◆ Clean the filter and outer surfaces.
Have not used the air conditioner for a long period of time	Set the fan going for a few hours to dry the inside of the air conditioner thoroughly.

Solving Common Problems

Before contacting an authorized service center, perform the following simple checks. They may save you the time and expense of an unnecessary call.

Problem	Explanation / Solution
The air conditioner does not operate at all	<ul style="list-style-type: none">◆ Check that the circuit breaker used for the air conditioner has not been triggered.◆ Check that the power cable is plugged into a wall socket and the socket is switched on, if necessary.◆ Check that the temperature indicator on the unit is lit; if necessary, press the  (On/Off) button on the remote control or unit.
The air conditioner does not operate with the remote control	<ul style="list-style-type: none">◆ Check that there are no obstacles between you and the unit.◆ Replace the remote control batteries if necessary.◆ Check that you are close enough to the unit (seven metres/yards or less).
No beep is heard when you press the  (On/Off) button on the remote control	<ul style="list-style-type: none">◆ Check that you are pointing the remote control at the remote control sensor on the unit.◆ Replace the remote control batteries if necessary.
The air conditioner does not cool	<ul style="list-style-type: none">◆ Check that the correct operating mode has been selected (Cool).◆ The room temperature may be too low.◆ Dust may be blocking the air filter; refer to page 26 for cleaning instructions.◆ Check that there is no obstacle blocking the air flow into or out of the unit.
The timer is not correctly triggered	<ul style="list-style-type: none">◆ Check that the timer has been programmed correctly; refer to page 12~14, 20~22.
Odors are permeating the room during air conditioning	<ul style="list-style-type: none">◆ Ventilate the room.

Technical Specifications

Design and specifications are subject to change without notice.

Model	Power Supply
AW0593L AW0693L AW0893L AW1093L AW1293L	115V~, 60Hz
AW1893L	230-208V~, 60Hz

SAMSUNG ROOM AIR CONDITIONER

LIMITED WARRANTY TO ORIGINAL PURCHASER

This SAMSUNG brand product, as supplied and distributed by SAMSUNG ELECTRONICS AMERICA, INC. (SAMSUNG) and delivered new, in the original carton to the original consumer purchaser, is warranted by SAMSUNG against manufacturing defects in materials and workmanship for a limited warranty period of:

One (1) Year Parts and Labor, Five (5) Years Parts Warranty for Compressor

This limited warranty begins on the original date of purchase, and is valid only on products purchased and used in the United States. Warranty repairs must be performed by SAMSUNG's authorized service center. To receive warranty service, the original dated bill of sale must be presented upon request as proof of purchase to SAMSUNG or SAMSUNG's authorized service center.

SAMSUNG will repair or replace any part found to be defective at no charge, as stipulated herein, with new or reconditioned parts during the limited warranty period specified above. To request warranty service, the purchaser must contact SAMSUNG for problem determination and service procedures. SAMSUNG does not warrant uninterrupted or error-free operation of the product. All replaced parts and products become the property of SAMSUNG and must be returned to SAMSUNG. Replacement parts and products assume the remaining original warranty, or ninety(90) days, whichever is longer.

In - Home Service (Except AW0593L):

During the warranty labor period, in-home service will be provided subject to availability within the contiguous United States. In-home service is not available in all areas. If during in-home service repair can not be completed, it may be necessary to remove, repair and return the product. If in-home service is unavailable, SAMSUNG may elect, at our option, to provide for transportation of our choice to and from a SAMSUNG authorized service center. Otherwise, transportation to and from the SAMSUNG authorized service center is the responsibility of the purchaser.

This limited warranty covers manufacturing defects in materials and workmanship encountered in normal, noncommercial use of this product and shall not apply to the following, including, but not limited to: delivery and installation; damage which occurs in shipment; applications and uses for which this product was not intended; failures or problems which are caused by products or equipment not supplied by SAMSUNG; accidents, misuse, abuse, neglect, misapplication, fire, water, lightning or other acts of nature; incorrect electrical line voltage, fluctuations or surges; damage caused by improper or faulty installation; product alteration or modification; improper or unauthorized repair; cosmetic damage or exterior finish; product with altered serial numbers; failure to follow operating and environmental instructions that are covered and prescribed in the instruction book; customer adjustments, routine maintenance and cleaning; consumable items such as filters; use of non-SAMSUNG or unauthorized parts, supplies, accessories or equipment which damage this product or result in service problems.

THERE ARE NO EXPRESS WARRANTIES OTHER THAN THOSE LISTED AND DESCRIBED ABOVE, AND NO WARRANTIES WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL APPLY AFTER THE EXPRESS WARRANTY PERIODS STATED ABOVE, AND NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR CORPORATION WITH RESPECT TO THIS PRODUCT SHALL BE BINDING ON SAMSUNG. SAMSUNG SHALL NOT BE LIABLE FOR LOSS OF REVENUE OR PROFITS, FAILURE TO REALIZE SAVINGS OR OTHER BENEFITS, OR ANY OTHER SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY THE USE, MISUSE OR INABILITY TO USE THIS PRODUCT, REGARDLESS OF THE LEGAL THEORY ON WHICH THE CLAIM IS BASED, AND EVEN IF SAMSUNG HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. NOR SHALL RECOVERY OF ANY KIND AGAINST SAMSUNG BE GREATER IN AMOUNT THAN THE PURCHASE PRICE OF THE PRODUCT SOLD BY SAMSUNG AND CAUSING THE ALLEGED DAMAGE. WITHOUT LIMITING THE FOREGOING, PURCHASER ASSUMES ALL RISK AND LIABILITY FOR LOSS, DAMAGE OR INJURY TO PURCHASER AND PURCHASERS PROPERTY AND TO OTHERS AND THEIR PROPERTY ARISING OUT OF THE USE, MISUSE OR INABILITY TO USE THIS PRODUCT SOLD BY SAMSUNG NOT CAUSED DIRECTLY BY THE NEGLIGENCE OF SAMSUNG. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT, IS NONTRANSFERABLE AND STATES YOUR EXCLUSIVE REMEDY.

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

To obtain warranty service, please contact SAMSUNG at:

SAMSUNG ELECTRONICS AMERICA, INC. - CONSUMER ELECTRONICS CUSTOMER SERVICE
400 Valley Road, Suite 201 Mount Arlington, NJ 07856
Tel: 973-601-6000, Fax: 973-601-6001
1-800-SAMSUNG (1-800-726-7864)
www.sosimple.com