


Stinger®

SR200 / SR80

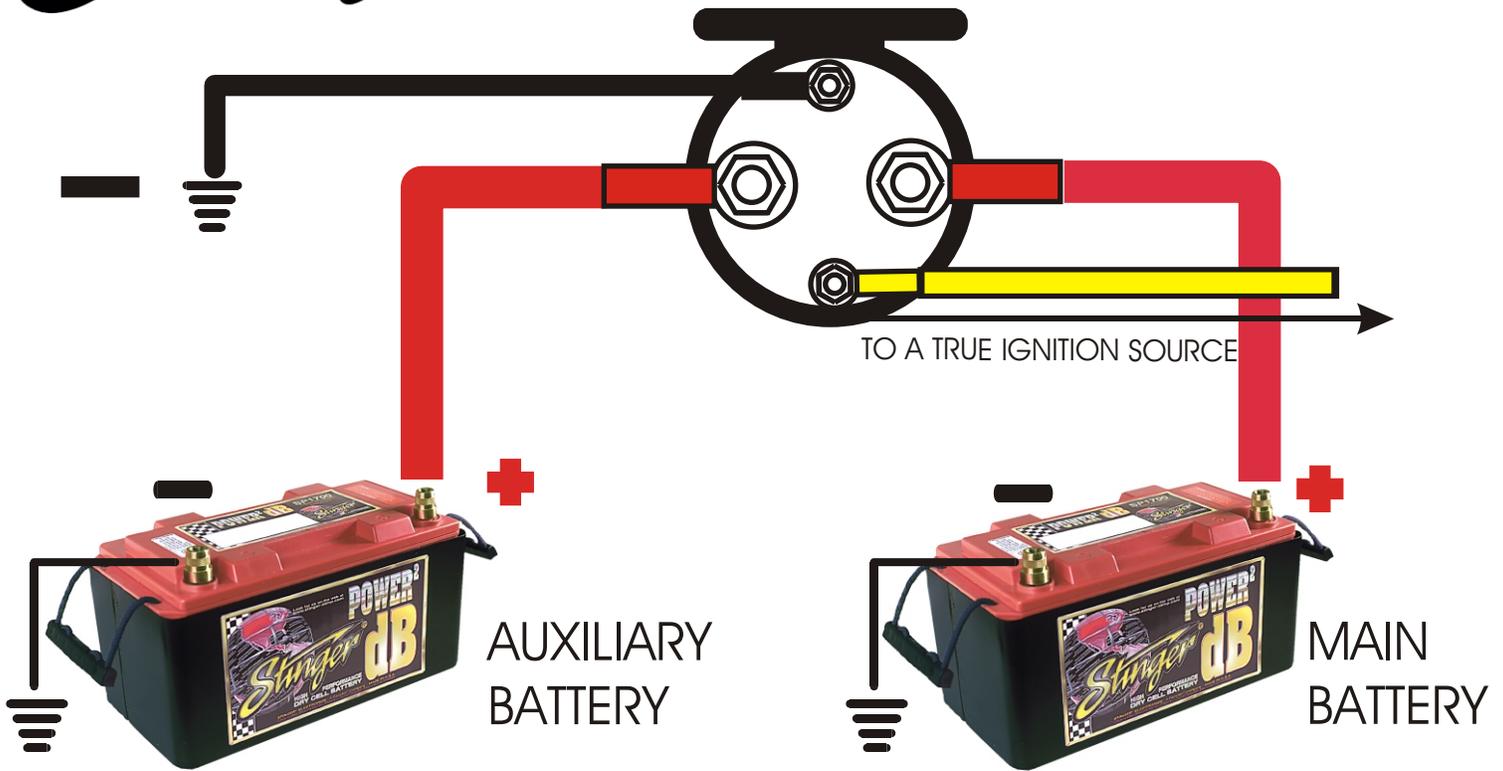

SR80 / SR200 Installation Instructions:

Two Large Terminals:

- #1- Connect one large terminal to the vehicle's main battery via a fuse holder.
- #2- Connect the other large terminal to the sound system's auxiliary battery / batteries, again, via a fuse holder.

*Note: The large terminals can be wired in either direction.

Two Small Terminals:

- #1- Connect one small terminal to true ignition power from your ignition harness. True ignition will keep power through the cranking cycle of the starter when tested. Verify that your power source is true ignition.
- #2- Connect to chassis ground.

*Note: The small terminals can be wired in either direction.

Stinger Electronics™, A Division of AAMP™ of America (A Recoton Co.)
13160 56th Court Clearwater, Florida 33760

www.stingerelectronics.com