OPERATOR AND PARTS MANUAL



Grass Catcher 966004101

Please read the operator's manual carefully and make sure you understand the instructions before using the machine.

CONTENTS

SAFETY RULES4
GENERAL OPERATION4
SLOPE OPERATION4
CHILDREN5
SERVICE5
CONTAINER CONTENTS7
ASSEMBLY8

OPERATION1	2
IMPROVED BAGGING TIPS1	2
CUSTOMER RESPONSIBILITIES 1	3
GENERAL RECOMMENDATIONS1	3
STORAGE1	3
PARTS 1	4

CONGRATULATIONS on your purchase of a new Grass Catcher. It has been designed, engineered and manufactured to give you the best possible dependability and performance.

Should you experience any problem you cannot easily remedy, contact the nearest authorized service center/ department. They have competent, well-trained technicians and the proper tools for service and repairs.

Read and retain this manual. The instructions will enable you to assemble and maintain your collection system properly. Always observe the SAFETY RULES.

KNOW YOUR GRASS CATCHER

READ THIS OPERATION MANUAL AND SAFETY RULES BEFORE ASSEMBLING OR OPERATING YOUR GRASS CATCHER. Compare the illustrations with the carton contents to familiarize yourself with the parts before starting the assembly. Study the operating instructions and safety precautions thoroughly to insure proper functioning of your Grass Catcher and to prevent injury to yourself and others. Save this manual for future reference.



WARNING

The operation of any mower can result in foreign objects thrown into the eyes, which can result in severe eye damage. ALWAYS wear safety glasses or eye shields before starting your mower and while mowing. We recommend a wide vision safety mask for over the spectacles or standard safety glasses.

SAFE OPERATION PRACTICES FOR RIDE-ON MOWERS



DANGER !

THIS CUTTING MACHINE IS CAPABLE OF AMPUTATING HANDS AND FEET AND THROWING OBJECTS. FAILURE TO OBSERVE THE FOLLOWING SAFETY INSTRUCTIONS COULD RESULT IN SERIOUS INJURY OR DEATH.

GENERAL OPERATION

- Read, understand and follow all instructions in the manual and on the machine before starting.
- Only allow responsible adults, who are familiar with the instructions, to operate the machine.
- Clear the area of objects such as rocks, stones, toys, wire etc., which could be picked up and thrown by the blades.
- Be sure the area is clear of all people and pets before mowing. Stop the machine if anyone enters the area.
- Never carry passengers or children even with blades off.
- Do not mow in reverse unless absolutely necessary. Always look down and behind before and while backing.
- Be aware of the mower discharge direction and do not direct it towards anyone. Do not operate the mower without either the entire grass catcher or the guard in place.
- Slow down before turning.
- Never leave the machine unattended when the engine is running. Always turn off the blades, set the parking brake, stop the engine and remove the key before leaving the machine.
- Turn off blades when not mowing.
- Stop engine before removing grass catcher or unclogging chute.
- Mow only in daylight or good artificial light.
- Do not operate the machine while under the influence of alcohol or drugs.
- Watch out for traffic when operating near or crossing roadways.
- Use extra care when loading and unloading the machine onto a trailer or truck.
- Data indicates that operators, age 60 years and above, are involved in a large percentage of riding mower-related injuries. These operators should evaluate their ability to operate the riding mower safely enough to protect themselves and others from serious injury.
- **DO NOT** operate mower with grass catcher, unless the front weights are installed.

Keep machine free of grass, leaves or other debris buildup which can touch hot exhaust/engine parts and burn. Do not allow the mower deck to plow leaves or other debris which can cause buildup to occur. Clean any oil or fuel spillage before operating or storing the machine. Allow machine to cool before storage.

SLOPE OPERATION

Slopes are a major factor related to loss-of-control and tip-over accidents, which can result in severe injury or death. All slopes require extra caution. If you cannot back up the slope or if you feel uneasy on it, do not mow it.

- DO
- Mow up and down slopes (10° Max.), not across.
- Remove obstacles such as rocks, tree limbs, etc.
- Watch for holes, ruts, or bumps. Uneven terrain could overturn the machine. Tall grass can hide obstacles.
- Use slow speed. Choose a low speed so that you will not have to stop while on the slope.
- Use extra care with grass catchers or other attachments. These can change the stability of the machine.
- Keep all movement on the slopes slow and gradual. Do not make sudden changes in speed or direction.
- Avoid starting or stopping on a slope. If tires lose traction, disengage the blades and proceed slowly straight down the slope.



SAFE OPERATION PRACTICES FOR RIDE-ON MOWERS



DO NOT

- **Do not** turn on slopes unless necessary, and then, turn slowly and gradually downhill, if possible.
- **Do not** mow near drop-off, ditches, or embankments. The mower could suddenly turn over if a wheel is over the edge of a cliff or ditch, or if an edge caves in.
- **Do not** mow on wet grass. Reduced traction could cause sliding.
- **Do not** try to stabilize the machine by putting your foot on the ground.

CHILDREN

Tragic accidents can occur if the operator is not alert to the presence of children. Children are often attracted to the machine and the mowing activity. Never assume that children will remain where you last saw them.

- NEVER allow children to operate the machine.
- Keep children out of the mowing area and under the watchful care of another responsible adult.
- Be alert and turn off the machine if children enter the area.
- Before and when backing, look behind and **down** for small children.
- Never carry children. They may fall off and be seriously injured or interfere with safe machine operation.
- Use extra care when approaching blind corners, shrubs, trees, or other objects that may obscure vision.

SERVICE

- The operation of any mower can result in foreign objects thrown into the eyes, which can result in severe eye damage. Always wear safety glasses or eye shields while operating your mower or performing any adjustments or repairs. We recommend a wide vision safety mask over spectacles or standard safety glasses.
- Use extra care in handling gasoline and other fuels. They are flammable and vapors are explosive.
 - Use only an approved container.
 - Never remove gas cap or add fuel with the engine running.
 - Allow engine to cool before refueling.
 - Do not smoke.
 - Never refuel the machine indoors.
 - Never store the machine or fuel container inside where there is an open flame, such as a water heater.
- Never run a machine inside a closed area.
- Keep nuts and bolts, especially blade attachment bolts, tight and keep equipment in good condition.
- Never tamper with safety devices. Check there proper operation regularly.



CAUTION

In order to prevent accidental starting when setting up, transporting, adjusting or making repairs, always disconnect spark plug wire and place wire where it cannot contact spark plug.

SAFE OPERATION PRACTICES FOR RIDE-ON MOWERS



- Keep machine free of grass, leaves, or other • debris buildup. Clean oil or fuel spillage. Allow machine to cool before storing.
- Stop and inspect the equipment if you strike an object. Repair, if necessary, before restarting.
- Never make adjustments or repairs with the engine running.
- Grass catcher components are subject to wear, damage, and deterioration, which could expose moving parts or allow objects to be thrown. Frequently check components and replace with manufacturer's recommended parts, when necessary.
- Mower blades are sharp and can cut. Wrap the blade(s) or wear gloves, and use extra caution when servicing them.
- Check brake operation frequently. Adjust and service as shown in the Operator's Manual.



WARNING!

Battery posts, terminals and related accessories contain lead and lead compounds, chemicals know to the State of California to cause cancer and birth defects or other reproductive harm. Wash hands after handling.



WARNING!

DO NOT tow any trailers, etc. with this mower. They may jackknife or over turn causing damage to the mower and possibly serious injury to the operator.

UNPACKING INSTRUCTIONS

- Remove all parts and packing materials from carton.
- Check carton contents against list. Be sure all parts are there.

TOOLS REQUIRED

- 1/2" Wrench (2) ٠
- 9/16" Wrench (2)
- ⁷/₁₆" Wrench (2)
- Ft/Lbs Torque Wrench •
- Drill
- 1/4" and 5/16" Drill Bits
- ⁹/₁₆" Socket and Ratchet ٠
- Standard Screwdriver

CONTAINER CONTENTS

- 2 Soft bag containers 1 Bag of Hardware
- 1 Upper Chute
- 1 Lower Chute 1 - Mounting Hardware
- 1 Cover Assembly



NOTE: When right hand (RH) and left hand (LH. are mentioned in this manual, it means when you are seated on the mower in the operator's position.

CAUTION

BEFORE ASSEMBLING GRASS CATCHER TO MOWER:

- Set parking brake.
- Place motion control levers in "NEUTRAL" position.
- Turn ignition key "OFF" and remove key.
- Make sure the blades and all moving parts have completely stopped.
- Disconnect spark plug and place wire where it cannot come in contact with plug.

INSTALL PLATE AND HANGER

- 1. Using hardware provided in kit, attach support mount to unit.
- 2. Attach hanger bracket to support mount. Do not fully tighten nuts at this time.



Hanger Bracket

 Secure rear end of support straps to outside of hanger assembly. Set reinforcement plates to the outside of the tank brackets and fasten front end of support strap to tank bracket and reinforcment plate with round head bolt. Secure front end of reinforcement plate to tank bracket with hex bolt. Fully secure all mounting hardware. See illustration.

NOTE: Depending on model, rear guard hole may need to be drilled out to ⁵/₁₆" if kit hardware is too large.



Support Straps

2MOUNTING COVER ASSEMBLY TO SUPPORT ASSEMBLY

For ease of assembly, you may wish assistance from another person for mounting the cover assembly to mower.

- 1. Position cover assembly on the ground behind the mower.
- 2. Lift and rotate cover to align the frame bracket with the hanger and slide the cover down until secure.



INSTALLING SPACER PLUG

Remove plastic end cap from the center bag support arm. Fully insert spacer plugs into the ends of the support tube. It may be necessary to tap the spacer into place with a hammer or mallet. Replace the plastic end cap back over the spacer. The additional extension will hold the hood more securely when latched.



CONTAINER INSTALLATION

- Install containers on support frame, overlapping containers at center tube.
 Note: One container should always overlap the other container at the center tube.
- 2. Close cover and lock latch handle over support tubes.

Latch Handle



WARNING!

DO NOT operate mower unless container is properly installed. Container is subject to wear and deterioration, check containers frequently, replace when cracked or damaged. Use only a recommended replacement container.

5LOWER CHUTE INSTALLATION

- 1. Raise and hold deflector shield in upright position.
- 2. Fit lower chute as shown and hook rear latch to mower deck.
- 3. Align the bracket slot on lower chute with the deflector bracket tab on the mower deck. Slide chute down over tab.
- 4. With the lower chute in proper position, hold the chute securely while hooking the front latch to the mower deck.

NOTE: While hooking the latches, the deflector shield may try to push the chute away from the mower deck opening. It is important to hold the chute in position while hooking the latches to the mower deck.



6 UPPER CHUTE INSTALLATION

- With ¼" drill bit, add a new hole 4¾" inches from the top of the chute, down along the side seam.
- 2. Attach bungee latch assembly from kit.
- 3. Slide upper chute onto lower chute, lining up notches and channels.
- 4. Stretch bungee latch up onto acorn nut on upper chute to secure.





Before continuing to Step 7, locate the seal fastening kit (packed separately) and install the top cover grommet.

7 CHUTE / HOOD INSTALLATION

- 1. Push upper chute through the gasketed opening in the cover assembly.
- 2. Rotate chute so the chute opening is downwards toward the container bags.

8 LEVELING MOWER DECK

Be sure deck is properly leveled for best mower performance. See your mower operator's manual for instructions.



IMPROVED BAGGING TIPS

Follow the mower operation instructions in the mower operator's manual.

When using the grass catcher on a lawn where grass and leaf bagging equipment has not been used, thatch and debris that has accumulated for long periods of time will be picked up. The amount collected and the total time of operation may be greater than experienced with regular use of the grass catcher.

- Always run throttle at full speed when bagging.
- Select a speed low enough to give good mower cutting performance, good quality cut and good bagging performance.

NOTE: It may be necessary to overlap width of cut to suit your conditions.

- If grass is extremely tall, it should be mowed twice. The first time relatively high, the second time to desired height.
- Use left hand side of mower for trimming.
- Plastic trash bags (3.0 mil, 30 gallon) can be inserted inside grass catcher containers for ease of debris disposal. To remove the plastic trash bags when full:
 - a. Disengage blades, shift into neutral, engage the parking brake and stop the engine.
 - b. Unlatch and raise cover.
 - c. Remove one container at a time by grasping container handles and pulling toward the rear, off of the tube rails.
 - d. With the container resting on the ground, close and secure the top of the plastic lawn bag.
 - e. Tip the container on its side and slide the filled bag from the container.
 - f. Install a new plastic lawn bag with the edges of the bag draped over upper lip of the container.
 - g. Repeat for other container.
 - h. Reinstall containers making sure right container overlaps left container at center supports.
 - i. Close cover and secure latches over center support tubes.
 - Avoid cutting wet grass or mowing in the morning while the dew is still heavy. Grass clippings collected under these conditions tend to be sticky and adhere to the walls of the flow path causing clogging.

- If the grass catcher fails to pick up cut grass or leaves, it is an indication that clogging has occurred in the system or that the grass catcher containers are full.
- a. Disengage blades, place motion control levers in neutral position.
 - Unlatch and raise cover.
 - Slide out containers and dispose of clippings.
 - Replace containers, close cover, and latch.
- b. Unlatch chutes and check for clogging.
 - Remove all debris in chute.
 - Reassemble and latch chutes.

CAUTION

- DO NOT operate mower with grass catcher partially installed.
- Disengage blades and stop engine before leaving mower seat to empty containers, unclogging chutes, etc.
- Close cover before starting.
- Disengage mower blades when crossing driveways or gravel surfaces and other areas where thrown objects could be a hazard.
- DO NOT attempt to vacuum up cans or other potentially hazardous projectiles.

GENERAL RECOMMENDATIONS

Always observe safety rules when performing any maintenance.

- Before each use check for loose fasteners.
- Clean unit thoroughly after each use.

BLADE CARE

For best results mower blades must be kept sharp. Replace bent or damaged blades.

• See BLADE CARE instructions in your mower operator's manual.

STORAGE

When grass catcher is to be stored for a period of time, clean it thoroughly, remove all dirt, grass, leaves, etc. Store in a clean, dry place.

BEFORE PERFORMING MAINTENANCE, SERVICE OR ADJUSTMENTS:

- · Set parking brake.
- Place motion control levers in "NEUTRAL" position.
- Place clutch control in "DISENGAGED" position.
- Turn ignition key to "OFF" position.
- Make sure blades and all moving parts have completely stopped.
- Disconnect spark plug wire(s) from spark plug(s) and place wire where it cannot come in contact with plug.

Do not leave grass in bagger containers. Empty containers after each use and before storing. Failure to do so may result in spontaneous combustion which could develop into a fire.



Grass catcher components are subject to wear, damage and deterioration, which could expose moving parts or allow objects to be thrown. Frequently check components and replace with manufacturer's recommended parts when necessary.



ITEM	PART NO.	QTY.	DESCRIPTION
1	539 11113		COVER ASSM, COMPLETE INCLUDES ITEMS 2-4
2	532 1275	331	SCREEN, COVER
3	532 1550	421	STRIP, REINFORCEMENT
4	532 1308	951	ATCH HANDLE, COVER
5	539 9769	524	SCREW #10-24 x ⁵ /8
6	532 1327	961	SPRING, COVER, LH
7	532 1329	831	SPRING, COVER RH
8	532 1332	351	SPACER, COVER
9	532 0859	021	SPRING, RETAINER
10	532 1740	833	CAP, TUBING END

- ITEM PART NO. QTY. DESCRIPTION
- 11... 532 179746....1 BAGGER, FRAME
- 12.. 532 128600....1 PIN, HINGE
- 13.. 532 400226....2 CONTAINER, SOFT BAG
- 14.. 539 105408....8 WASHER #10 FLAT
- 15.. 539 976977....4 NUT #10-24 HEX NYLOC
- 17.. 522 801301....1 SPACER, PLUG
- 18.. 532 127534....1 GASKET
- 19.. 539 108081....4 SCREW #10-24 x ½
- 20.. 539 108086....9 NUT #10-24 ACORN



- ITEM
 PART NO.
 QTY.
 DESCRIPTION

 1...
 525
 497001....1
 CHUTE, UPPER

 2...
 532
 405455....1
 CHUTE, LOWER

 3...
 539
 108082....1
 INDICATOR, BAG DUMP

 4...
 522
 854702....1
 BRACKET, HANGER

 5...
 539
 108089....3
 NUT #10-24 WELD PLATED

 6...
 539
 108194....2
 LATCH ASSM, CHUTE

 7...
 539
 976952....3
 SCREW #10-24 x 5/8

 8...
 539
 108084....4
 WASHER ³/₁₆ x ³/₄
 16 GA

 9...
 539
 109552....3
 WASHER ³/₁₆ LOCK
 10...
 522854402....1
 STRAP, SUPPORT, RT

 11...
 522
 854502....1
 STRAP, SUPPORT, LT
 12...
 522
 854602....1
 BRACKET, COLLECTION
- ITEM PART NO. QTY. DESCRIPTION
- 13.. 539 990316....4 RHSNB ⁵/₁₆-18 x ³⁄₄
- 14.. 539 112899..12 NUT 5/16-18 HEX FLG NYLOC
- 15.. 523 112802....2 PLATE
- 16.. 539 976938....2 HCS $\frac{5}{16}$ -18 x 2¹/₄
- 17.. 539 100472....2 RHSNB 5/16-18 x 11/4
- 18.. 539 990209....4 HCS ⁵/16-18 x 1
- 19.. 539 990188....6 WASHER 5/16 SAE FLAT
- 20.. 539 108081....1 SCREW, #10-14 x 1/2
- 21.. 539 108088....1 LATCH, HOOD
- 22.. 539 108083....1 SCREW #10-24 x 11/8
- 23.. 539 108085....1 SPACER, SPLIT
- 24.. 539 108086....1 NUT #10-24 ACORN

HEX HEAD CAP SCREWS

The torque values shown should be used as a general guideline when specific torque values are not given.

Grade		SAE Grade 5		SAE Grade 8		Flangelock Screw w/Flangelock Nut	
	ft./lbs	Nm	ft./lbs	Nm	ft./lbs	Nm	ft./lbs
Shank Size (Diameter in inches, fine or coarse thread)	1⁄4	9	12	13	18		
	⁵ / ₁₆	18	24	28	38	24	33
	³ /8	31	42	46	62	40	54
	⁷ / ₁₆	50	68	75	108		
	1/2	75	102	115	156		
	⁹ / ₁₆	110	150	165	224		
	⁵ /8	150	203	225	305		
	3⁄4	250	339	370	502		
	7/ ₈	378	513	591	801		
	1 ¹ /8	782	1060	1410	1912		

U.S. Standard Hardware

** Grade 5 - Minimum commercial quality (lower quality not recommended)

Metric Standard Hardware

Grade		Grade 8.8		Grade 10.9		Grade 12.9	
	ft./lbs	Nm	ft./lbs	Nm	ft./lbs	Nm	ft./lbs
Shank Size (Diameter in millimeters, fine or coarse thread)	M4	1.5	2	2.2	3	2.7	3.6
	M5	3	4	4.5	6	5.2	7
	M6	5.2	7	7.5	10	8.2	11
	M7	8.2	11	12	16	15	20
	M8	13.5	18	18.8	25	21.8	29
	M10	24	32	35.2	47	43.5	58
	M12	43.5	58	62.2	83	75	100
	M14	70.5	94	100	133	119	159
	M16	108	144	147	196	176	235
r in m	M18	142	190	202	269	242	323
nk Size (Diamete	M20	195	260	275	366	330	440
	M22	276	368	390	520	471	628
	M24	353	470	498	664	596	794
Sha	M27	530	707	474	996	904	1205