

BUNN®

ULTRA-2 PAF ULTRA-2 PAFA

USE & CARE INSTRUCTIONS for ULTRA-2 COLD DRINK DISPENSER WITH PAF DISPENSER

NOTICE - This guide is for quick reference only and is not intended to replace the information in the Operation Manual!

DISASSEMBLY & CLEANING

EMPTY ALL PRODUCT FROM THE ULTRA HOPPERS INTO A BUCKET OR CONTAINER BEFORE PROCEEDING!




1. Open the Cabinet Door and allow the support arms to lock in place. Door must remain open during the entire cleaning procedure.



2. Place the power switch in the OFF position. Slide the gate shut on the powder hopper and remove the hopper. Wipe the hopper tray clean of powder residue.




3. Pull the Mixing Chamber out of the Whipper Chamber.

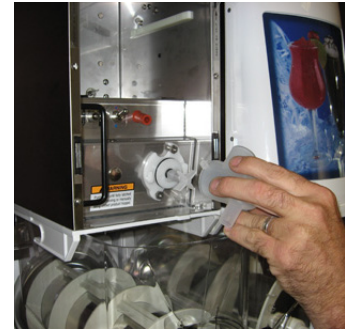

4. Twist the Whipper Chamber clockwise and pull it off the Whipper Chamber Receptacle.



5. Pull the Frother off the Motor Shaft. Notice the flat keyway on the shaft and the matching keyway inside the Frother. It is important that these two keyways are lined up when reassembling.

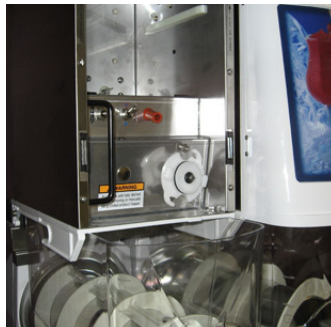

6. Twist Whipper Chamber Receptacle clockwise and pull it off the Motor Shaft. Wipe down all inside surfaces.



7. Slip the O-ring off the Whipper Chamber Receptacle and remove the shaft seal.



8. Wash components in a mild solution of dish detergent using a bristle brush. Rinse and dry each item thoroughly before reassembling.

NOTE: Parts must be thoroughly dry before adding powder to the hopper.


(Page 1 of 4, Continued)

BUNN-O-MATIC CORPORATION

POST OFFICE BOX 3227

SPRINGFIELD, ILLINOIS 62708-3227

PHONE: (217) 529-6601 FAX: (217) 529-6644

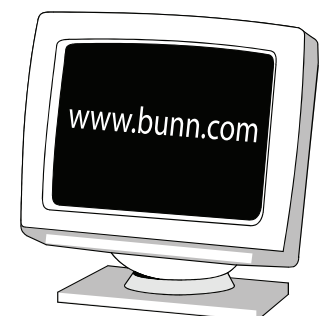

DISASSEMBLY & CLEANING


Turn cooling to OFF selection. Empty all product from the hopper(s). Turn auger to OFF selection.



1. Slide PAF assembly back until it latches before removing ULTRA Hoppers.



2. Depress the hopper lock plunger, lift slightly.

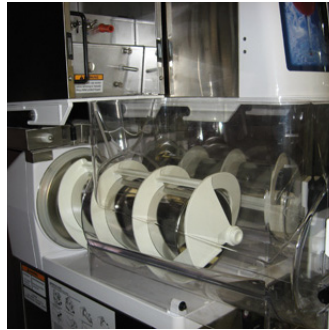

3. Pull the hopper assembly forward and remove.



4. Pull the auger from the cooling drum.




5. Remove the hopper seal from the flange on the cooling drum.



6. **CAUTION:** Faucet valve is under spring tension. Spread one side of the handle first, then the other and disconnect from hopper.



7. Carefully slide valve up to remove spring and faucet seal. Extra care should be taken when handling the seal to prevent damage.

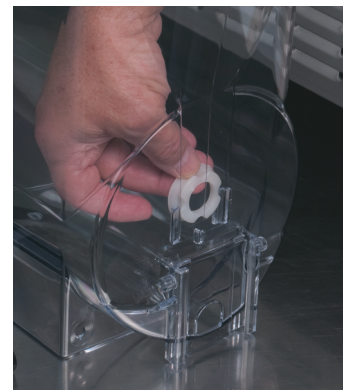

8. Remove the auger nose bushing from inside the front of the hopper. **NOTE:** Do not scratch this surface when cleaning. Deep scratches could cause leakage around the seal.



9. Remove the drip tray and cover.


10. Place all parts in a clean sink with mild hot water (120°F) and sanitizer solution. Allow all parts to soak for at least 5 minutes. Carefully wash all components with a clean wash cloth in the hot water and sanitizer solution. Use a clean, soft bristle brush as needed for the smaller components and tight areas. Do not immerse hopper lids. Use a commercial sanitizer that has 100 ppm of available chlorine with a concentration level of at least 3% available chlorine (KAY-5 Sanitizer). Follow the sanitizer's mixing instructions to ensure 100 ppm of available chlorine.

11. Wash the drum(s), hopper drip tray(s), top cover(s), and outer enclosure using a clean wash cloth that has been dampened in the hot water and sanitizer solution. Pay particular attention to the shaft area and make sure it is thoroughly cleaned and sanitized.

12. Thoroughly rinse all surfaces with a clean wash cloth that has been dampened with hot water. Wipe dry with a clean dry wash cloth before reassembling the dispenser.

NOTE – Although most parts are dishwasher safe, they may be affected by the chemicals in some commercial sanitizing agents. Do not place the hopper nor hopper lids in a dishwasher. Rinse thoroughly before assembly.

ASSEMBLY

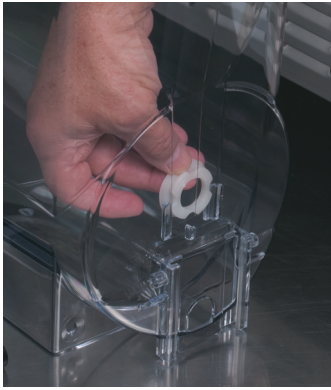

1. Replace the auger nose bushing inside the front of the hopper.



2. Install the hopper seal over the flange at the rear of the cooling drum as shown.



3. Align the auger shafts with the augers. Push the augers as far as they will go and rotate them so the flat face of the auger shaft is aligned with the flat face of the auger nose.



4. Install the hopper over the auger and cooling drum and slide it into place. Push down until the hopper **lock plunger snaps into place**.



5. Position the faucet seal and the return spring in the faucet valve.



6. Slide the faucet valve assembly into place on the hopper.



7. Press down on the valve to compress the spring. Position the faucet handle over the faucet valve one side at a time and snap into place on the hopper.



8. Install the drip tray and cover.



9. Turn ON augers and cooling function to desired settings.

NOTE: Whether liquid concentrate or granulated powder, all product must be thoroughly mixed **BEFORE** adding it to the hoppers.



10. Slide PAF assembly forward.



11. Reassemble and install all PAF parts. Return power switch to the ON position. Close Door.

THOROUGH CLEANING OF THE PAF HOPPER (Once a week)




1. Open the Cabinet Door and allow the support arms to lock in place.



2. Slide the gate shut on the powder hopper and remove the hopper. Remove the Cover and empty the contents.



3. Pull the Ejector Elbow off the Hopper Base. Remove the Slide Gate from the Ejector Elbow.

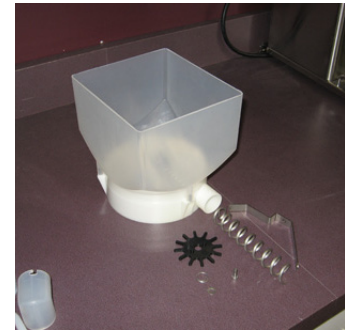

4. Remove the Wiper Blade and Drive Gear by removing the Retaining Ring from the Wiper Blade Shaft. Remove Auger by pulling it out the front of Hopper Base.



5. Remove the Auger Drive Shaft by turning the screw of the Auger Drive Bracket in a **clockwise** direction.



6. Wash all components in a mild solution of dish detergent using a bristle brush when needed. Rinse and dry each item thoroughly before reassembling.
NOTE: Parts must be thoroughly dry before adding powder to the hopper.