
# CANER'S GUIDE

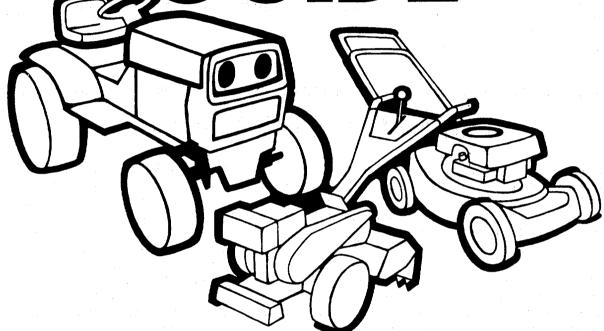

22" REAR DISCHARGE THREE SPEED ROTARY MOWER

**Model Number** 127-365-000

**IMPORTANT: Read Safety Rules and Instructions Carefully** 

## INDEX

Slope Gauge	
Contents of Hardware Pack	4
Rules for Safe Operation	5
Assembly	
Controls	2
Operation	2
Adjustments	4
Lubrication	5
Maintenance	6
Off-Season Storage	9
Illustrated Parts	
Repair Parts Lists	3
Trouble Shooting Chart24	4
Parts Information Back Cove	

Dear Customer,

So often throughout the year we are all in a rush to meet our daily obligations.

However, we at MTD Products Inc are taking a quick moment out to say...

"Thank you for your business."

Sincerely, MTD PRODUCTS INC



INSTRUCTIONS GIVEN WITH THIS SYMBOL ARE FOR PERSONAL SAFETY. BE SURE TO FOLLOW THEM.

## LIMITED WARRANTY

For one year from the date of original retail purchase, MTD PRODUCTS INC will either repair or replace, at its option, free of charge, F.O.B. factory or authorized service firm, any part or parts found to be defective in material or workmanship. Transportation charges for the movement of any power equipment unit or attachment are the responsibility of the purchaser. Transportation charges for any parts submitted for replacement under this warranty must be paid by the purchaser unless such return is requested by MTD PRODUCTS INC.

This warranty will not apply to any part which has become inoperative due to misuse, excessive use, accident, neglect, improper maintenance, alterations, or unless the unit has been operated and maintained in accordance with the instructions furnished. This warranty does not apply to the engine, motor, battery, battery charger or component parts thereof. Please refer to the applicable manufacturer's warranty on these items.

This warranty will not apply where the unit has been used commercially.

Warranty service is available through your local authorized service dealer or distributor. If you do not know the dealer or distributor in your area, please write to the Customer Service Department of MTD.

The return of a complete unit will not be accepted by the factory unless prior written permission has been extended by MTI).


This warranty gives you specific legal rights. You may also have other rights which vary from state to state.

WARNING: This unit is equipped with an internal combustion engine and should not be used on or near any unimproved forest-covered, brush-covered or grass-covered land unless the engine's exhaust system is equipped with a spark arrester meeting applicable local or state laws (if any). If a spark arrester is used, it should be maintained in effective working order by the operator.

In the State of California the above is required by law (Section 4442 of the California Public Resources Code). Other states may have similar laws. Federal laws apply on federal lands. A spark arrester muffler is available at your nearest engine authorized service center.

# **SLOPE GAUGE**

(Keep this sheet in a safe place for future reference.)

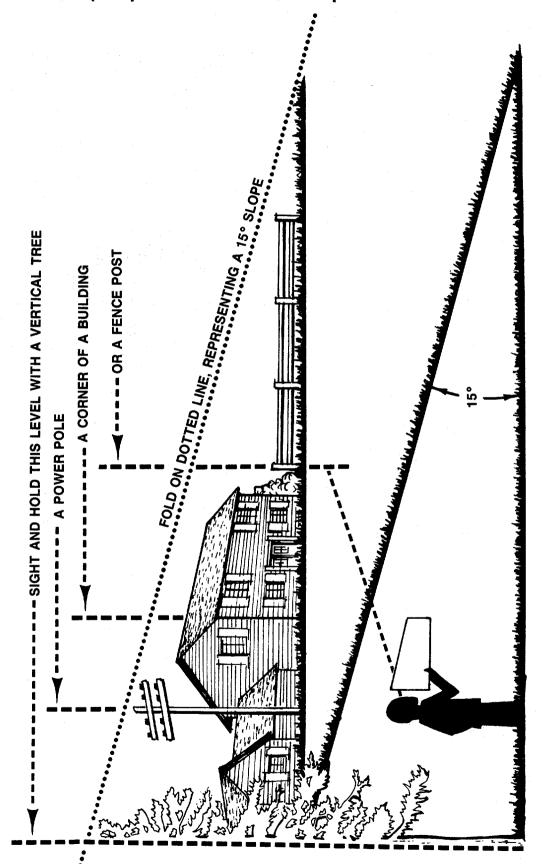



riding mower could overturn and cause serious injury. If operating a walk-behind mower on such a slope, it is Do not mow on inclines with a slope in excess of 15 degrees (a rise of approximately 21/2 feet every 10 feet). A extremely difficult to maintain your footing and you could slip, resulting in serious injury.


Operate WALK-BEHIND mowers across the face of slopes, never up and down slopes. Operate RIDING mowers up and down slopes, never across the face of slopes.

### CONTENTS OF HARDWARE PACK/PARTS IDENTIFICATION

Remove this sheet from your owner's manual and lay the hardware on the illustration for identification purposes.

After assembly, keep the Slope Gauge which is on the reverse side of this sheet for future use.

(Hardware pack may contain extra items which are not used on your unit.)

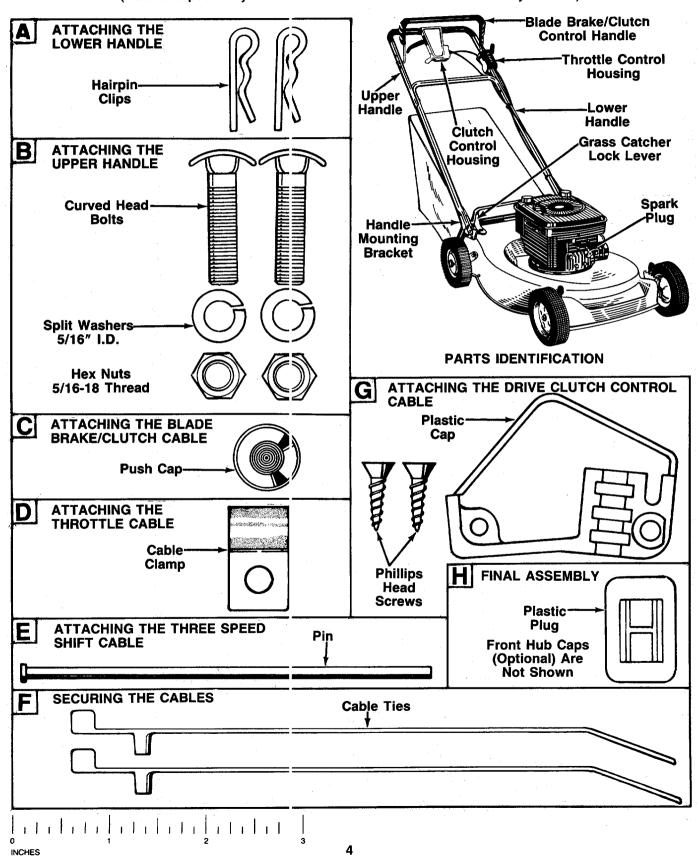

## **IMPORTANT**

#### **RULES FOR SAFE OPERATION**



THIS SYMBOL POINTS OUT IMPORTANT SAFETY INSTRUCTIONS WHICH, IF NOT FOLLOWED, COULD ENDANGER THE PERSONAL SAFETY AND/OR PROPERTY OF YOURSELF AND OTHERS. READ AND FOLLOW ALL INSTRUCTIONS IN THIS MANUAL BEFORE ATTEMPTING TO OPERATE YOUR LAWN MOWER. FAILURE TO COMPLY WITH THESE INSTRUCTIONS MAY RESULT IN PERSONAL INJURY. WHEN YOU SEE THIS SYMBOL— HEED ITS WARNING.





Your lawn mower was built to be operated according to the rules for safe operation in this manual. As with any type of power equipment, carelessness or error on the part of the operator can result in serious injury. If you violate any of these rules, you may cause serious injury to yourself or others.



#### **TRAINING**

- . Read this owner's manual carefully in its entirety before attempting to assemble or operate this machine. Be completely familiar with the controls and the proper use of this machine before operating it. Keep this manual in a safe place for future and regular reference and for ordering replacement parts.
- Your rotary mower is a precision piece of power equipment, not a plaything. Therefore, exercise extreme caution at all times.
- Never allow children to operate a power mower. Only persons well acquainted with these rules of safe operation should be allowed to use your mower.
- 4. Keep the area of operation clear of all persons, particularly small children and pets. Stop engine when they are in the vicinity of your mower to help prevent blade contact or thrown object injury. Although the area of operation should be completely cleared of foreign objects, an object may have been overlooked and could be accidently thrown by the mower in any direction and cause serious personal injury to the operator or any others allowed in the area.



#### **PREPARATION**

- . Thoroughly inspect the area where the equipment is to be used. Remove all stones, sticks, wire, bones and other foreign objects which could be picked up and thrown by the mower in any direction and cause serious personal injury to the operator or any others allowed in the area.
- Always wear safety glasses or eye shields during operation or while performing an adjustment or repair, to protect eyes from foreign objects that may be thrown from the machine in any direction.
- Wear sturdy, rough-soled work shoes and close-fitting slacks and shirts to avoid entanglement in the moving parts. Never operate a unit in bare feet, sandals, or sneakers.
- 4. Check the fuel before starting the engine. Gasoline is an extremely flammable fuel. Do not fill the gasoline tank indoors, while the engine is running, or until engine has been allowed to cool for two minutes after running. Replace gasoline cap securely and wipe off any spilled gasoline before starting the engine as it may cause a fire or explosion.
- Disengage the self-propelled mechanism or drive clutch on units so equipped before starting the engine.
- 6. The blade control handle is a safety device. Never attempt to bypass its operation. Doing so makes the safety device inoperative and may result in personal injury through contact with the rotating blade. The blade control handle must operate easily in both directions.
- Never attempt to make a wheel or cutting height adjustment while the engine is running.
- Never operate the equipment in wet grass. Always be sure of your footing. A slip and fall can cause serious personal injury. Keep a firm hold on the handle and walk, never run. Mow only in daylight or in good artificial light.

9. For your safety, use the slope gauge included as part of this manual to measure slopes before operating this unit on a sloped or hilly area. If the slope is greater than 15° as shown on the slope gauge, do not operate this unit on that area or serious injury could result.



#### **OPERATION**

- Do not change the engine governor settings or overspeed the engine. Excessive engine speeds are dangerous.
- Do not put hands or feet near or under rotating parts. Keep clear of the discharge opening at all times as the rotating blade can cause injury.
- 3. Stop the blade when crossing gravel drives, walks or roads.
- 4. After striking a foreign object, stop the engine, remove the wire from the spark plug, and thoroughly inspect the mower for any damage. Repair the damage before restarting and operating the mower
- If the equipment should start to vibrate abnormally, stop the engine and check immediately for the cause. Vibration is generally a warning of trouble.
- 6. Shut the engine off and wait until the blade comes to a complete stop before removing the grass catcher or unclogging the chute. The cutting blade continues to rotate for a few seconds after the engine is shut off. Never place any part of the body in the blade area until you are sure the blade has stopped rotating.
- Before cleaning, repairing or inspecting, make certain the blade and all moving parts have stopped. Disconnect the spark plug wire, and keep the wire away from the spark plug to prevent accidental starting.
- Do not run the engine indoors.
- Mow across the face of slopes, never up-and-down. Exercise extreme caution when changing direction on slopes. Do not mow excessively steep slopes. Always be sure of your footing. A slip and fall can cause serious personal injury.
- Never operate mower without proper guards, plates or other safety protective devices in place.
- Do not operate this mower with the chute door open, unless the complete grass catcher is properly mounted on the mower.



#### **MAINTENANCE AND STORAGE**

- Check the blade and engine mounting bolts at frequent intervals for proper tightness.
- Keep all nuts, bolts, and screws tight to be sure the equipment is in safe working condition.
- Never store the equipment with gasoline in the tank inside of a building where fumes may reach an open flame or spark. Allow the engine to cool before storing in any enclosure.
- To reduce fire hazard, keep the engine free of grass, leaves, or excessive grease.
- Check the grass catcher bag frequently for wear or deterioration.For safety protection, replace only with new bag meeting original equipment specifications.

## Rules for Safe Operation (Continued)

#### **BLADE BRAKE/CLUTCH MAINTENANCE**

NOTE: Any required repair work on the blade brake/clutch should be performed by an authorized service dealer. If you cannot locate an authorized service dealer, contact the manufacturer.

- 1. The blade brake/clutch hand control is a safety devi :e. Never attempt to bypass its operation. Doing so makes the safety device inoperative and may result in personal injury through contact with the rotating blade. This hand control must operate freely in both directions.
- 2. Striking a solid object can cause damage to the blade brake/clutch or to the engine crankshaft. Extensive vibration of the mo ver during operation is an indication of damage and the unit should be promptly inspected and repaired.
- 3. A leak in the lower engine crankshaft oil seal could expose the blade brake/clutch friction pads to excess oil resulting in blade or brake slippage, which could increase the stopping time of the blade. Oil collection on the floor beneath the mower during storage may be an indication of an oil seal leak. The unit should be checked by an authorized service dealer
- 4. Periodically inspect the inner control cable in the area where it attaches to the hand control. If the cable becomes frayed, it could cause the blade brake/clutch to operate improperly. Also, be careful to avoid pinching the blade brake/clutch control cable when storing the handle.



IMPORTANT: This unit is shipped W THOUT GASOLINE or OIL. After assembly, service engine with gasoline and oil as instructed in the separate engine manual packed with your unit.

NOTE: Reference to right or left hand side of the mower is observed from the operating position. Refer to parts identification illustration on page 4 for location of parts when assembling the mower.

#### **ASSEMBLY INSTRUCTIONS**

#### UNPACKING

- 1. Remove the lawn mower from the carton by opening the top flaps and lifting the unit out. Be careful of the staples. Make certain all parts and literature have been removed from the carton before the carton is discarded.
- 2. Disconnect and ground the spark plug wire against the engine. Check beneath the deck for any cardboard packaging. Remove if present.
- 3. Stretch out all control cables and place on the floor. Be careful not to bend or kink the cables at any time during assembly.
- 4. Remove page four from this manual and lay the contents of the hardware pack on the illustration for identification.

#### ATTACHING THE LOWER HANDLE (Hardware A)

Place lower handle in position over weld pins in handle mounting brackets on the rear of the deck. Make certain the instruction label on the lower handle can be read from the operating position. Secure by placing two hairpin clips in inner hole on weld pins. See



There are two (2) holes in the handle mounting brackets. Place hairpin clips in the inner hole for operation. The outer hole is for storage.



It may be necessary to bend the ends of the lower handle inward slightly to obtain a snug fit against the bracket.

#### **Tools Required for Assembly**

- (1) Phillips Head Screwdriver
- (1) 1/2" Wrench\*
- (1) 5/16" Wrench or Nutdriver\*
- (1) 7/16" Wrench\*
- (1) 9 mm Wrench or Socket
- (1) Soft Hammer (Optional)
- \*Or one 6" Adjustable Wrench.

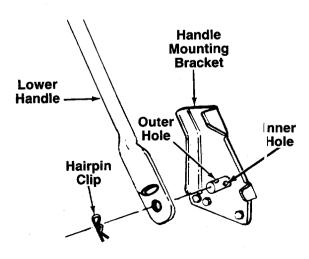


FIGURE 1.

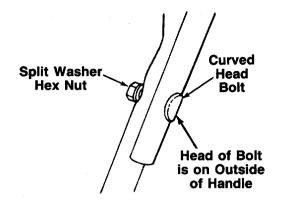


FIGURE 2.

#### ATTACHING THE UPPER HANDLE (Hardware B)

Place upper handle in position over lower handle. The label on the throttle control housing and the control lever must be facing up. Secure upper handle with two curved head bolts, split washers and hex nuts. See figure 2.

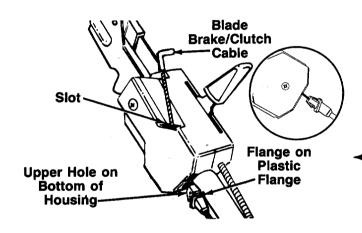


FIGURE 3.

#### ATTACHING THE BLADE BRAKE/CLUTCH CABLE (Hardware C)

The blade brake/clutch cable is the cable which has an "L" fitting on the loose end, and is attached to the blade brake/clutch underneath the deck.

- 1. Route the blade brake/clutch cable under the lower handle and inside the handle mounting bracket. Place end of cable into the upper hole on the bottom of the control housing, and through the slot on the side of the housing as shown. The angle of the plastic flange must be positioned downward as shown in figure 3. Be careful not to bend or kink the cable at any time.
- 2. Push the plastic flange until it locks into the control housing.



The cable must be assembled as shown for proper blade brake/clutch operation.

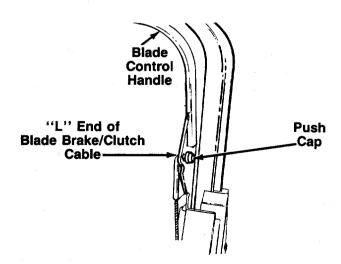


FIGURE 4.

3. Insert the "L" end of the blade brake/clutch cable into the hole in the blade brake/clutch control handle. from the inside to the outside as shown in figure 4. Hold the end of the cable, and press push cap on by hand.

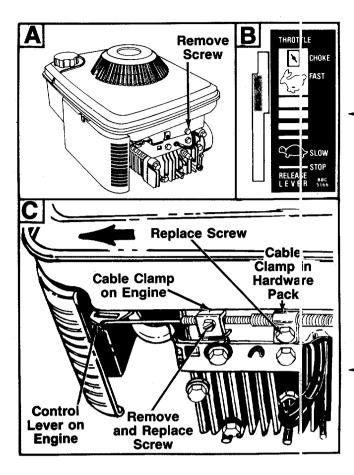


FIGURE 5.

#### **ATTACHING THE THROTTLE CABLE (Hardware D)**

- 1. Using a 7/16" wrench, remove the screw on the engine shown in figure 5A.
- Move throttle control lever until it stops in FAST position (do not push all the way forward to CHOKE position). See figure 5B.
- 3. The throttle control cable is attached to the upper handle. Route the throttle control cable under the lower handle and inside the handle mounting bracket. Hook the "Z" end of the throttle control cable into the hole in the control lever on the engine. See figure 5C.
- 4. Using a 5/16" wrench or nutdriver, remove the screw on the cable clamp shown in figure 5C. Slip the control casing under the clamp. Replace the screw (casing should be above the screw), but do not tighten screw (cable must still move freely beneath the clamp).
- 5. Slide the control lever on the engine as far toward the outside of the engine as it will go easily (just until resistance is felt) as shown in figure 5C. (Do not force it into the extreme outside position, which is the CHOKE position.) Tighten the screw to secure the throttle control cable in this position.
- Loosen the screw on the clamp on the side of the engine. Slip the cable casing under the clamp to secure the cable away from the muffler. Be careful not to bend or kink the cable. Tighten the screw.
- Secure cable casing to the front of engine with cable clamp provided in hardware pack and screw removed from engine in step 1. Do not overtighten.

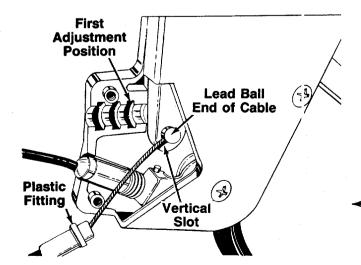


FIGURE 6.

## ATTACHING THE DRIVE CLUTCH CONTROL CABLE (Hardware G)

The drive clutch control cable is attached to the deck. Attach the cable to the lever in the clutch control housing, located in the middle of the upper handle, as follows.

 Place the lead ball end of the cable into the fitting provided in the end of the clutch control lever. Slip the braided wire into the vertical slot as shown in —figure 6.

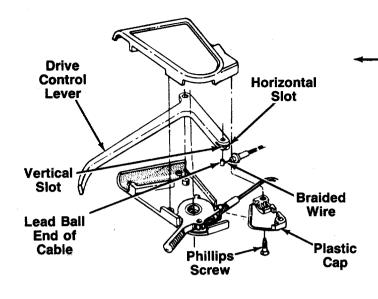


FIGURE 7.

- Slide the braided wire around in the horizontal slot.
   See figure 7.
- 3. Place the plastic fitting on the control cable into the first adjustment position in the clutch control housing. See figure 6.
- Secure the plastic cap to the clutch control housing using the two Phillips head screws. See figure



Drive clutch adjustment must be checked before the unit is operated, as described in the operation section.

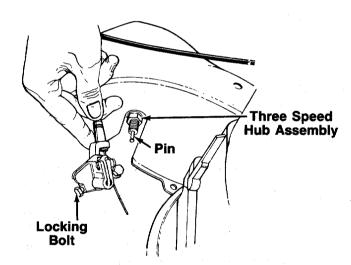


FIGURE 8.

## ATTACHING THE THREE SPEED SHIFT CABLE (Hardware E)

The three speed shift cable is attached to the drive clutch control housing on the upper handle. Attach the shifting mechanism on the other end of the cable to the three speed hub assembly as follows.

- 1. Place the three speed shift lever in the third speed position (all the way down).
- ---2. Insert pin into hub assembly as shown in figure 8.
  - 3. Loosen the locking bolt on the mechanism shown in figure 8 using a 9 mm wrench or socket.

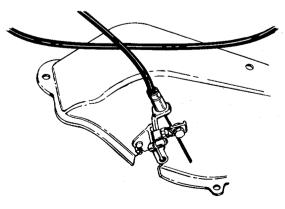


FIGURE 9.

 Push the mechanism on the end of the cable all the way onto the pin and hub assembly. Tighten the locking bolt while holding the mechanism firmly in place. See figure 9.

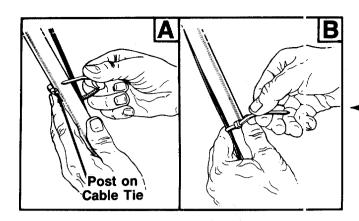


FIGURE 10.

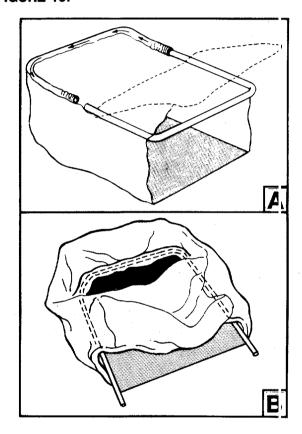


FIGURE 11.—Bag with Flip Top Opening

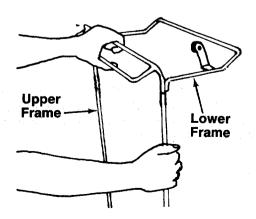


FIGURE 12.

#### **SECURING THE CABLES (Hardware F)**

Secure all control cables to the left side of the handle as follows.

- A. Insert posts on cable ties into holes provided on the inside of the lower handle, one near the top and one near the bottom of lower handle. See figure 10A.
- B. Secure the cables with the cable ties. See figure 10B.
- C. Trim excess ends of cable ties.

#### FINAL ASSEMBLY OF MOWER (Hardware H)


- If plastic plug is not already assembled, insert plastic plug into hole in the top rear of the deck by slipping one end of plug into hole, then pressing down on the other end of plug. Use a soft hammer if necessary.
- 2. Attach front hub caps (optional) to the wheels by lining up the four tabs on the hub caps with the four holes in the wheels. Push to lock in position.
- 3. Make certain all nuts and bolts are tightened securely.

#### **ASSEMBLY OF GRASS CATCHER**

There are two different types of grass bags, bags with and without flip top openings. Follow the instructions which pertain to your unit.

- 1. Grass Bags with Flip Top Opening:
  - a. Attach bag to rear frame by inserting one end of frame into pocket from inside bag. See figure
     11A.
  - b. Thread all material on one side of frame before working it around the frame.
  - c. After threading, both ends of frame should be inside of bag. See figure 11B.

2. Join the upper frame and lower frame assembly——as shown in figure 12.

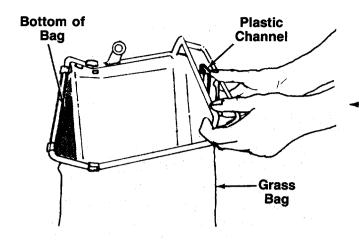

Chute Door

on Mower Open

Hooks on litch Bracket

Grass

Catcher

Frame

FIGURE 13.

FIGURE 14.

- Grass bags without Flip Top Opening: Place bag over frame (black plastic side is the bottom of bag). Upper frame goes to the top of bag.
- 4. Secure bag to frame by slipping plastic channels—on bag over frame. See figure 13.
- Grass Bags with Flip Top Opening: Close top of bag by stretching loose material over the end of the frame.



Never operate the mower with the bag open.

#### ATTACHING BAG TO MOWER



**DO NOT** operate the mower with the chute door open unless the complete grass catcher is properly mounted on the mower.

- Attach the grass catcher frame to grass catcher hitch bracket on rear of the mower by hooking grass catcher into hooks on grass catcher hitch bracket. See figure 14.
- 2. Lift the rear of grass catcher up. The roller on the grass catcher will push the chute door on the mower open. See figure 14.



Figure 14 is shown with the chute door open for clarity only.


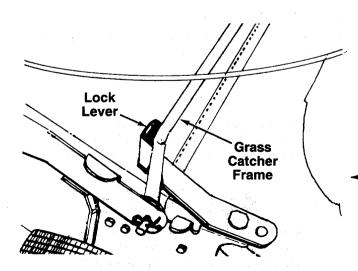


FIGURE 15.

The grass catcher frame will snap into place, secured by the lock lever. See figure 15.

To remove the grass catcher, unhook the lock lever and—slip the grass catcher off the unit. See figure 15.

#### **CONTROLS**

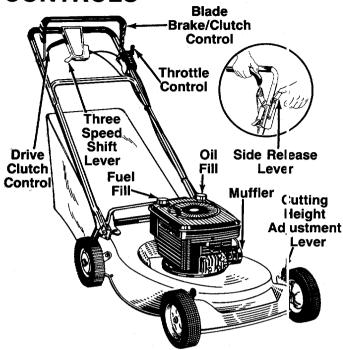

## FIGURE 16. THROTTLE CONTROL

The throttle is located on the left side of handle. It controls engine speed. See figure 16.

#### **DRIVE CLUTCH CONTROL**

Squeezing the drive clutch control engages the drive mechanism to the rear wheels. Releasing the clutch control stops the rear wheels from driving. Release the drive clutch control to slow down when negotiating an obstacle, making a turn or stopping. See figure 16.

#### **BLADE BRAKE/CLUTCH CONTROL**

# WARNING THIS CONTROL MECHANISM IS A SAFETY DEVICE NEVER ATTEMPT TO BYPASS ITS OPERATIONS

The blade brake/clutch control is located on the upper handle of the mower. The blade brake/clutch handle engages and disengages the blade.

To engage the blade, pull the side release leve away from the unit. See figure 16. Pull the blade brake clutch control handle against the upper handle. Release side lever.

Release the blade brake/clutch control handle to stop the blade from turning.

#### THREE SPEED SHIFT LEVER

The three speed shift lever is located on the drive clutch control housing on the upper handle. See figure 16. This lever is used to select the operating speed of the mower. Release the drive clutch control and stop the mower before changing speeds.



Do not move the shift lever while the drive clutch control is engaged.

#### **OPERATION**



#### FIGURE 17.

Keep hands and feet away from the chute area on cutting deck. See figure 17.



For shipping purposes your mower is set with the wheels in a low cutting height position. For best results raise the cutting position until it is determined which height is best for your lawn. See cutting height adjustment section.

#### **GAS AND OIL FILL-UP**

Service the engine with gasoline and oil as instructed in the separate engine manual packed with your mower. Read instructions carefully.



Your unit has been shipped without oil; however, a small amount of oil may be present from the factory. Do not overfill.



Never fill fuel tank indoors, with engine running or until the engine has been allowed to cool for at least two minutes after running.

#### **BEFORE STARTING**

Before each use, check for proper drive clutch operation by performing the following before starting the engine:

With the drive clutch control released, push mower forward. It should move freely. **Pull mower backward. It should move freely.** 


If it does not and the rear wheels tend to lock up, the clutch may not be releasing completely. Do not start the engine until corrections have been made. Check the control cable for severe bend, kinks and binding, or grass build-up in the pulley grove. Correct and adjust as required.

#### TO START ENGINE



When starting the unit for the first time, face the mower against a solid object such as a wall, fence, etc. Start the unit, and if it shows any signs of motion with the drive clutch control disengaged, shut the engine off immediately. Check the position of the drive clutch control cable. The plastic fitting must be assembled in the first adjustment position inside the housing, all the way to the right, as shown in figure 6.

- 1. Attach spark plug wire to spark plug.
- 2. Open fuel shut-off valve, located beneath the fuel tank. See figure 18.

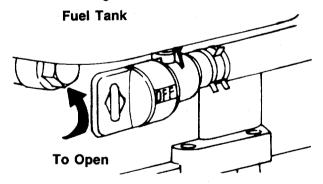

#### FIGURE 18.

- 3. Move throttle control lever to CHOKE position.
- 4. With the blade brake/clutch handle released, crank engine by pulling recoil starter with a quick firm pull. Do not pull out so far that rope stops with a jerk as this will cause rope failure. Do not allow rope and handle to snap back into place.
- 5. After engine starts, move throttle control to desired engine speed.

#### TO STOP ENGINE

- 1. Move throttle control lever to STOP position.
- Disconnect spark plug wire from spark plug and ground against the engine to prevent accidental starting while equipment is unattended.



If any problems are encountered, refer to the Trouble Shooting Chart on page 19.

#### TO ENGAGE THE BLADE

- Start engine as instructed on page 12. Allow the engine to warm up for one minute before attempting to engage the blade.
- To engage the blade, pull the side release lever away from the unit. Pull the blade brake/clutch control handle down against the upper handle. Release the side lever. See figure 16.



If a warm engine falters or stalls when attempting to engage the blade, refer to Carburetor Adjustment Section of this owner's manual.

3. Release the blade brake/clutch control handle to stop the blade from turning.



Always release the blade brake/clutch control handle before stopping the engine. If the engine begins to stall, release the blade brake/clutch control handle immediately.

Should the engine stall with the blade brake/clutch control in the operating position (control handle **not** released), difficulty may be encountered in pulling the starter rope to restart the engine. Proceed as follows.

- 1. Disconnect the spark plug wire from the spark plug.
- 2. Move the throttle lever to STOP position.
- 3. Hold the blade brake/clutch control in the engaged position.
- 4. While holding the blade brake/clutch control handle in this position, pull the starter rope.
- 5. As the starter rope is being pulled, release the blade brake/clutch control handle.

The starter rope should now operate correctly. Reconnect the spark plug wire for normal operation.

#### **USING YOUR ROTARY MOWER**



DO NOT operate the mower with the chute door open unless the complete grass catcher is properly mounted on the mower.

Be sure that lawn is clear of stones, sticks, wire, or other objects which could damage lawn mower or engine. Such objects could be accidently thrown by the mower in any direction and cause serious personal in ury to the operator and others.

Operate a new engine at intermediate speeds ard light load for the first few hours as you would a new automotive engine.

For the best results, do not cut wet grass because it tends to stick to the underside of the mower, preventing proper discharge of grass clippings, and could cause you to slip and fall. New grass, thick grass or wet grass may require a narrower cut. Blade speed should be adjusted to the condition of the lawn.

For best results, cut off one-third or less of the total length of the grass. Lawn should be cut in the fall as long as there is growth.

This mower is designed to be operated at full throttle to give you the best cut and do the most effective job of bagging the cut grass.

#### **IMPORTANT**

If you strike a foreign object, stop the engine. Remove wire from spark plug, thoroughly inspect the mower for any damage, and repair the damage before restarting and operating the mower.

Striking a solid object can cause damage to the blade brake/clutch or to the engine crankshaft. Extensive vibration of the mower during operation is an indication of damage. The unit should be promptly inspected and repaired.


### **ADJUSTMENTS**



Do not at any time make any adjustment to lawn mower without first stopping engine and disconnecting spark plug wire.

#### DRIVE CLUTCH CONTROL ADJUSTMENT

If the unit does not self-propel with the drive clutch control engaged, remove the plastic cap from beneath the drive clutch control housing. Move the plastic fitting on the control cable to the next adjustment position on the left. Reassemble the plastic cap and retest. See figure 19.

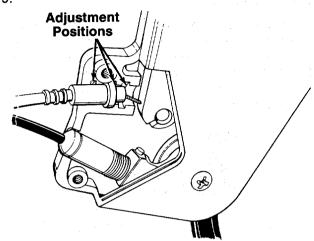

#### FIGURE 19.

#### **CUTTING HEIGHT ADJUSTMENT**

An adjusting plate and thumb lever at each wheel position provides cutting height adjustment. Each adjusting plate has nine height positions. Height of cut will be changed when the thumb lever is moved from one hole to another. Simply depress the lever towards wheel and move wheel and lever assembly to desired position. See figure 20.



When changing the positions of the rear height adjusters, move one side two or three positions only, then move the other side in the same manner to avoid binding the rear axle. Repeat until desired height is reached.

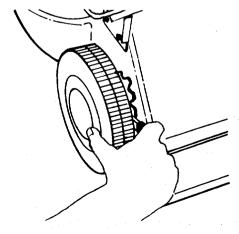


FIGURE 20.

Cutting height will be raised as front levers are moved to the front, and rear levers are lowered. Cutting height will be lowered as front levers are moved to the rear, and rear levers are raised. All wheels must be placed in the same relative position.

For rough or uneven lawns, move the wheels to a position which will give a higher cutting height.

#### **THROTTLE**

The throttle control wire assembly can be adjusted if necessary. Loosen the screw on the cable clamp closest to the control lever on engine. Adjust as instructed in step 5 of "Attaching the Throttle Control Cable" in Assembly Instructions.

#### **CARBURETOR ADJUSTMENTS**



If any adjustments are made to the engine while the engine is running (e.g. carburetor), disengage all clutches and blades. Keep clear of all moving parts. Be careful of heated surfaces and muffler.

Minor carburetor adjustments may be required to compensate for differences in fuel, temperature, altitude and load. Refer to the separate engine manual packed with your mower.



If a warm engine falters or stalls when attempting to engage the blade, the carburetor mixture should be adjusted 1/8 turn richer (counterclockwise). See figure 21.

The carburetor should be adjusted with the air cleaner in place and the blade control handle in the blade disengaged position.



A dirty air cleaner will cause an engine to run rough. Be certain air cleaner is clean before adjusting carburetor. Refer to the separate engine manual.

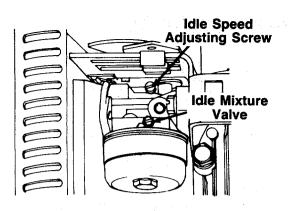


FIGURE 21.

#### **LUBRICATION**



Always stop engine and disconnect spark plug wire before cleaning, lubricating or doing any kind of work on lawn mower.

Blade Brake/Clutch—Lubricate the pivot points on the blade brake/clutch handle and the cable at least once a season with light oil. The control must operate freely in both directions.

**Discharge Chute Door Mechanism**—The torsion spring and pivot point should be lubricated periodically with light oil to prevent any rust or binding. Door must work freely.

Wheels—Mower may be provided with ball bearing wheels. Lubricate at least once a season with light oil. Also, if the wheels are removed for any reason, lubricate the surface of the axle bolt and the inner surface of the wheel with light oil. A 4 oz. plastic bottle of light oil lubricant is available. Order part number 737-0170. Engine oil may also be used.

**Engine**—Follow engine manual for lubrication instructions.

**Throttle**—Periodically lubricate throttle control lever and throttle wire assembly with a few drops of light oil for ease of operation.

Chain—Periodically lubricate the chain with appropriate chain lubricant. A stiff or rusted chain can be restored by removing the master link, soaking the chain in kerosene or a solvent, letting it air dry and wiping the chain with a rag saturated with lubricant.

If the rotary mower is operated in a sandy area, the chain should not be lubricated with oil. Excessive oil on a chain will collect dirt and cause excessive wear on the chain and sprockets.

#### **MAINTENANCE**



Be sure to disconnect and ground the spark plug wire before performing any repairs or maintenance.




When tipping the unit, empty the fuel tank and keep engine spark plug side up.

#### TROUBLE SHOOTING

Refer to page 19 of this manual for trouble shooting information.

#### **CUTTING BLADE**

To remove the cutting blade for sharpening or replacement, remove the two hex nuts and lock washers which hold the blade to the blade brake/clutch. Protect hands by using heavy gloves or a rag to grasp the cutting blade. See figure 22.

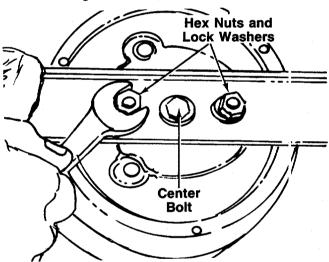

#### FIGURE 22.

When sharpening the blade, follow the original angle of grind as a guide. It is **extremely important** that each cutting edge receives an equal amount of grincing to prevent an unbalanced blade. An unbalanced blade will cause excessive vibration when rotating at high speeds, may cause damage to the mower and could break, causing personal injury.

The blade can be tested for balance by balancing it on a round shaft screwdriver. Remove metal from the heavy side until it balances evenly.

When replacing the blade, be sure to install the blade with the side of the blade marked "Bottom" (or with part number) facing the ground when the mower is in the operating position.

#### **Blade Mounting Torque**

Make certain that the center bolt which secures the blade brake/clutch and the two hex nuts which secure the blade are tightened to between 350 inch pounds (minimum) and 600 inch pounds (maximum).

To insure safe operation of your unit, ALL nuts and bolts must be checked periodically for correct tightness.

#### **DECK**

The underside of mower deck should be cleaned after each period of use as grass clippings, leaves, dirt and other matter will accumulate. This accumulation of grass clippings, etc., is undesirable as it will invite rust and corrosion and may cause an uneven discharge of grass clippings at the next cutting.

The deck may be cleaned by tilting the mower forward or on its side and scraping clean with a suitable tool or by washing with a stream of water from a garden hose.



Do not direct the stream of water at a hot engine as damage to the engine may result.

#### **ENGINE**

Refer to separate engine manual for all engine maintenance instructions.

Maintain **engine oil** as instructed in the separate engine manual packed with your unit. Read and follow instructions carefully.

Service air cleaner every 25 hours under normal conditions. Clean every few hours under extremely dusty conditions. Poor engine performance and flooding usually indicates that the air cleaner should be serviced.

The **spark plug** should be cleaned and the gap reset once a season. Spark plug replacement is recommended at the start of each mowing season; check engine manual for correct plug type and gap specifications.

#### **BELT REMOVAL AND REPLACEMENT**

- 1. Remove the spark plug wire and ground it.
- 2. Drain the fuel tank or place a piece of plastic film beneath the cap to prevent gasoline leakage.
- Remove the mechanism for the three speed shift cable from the three speed hub. Refer to Assembly Instructions.
- 4. Remove the 15 mm nut which holds the three speed hub to the belt guard. See figure 23.
- 5. Remove the three screws which hold the belt guard (and idler assembly). See figure 23.

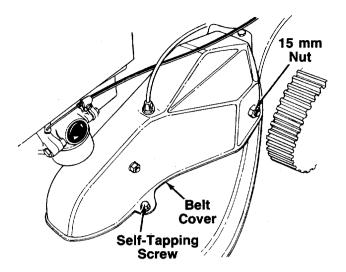


FIGURE 23.

- 6. Remove the belt from the idler as you lift off the belt guard.
- 7. Slide the belt off the pulley as shown in figure 24.
- 8. Loosen the nut on the inside of the three speed hub. See figure 24.

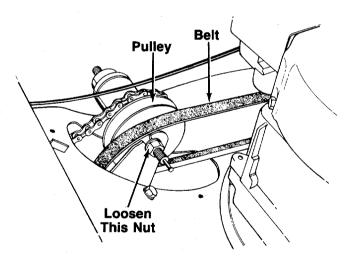



FIGURE 24.

9. Lift the three speed hub out of the three speed hub bracket. See figure 25.




When reassembling the three speed hub, be certain the washer is between the hub bracket and the pulley.

Remove the belt from the pulley and the engine pulley.

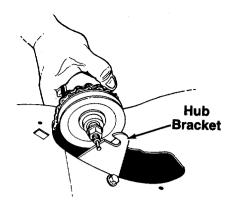

#### FIGURE 25.

 Reassemble in reverse order with the new belt, making certain the idler pulley is under the belt. See figure 26.

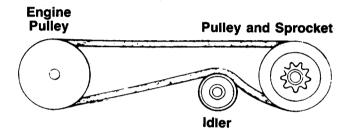

#### FIGURE 26.

#### **BLADE BRAKE/CLUTCH**

This unit is equipped with a blade brake/clutch. If for some reason the blade brake/clutch becomes inoperative, it is suggested that all repair work on the blade brake/clutch should be performed by an authorized service dealer. The unit should be inspected by an authorized service dealer if any of the following conditions are noticed.

- 1. Frayed clutch control cable.
- 2. Leaking oil seal (oil collection on the floor during mower storage).
- 3. Extensive vibration of the unit.


#### **Blade Brake/Clutch Removal**

- 1. Disconnect the spark plug wire and ground it against the engine block.
- 2. Empty fuel tank and drain oil from crankcase.
- 3. Remove the cable ties which secure control cables to the handle.
- Disconnect the blade brake/clutch cable from the clutch control handle by removing the push cap, using a pair of pliers.



A new push cap is needed for reassembly.

- 5. Remove two truss machine screws on the inside of the control housing as shown in figure 27.
- Loosen the truss machine screw on the outside of the control housing until the two halves of control housing can be separated enough for the control cable to be freed. Slide the blade brake/clutch cable out of the control housing.
- 7. Retighten the truss machine screws on the control housing.

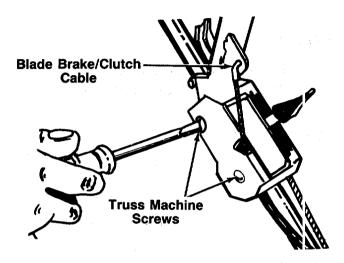

#### FIGURE 27.

- 8. Disconnect the throttle control cable from the engine by loosening screw on engine and disconnecting the "Z" fitting. Refer to figure 5.
- Tip the mower on its side. Remove the blade by removing two hex nuts and lock washers. Refer to figure 22.




When reassembling, tighten hex nuts to between 350 and 600 in. lbs.

- 10. Remove the center bolt as follows.
  - a. Insert a screwdriver into the slot provided in the blade brake/clutch housing where the control cable enters housing. See figure 28.
  - b. Place a 9/16" wrench on the center bolt. Turn the wrench slowly until the screwdriver catches in a groove provided inside the clutch. The screwdriver will now keep the clutch from turning, and the center bolt, and two be leville washers may be removed.




Upon reassembly, be certain to tighten center bolt to between 350 and 600 in. lbs.

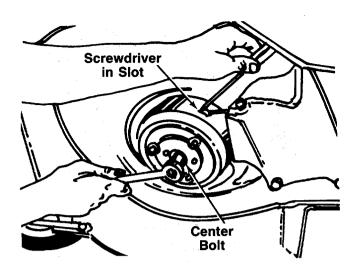

#### FIGURE 28.

11. Support the engine with one hand. Remove the three self-tapping screws which secure the deck and blade brake/clutch to the engine. A ½" socket wrench is required. See figure 29.

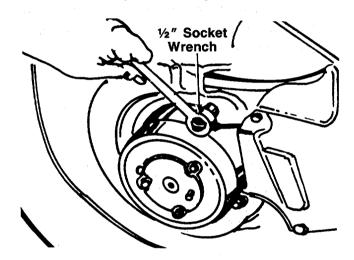

#### FIGURE 29.

- 12. Slide the blade brake/clutch cable through the hole in the deck as you lift off the engine and blade brake/clutch. Be careful not to kink control cable.
- Remove blade brake/clutch from engine crankshaft.

#### Blade Brake/Clutch Installation

- Place the new blade brake/clutch on engine crankshaft. Line up holes on blade brake/clutch with mounting holes on engine.
- Place the two belleville washers onto crankshaft. Cupped side of washers must be against the blade brake/clutch. Secure with hex bolt finger tight only.
- 3. Place cable through engine mounting hole on deck.
- 4. Reverse steps 1 through 12 of preceding section for reassembly.

#### **OFF-SEASON STORAGE**

The following steps should be taken to prepare lawn mower for storage.

- 1. Clean and lubricate mower thoroughly as described in the lubrication instructions.
- 2. Refer to engine manual for correct engine storage instructions.
- 3. Coat mower's cutting blade with chassis grease to prevent rusting.
- 4. Store mower in a dry, clean area.



When storing any type of power equipment in an unventilated or metal storage shed, care should be taken to rustproof the equipment. Using a light oil or silicone, coat the equipment, especially the bearings and cables.


#### HANDLE STORAGE

The handle can be stored in an upright position to take less space. Move hairpin clips to outer hole on weld pins (see figure 1). Grasp the lower handle at the bottom and pull apart slightly. Tip the handle forward. It will lock in this position. Reverse this procedure to place the handle in the operating position.



Be careful not to kink or pinch blade brake/clutch cable when storing the handle.

#### **OPTIONAL EQUIPMENT**

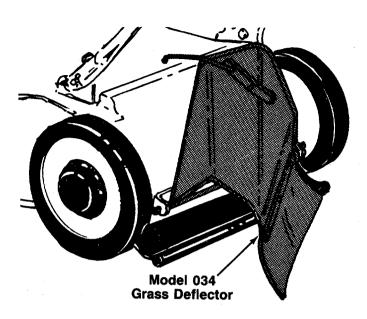

Grass Deflector model 190-034-000 is available as optional equipment.

## Model 365

#### †Front Hub Caps (Optional)

Color	Part No.
Red	731-0124
Orange	731-0254
Black	731-0354
Gray	731-0355
Citay	701-0000

= 9.8		5	Gray	7	31-0355	
103	2 3 4	6 7	** Wi	FRONT WH	IEEL CHART bly (8 x 1.75)	
57		8 Smooth	Waffle Tread	Twinline Tread	Bearing	Axle Boit
<b>(a)</b>	17 / 110 -	734-0843	734-0894	734-0661	Plastic-741-0262	738-0102
100	1071112	734-0845	734-0645	734-0643	3/8" Ball—741-0267 1/2" Ball—741-0484 Spacer—750-0434	710-0347
99 98 87 88 86	18 19 97 96 95 94 93 92	22 20 21 29 30 75	76	23	25 26 27 28 12 33 32 34 35	
104 85 83 83	89 78 77 5106 82 81 80 79 71 70 9	72 73 40 41	2	36	37	
62 63 64	68 58	A 45 56 54		35 46 48 50 49 50	7	

## Model 365 PARTS LIST FOR MODEL 365 ROTARY MOWER

		nouc		PARIS LIST F					<u> </u>	
2   731-0624   Control Disc Pin   Throttle Control Leve   Throttle Control Rever   Throttle Control Rev				DESCRIPTION					DESCRIPTION	NEW PART
2   731-0624   Control Disc Pin   Throttle Control Leve   Throttle Control Rever   Throttle Control Rev	1	731-0609		L.H. Bail Ass'y.		57	726-0135		Push Cap	
3   731-0524   Control Disc Pin   59   15262   Whéel Pivot Bar   Bar   Tours   Spring Lever Knob   61   732-0401   Lockout Spring   Find the Control Lever   710-0796   732-0401   Lockout Spring   Find the Control Wire   710-0796   732-0401   Lockout Spring   Find the Control Wire   731-0815   Truss Mach. Hi-B Tap Scr. #12 x 1.50" Lg. Control Panel Half   65   738-0507   Shid. Bolt. 50" Dia. x .430   Spring Lever Ass'y. Wirknob   Find the Control Label   61   748-0633   Throttle Control Wire   67   738-0507   Shid. Bolt. 50" Dia. x .430   Spring Lever Ass'y. Wirknob   Find the Control Label   61   748-0601   Find the Control Label   62   748-04001   Find the Control Label   63   748-0401   Find the Control Wire   748-0601   Find the Control Label   748-0601   Find the Control	2	731-0607		Lock Pin		58	15261		Height Adj. Plate	
4 731-0528   Throttle Control Lever   50 736-0105   Bell-Wash. A0" I.D. x. 88"   S73-0401   Truss Mach. H-B Tap Sor. #12 x 1.50" I.g.   61 ***   Bearing   Plastic Hub Cap   Axie Bott   Spacer (Used w/Ball Bearings)   Sacro Truss Mach. H-B Tap Sor. #12 x 1.50" I.g.   63 ***   Axie Bott   Spacer (Used w/Ball Bearings)   Sacro Truss Mach. H-B Tap Sor. #12 x 1.50" I.g.   64 ***   Spacer (Used w/Ball Bearings)   Sacro Truss Mach. H-B Tap Sor. #131 731-0816   Clutch Panel Half   Throttle Control Wire   67 738-0507   Shid. Bott. 50" Dia. x. 430   Spring Lever Ass'y. w/Knob   Clutch Cable 46" I.g.   68 14832   Spring Lever Ass'y. w/Knob   Carr. Bott 51/6-18 x 1.38"   70 13407   Chute Door   Truss Mach. H-B Tap Sor. #10 x 62"   712-0287   Hex Nut %-20 Thd. Haipin Cottes 57/6" Dia. x. 162   712-0271   Hex Sems Nut %-20 Thd. Haipin Cottes 57/6" Dia.   149-0429   Axie Truss Ass'y. L. Hex Nut %-20 Thd. Hex Nut %		731-0524		Control Disc Pin	,	59	15262		Wheel Pivot Bar	
5 720-0190   Spring Lever Knob   67 732-0401   Lockout Spring   Spring Lever Knob   67 732-0401   Lockout Spring   Spring Lever Knob   68   1				Throttle Control Lever		60	736-0105	1		l
6 732-0401   Lockout Spring								ļ	l <del></del> _	
7 710-0796 8 731-0817 9 746-0833 170 777-5774 1731-0816 10 777-5774 1731-0816 10 12 746-0400A 171 731-0816 171 732-0346 171 733-0360 171 732-0346 171 733-0360 171 733-03							+			
## #12 x 1.50° Lg. #12 x 1.50°				Truss Mach. Hi-B Tap Scr.			**		Axle Bolt	
8 731-0817   Control Panel Half   567   738-0507   738-0507   738-0507   738-0507   738-0507   738-0507   738-0507   738-0507   738-0507   738-0507   738-0505   738-0507   738-0505   738-0505   738-0507   738-0505   738-0505   738-0507   738-0505   738-0505   738-0507   738-0505   738-0505   738-0507   738-0505   738-	•	, , , , , , ,					**			
9 748-0833	Ω	731-0817		Control Panel Half			**			ı
10   777-5774   Control Label   Control Labe							739-0507			1
11   731-0816	1			_						
12   746-0400A						00	14002			
13   710-0671   Carr. Bolt 6/16-18 x 1.38"   Tol. 14712-0267   Hex Nut 5/16-18 Thd.*   Tol. 20267   Hex Nut 5/16-18 Thd.*   Tol. 20267   Hex Nut 14-20 Thd.*   Height Adj. Ass'y. — LH.   Height Adj. Ass'y. — Comp.   Hex Nut 14-20 Thd.*   Height Adj. Ass'y. — Comp.   Hex Nut 14-20 Thd.*   Height Adj. Ass'y. — Comp.   Hex Nut 14-20 Thd.*   Height Adj. Ass'y. — Comp.   Hex Nut 14-20 Thd.*   Height Adj. Ass'y. — Comp.   Hex Nut 14-20 Thd.*   Height Adj. Ass'y. — Comp.   Hex Nut 14-20 Thd.*   Height Adj. Ass'y. — Comp.   Hex Nut 14-20 Thd.*   Hex Nut 14-20 Th						60	14570			
14   712-0267   Hex Nut 5/16-18 Thd.*									Chita Daar	
15   736-0119   L-Wash. 5/16"   LD.*   Cable Tie   736-0240   Cable Tie   736-0240   Lower Handle   736-0211   749-0505   Lower Handle   748-0505   Lower Handle   757-05021   Fl-Wash. 285"   LD. x 1,25"   Hax Bolt ¼-20 x .88"   Lg. x 1,25"   Hax Jam Nut 3/8-16 Thd. x 1,20"   Hax Jam Nut 3/8-16 Thd. x 1,20"   Lever Cover Shimano 3-Sp. Shift Lever Control Lever Cover Shimano 3-Sp. Shift Lever Control Lever Cover Shimano 3-Sp. Shift Lever Countrol Hax Ship x 1,20"   Lever X 1,25"   Lever X 1,25"   Lg. x 1,25"   Lever X										
Cable Tie										
17   749-0505   Lower Handle   174   110-0206   174   120   174									1	
14852										
19   732-0357			]						Hex Bolt 1/4-20 x .88" Lg.	
20   738-0155   Shid. Bolt. 437" Dia. x. 162   77   731-0664   Rear Flap   Grass Catcher Hitch Brkt.   Harlog Brkt. Ass'y.—L.H.   Hairpin Cotter 5/16" Dia.   Hex B-Tap Scr. #10 x. 62"   80   738-0105   Bell-Wash40" I.D. x 1.13"   Ind. x										
12297										
22									Rear Flap	
23   710-0436   Hex B-Tap Scr. #10 x .62"   80   736-0105   731-0422   Casing Clamp   81   731-0763   731-0763   Flat "C"-Sunk Hd. Tap Scr. #10 x .75" Lg. Spark Plug Insulator Engine   84   746-0466   S.P. Cable—53" Lg. Sp. Control— Lower Cover Ontrol Lever Shimano 3-Sp. Shift Lever Cover Ontrol Lever Shimano 3-Sp. Shift Lever Control Lever Shimano 3-Sp. Solid Shift Cable Mounting Cap   Flat "C"-Sunk Hd. Tap Scr. #10 x .75" Lg. Sp. Control— Lower Cover Shimano 3-Sp. Shift Lever Cover Shimano 3-Sp. Shift Lever Control Lever Shimano 3-Sp. Shift Lever Cable Clutch Control Hsg. Comp. Sp. 712-0287   Hex Nut Y-20 Thd.* Sp. Table Sp.									Grass Catcher Hitch Brkt.	
23   710-0436   Hex B-Tap Scr. #10 x .62"   80   736-0105   731-0442   735-0439   Hex B-Tap Scr. #10 x .38"   81   712-0342   731-0763   710-0429   Hex B-Tap Scr. #10 x .38"   82   731-0763   710-0841   Flat "C"-Sunk Hd. Tap Scr. #10 x .75" Lg. Spark Plug Insulator Engine   84   746-0466   S.P. Cable—53" Lg. Scr. #10 x .75" Lg. Spark Plug Insulator Engine   84   746-0466   S.P. Cable—53" Lg. Scr. #10 x .75" Lg. Spark Plug Insulator Engine   87   710-082   Catcher Lock Lever w/Knob   Plug   Hex TT-Tap Scr. ¼-20 x   86   731-0762   S.P. Control— Lower Cover   Shimano 3-Sp. Shift Lever Control Lever   S.P. Control— Lower Cover   Shimano 3-Sp. Shift Lever Control Lever   S.P. Control— Lower Cover   Shimano 3-Sp. Shift Lever Control Lever   S.P. Control— Lower Cover   Shimano 3-Sp. Shift Lever Control Lever   S.P. Control— Lower Cover   Shimano 3-Sp. Shift Lever Control Lever   S.P. Control— Lower Cover   Shimano 3-Sp. Shift Lever Control Lever   S.P. Control— Lower Cover   Shimano 3-Sp. Shift Lever Control Lever   S.P. Control— Lower Cover   Shimano 3-Sp. Shift Lever Control Lever   S.P. Control— Lower Cover   Shimano 3-Sp. Shift Lever Control Lever   S.P. Control— Lower Cover   Shimano 3-Sp. Shift Lever Control Lever   S.P. Control— Lower Cover   Shimano 3-Sp. Shift Lever Control Hex Nut Side—16 Thd.*   S.P. Control— Lower Cover   Shimano 3-Sp. Shift Lever Control Hex Nut Side—16 Thd.*   S.P. Control— Lower Cover   Shimano 3-Sp. Shift Lever   S.P. Control— Lower Cover   Shimano 3-Sp. Cable   S.P. Cable	22	714-0104				79	736-0219		Bell-Wash40" I.D. x 1.13"	
24   751-0442   Casing Clamp   Cable Clip   Rex B-Tap Scr. #10 x .38"   Spark Plug Insulator   Engine   Separk Plug Insulator   Engine   Separk Plug Insulator   Spark Plug Insulator	23	710-0436		Hex B-Tap Scr. #10 x .62"		80	736-0105		Bell-Wash40" I.D. x .88"	
25   12894   Cable Clip	24	751-0442		Casing Clamp		81	712-0342			
26										
28									Flat "C"-Sunk Hd. Tap	
28							1			
29		_				84	746-0466		S.P. Cable—53" Lg	
30		14845							3-Sn S P Control	
31						00	701-0702			
32   736-0329   L-Wash. ¼" I.D.*   87   731-0620   3-Sp. S.P. Control Lever   3-Sp. S.P. Control—   1-Sp. S.P. S.P. Control   1-Sp. S.P. S.P. Control—   1-Sp. S.P. S.P. Control—   1-Sp. S.P. S.P. Control   1-Sp. S.P. S.P. Control—   1-Sp. S.P. S.P. Control   1-Sp. S.P. S.P. Control—   1-Sp. S.P. S.P. Control   1-Sp. S.P. S.P. S.P. Control   1-Sp. S.P. S.P. S.P. Control—   1-Sp. S.P. S.P. S.P. Control—   1-Sp. S.P. S.P. S.P. S.P. Control—   1-Sp. S.P. S.P. S.P. S.P. S.P. Control—   1-Sp. S.P. S.P. S.P. S.P. S.P. S.P. S.P. S						96	717 0000	·		
32   736-0329   1-Wash. ¼"   I.D.*   88   731-0761   3-Sp. S.P. Control—Upper Cover   14579   14579   16327   463   22" Deck Ass'y. — Comp.   91   710-0703   736-0329   172-0287   172-0287   1839   736-0356   1839   1	31	710-00-12		75" La						
Transport   Tran	20	726 0220		1 ./5 Lg.						
34						00	/31-0/61			
35					ļ	00	717 0000			
36				Front Month Ass y.—L.H.		09	/1/-0823		Snimano 3-Sp. Solid Snin	
Ass'y.—Comp.   91   710-0703   Carr. Bolt ¼-20 x .75" Lg.*						00				
37	36	/17-0485	•			i .				
38										
39   736-0356   40   710-0654   Hex Wash. Hd. TT-Tap Scr.   3/8-16 x 1.0" Lg.   Hinge Pin   96   726-0100   Plastic Roller   Push Nut 3/8" Rod   Plastic Roller   Push Rear Chute—R.H.   100   749-0437   Frame   Push Cap				22" Deck Ass'y.						
40       710-0654       Hex Wash. Hd. TT-Tap Scr. 3/8-16 x 1.0" Lg.       95       14592       Handle Brkt. Ass'y.—R.H.         41       738-0386       Hex Nut ¼-20 Thd.*       96       726-0100       Push Nut 3/8" Rod         42       712-0287       L-Wash. ¼-20 Thd.*       97       731-0430       Plastic Roller         43       736-0329       L-Wash. ½-1 LD.*       98       764-0171       Grass Bag (w/o Flip Top)         44       14236       Rear Chute—R.H.       99       749-0278       Catcher Upper Frame         45       738-0430       Shld. Bolt .500" Dia.       99       749-0278       Catcher Upper Frame         46       14014       Rear Baffle—L.H.       100       749-0437       Upper Handle         47       710-0167       Carr. Bolt ¼-20 x .50" Lg.*       101       726-0245       Push Cap       N         49       712-0328       Hex Nut 3/8-24 Thd.—Gr. 8       103       753-0431       Control Housing Comp.         50       736-0105       Bell-Wash40" I.D. x .88"       104       717-0829       Shimano 3-Sp. Cable         52       742-0222       Blade       105       717-0828       Shimano 3-Sp. Cable         53       712-087       Hex Nut ¼-20 Thd.*       106										
3/8-16 x 1.0" Lg.  41 738-0386 42 712-0287 43 736-0329 44 14236 45 738-0430 46 14014 47 710-0167 48 736-0169 49 712-0328 50 736-0105 51 710-0818 52 742-0222 53 712-0287 54 736-0329 55 710-0167 55 710-0167  Carr. Bolt ¼-20 Thd.*  L-Wash. ¼" I.D.*  L-Wash. ¼" I.D.*  Bear Chute—R.H.  Shid. Bolt .500" Dia.  Rear Baffle—L.H.  Carr. Bolt ¼-20 x .50" Lg.*  L-Wash. 3/8" I.D.*  Hex Nut 3/8-24 Thd.—Gr. 8  Bell-Wash40" I.D. x .88"  T12-0222  T42-0222  T42-0222  T42-0222  T42-0222  T42-0222  T42-0388  T12-0287  T10-0167  Carr. Bolt ¼-20 Thd.*  L-Wash. ¼" I.D.*  Carr. Bolt ¼-20 x .50" Lg.*  T10-0167  Carr. Bolt ¼-20 x .50" Lg.*  T10-0167  Carr. Bolt ¼-20 x .50" Lg.*  T10-0167  T17-0829  T17-0829  T17-0828  T17-0828  T17-0828  T17-0828  T17-0828  T17-0828  T17-0828  T17-0828  T17-0828  T17-0829  T17-0828  T17-0828  T17-0829  T17-0828  T18-0145  T17-0829  T17-0829  T17-0829  T17-0828  T17-0829  T17-0828  T17-0828  T17-0829  T17-0828  T17-0828  T17-0828  T17-0828  T17-0829  T17-0828  T17-0829				Bell-Wash39" I.D. x 1.13"		94	710-0892			
3/8-16 x 1.0" Lg. Hinge Pin 41 738-0386 42 712-0287 43 736-0329 44 14236 45 738-0430 46 14014 47 710-0167 48 736-0169 49 712-0328 50 736-0105 51 710-0818 52 742-0222 53 712-0287 54 736-0329 55 710-0167 55 710-0167 56 738-0329 57 710-0167 57 738-0386 48 1.0" Lg. Hinge Pin Hex Nut ¼-20 Thd.* Hex Nut ½-20 Thd.* Hex Nut ½-20 Thd.* Hex Nut ¼-20 Thd.* L-Wash. ¼" I.D.* L-Wash. ¼" I.D.* Lg. (Grade 8) 22" Blade Hex Nut ¼-20 Thd.* L-Wash. ¼" I.D.* L-Wash. ¼" I.D.* Carr. Bolt ¼-20 x .50" Lg.* L-Wash. ¼" I.D. Total Rear Baffle—L.H. Total Rear Upper Handle Push Cap Cartcher Upper Frame Upper Handle Push Cap Catcher Upper Frame Upper Handle Push Cap Catcher Upper Handle Push Cap Control Housing Comp. Shimano 3-Sp. Shift Lever Brkt. Shimano 3-Sp. Cable Spring Brkt. Shimano 3-Sp. Cable Spring Brkt. Shimano 3-Sp. Cable Mounting Spring Instruction Label	40	710-0654							Scr. ¼" x .62" Lg.	
41       738-0386       Hinge Pin       96       726-0100       Push Nut 3/8" Rod         42       712-0287       Hex Nut ¼-20 Thd.*       97       731-0430       Plastic Roller         43       736-0329       L-Wash. ¼" I.D.*       98       764-0171       Grass Bag (w/o Flip Top)         44       14236       Rear Chute—R.H.       99       749-0278       Catcher Upper Frame         45       738-0430       Carr. Bolt ¼-20 x .50" Lg.*       100       749-0437       Upper Handle         46       14014       Rear Baffle—L.H.       101       726-0245       Push Cap         47       710-0167       Carr. Bolt ¼-20 x .50" Lg.*       101       726-0245       Push Cap         48       736-0169       L-Wash. 3/8" I.D.*       102       718-0145       Grip         49       712-0328       Hex Nut 3/8-24 Thd.—Gr. 8       103       753-0431       Control Housing Comp.         50       736-0105       Bell-Wash40" I.D. x .88"       104       717-0827       Shimano 3-Sp. Cable         52       742-0222       Blade       105       717-0828       Shimano 3-Sp. Cable         54       736-0329       L-Wash. ¼" I.D.*       106       717-0828       Shimano 3-Sp. Cable				3/8-16 x 1.0" Lg.		95	14592			
42       712-0287       Hex Nut ¼-20 Thd.*       97       731-0430       Plastic Roller         43       736-0329       L-Wash. ¼" I.D.*       98       764-0171       Grass Bag (w/o Flip Top)         44       14236       Rear Chute—R.H.       99       749-0278       Catcher Upper Frame         45       738-0430       Rear Baffle—L.H.       100       749-0437       Upper Handle         47       710-0167       Carr. Bolt ¼-20 x .50" Lg.*       101       726-0245       Push Cap       Push Cap         48       736-0169       Hex Nut 3/8-24 Thd.—Gr. 8       103       753-0431       Control Housing Comp.         50       736-0105       Bell-Wash40" I.D. x .88"       104       717-0827       Shimano 3-Sp. Shift Lever         51       710-0818       Hex Cl-Bolt 3/8-24 x 2.0"       105       717-0829       Shimano 3-Sp. Cable         52       742-0222       Blade       106       717-0828       Shimano 3-Sp. Cable         54       736-0329       L-Wash. ¼" I.D.*       106       717-0828       Shimano 3-Sp. Cable         55       710-0167       Carr. Bolt ¼-20 x .50" Lg.*       107       777-5775       Instruction Label	41	738-0386		Hinge Pin		96		1		
43       736-0329       L-Wash. ¼″ I.D.*       98       764-0171       Grass Bag (w/o Flip Top)         44       14236       Rear Chute—R.H.       99       749-0278       Catcher Upper Frame         45       738-0430       Shld. Bolt .500″ Dia.       99       749-0278       Catcher Upper Frame         46       14014       Rear Baffle—L.H.       100       749-0437       Upper Handle         47       710-0167       Carr. Bolt ¼-20 x .50″ Lg.*       101       726-0245       Push Cap       Push Cap         48       736-0169       Hex Nut 3/8-24 Thd.—Gr. 8       103       753-0431       Control Housing Comp.         50       736-0105       Bell-Wash40″ I.D. x .88″       104       717-0827       Shimano 3-Sp. Shift Lever         51       710-0818       Hex Cl-Bolt 3/8-24 x 2.0″       105       717-0829       Shimano 3-Sp. Cable         52       742-0222       22″ Blade       106       717-0828       Shimano 3-Sp. Cable         54       736-0329       L-Wash. ¼″ I.D.*       106       717-0828       Shimano 3-Sp. Cable         55       710-0167       Carr. Bolt ¼-20 x .50″ Lg.*       107       777-5775       Instruction Label		712-0287								
44       14236       Rear Chute—R.H.       764-0170       Grass Bag (w/Flip Top)         45       738-0430       Rear Baffle—L.H.       99       749-0278       Catcher Upper Frame         46       14014       Rear Baffle—L.H.       100       749-0437       Upper Handle         47       710-0167       Carr. Bolt ¼-20 x .50" Lg.*       101       726-0245       Push Cap       N         48       736-0169       L-Wash. 3/8" I.D.*       102       718-0145       Grip       Control Housing Comp.         50       736-0105       Bell-Wash40" I.D. x .88"       104       717-0827       Shimano 3-Sp. Shift Lever         51       710-0818       Hex Cl-Bolt 3/8-24 x 2.0"       105       717-0829       Shimano 3-Sp. Cable         52       742-0222       Blade       Spring Brkt.       Shimano 3-Sp. Cable         54       736-0329       L-Wash. ¼" I.D.*       106       717-0828       Shimano 3-Sp. Cable         55       710-0167       Carr. Bolt ¼-20 x .50" Lg.*       107       777-5775       Instruction Label										
45       738-0430       Shld. Bolt .500" Dia.       99       749-0278       Catcher Upper Frame         46       14014       Rear Baffle—L.H.       100       749-0437       Upper Handle         47       710-0167       Carr. Bolt ¼-20 x .50" Lg.*       101       726-0245       Push Cap       N         48       736-0169       Hex Nut 3/8-24 Thd.—Gr. 8       102       718-0145       Grip       Control Housing Comp.         50       736-0105       Bell-Wash40" I.D. x .88"       104       717-0827       Shimano 3-Sp. Shift Lever Brkt.         51       710-0818       Lg. (Grade 8)       105       717-0829       Shimano 3-Sp. Cable Spring Brkt.         52       742-0222       Blade       Hex Nut ¼-20 Thd.*       106       717-0828       Shimano 3-Sp. Cable Mounting Spring         54       736-0329       L-Wash. ¼" I.D.*       107       777-5775       Instruction Label								[		
46       14014       Rear Baffle—L.H.       100       749-0437       Upper Handle         47       710-0167       L-Wash. 3/8" I.D.*       101       726-0245       Push Cap       N         48       736-0169       L-Wash. 3/8" I.D.*       102       718-0145       Grip       Control Housing Comp.         50       736-0105       Bell-Wash40" I.D. x .88"       104       717-0827       Shimano 3-Sp. Shift Lever Brkt.         51       710-0818       Lg. (Grade 8)       105       717-0829       Shimano 3-Sp. Cable Spring Brkt.         52       742-0222       Blade       Hex Nut ¼-20 Thd.*       106       717-0828       Shimano 3-Sp. Cable Mounting Spring         54       736-0329       L-Wash. ¼" I.D.*       107       777-5775       Instruction Label				· · · · · · · · · · · · · · · · · · ·		99		1		
47       710-0167       Carr. Bolt ¼-20 x .50" Lg.*       101       726-0245       Push Cap       N         48       736-0169       L-Wash. 3/8" I.D.*       102       718-0145       Grip       Control Housing Comp.         50       736-0105       Bell-Wash40" I.D. x .88"       104       717-0827       Shimano 3-Sp. Shift Lever Brkt.         51       710-0818       Lg. (Grade 8)       105       717-0829       Shimano 3-Sp. Cable Spring Brkt.         52       742-0222       Blade       Hex Nut ¼-20 Thd.*       106       717-0828       Shimano 3-Sp. Cable Mounting Spring         54       736-0329       L-Wash. ¼" I.D.*       107       777-5775       Instruction Label										
48       736-0169       L-Wash. 3/8" I.D.*       102       718-0145       Grip         49       712-0328       Hex Nut 3/8-24 Thd.—Gr. 8       103       753-0431       Control Housing Comp.         50       736-0105       Bell-Wash40" I.D. x .88"       104       717-0827       Shimano 3-Sp. Shift Lever         51       710-0818       Lg. (Grade 8)       105       717-0829       Shimano 3-Sp. Cable         52       742-0222       Blade       Spring Brkt.       Shimano 3-Sp. Cable         53       712-0287       Hex Nut ¼-20 Thd.*       106       717-0828       Shimano 3-Sp. Cable         54       736-0329       L-Wash. ¼" I.D.*       107       777-5775       Instruction Label								1	Push Can	NI.
49       712-0328       Hex Nut 3/8-24 Thd.—Gr. 8       103       753-0431       Control Housing Comp.         50       736-0105       Bell-Wash40" I.D. x .88"       104       717-0827       Shimano 3-Sp. Shift Lever Brkt.         51       712-0222       Control Housing Comp.       Shimano 3-Sp. Shift Lever Brkt.         52       742-0222       Shimano 3-Sp. Cable Spring Brkt.         53       712-0287       Hex Nut ¼-20 Thd.*       106       717-0828       Shimano 3-Sp. Cable Spring Housing Comp.         54       736-0329       L-Wash. ¼" I.D.*       106       717-0828       Shimano 3-Sp. Cable Mounting Spring Instruction Label					1			1		1.4
50       736-0105       Bell-Wash40" l.D. x .88"       104       717-0827       Shimano 3-Sp. Shift Lever Brkt.         51       710-0818       Lg. (Grade 8)       105       717-0829       Shimano 3-Sp. Cable Spring Brkt.         52       742-0222       22" Blade       Spring Brkt.       Shimano 3-Sp. Cable Spring Brkt.         54       736-0329       L-Wash. ¼" l.D.*       106       717-0828       Shimano 3-Sp. Cable Spring Brkt.         55       710-0167       Carr. Bolt ¼-20 x .50" Lg.*       107       777-5775       Instruction Label										
51       710-0818       Hex Cl-Bolt 3/8-24 x 2.0"       Brkt.       Shimano 3-Sp. Cable         52       742-0222       22" Blade       Spring Brkt.         53       712-0287       Hex Nut ¼-20 Thd.*       106       717-0828       Shimano 3-Sp. Cable         54       736-0329       L-Wash. ¼" I.D.*       Mounting Spring         55       710-0167       Carr. Bolt ¼-20 x .50" Lg.*       107       777-5775       Instruction Label										
Lg. (Grade 8)  105 717-0829  Shimano 3-Sp. Cable Spring Brkt.  Shimano 3-Sp. Cable Mounting Spring Shimano 3-Sp. Cable Spring Brkt.  Shimano 3-Sp. Cable I-Wash. ¼″ I.D.*  Total Property of the prope						104	/1/-002/	1		
52       742-0222       22" Blade       Spring Brkt.         53       712-0287       Hex Nut ¼-20 Thd.*       106       717-0828       Shimano 3-Sp. Cable Mounting Spring         54       736-0329       L-Wash. ¼" I.D.*       107       777-5775       Instruction Label	ונ	7 10-0010				105	717 0000			
53       712-0287       Hex Nut ¼-20 Thd.*       106       717-0828       Shimano 3-Sp. Cable Mounting Spring         54       736-0329       L-Wash. ¼″ I.D.*       107       777-5775       Instruction Label	<b>50</b>	742 0000		Ly. (Glade o)		105	717-0829			
54 736-0329 L-Wash. ¼" I.D.* 55 710-0167 Carr. Bolt ¼-20 x .50" Lg.* 107 777-5775 Instruction Label						400	747 0000	1	Spring Brkt.	
55 710-0167 Carr. Bolt 1/4-20 x .50" Lg.* 107 777-5775 Instruction Label			`			106	717-0828	1-		
	L					4.~		-		
56   /12-02/1   Hex Sems Nut ¼-20 Ind.       8365-000-7   Hardware Pack					ł			_		
	56	/12-0271		Hex Sems Nut 1/4-20 Thd.	L	_	8365-000-	1	Hardware Pack	

## Model 365 NOTE This nstruction manual covers various models, and all specifications shown do not necessarily apply to NOTE: The engine is not under warranty by your model. Specifications subject to change the mower manufacturer...If repairs or service is needed on the engine, please without notice or obligation. contact your nearest authorized engine service outlet. Check the "Yellow Pages" of Find It Fast In The your telephone book under "Engines—Gasoline." **Yellow Pages** 12 10-Engine 51 46 39

## Model 365 PARTS LIST FOR MODEL 365 ROTARY MOWER

	PARTS LIST FOR MODEL 365 HOTARY MOWER								
REF. NO.	PART NO.	COLOR CODE	DESCRIPTION	NEW PART	REF. NO.	PART NO.	COLOR CODE	DESCRIPTION	NEW PART
1	717-0485		Blade/Brake Clutch Ass'y.		42	714-0115	}	Cotter Pin 1/8" Dia. x 1.0"*	
2	719-0256		Fan Adapter		43	748-0187		Ratchet Wheel 1.62" O.D.	
3	746-0400		BBC-Clutch Cable—46"		44	741-0180		FI-Ball Brg. 1/2" I.D.	
4	14307	1	Clutch Housing		45	734-1411	1	Wheel Ass'y. Comp. 8 x 1.75	N
5	741-0326		Steel Ball .500" Dia.		46	710-0892		Hex L-Wash. Hd. AB-Tap	
6	731-0520	1	Ball Block					Scr. 1/4 x .62" Lg.	
7	710-0875		Hex Wash, TT-Tap CI-Scr.		47	736-0219		Bell-Wash40" I.D. x 1.13"	
			1/4-20 x .75" Lg.		48	750-0387		Spacer .505" I.D.	
8	736-0333		FI-Wash690" I.D. x		49	741-0248		Flg. Brg506" I.D. Plastic	
			1.060" O.D.		50	713-0359		9 and 21 Tooth Sprocket	
9	14300		Clutch Blade Hsg. Ass'y.					Ass'y.	
10	741-0124		Ball Brg669" I.D. x		51	717-0825		Shimano 3-Sp. Hub w/18	
			1.574" O.D.					Tooth Sprocket	
11	732-0396		Compression Spring .32"		52	756-0360		FI-Idler Plastic 1.62" Dia.	
		ŀ	O.D. x 2.00" Lg.		53	738-0140		Shld. Bolt .437" Dia. x .180	
12	14304	·	Clutching Cone		54	736-0119		L-Wash. 5/16" I.D.*	
13	14305		Brake Cup Cone		55	712-0267		Hex Nut 5/16-18 Thd.*	
14	732-0397		Extension Spring—1.75" Lg.		56	756-0462		1/2" "V"-Engine Pulley .50"	
15	710-0456		Hex Drilling Scr. #10 x .50"					I.D. x 2.80" O.D.	
16	736-0329		L-Wash. 1/4" I.D.*	ľ	57	715-0144		Spring Pin Spir. 3/16" Dia.	
17	712-0340		Hex Nut 3/8-24 Thd.					x 1.50" Lq.	
1			(Special)		58	754-0292		"V"-Belt	1
18	712-0287		Hex Nut 1/4-20 Thd.*		59	736-0160		Fl-Wash531" I.D. x .930"	
19	732-0357		Extension Spring—1.12" Lg.		60	714-0115		Cotter Pin 1/8" Dia. x 1.0" *	
20	710-0599		Hex Wash. S-Tap Scr.		62	710-0726	1	Hex Wash. Hd. Tap Scr.	
ŀ			1/4-20 x .50" Lg.	ŀ				5/16-18 x .75" Lg.	
21	741-0248		Flg. Brg506" I.D.—Plastic		63	736-0226		Fl-Wash469" I.D. x .88"	
22	713-0361		#48 Chain 1/2" Pitch x		64	712-0340		Hex Nut 3/8-24 Thd.	
			38 Links (Endless)	1				(Special)	
23	713-0256		#48 Chain 1/2" Pitch x		65	717-0824		Shimano 3-Sp. Shift Bell	
			32 Links (Endless)					Crank	
24	13414		Rear Shaft Ass'y.—20.75"		66	738-0471		Pulley Shaft 10" Lg.	
25	16097		Index Plate Rear—L.H.		67	717-0823		Shimano 3-Sp. Solid Shift	
	16098		Index Plate Rear—R.H.					Cable	
			(Not Shown)		68	736-0160		FI-Wash531" I.D. x .930"	
26	736-0326		FI-Wash510" I.D. x 1.0"		69	714-0111		Cotter Pin 3/32" Dia. x 1.0" *	
27	750-0190		Spacer .740" I.D.		70	16304		3-Sp. Hub Bracket	ŀ
28	16099		Pivot Brkt.—L.H.		71	13415		Idler Bracket Ass'y.	
	16100		Pivot Brkt.—R.H. (Not		72	16305	463	3-Sp. Belt Cover	
İ			Shown)	1	73	738-0255		Shid. Bolt .375" Dia. x .181	
29	741-0324		Hex Flange Brg506"	İ	74	710-0642		Hex TT-Tap Scr. 1/4-20 x	
			I.D.—Plastic		1			.75" Lg.	
30	720-0190		Spring Lever Knob		75	746-0466		S.P. Cable—53" Lg.—Blue	
31	732-0467		Spring Lever		76	715-0120		Spring Pin Spir. 3/16" Dia.	
32	736-0160	1	Fl-Wash531" I.D. x .930"				İ	x 1.0" Lg.	
33	710-0352		Hex B-Tap Scr. ¼ x .38"		77	731-0511		Trim Strip	
34	712-0342		Hex Jam Nut 3/8-16 Thd.		78	717-0832		Snap Ring (Special)	1
35	736-0105		Bell-Wash400" I.D. x .88"		79	717-0830		Shifting Pin (Special)	
36	738-0137		Shid. Bolt .342" Dia. x .268		80	717-0826		Pulley Snap Ring (Special)	
37	10622		Spring—Nylon		81	756-0463		½" V-Pulley 1.375" I.D. x	
38	748-0188		Pawl					3.25" O.Ď.	
39	10647		Hub Cap		82	717-0831		Shimano 3-Sp. Dust Cover	
40	712-0324		Hex Ins. L-Nut 1/4-20 Thd.				1	•	
41	710-0748	1	Pan Hd. Tap Scr. #12 x						
			.50" Lg.*			j.			
L				<u> </u>	<u> </u>	L			

<sup>\*</sup>For faster service obtain standard nuts, bolts and washers locally. If these items cannot be obtained locally, order by part number and size as shown on parts list.

If color or finish is important when ordering parts, use the appropriate color code shown at right [i.e. (part no.)-463 for Topflite Red Finish].

#### Color Codes

312—White 463—Topflite Red 436—Radiant Yellow 480—Brilliant Green 447—Patina Silver 483—Charcoal Grey 452—Black 499—Beige
456—Radiant Tangerine 606—Majestic Orange 629—Silver Flake

**Trouble Shooting Chart** 

	Trouble Officialing	Ondit		
Symptom	Possible Cause(s)	Corrective Action		
1 Engine fails to start	<ul> <li>A Check fuel tank for gas</li> <li>B Fuel shut-off valve closed</li> <li>C Spark plug lead wire disconnected</li> <li>D Throttle control lever not in the starting position</li> <li>E Faulty spark p ug</li> <li>F Carburetor improperly adjusted, engine flooded</li> </ul>	A Fill tank if empty. B Open fuel shut-off valve. C Connect lead wire. D Move throttle lever to start position. E Clean, adjust gap or replace.† F Remove spark plug, dry the plug, crank engine with plug re-		
	G Old stale gascline	moved, and throttle in off position. Replace spark plug and lead wire and resume starting procedures.  G Drain and refill with fresh gasoline.		
2 Hard starting or loss of power	A Spark plug wire loose B Carburetor improperly adjusted C Dirty air cleaner	A Connect and tighten spark plug wire.  B Adjust carburetor.†  C Clean air cleaner.†		
3 Operation erratic	A Dirt in gas tan ←  B Dirty air cleaner  C Water in fuel supply  D Vent in gas cap plugged	<ul> <li>A Remove the dirt and fill tank with fresh gas.</li> <li>B Clean air cleaner.†</li> <li>C Drain contaminated fuel and fill tank with fresh gas.</li> <li>D Clear vent or replace gas cap.</li> </ul>		
4 Occasional skip (hesitates) at high speed	Carburetor improperly adjusted      Carburetor idle speed too slow     Spark plug gap too close     Carburetor idle mixture adjustment improperly set	A Adjust carburetor.†      A Adjust carburetor.†      B Adjust to .030".      C Adjust carburetor.†		
5 Idles poorly	A Spark plug for led, faulty, or gap too wide  B Carburetor improperly adjusted  C Dirty air cleaner	A Reset gap to .030" or replace spark plug.     B Adjust carburetor.†     C Clean air cleaner.†		
6 Engine overheats	A Carburetor not adjusted properly  B Air flow restricted  C Engine oil level low	A Adjust carburetor.† B Remove blower housing and clean.† C Fill crankcase with the proper oil.		
7 Excessive vibration	A Cutting blade oose or unbalanced  B Bent blade	A Tighten blade. Balance blade. B Replace blade.		

†Refer to the separate engine manual packed with your unit.

Note: For repairs beyond the minor adjustments listed above, contact your local authorized service dealer.



The use of any accessory on this Rolary Mower other than those manufactured by the mower manufacturer is **not** recommended.

GRASS CATCHER Model 028 is available as replacement equipment for the mower shown in this manual.



- 1. DO NOT operate the mower with the chute door open unless the complete grass catcher is properly mounted on the mower.
- 2. DO NOT operate the mower without the protective shield on the rear of the deck in place.



Under normal usage bag material is subject to vear and should be checked periodically. Be sure any replacement bag complies with the mower manufacturer's recommendations.

For replacement bags, use only factory authorized replacement bag No. 764-0171 (without Flip Top) or 764-0170 (with Flip Top).

## PARTS INFORMATION

#### POWER EQUIPMENT PARTS AND SERVICE

Parts and service are available through the authorized service firms listed below. All orders should specify the model number of your unit, part numbers, description of parts and the quantity of each part required.

#### BRIGGS AND STRATTON, TECUMSEH AND PEERLESS PARTS / SERVICE

Briggs & Stratton, Tecumseh and Peerless parts and service shou handled by your nearest authorized engine service firm. Check the  $y\epsilon$ pages of your telephone directory under the listing Engines—Gasoli Briggs & Stratton or Tecumseh Lauson.

NOTE: If any parts are found to be missing or defective upon assembly of this unit, write to advise the factory so that immediate replacement can be made.

ALABAMA	BIRMINGHAM	NEW YORK	CASTUAGE
Auto Electric & Carburetor Co.	2625 4th Ave S 15233	Gamble Diet Inc	CARTHAGE
ARKANSAS	NORTH LITTLE BOOK	Gamble Dist., Inc.	. West End Ave 13
Sutton's Lawn Mower Shop	5301 Roundtop Drive	NORTH CAROLINA	GREENSBORO
	Box 368, Rt. 4 72117	Dixie Sales Company OHIO	. 335 N. Green 274
CALIFORNIA	PORTERVILLE		CARROLL
Billious	75 North D Street\$3257	Stebe's Mid-State Mower Supply	/ Box 366, 71 High St 431
COLORADO	DENVER		CLEVELAND
Spitzer Industrial Products Co.	6601 N	Bleckrie, Inc	. 7900 Lorain Ave 44102
	141 41		WADOWADTH
FLORIDA	JACKSONVILLE	National Central	. 687 Seville Rd44281
FLORIDA Radco Distributors	4000 Viotor Ct		
	Pox 5450	Burton Supply Co	. 1301 Logan Ave.
	Box 5459 32207 HIALEAH		Box 92944501
Small Eng. Dist	7995 W. 26th Court 3 3016	OREGON	
GEORGIA	- 7995 W. 26th Court 33016	Kenton Supply Co	8216 N. Donyor Ave. 07047
	EAST POINT	PENNSYLVANIA	HARRISBURG
	2834 Church St 3 )344	PENNSYLVANIA EECO Inc.	. 4021 N. 6th St 17110
Keen Edge Co	LYONS		
INDIANA	8615 Ogden Ave 60534	Thompson Rubber Co	850 Davieville Pd 40000
Parts & Calan Inc	ELKHART	,	PITTSBURGH
IOWA	. 2101 Industrial Pkwy 46516	Bluemont Co	PITTSBURGH  11125 Frankstown Rd 15235
IUTIA	DUBUQUE		
Power Lawn & Garden Equip	. 2551 J.F. Kennedy52001	Frank Roberts & Sons	BD 2
LOUISIANA	NEW ORLEANS		SCRANTON
Sunren Engine Co	NEW ORLEANS 8330 Earhart Blvd7(118	Scranton Auto Ignition Co	1122 OF Museum Account
WARYLAND	TAKOMA DARK	TENNESSEE	KNOXVILLE
Center Supply Co	. 6867 New Hampshire	Ace Distributors	2102 Magazia
	Ave	THE DISTIBUTORS	MEMPHIS
MASSACHUSETTS	SPRINGFIELD	American Sales & Service Inc.	2005 40 Dallian I
Morton B. Collins Co	. 300 Birnie Ave 01107	American Sales & Service, Inc TEXAS	3035-43 Bellbrook 38116
WICHIGAN	LANSING	Marr Brothers, Inc.	DALLAS
Lorenz Service Co	. 2500 S. Pennsylvania48910	Wall Brothers, Inc	423 E. Jefferson 75203
	MOUNT CLEMENS	Woodson Salas Com	FORT WORTH
Power Equipment Dist	. 340 Hubbard 48043	Woodson Sales Corp	6733 Baker Blvd.
MINNESOTA	HOPKING		Hwy. 10 76118
Hance Distributing Inc.	. 420 Excelsior Ave. W 55343	Bullard Cupaly Ca	HOUSTON
MISSOURI	EARTH CITY	Bullard Supply Co	2409 Commerce St77003
Oscar Wilson Engine & Parts	4159 Shoreline Dr 63 )45	Engine House Inc	SAN ANTONIO
•	KANSAS CITY	Engine House Inc	8610 Botts Lane
Automotive Equip. Service	3117 Holmes St 64100	HTAH	P.O. Box 17867 78217
	ST. JOSEPH	UTAH	SALT LAKE CITY
Ross-Frazer Supply Co	8th and Montorov	Powered Products	1661 N. Beck St 84116
обру обт.	ST. LOUIS	VINGINIA	ACHI AND
Henzler, Inc.	2015 Lamoy Form Dd	RBI Corp	101 Cedar Ridge Dr 23005
NEW JERSEY	ALLOWAY		
Piersons	Canal St court	Equip. Northwest	1410 14th Ave98122
NEW MEXICO	ALBUQUERQUE	MISCONSIN	MII WALKEE
Spitzer Eng. & Parts Co	1002 Third Ave ALM OF CO	Wisconsin Magneto Inc	4727 N. Teutonia St 53209
-priser Eng. a rans ou	1025 THIRD AVE. IN.W 87" 03		

#### WARRANTY FARTS AND SERVICE POLICY

The purpose of warranty is to protect the customer from defects in workmanship and materials, defects which are NOT detected at the time of manufacture. It does not provide for the unlimited and unrestricted replacement of parts. Use and maintenance are the responsibility of the customer. The manufacturer cannot assume responsibility for conditions over which it has not control. Simply put, if it's the manufacturer's fault, it's the manufacturer's responsibility; if it's the customer's fau t, it's the customer's responsibility.

#### CLAIMS AGAINST THE MANUFACTURER'S WARRANTY INCLUDES:

- 1. Replacement of Missing Parts on new equipment.
- 2. Replacement of Defective Parts within the warranty period.
- 3. Repair of Defects within the warranty period.

All claims MUST be substantiated with the following information:

- 1. Model Number, Serial Number and/or Data Code of unit involved.
- 2. Date unit was purchased or first put into service.
- 3. Date of Failure.
- 4. Nature of Failure.