

OWNER'S MANUAL

26" RIDING MOWER

Model Number 133-500A

Important:

Read Safety Rules and Instructions Carefully

Thank you for purchasing an American built product.

INDEX

Safe Operation Practices	Off-Season Storage
Assembly Instructions4	
Controls	
Operation9	Parts List for Rider
Adjustments11	
Lubrication	
Maintenance12	

LIMITED WARRANTY

For one year from the date of original retail purchase, MTD PRODUCTS INC will either repair or replace, at its option, free of charge, F.O.B. factory or authorized service firm, any part or parts found to be defective in material or workmanship. Transportation charges for the movement of any power equipment unit or attachment are the responsibility of the purchaser. Transportation charges for any parts submitted for replacement under this warranty must be paid by the purchaser unless such return is requested by MTD PRODUCTS INC.

This warranty will not apply to any part which has become inoperative due to misuse, excessive use, accident, neglect, improper maintenance, alterations, or unless the unit has been operated and maintained in accordance with the instructions furnished. This warranty does not apply to the engine, motor, battery, battery charger or component parts thereof. Please refer to the applicable manufacturer's warranty on these items.

This warranty will not apply where the unit has been used commercially.

Warranty service is available through your local authorized service dealer or distributor. If you do not know the dealer or distributor in your area, please write to the Customer Service Department of MTD.

The return of a complete unit will not be accepted by the factory unless prior written permission has been extended by MTD.

This warranty gives you specific legal rights. You may also have other rights which vary from state to state.



This unit is equipped with an internal combustion engine and should not be used on or near any unimproved forest-covered, brush-covered or grass-covered land unless the engine's exhaust system is equipped with a spark arrester meeting applicable local or state laws (if any). If a spark arrester is used, it should be maintained in effective working order by the operator.

In the State of California the above is required by law (Section 4442 of the California Public Resources Code). Other states may have similar laws. Federal laws apply on federal lands. A spark arrester muffler is available at your nearest engine authorized service center.



To reduce the potential for any injury, comply with the following safety instructions. Failure to comply with the instructions may result in personal injury.

SAFE OPERATION PRACTICES FOR RIDING VEHICLES

- Read this owner's manual carefully in its entirety before attempting to assemble or operate this unit. Keep this manual in a safe place for future and regular reference and for ordering replacement parts.
- This unit is a precision piece of power equipment, not a plaything. Therefore exercise extreme caution at all times.
- Know the controls and how to stop quickly— READ THIS OWNER'S MANUAL.
- 4. Do not allow children to operate vehicle. Do not allow adults to operate it without proper instruction. Only persons well acquainted with these rules of safe operation should be allowed to use your mower.
- No one should operate this unit while intoxicated or while taking medication that impairs the senses or reactions.
- 6. Wear sturdy, rough-soled work shoes and close-fitting slacks and shirts to avoid entanglement in the moving parts. Never operate a unit in bare feet, sandals, or sneakers.
- 7. To prevent injury, do not carry passengers or give rides. Keep children, pets and bystanders out of the area while mowing. Only the operator should ride on the unit and only ride in the seat.
- 8. Check overhead clearance carefully before driving under power lines, guy wires, bridges or low hanging tree branches, before entering or leaving buildings, or in any other situation where the operator may be struck or pulled from the unit, which could result in serious injury.
- To maintain control of the unit and reduce the possibility of upset or collision, operate the tractor smoothly. Avoid erratic operation and excessive speed.
- 10. Keep the area of operation clear of all persons, particularly small children and pets. Stop engine when they are in the vicinity of your mower. Although the area of operation should be completely cleared of foreign objects, a small object may have been overlooked and could be accidently thrown by the mower in any direction and cause injury.
- 11. Clear work area of objects which might be picked up and thrown by the mower in any direction and cause injury.
- Stop the blade(s) when crossing gravel drives, walks or roads.
- 13. Disengage all attachment clutches and shift into neutral before attempting to start engine.
- 14. Disengage power to attachment(s) and stop engine before leaving operating position.
- 15. Do not put hands or feet near or under rotating parts. Keep clear of the discharge opening at all times as the rotating blade(s) can cause injury.

- 16. Disengage power to attachment(s) and stop engine before making any repairs or adjustments. Disconnect the spark plug wire and keep the wire away from the plug to prevent accidental starting.
- 17. Before attempting to unclog the mower or discharge chute, stop the engine. The mower blade(s) may continue to rotate for a few seconds after the engine is shut off. Therefore, be sure the blade(s) have stopped completely. Disconnect the spark plug wire and keep the wire away from the plug to prevent accidental starting.
- 18. Disengage power to attachment(s) when transporting or not in use.
- 19. Take all possible precautions when leaving vehicle unattended such as disengaging power-take-off, lowering attachments, shifting into neutral, setting parking brake, stopping engine and removing key.
- 20. Do not stop or start suddenly when going uphill or downhill. Mow up and down face of steep slopes; never across the face. Use extreme caution if it is necessary to drive the tractor up an incline or back the tractor down an incline because the front of the tractor could lift and rapidly flip over backward which could cause serious injury.
- 21. Reduce speed on slopes and in sharp turns to prevent tipping or loss of control. Always keep the tractor in gear when going down steep hills to take advantage of engine braking action.
- 22. Stay alert for holes in terrain and other hidden hazards.
- Use care when pulling loads or using heavy equipment.
 - A. Use only approved drawbar hitch points.
 - B. Limit loads to those you can safely control.
 - C. Do not turn sharply. Use care when backing.
 - D. Use counterweight(s) or wheel weights when suggested in owner's manual.
- 24. Watch out for traffic when crossing or near roadways.
- 25. When using any attachments, never direct discharge of material toward bystanders nor allow anyone near vehicle while in operation.
- 26. Handle gasoline with care. It is highly flammable.
 - A. Use approved gasoline container.
 - B. Never remove cap or add gasoline to a running or hot engine or fill fuel tank indoors. Wipe up spilled gasoline.
 - C. Open doors if engine is run in garage. Exhaust fumes are dangerous. Do not run engine indoors.

- 27. Keep the vehicle and attachments in good operating condition, and keep safety devices in place. Use guards as instructed in operator's manual.
- Keep all nuts, bolts, and screws tight to be sure the equipment is in safe working condition.
- 29. Never store the equipment with gasoline in the tank inside a building where fumes may reach an open flame or spark. Allow engine to cool before storing in any enclosure.
- To reduce fire hazard, keep engine free of grass, leaves or excessive grease.
- grass, leaves or excessive grease.

 31. The vehicle and attachments should be stopped and inspected for damage after striking a foreign object. The damage should be repaired before restarting and operating the equipment.
- 32. Do not change the engine governor settings or overspeed the engine.
- 33. When using the vehicle with mower, proceed as follows:
 - (1) Mow only in daylight or in good artificial light.

- (2) Never make a cutting height adjustment while engine is running if operator must dismount to do so.
- (3) Shut the engine off and wait until the blade comes to a complete stop before removing the grass catcher.
- (4) Check blade mounting bolts for proper tightness at frequent intervals.
- 34. Check grass catcher bags frequently for wear or deterioration. For safety protection, replace only with new bag meeting original equipment specifications.
- 35. Look behind to make sure the area is clear before placing the transmission in reverse and continue looking behind while backing up. Disengage blades before shifting into reverse and backing up.
- 36. This unit should not be driven up a ramp onto a trailer or truck under power, because the unit could tip over, causing serious personal injury. The unit must be pushed manually to load properly.

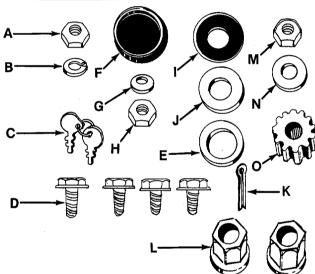


FIGURE 1.

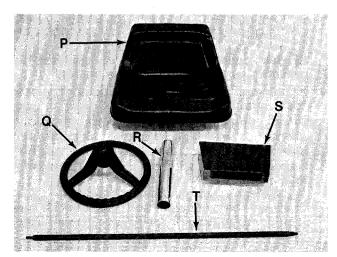


FIGURE 2.

ASSEMBLY INSTRUCTIONS



This unit is shipped WITHOUT GAS-OLINE or OIL. After assembly, see separate engine manual for proper fuel and engine oil recommendations.

—Contents of Hardware Pack: (See Figure 1)

- A (1) Hex Nut 1/2-13 Thread
- B (1) Lock Washer 1/2" I.D.
- C (2) Ignition Keys (May be on Rider)
- D (4) Hex Self-Tapping Screws
- E (1) Flat Washer 5/8" I.D. x 11/4" O.D.
- F (1) Steering Wheel Cap
- G (1) Cupped Washer 5/16" I.D.
- H (1) Hex Nut 5/16-18 Thread
- I (1) Steering Tube Spacer
- J (1) Flat Washer 5/8" I.D. x 1-5/8" O.D.
- K (1) Cotter Pin
- L (2) Hex Flange Bearings
- M (1) Hex Nut 5/16-24 Thread
- N (1) Flat Washer 5/16" I.D. x 5/8" O.D.
- O (1) Pinion Gear

← Loose Parts in Carton: (See Figure 2)

- P (1) Seat
- Q (1) Steering Wheel
- R (1) Steering Tube—Chrome
- S (1) Steering Gear Cover
- T (1) Steering Shaft


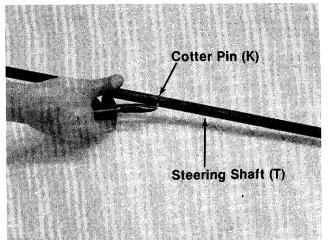


FIGURE 3.

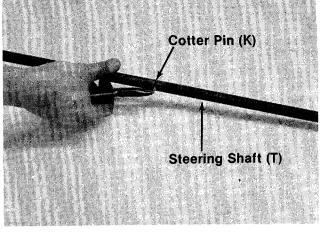

2. Press the large flat washer (J) (1-5/8" diameter) into the open side of the black plastic steering tube spacer (I). See figure 4.

INSTALLATION OF STEERING MECHANISM 1. Insert the cotter pin (K) into the hole on steering shaft (T). Secure in place by bending the ends of the cotter pin in opposite directions.

See figure 3.

3. Press the steering tube spacer into one end of the chrome-plated steering tube (R). See figure 4. Make certain spacer is seated securely into tube.

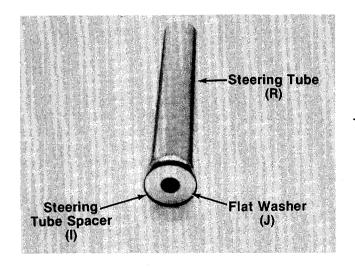


FIGURE 4.


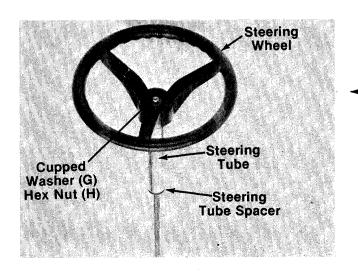


FIGURE 5.

- 4. With the steering shaft in the normal upright position (end with flattened portions up), slide the steering tube spacer and steering tube down over the shaft. See figure 5.
- 5. Place steering wheel (Q) over the end of the steering shaft, lining up the flattened portions of the steering shaft with the flattened portions of the steering wheel. Make certain steering wheel is seated over the end of the steering tube.
- 6. Place cupped washer (G) over the steering shaft, with the cupped side of the washer against the steering wheel. Secure with hex nut (H) (5/16" I.D.). See figure 5. Tighten securely.

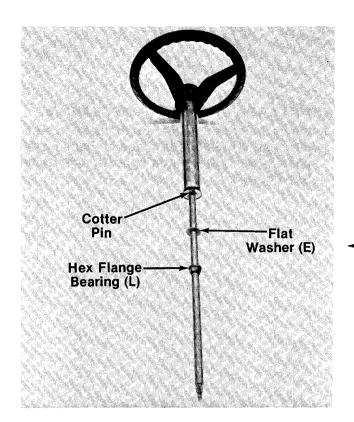

7. Slip flat washer (E) (1¼" diameter) on the steering shaft immediately below the cotter pin. Place one plastic hex flange bearing (L),—flat side up, below the washer. See figure 6.

FIGURE 6.

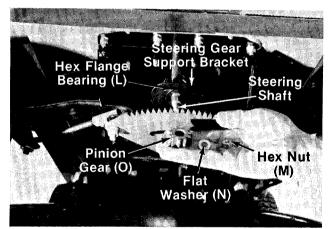


FIGURE 7.


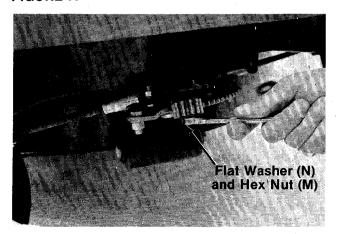


FIGURE 8.

- 8. Insert the steering shaft with assembled parts through the steering housing cover. The lower end of the shaft should extend through the hole in the front end of the steering gear support bracket (Ref. No. 12 on page 24). See ——figure 7.
- 9. Loosen the hex nut located at the rear of the steering gear segment (Ref. No. 27 on page 24) so that the steering gear segment can be pushed about ¼" toward the rear of the rider, to permit easier assembly of the pinion gear. Two 9/16" wrenches are required.
- Place the remaining hex flange bearing (L), flat side down, over the end of the steering shaft, and seat it into the steering gear support bracket. See figure 7.
- 11. Position pinion gear (O) over splined collar on steering shaft. Then place flat washer (N) (5/8" diameter) on shaft and secure with hex nut (M) (5/16" I.D.). Do not tighten at this time.
- 12. Push the steering gear segment (loosened in step 9) forward toward its original position, until it engages the teeth of the pinion gear. Retighten the nut at the rear of the steering gear segment. Two 9/16" wrenches are required.
- 13. Now tighten the hex nut (M) which secures ——the pinion gear. See figure 8.
- 14. Lubricate the teeth of the pinion gear and steering gear segment with an automotive chassis grease.

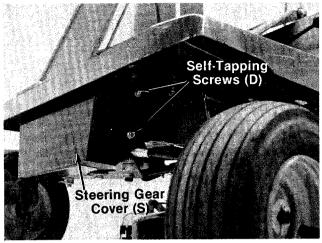

16. Press steering wheel cap (F) in place in the center of the steering wheel.



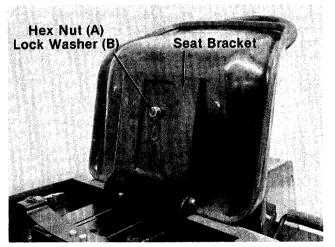


FIGURE 10.

SEAT

The seat may be adjusted to three different positions. Select the desired seat position and secure the seat to the seat bracket with hex nut (A) and lock washer (B). See figure 10.

15. Install the steering gear cover (S) as shown in

figure 9, to cover the underside of the steering mechanism. Secure with two self-tapping screws (D) on each side of the cover. Do not completely tighten any of these screws until all four of them are positioned correctly.

TIRE PRESSURE

For shipping purposes, the tires on your unit may be over-inflated. Tire pressure should be reduced before unit is put into operation. Pressure should be approximately 15 p.s.i. Equal tire pressure should be maintained on all tires. Maximum tire pressure is 30 p.s.i.

CONTROLS

This manual should be read in its entirety before operating the riding mower. While reading the manual, compare the illustrations with your mower to familiarize yourself with the locations of various controls, lubrication points and adjustment features.

Study the operating instructions and safety precautions thoroughly to insure proper functioning of your mower and to prevent injury to yourself and others. Be sure to save this manual for future reference.

THROTTLE CONTROL

The throttle control is used to regulate the engine speed and choke the engine. The engine should be operated from 3/4 to full throttle when operating the cutting deck. See figure 11.

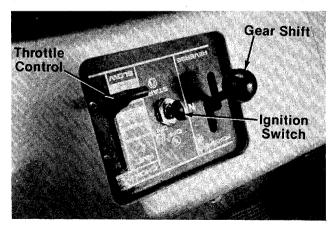


FIGURE 11.

IGNITION KEY

The key must be turned to the "ON" position before pulling the recoil handle to start the engine. Turn the key to the left to the "OFF" position to stop the engine. Remove the key when the unit is not in use.

SHIFT LEVER

The shift lever is located on the left hand side of the console and has three positions, "FORWARD," "NEUTRAL" and "REVERSE." See figure 11. The clutch-brake pedal must be depressed and the riding mower must not be moving when shifting gears. Do not force the shift lever. Release the clutch-brake pedal slightly to line up the shifting collar in the transmission. Then try to shift gears.

CLUTCH-BRAKE PEDAL

The clutch-brake pedal is located on the right side of the rider. Depressing the clutch-brake pedal part way disengages the clutch. Pressing the pedal all the way down disengages the clutch and engages the disc brake. See figure 12.



The clutch-brake pedal must be depressed to start the engine.

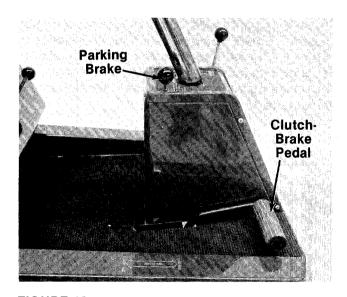


FIGURE 12.

PARKING BRAKE

To set the parking brake, depress the clutch-brake pedal and press the parking brake knob down. To release the parking brake, depress and release the clutch-brake pedal. See figure 12.

BLADE ENGAGEMENT LEVER

The blade engagement lever is located on the right hand side of the deck. Figure 13 shows the blade engagement lever in the disengaged position.

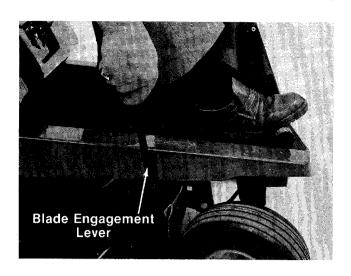


FIGURE 13.

To engage the blade, move the blade engagement lever toward the front of the unit. Move the lever toward the rear to disengage the blade.

DECK CUTTING HEIGHT LEVER

The deck cutting height lever is used to raise and lower the cutting deck, which sets the cutting height.

Move the lever outward, select desired cutting height and release lever. The lever may be set in any one of the six cutting height positions. See figure 14.



The blade does not shut off when the deck is raised. You must place the Blade Engagement Lever in the disengaged (OFF) position.



FIGURE 14.

SAFETY INTERLOCK SYSTEM

Interlock safety switches are located on the clutch-brake pedal, the blade engagement lever and shift lever.

Before the engine will start, the clutch pedal must be depressed all the way and the blade engagement lever must be in the disengaged position.

Before the unit can be shifted into reverse, the blade engagement lever must be in the disengaged position.

RECOIL STARTER HANDLE

The recoil starter handle is located on the left rear side of rider. The recoil starter handle can be pulled while standing by the left rear side of unit. The ignition key must be on before the engine will start. After the engine starts, the recoil starter handle must be returned and locked into the rope handle bracket before the blade or clutch is engaged. The engine will stop if these instructions are not followed. See figures 15 and 16.

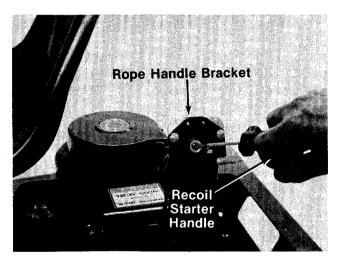


FIGURE 15.

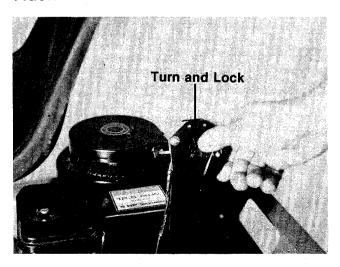


FIGURE 16.

OPERATION

CAUTION

- 1. Keep all shields in place.
- 2. Before leaving operator's position:
 - a. Shift transmission to neutral
 - b. Set parking brake
 - c. Disengage attachment clutch
 - d. Shut off engine
 - e. Remove ignition key
- 3. Wait for all movement to stop before servicing machine.
- 4. Keep people and pets a safe distance away from machine.
- 5. Look to the rear before backing up.

CAUTION NOT OPERATE

DO NOT OPERATE MOWER UNLESS GUARD OR ENTIRE GRASS CATCHER IS IN ITS PROPER PLACE.



NOTE

This unit is equipped with a safety interlock system for your protection. The purpose of the safety interlock system is to prevent the engine from cranking or starting unless the clutch-brake pedal is depressed and the blade engagement lever is in the disengaged position. In addition, the blade engagement lever must be in the disengaged position when the unit is put into reverse or the engine will shut off.



Do not operate the rider if the interlock system is malfunctioning because it is a safety device, designed for protection.

STARTING THE ENGINE



CAUTION

Get on and off the unit from the left hand side to avoid possible contact with the blade engagement lever (located on the right hand side).

- Be sure the crankcase is filled with oil as recommended in the engine manual. Fill fuel tank with clean, fresh unleaded, low-lead or regular grade leaded gasoline.
- 2. Attach the wire to the spark plug.
- Depress the clutch-brake pedal and lock it down.
- 4. Move the blade engagement lever back to the disengaged position.
- 5. Set the throttle control lever in the "CHOKE" position.
- Turn the ignition key to the "ON" position. Twist the recoil starter handle until it is free and pull it with a quick steady motion. After the engine starts, return the recoil starter handle and twist it until it locks. See figure 15.
- 7. Slowly return the throttle to the running position as soon as the engine starts.
- To stop, turn the ignition key to the "OFF" position. Remove the key when the rider is not in use.

PUTTING THE RIDING MOWER IN MOTION



CAUTION

Parking brake **must** be disengaged before unit is put into motion.

- Advance the throttle control from 3/4 to full throttle to prevent strain on the engine and to operate the cutting blades.
- Place the shift lever in either the "FORWARD" or "REVERSE" position.



CAUTION

Look to the rear before backing up.

- 3. Slowly release the clutch-brake pedal.
- 4. To stop, depress the clutch-brake pedal.
- The blades can be engaged either while moving or while standing still. Move the blade engagement lever forward slowly until the blades are turning.



When the blades are engaged, keep feet and hands away from the discharge opening, the blades or any part of the deck.

STOPPING

Engine—Turn the ignition key to the left to the "OFF" position.

Rider—Depress the clutch-brake pedal.

Blades—Pull the blade engagement lever all the way back.



CAUTION

If the unit is not to be used for a long period, place the shift lever in NEUTRAL, stop the engine, set the parking brake and remove the key. DO NOT leave the machine on an incline.



A brief break-in period is essential to ensure maximum engine and mower life. The break-in consists of running the engine at half speed for a period of time required to use one tank of gasoline. It is also recommended to change crankcase oil after the first 5 hours of operation.

Be sure that the lawn is clear of stones, sticks, wire, or other objects which could damage lawn mower or engine. For best results and to insure more even grass distribution, do not mow when lawn is excessively wet.



IMPORTANT

If you strike a foreign object, stop the engine. Remove wire from spark plug, thoroughly inspect the mower for any damage, and repair the damage before restarting and operating the mower.

GRASS CATCHER Model 015 is available as optional equipment for the mower shown in this manual.



The mower should not be operated without the entire grass catcher or chute deflector in place.



Under normal usage bag material is subject to wear, and should be checked periodically. Be sure any replacement bag complies with the mower manufacturer's recommendations.

For replacement bags, use only factory authorized replacement bag No. 764-0121.

ADJUSTMENTS



CAUTION

Do not at any time make any adjustment to lawn mower without first stopping engine and disconnecting spark plug wire.

THROTTLE CONTROL

To Check Operation:

- 1. Remove air cleaner.
- 2. Move throttle control lever to "CHOKE" position. The carburetor choke should be closed.
- 3. Move throttle control lever to "STOP" position. Lever should make good contact with stop switch.

If adjustment is needed, refer to the separate engine manual packed with your unit.

BRAKE ADJUSTMENT (See Figure 17)

During normal operation of this machine, the brake is subject to wear and will require periodic examination and adjustment.

The brake is located by the left rear wheel inside the frame.

To adjust the brake, loosen the outside hex nut. Tighten the inside hex nut one-quarter turn. Test the brake and repeat adjustment if necessary. Then tighten the outside hex nut. See figure 17.

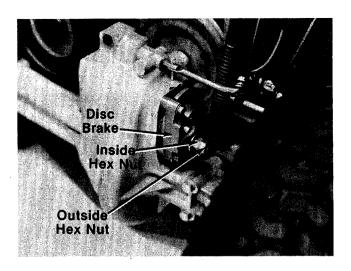


FIGURE 17.

WHEEL ALIGNMENT

The caster (forward slant of the king pin) and the camber (tilt of the wheels out at the top) require no adjustment. Automotive steering principles have been used to determine the caster and camber on the mower. The front wheels should toe-in 1/8 inch. See figure 18. To adjust, follow these steps:

- Remove the cotter pin and flat washer which hold the tie rod to the axle bracket. See figure 18
- 2. Adjust the tie rod in or out until the wheels toe-in approximately 1/8".
- 3. Replace the tie rod into the wheel bracket, and replace the cotter pin and flat washer.

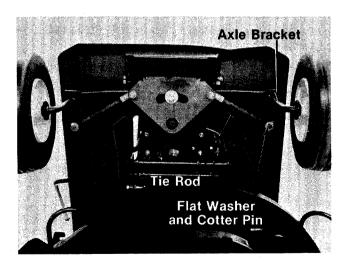


FIGURE 18.

DECK ADJUSTMENT ROD

If an uneven cut is obtained, the deck may be adjusted. A deck adjustment rod is located on the right side of the unit. See figure 19.

To adjust the deck, loosen the two hex nuts at the left rear deck link assembly. Thread the hex nuts up or down the deck adjustment rod as necessary. Retighten the hex nuts.

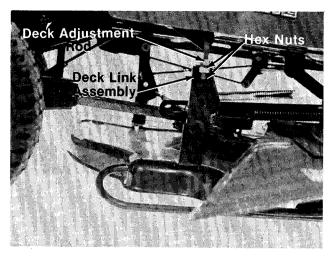


FIGURE 19. CARBURETOR ADJUSTMENT



If any adjustments are made to the engine while the engine is running (e.g. carburetor), disengage all clutches and blades. Keep clear of all moving parts. Be careful of heated surfaces and muffler.

Minor carburetor adjustment may be required to compensate for differences in fuel, temperature, altitude and load.

To adjust the carburetor, refer to the separate engine manual packed with your unit.

LUBRICATION

IMPORTANT

Always stop engine and disconnect spark plug wire before cleaning, lubricating or doing any kind of work on riding mower.

- 1. **Engine.** Maintain the engine oil according to the engine manual.
- 2. **Bearings.** The following bearings are plastic and do not require lubrication. However, their normal life can be extended by lubricating them once a season with a light, non-detergent oil. A 4 oz. plastic bottle of light oil lubricant is available. Order part number 737-0170. Engine oil may also be used.

- a. King Pin Bearings (total 4 bearings)
- b. Front Wheel Bearings (total 4 bearings)
- 3. Throttle Control and Cable. Wipe oiled rag along entire length of cable.
- 4. **Linkage.** Oil all deck linkage and height adjustment linkage.
- Transaxle. It is lubricated at the factory and does not require checking. Lubricate with 10 oz. of grease (Part No. 737-0148) if disassembled.

MAINTENANCE



Disconnect spark plug wire and ground it against the engine before performing any repairs or maintenance.

CUTTING BLADE

A. Removal for Sharpening or Replacement



Be sure to disconnect and ground the spark plug wire before working on the cutting blade to prevent accidental engine starting.

- 1. Remove the large bolt and lock washer which holds the blade and adapter to the blade spindle. See figure 20.
- 2. Remove the blade and adapter from the spindle.
- If the blade or blade adapter needs replacing, remove the two small bolts, lock washers and nuts which hold the blade to the adapter. See figure 20.

B. Sharpening

Remove the cutting blade by following the directions of the preceding section.

When sharpening the blade, follow the original angle of grind as a guide. It is extremely important that each cutting edge receives an equal amount of grinding to prevent an unbalanced blade. An unbalanced blade will cause excessive vibration when rotating at high speeds, may cause damage to the mower and could break, causing personal injury.

The blade can be tested for balance by balancing it on a round shaft screwdriver. Remove metal from the heavy side until it balances evenly.



It is recommended that the blade always be removed from the adapter for the best test of balance.

C. Reassembly

Before reassembling the blade and the blade adapter to the unit, lubricate the spindle and the inner surface of the blade adapter with light oil. Lubricating the bolt holes, bolts and inner surface of the nuts with light oil is also recommended. A 4 oz. plastic bottle of light oil lubricant is available. Order part number 737-0170. Engine oil may also be used.

When replacing the blade, be sure to install the blade with the side of the blade marked "Bottom" (or with part number) facing the ground when the mower is in the operating position.

Blade Mounting Torque

3/8" Dia. Bolt 375 in. lb. min., 450 in. lb. max. 5/16" Dia. Bolt 150 in. lb. min., 250 in. lb. max.



To insure safe operation, ALL nuts and bolts must be checked periodically for correct tightness.

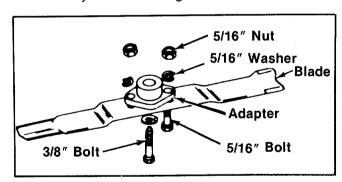


FIGURE 20. BLADE REMOVAL

CLEANING ENGINE AND BLADE HOUSING

Any fuel or oil spilled on the machine should be wiped off promptly. Grass, leaves, and other dirt must not be left to accumulate around the cooling fins of the engine or on any part of the machine.

Clean the underside of the blade housing after each mowing.

BELTS

Check that belts are free of oil or dirt. Wipe the belts periodically with a clean rag.

ENGINE OIL

Check oil level before starting engine and after every 5 hours of operation or each period of use. Refer to separate engine manual.

Change oil after first 5 hours of operation. Thereafter change every 25 hours. Change oil while engine is warm.

AIR CLEANER

Service air cleaner every 25 hours under normal conditions. Clean every few hours under extremely dusty conditions. Poor engine performance and flooding usually indicates that the air cleaner should be serviced. Refer to separate engine manual.

SPARK PLUG

The spark plug should be cleaned and the gap reset once a season. Spark plug replacement is recommended at the start of each mowing season; check engine manual for correct plug type and gap specification.

INSTALLATION OF TIRE TO RIM



The following procedure must be followed when removing or installing a tire to the rim.

- 1. Lubricate the tire beads and rim flanges.
- 2. Do not exceed 30 p.s.i. when seating beads.
- 3. Adjust to recommended pressure after beads are seated.

BELT REMOVAL AND REPLACEMENT



It is recommended that the entire instructions on belt removal and replacement be read before changing the belts.

Deck Belt

- To prevent gasoline from leaking from the engine, remove the fuel tank cap, place a piece of thin plastic over the neck of the fuel tank and screw on the cap.
- 2. Disconnect the spark plug wire and ground it against the engine.



Rear wheel was removed for clarity only. It is not necessary to remove the wheel when changing belts.

- Move the blade engagement lever to the disengaged position.
- Remove one hex bolt and lock washer at the front of upper engine belt guard. A 7/16" wrench is required. See figure 21.
- 5. Loosen (**Do Not** remove) the second bolt. See figure 21.

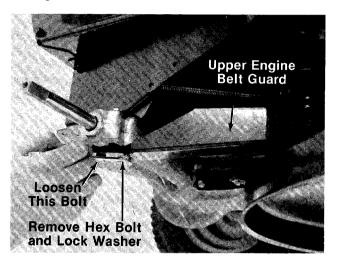


FIGURE 21.

6. Pivot the upper engine belt guard out and away from the engine pulley. See figure 22.

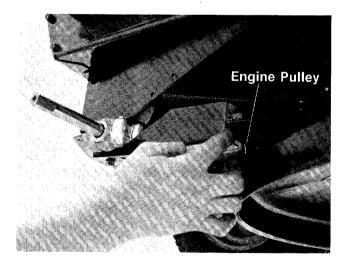


FIGURE 22.

- 7. Remove the hex bolt at the lower inside belt guard (at transaxle) which holds the brake cable assembly. See figure 23. A 3/8" wrench is required.
- Loosen the second bolt (do not remove), then pivot the guard upward, and slip the deck belt off the engine pulley. See figures 23 and 24.

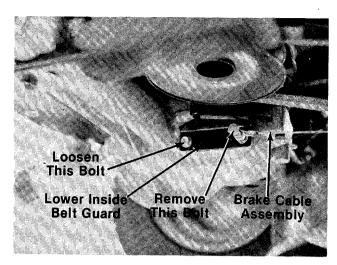


FIGURE 23.

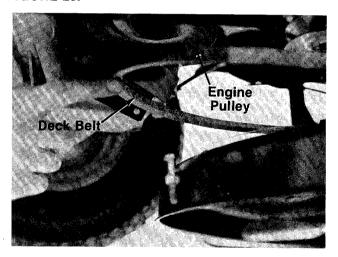


FIGURE 24.

 Remove the three (3) hairpin cotters and flat washers which hold the deck links to the rider. Two (2) are located at the rear of the deck. See figure 25. One (1) is located at the front of the deck.

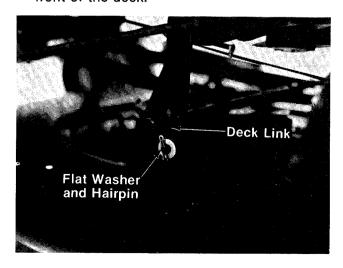


FIGURE 25.

- 10. Remove the two belt keepers on the deck. See figure 26.
- 11. Remove and replace the deck drive belt.

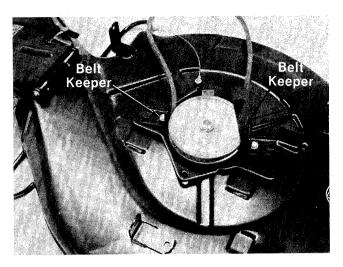


FIGURE 26.

DRIVE BELT

- 1. Remove the deck as outlined in steps 1 through 9 in previous section.
- 2. Remove the hex bolt, nut and lock washer at the torque rod bracket and transaxle. See figure 27.

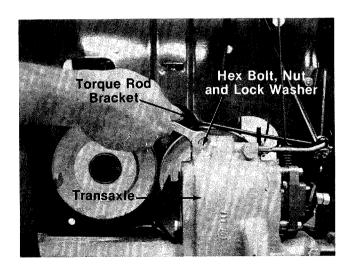


FIGURE 27.

3. Remove the hex bolt which holds the torque rod bracket to the torque rod, and remove bracket. See figure 28.

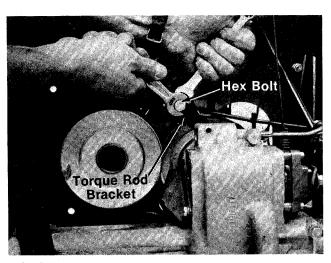


FIGURE 28.

4. Remove the belt trap (located on the left hand side of the transaxle pulley) by removing two hex nuts and lock washers. See figure 29.

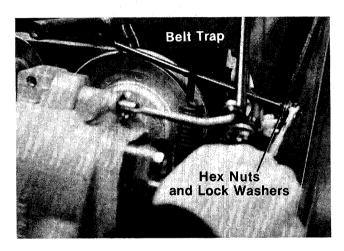


FIGURE 29.

5. Remove the idler pulley by removing the hex lock nut. See figure 30.

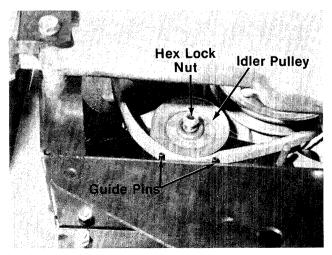


FIGURE 30.

- 6. Slip the idler pulley and drive belt off the idler bracket.
- 7. Slip the drive belt off the engine pulley and around the torque rod. Work it over the top of the transaxle pulley.
- 8. Pull the drive belt out through the opening in the frame below the engine pulley and above the transaxle pulley. See figure 31.

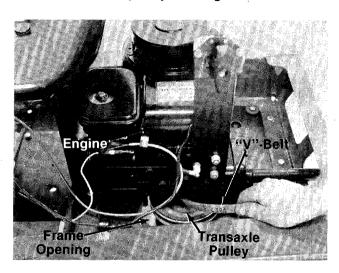


FIGURE 31.

Upon reassembly of idler pulley, be certain the hub side of idler goes against the idler bracket.

- 10. When sliding the idler pulley on the idler bracket, be certain the belt is between the pulley and guide pins. See figure 30.
- 11. Reverse the above steps (paying close attention to steps 9 and 10) when reassembling the new belts.



Be certain all belts are inside belt guards and keepers.

OFF-SEASON STORAGE

If the machine is to be inoperative for a period longer than 30 days, prepare for storage as follows.

- 1. Clean the engine and the entire unit thoroughly.
- 2. Lubricate all lubrication points. Wipe the entire machine with an oiled rag to protect the surfaces.
- Refer to the engine manual for correct engine storage instructions. The engine must be completely drained of fuel to prevent gum deposits from forming on essential carburetor parts, fuel lines and fuel tanks.
- 4. Store unit in a clean, dry area.

TROUBLE SHOOTING CHART FOR RECOIL START MODELS

CAUTION: ALWAYS DISCONNECT SPARK PLUG BEFORE ATTEMPTING ANY REMEDY.


TROUBLE	LOOK FOR	REMEDY
Engine will not start when re- coil handle is pulled.	Clutch and blade not disengaged.	Clutch pedal must be depressed and blade must be shut off.
punou.	Ignition key not in the ON position.	Turn on the ignition key.
	Throttle not in the starting position.	Check owner's guide for correct position for throttle control for starting.
	No spark to spark plug.	Spark plug lead disconnected. Connect lead. Hold spark plug lead away from engine block about 1/8". Crank engine. There should be a spark. If not, have the engine repaired at authorized engine service dealer. Faulty spark plug. To test, remove spark plug. Attach spark plug lead to spark plug. Ground spark plug body against the engine block. Crank the engine. The spark plug should fire at the electrode. Replace if it does not.
ř	No fuel to the carbure- tor.	Gasoline tank empty. Fill. Fuel valve shut off. Open valve. Valve is located either at the bottom of the fuel tank or on the carburetor. Fuel line is plugged. Remove and clean.
	Air filter dirty.	If the air cleaner is dirty, the engine may not start. Clean or replace as recommended by the engine manufacturer.
	Mechanical failure (wires or switch).	The interlock system includes two mechanical activated switches which are wired in parallel. If the buttons on both switches are not depressed at least 1/8", the magneto will be grounded and the engine will not start. While testing the interlock system, you will make the mower temporarily unsafe by permitting the engine to be started with the blade and clutch engaged. WARNING: While testing, disengage the clutch, shut off the blade control, set the parking brake and place the gear shift lever in neutral. Disconnect the yellow wire where it attaches to the primary wire from the breaker assembly on the engine. Try to start the engine. If the engine does not start , the problem is in the engine (e.g. no fuel or no ignition). If the engine does start, the problem is in the safety system. Check the following: 1. The interlock wire may be grounded by being pinched or rubbing through the insulation. Tape or replace the wire. 2. The bolt on the flat spring behind the recoil starter where the yellow wire attaches must be insulated from the spring. Use a continuity tester. If it is not insulated, remove the bolt and nut, and replace the two fiber washers and reassemble.
Engine stops when the mower blade is engaged or the clutch is released.	Recoil handle is not in proper position.	After the engine starts, the recoil starter handle must be pushed into the dashboard and turned a quarter turn either direction to lock it in place.
Engine smokes.	Engine loses crankcase vacuum.	Dipstick not seated or broken. Replace defective part. Engine breather defective. Replace.
Excessive vibration	Bent or damaged blade spindle	Stop engine immediately. Check all pulleys, blade spindles, blade adapters, keys and bolts for tightness or damage. Tighten or replace any damaged parts.
	Bent blade.	Stop engine immediately. Replace damaged blade. Only use original equipment blades.
Mower will not discharge grass or leaves uncut strips.	Engine speed too low.	Throttle must be set between 3/4 and full throttle.
	T	Han January American State Company
•	Transmission selection.	Use lower transmission gear. The slower your ground speed, the better the quality of cut.

BELT TROUBLE SHOOTING CHART

Failure	Probable Cause	Corrective Action
1 Broken Belt	1A Sudden stop or shock load to belt	1A Inspect rider for cause such as foreign objects stuck in between deck and frame or belt path. Remove obstruction and inspect for damage. Replace belt per parts list in this manual.
	1B Incorrect belt used	1B Replace with proper belt only. See parts list in this manual. Roll belt onto pulley. Do not use a screwdriver to push or pry belt onto pulley. The sharp bend can damage internal cords.
	1C Abrupt engagement	1C Slower engagement required.
	1D Defective or damaged belt	1D Refer to 1B.
2 Belt Shreds	2A Belt guides or guards in- correctly adjusted	2A Belt guides and guards should be adjusted to approximately 1/16 to 1/8 inch from belt when in the engaged position.
	2B Pulleys not aligned	2B Realign pulleys to be within approximately 1/16 inch of each other. Check with straight edge. Be sure fastening hardware is tight.
	2C Bad pulley—rough, rusty, chipped, bent, frozen bearing, etc.	2C Replace as necessary. Adjust as per 2B.
3 Belt Comes Off	3A Belt stretched	3A Adjust as necessary when applicable. Refer to 1B.
	3B Broken or weak idler spring	3B Replace.

NOTES

19

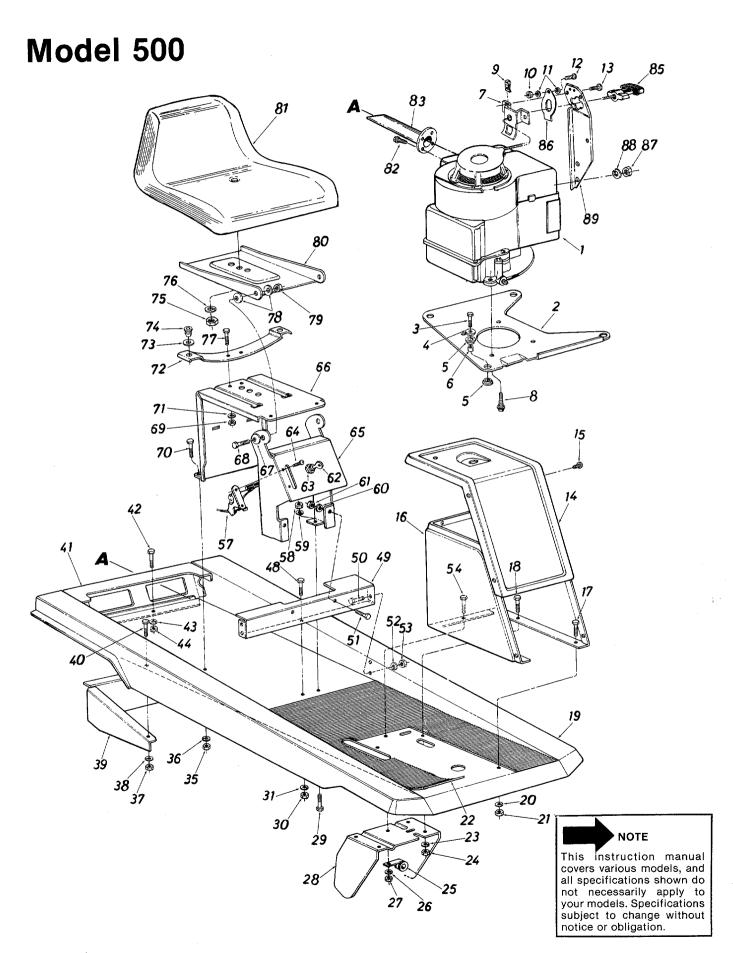


PARTS LIST FOR MODEL 500 RIDING MOWER

			PARTS LIST FOR				3 111 0 11		
REF. NO.	PART NO.	COLOR CODE	DESCRIPTION	NEW PART		PART NO.	COLOR CODE	DESCRIPTION	NEW PART
1			Engine		44	712-026	7	Hex Nut 5/16-18 Thd.*	
2	15572		Engine Mounting Plate	N	48	710-011		Hex Bolt 5/16-18 x .75" Lg.*	
3	710-015	58	Hex Bolt 5/16-24 x 1.25" Lg.*		49	15604		Seat Support & Frame Brkt.	N
4	736-023	31	Fl-Wash330" I.D. x 1.125"		50	710-062	1	Hex Bolt 5/16-18 x .50" Lg.*	'`
			O.D.		51	710-062	1	Hex Bolt 5/16-18 x .50" Lg.*	1
5	722-015		Engine Mounting Grommet		52	736-011	9	L-Wash. 5/16" I.D.*	
6	750-053	39	Spacer .315" I.D. x .50" O.D.		53	712-026	7	Hex Nut 5/16-18 Thd.*	ĺ
			x .520" Lg.		54	710-011	8	Hex Bolt 5/16-18 x .75" Lg.*	
7	11053		Switch Brkt. Ass'y.		57	746-022	0	Throttle Control	
8	710-050)2	Hex Wash. Hd. Self-Tap Scr.		58	712-026	7	Hex Nut 5/16-18 Thd.*	
_			3/8-16 x 1.25" Lg.		59	736-011	9	L-Wash. 5/16" I.D.*	
9	712-014		Speed Nut #10-24 U-Type		60	736-011	9	L-Wash. 5/16" I.D.*	
10	712-012		Hex Nut #10-24 Thd.		61	712-026		Hex Nut 5/16-18 Thd.*	
11	736-033		Fiber Washer		62	725-020		Ignition Key	
12	710-042	25	Truss Mach. Scr. #10-24 x		63	725-046		Ignition Switch	
			.62" Lg.		64	710-035	1	Truss Mach. B-Tap Scr. #10	
13	710-035	51	Truss Mach. Scr. #10 x .50"					x .50" Lg.	
		[Lg.		65	15605		Front Seat Bracket	N
14	15554		Steering Housing Cover	N	66	15606		Rear Seat Bracket	N
15	710-035	51	Truss Mach. B-Tap Scr. #10		67	736-024	2	Bell-Wash345" I.D. x .88"	
		1	x .50" Lg.					O.D.	
16	15555		Steering Shaft Housing	N	68	710-011		Hex Bolt 5/16-18 x .75" Lg.*	
17	710-037		Hex Bolt 5/16-18 x 1.0" Lg.*		69	712-028		Hex Nut 1/4-20 Thd.*	
18	710-011	8	Hex Bolt 5/16-18 x .75" Lg.*		70	710-0759		Hex Bolt 5/16-18 x .62" Lg.*	l ·
19	15550	_	Main Frame	N	71	736-0329		L-Wash. 1/4" I.D.*	ĺ
20	736-011		L-Wash. 5/16" I.D.*		72	732-043		Seat Spring	N
21	712-026		Hex Nut 5/16-18 Thd.*		73	736-0160	ן	FI-Wash531" I.D. x .930"	
22	735-022		Floor Mat	N	7.4	704 055	_	O.D.	
23	736-011		L-Wash. 5/16" I.D.*		74	731-055		Grommet	
24 25	712-026		Hex Nut 5/16-18 Thd.*		75	712-0206		Hex Nut ½-13 Thd.*	
26	726-017 712-026		Clamp		76	736-092		L-Wash. 1/2" I.D.*	-
27	736-011		Hex Nut 5/16-18 Thd.* L-Wash. 5/16" I.D.*		77 78	710-0258		Hex Bolt 1/4-20 x .62" Lg.*	
28	15562	9		N	/0	736-0242	ے	Bell-Wash345" I.D. x .88"	
29	710-075	ia l	Clutch-Brake Pedal Ass'y. Hex Bolt 5/16-18 x .62" Lg*	IN 1	79	712-0158	,	O.D.	
30	712-026		Hex Nut 5/16-18 Thd.*		80	15607	'	Hex Cent. L-Nut 5/16-18 Thd. Seat Pivot Bracket	
31	736-011		L-Wash. 5/16" I.D.*		81	757-0264	, l		N
35	712-026		Hex Nut 5/16-18 Thd.*		82	710-0407		Seat Ass'y. Comp.	
36	736-011		L-Wash. 5/16" I.D.*		02	110-0401	'	Hex F-Tap Scr. 8-32 x .38" Lg.	
37	712-026		Hex Nut 5/16-18 Thd.*		83	751-034	1	Exhaust Pipe Ass'y.	NI.
38	736-011		L-Wash. 5/16" I.D.*		85	11263	'	Plastic Handle (Starter Rope)	N
39	15552	-	Transaxle Support Ass'y.	N	86	732-0257	7	Switch Spring	' 1
	710-011	8	Hex Bolt 5/16-18 x .75" Lg.*	17	87	712-0267		Hex Nut 5/16-18 Thd.*	
41	15571	-	Rear Frame Panel	N	88	736-0119		L-Wash. 5/16" I.D.*	
	710-062	1	Hex Bolt 5/16-18 x .50" Lg.*	'`	89	15655	_	Rope Handle Bracket	N
	736-011		L-Wash. 5/16" I.D.*			.0000	- 1	po Handio Diaonet	13

(462-Red Flake)

When ordering parts, if color or finish is important use the appropriate color code shown above. (e.g. Red Flake Finish—11836 (462).)

^{*}For faster service obtain standard nuts, bolts and washers locally. If these items cannot be obtained locally, order by part number and size as shown on parts list.

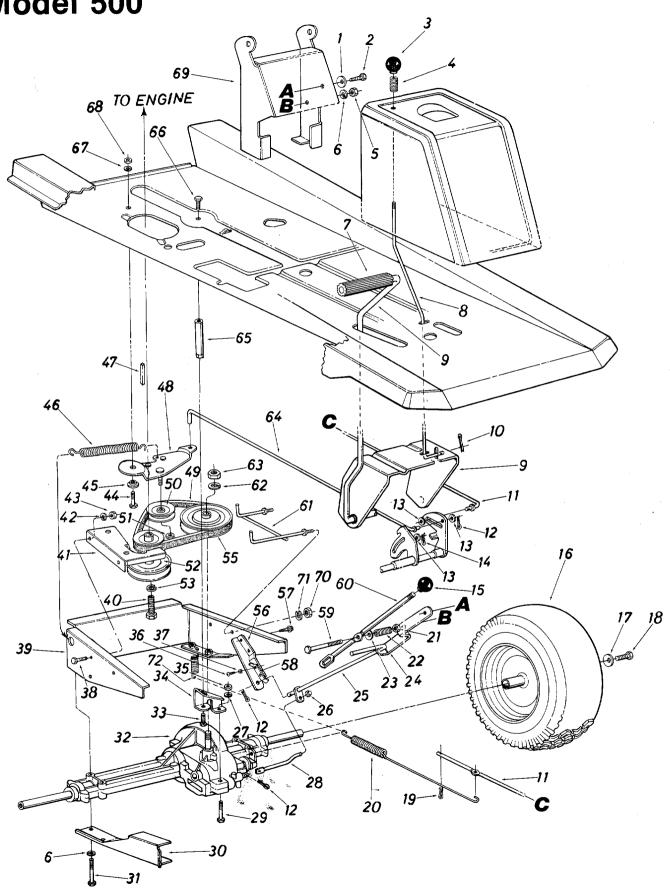


PARTS LIST FOR MODEL 500 RIDING MOWER

REF. NO.		DESCRIPTION	NEW PART	REF. NO.	PART COLOR NO. CODE	DESCRIPTION	NEW PART
1	736-0242	Bell-Wash345" I.D. x .88"		35	712-0287	Hex Nut 1/4-20 Thd.*	
	 	O.D.		36	710-0789	C-Sink AB S-Tap Scr. #8 x	1
2	710-0776	Hex Wash. Hd. AB-Tap Scr.				.50" Lg.	
		1/4 x .62" Lg.		37	726-0206	Push-In Nut #10	1
3	720-0187	Ball Knob		38	710-0252	Hex Bolt 1/4-20 x .75" Lg.*	1 '
4	732-0437	Compression Spring	N	39	15552	Transaxle Support Ass'y.	N
	712-0267	Hex Nut 5/16-18 Thd.*		40	710-0314	Hex Bolt 7/16-20 x 1.0" Lg.*	
6	736-0119	L-Wash. 5/16" I.D.*		41	15646	Upper Engine Belt Guard	N
7	735-0196	Foot Pad		42	736-0329	L-Wash. 1/4 " I.D.*	
8	747-0427	Brake Locking Rod		43	712-0287	Hex Nut 1/4-20 Thd.*	ľ
9	15562	Clutch-Brake Pedal Ass'y.	N	44	710-0118	Hex Bolt 5/16-18 x .75" Lg.*	
10	714-0507	Cotter Pin 3/32" I.D. x ¾"		45	748-0234	Shoulder Spacer	
		Lg.*		46	732-0383	Ext. Spring	
	747-0431	Brake Rod	N	47	714-0114	Sq. Key 1/4" x 2.00" Lg.	
12	714-0115	Cotter Pin 1/8" x 1.0" Lg.*		48	15651	Idler Bracket Ass'y.	N
13	736-0275	FI-Wash330" I.D. x .68"		49	754-0249	5L "V"-Belt 30" Lg. (Bare	į
		O.D.				Back)	N
14	714-0104	Intern. Cotter Pin 5/16" Dia.		50	756-0116	"V"-Idler Pulley	
15	720-0165	Gear Shift Knob		51	712-0116	Hex Insert L-Nut 3/8-24 Thd.	
16	* *	Rear Wheel Ass'y.		52	756-0391	Engine Pulley	N
17	736-0242	Bell-Wash345" I.D. x .88"		53	736-0171	L-Wash. 7/16" I.D.*	
		O.D.		55	756-0394	Transaxie Pulley 6.0" O.D.	
	710-0627	Hex L-Bolt 5/16-24 x .75" Lg.				(Straight)	N
19	714-0470	Cotter Pin 1/8" Dia. x 1.25"		56	15624	Shift Lever Support	N
		Lg.*		57	710-0776	Hex Wash. Hd. AB-Tap Scr.	
20	732-0389	Ext. Spring .75" O.D. x 17.0"				½ x .62" Lg.	İ
<u> </u>		Lg.		58	732-0420	Spring Switch	
21	712-0267	Hex Nut 5/16-18 Thd.*		59	710-0395	Hex Bolt 5/16-18 x 2.25" Lg.*	
22	732-0369	Spring		60	747-0430	Upper Shift Lever	N
23	736-0242	Bell-Wash345" I.D. x .88"		61	747-0429	Belt Trap	N
		O.D.		62	736-0921	L-Wash. ½″ I.D.*	
	15659	Shift Lever Brkt.	N	63	712-0206	Hex Nut 1/2-13 Thd.*	1
	15637	Shift Lever Ass'y.	N	64	747-0423	Clutch Rod	N
26	726-0106	Cap Speed Nut 1/4" Rod		65	711-0544	Torque Rod 4.325" Lg.	N
27	736-0329	L-Wash. 1/4" I.D.*	,	66	710-0180	Hex Bolt 3/8-24 x .75" Lg.	
28	747-0421	Shift Rod	N		700 04 15	(Grade 5)	
29	710-0136	Hex Bolt 1/4-20 x 1.75" Lg.*		67	736-0119	L-Wash. 5/16″ I.D.*	1
30	15625	Lower Outside Engine Belt		68	712-0267	Hex Nut 5/16-18 Thd.*	
		Guard	N	69	15605	Front Seat Bracket	N
	710-0176	Hex Bolt 5/16-18 x 2.75" Lg.*		70	712-0287	Hex Nut 1/4-20 Thd.*	
	717-0775	Transaxle Comp.	N	71	736-0329	L-Wash. 1/4" I.D.*	
33	710-0180	Hex Bolt 3/8-24 x .75" Lg.*		72	732-0303	Brake Return Spring 3.18"	
34	15564	Torque Rod Bracket	N			Lg.	
٠.,							

REAR WHEEL CHART

Part No.	Description
734-0523	Rear Wheel Ass'y. Comp. 13.0 x 5.0"
734-0517	Rear Wheel Rim Only
734-0298	Rear Wheel Tire Only 13 x 5.0"
734-0255	Air Valve

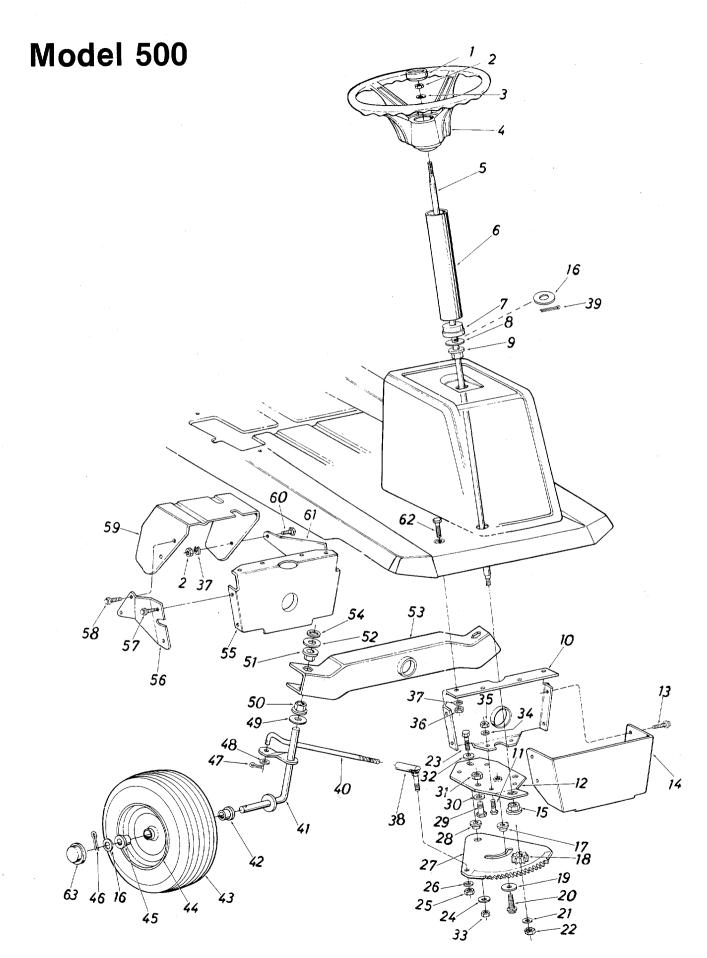

PARTS LIST FOR MODEL 500 RIDING MOWER

			PARTS LIST FUR		·		G MICW	ER	
REF. NO.	PART NO.	COLOR CODE	DESCRIPTION	NEW PART	REF. NO.	PART NO.	COLOR CODE	DESCRIPTION	NEW PART
1	731-022	o l	Steering Wheel Cap		32	736-010)5	Bell-Wash385" I.D. x .88"	
2	712-026		Hex Nut 5/16-18 Thd.*			, , , , ,		O.D.	
3	736-024		Bell-Wash345" I.D. x .88"		33	712-024	11	Hex Nut 3/8-24 Thd.*	
			O.D.		34	736-01		L-Wash. 5/16" I.D.*	
4	731-021	9	Steering Wheel Ass'y.		35	712-026		Hex Nut 5/16-18 Thd.*	
5	738-053		Steering Shaft	N	36	712-026		Hex Nut 5/16-18 Thd.*	
6	750-056		Steering Tube Spacer	''	37	736-01		L-Wash. 5/16" I.D.*	
		7	(Chrome)	N	38	723-015		Ball Joint Ass'y. 3/8-24 Thd.	
7	731-065	1	Steering Tube Spacer	N	39	714-01		Cotter Pin 1/8" Dia. x 1.0"	
8	736-018		FI-Wash640" I.D. x 1.25"				. •	Lg.	
		-	O.D.		40	747-041	7	Steering Tie Rod	N
9	741-022	5	Hex Flange Bearing		41	15616	•	Front Axle Ass'y.—R.H.	N
10	15613	_	Pivot Bar Bracket	N		15617		Front Axle Ass'y.—L.H. (Not	
11	710-011	8 l	Hex Bolt 5/16-18 x .75" Lg.*	''				Shown)	N
12	15614	_	Steering Gear Support Brkt.	N	42	741-031	3	Flange Bearing .632" I.D.	'1
13	710-077	6	Hex Wash. Hd. AB-Tap Scr.	''	43	* * *		Front Wheel Ass'y. Comp.	
		_	½ x .62" Lg.		44	* *		Front Wheel Rim Only	
14	15608		Steering Gear Cover	ΙN	45	741-031	3	Flange Bearing .632" I.D.	
15	741-022	5	Hex Flange Bearing	'`	46	714-047		Cotter Pin 1/8" Dia. x 1.25"	
16	736-028	l I	Fl-Wash640" I.D. x 1.62"		'		J	Lg.*	
. •			O.D.		47	714-011	5	Cotter Pin 1/8" Dia. x 1.00"	
17	738-054	1	Shoulder Spacer .622 Dia. x		''		•	Lg.*	
			.218	N	48	736-030	0	Fl-Wash385" I.D. x .87"	
18	748-029	o l	Steering Pinion Gear	N	'		•	O.D.	
19	736-030		FI-Wash385" I.D. x .87"		49	736-015	6	Fl-Wash635" I.D. x 1.12"	
			O.D.			, , , , , , ,	•	O.D.	
20	710-050	2	Hex Wash. Hd. Self-Tap Scr.		50	741-022	5	Hex Flange Bearing	
1			3/8-16 x 1.25" Lg.		51	741-022		Hex Flange Bearing	
21	736-024	2	Bell-Wash345" I.D. x .88"		52	736-015		FI-Wash635" I.D. x 1.12"	
			O.D.			/ -	_	O.D.	
22	712-012	3	Hex Nut 5/16-24 Thd.*		53	15610		Pivot Bar Ass'y.	N
23	710-019	1	Hex Bolt 3/8-24 x 1.25" Lg.		54	726-015	9	Speed Nut 5/8" I.D.	'`
			(Grade 5)		55	15613		Pivot Bar Bracket	N
24	736-010	5	Bell-Wash385" I.D. x .88"		56	15694		Bracket Reinforcement—	'
			O.D.					R.H.	N
25	712-024	1	Hex Nut 3/8-24 Thd.*		57	710-077	6	Hex Wash. Hd. AB-Tap Scr.	'`
26	736-0169	9	L-Wash. 3/8" I.D.*					½ x .62" Lg.	
27	717-047		Steering Gear Segment	Ν	58	710-077	6	Hex Wash. Hd. AB-Tap Scr.	-
28	738-054	1	Shoulder Spacer .622" Dia. x					½ x .62" Lg.	
			.218 ·	Ν	59	15562		Clutch-Brake Pedal Ass'y.	N
29	710-0689	9	Hex Bolt (Nylon) 1/2-13 x .75"		60	710-011	8	Hex Bolt 5/16-18 x .75" Lg.*	• •
			Lg.		61	15699		Bracket Reinforcement—L.H.	N
30	736-0160	o	FI-Wash530" I.D. x .930"		62	710-011	8	Hex Bolt 5/16-18 x .75" Lg.*	
			O.D.		63	731-048	4	Plastic Hub Cap	
31	712-0206	6	Hex Nut 1/2-13 Thd.*						-
					LL				

⁽⁴⁶²⁻Red Flake)

When ordering parts, if color or finish is important use the appropriate color code shown above. (e.g. Red Flake Finish—11836 (462).)


**FRONT WHEEL CHART

Description	11 x 4.0—Part No.	10.5 x 3.5—Part No.		
Wheel Assembly Comp.	734-1044	734-1000		
Tire Only	734-0770			
Rim Only	734-1042			
Bearing	741-0313	741-0313		
Air Valve	734-0255			

^{*}For faster service obtain standard nuts, bolts and washers locally. If these items cannot be obtained locally, order by part number and size as shown on parts list.

Model 500 82-*78*_× -25 -33 -72 69₆₈ *3* . B 38⁵³ 49


NO.	NO. CODE	DESCRIPTION	PART	REF.	PART NO.	COLOR	DESCRIPTION	NEW
1 1	747-0418	Deck Lift Handle	N	48	10769	CODE	Blade Adapter Kit	PART
2	715-0114	Spring Pin Spir. 1/4" Dia. x		49	736-011	9	L-Wash. 5/16" I.D.*	
_		1.50" Lg.		50	712-012		Hex Nut 5/16-24 Thd.*	
3	720-0143	Grip		51	712-026		Hex Nut 5/16-18 Thd.*	
4	714-0166	Cotter Pin (Special)	N	52	736-011		L-Wash. 5/16" I.D.*	
5	736-0162	FI-Wash. 5/8" I.D. x 1.0" O.D. x .12		53	750-014	2	Spacer .836" I.D. x 1.01" O.D.	
6	736-0187	FI-Wash. 5/8" I.D. x 1.25"	•	54	747-042	8	x .320 Deck Link 3.9" Lg.	N
	-	O.D. x .60		55	15658	•	Belt Guard Plate Ass'y.	N
7	15576	Deck Lift Handle Brkt. Ass'y.	N	56	732-015		Spring .38" O.D. x 3.25" Lg.	
8	732-0430	Compression Spring .50"		57	710-019		Hex Bolt 1/4-28 x .62" Lg.	
	706 0000	O.D. x 1.04		58	736-032	9	L-Wash. 1/4 " I.D.*	
9	736-0300	FI-Wash385" I.D. x .87" O.D. x .06		59	11396		Adapter Ass'y.—Chute	
10	714-0115	Cotter Pin 1/8" Dia. x 1.00"		60 61	11634 732-026	4	Chute Deflector Ass'y. Comp. Torsion Spring	1
10	714-0113	Lg.*		62	15626	•	Lower Inside Belt Guard	N
11	15578	Deck Lift Brkt. Ass'y.—L.H.	N	63	710-010	6	Hex Bolt 1/4-20 x 1.25" Lg.*	'
12	711-0749	Adj. Ferrule-Deck Lift	, ,	64	727-027	8	Brake Cable Ass'y.	N
ļ		Handle	N	65	10426		Belt Keeper Ass'y.	''
13	15581	Index Bracket		66	710-060	4	Hex Wash. Hd. Scr. 5/16-18 x	
14	710-0118	Hex Bolt 5/16-18 x .75" Lg.*			740.000	_	.62" Lg.	
15 16	736-0119 712-0267	L-Wash. 5/16" I.D.* Hex Nut 5/16-18 Thd.*		67	710-032	2	Hex Sems Bolt 5/16-18 x	
17	15573	Deck Lift Ass'y. Front	N	68	710-060	4	1.00" Lg.* Hex Wash. Hd. 5/16-18 x .62"	
18	747-0426	Deck Lift Connecting Rod	Ň	. 00	7 10-000	·	Lg.	
19	736-0300	Fl-Wash385" I.D. x .87"		69	15632		Blade Brake Brkt. Ass'y.	N
		O.D. x .06		70	726-010		Cap Speed Nut 1/4" Rod	'
20	714-0115	Cotter Pin 1/8" Dia. x 1.00"		71	712-028		Hex Nut 1/4-20 Thd.*	
21	710-0599	Lg.*		72	712-028		Hex Nut 1/4-20 Thd.*	
/ 21	710-0599	Hex Wash. Hd. Self-Tap Scr. 1/4-20 x .50" Lg.		73	732-044	U	Extension Spring .99" O.D. x 14.2" Lg.	N
22	710-0805	Hex Bolt 5/16-18 x 1.5" Lg.*		74	750-051	5	Sleeve .511" I.D. x .70" x .37"	'
25	15613	Pivot Bar Bracket	N				Lg.	
26	732-0439	Spring Hook		75	736-011		L-Wash. 5/16" I.D.*	
27 28	756-0395 754-0264	Deck Pulley 6.0" O.D. "V"-Belt ½" x 52" Lg.	N	76 77	712-026 736-030		Hex Nut 5/16-18 Thd.*	}
29	711-0753	Spec. Clevis Pin .250" Dia.	Ň	"	730-030		FI-Wash385" I.D. x .87" O.D. x .06	
30	732-0435	Switch Actuator	- '	78	15568		Blade Engagement Lever	
31	736-0160	FI-Wash531" I.D. x .930"					Ass'y.	N
00	700.0450	O.D. x .050		79	714-011	5	Cotter Pin 1/8" Dia. x 1.00"	
32 33	736-0158	FI-Wash. 5/8" I.D.*		00	740 000	_	Lg.*	
34	712-0242 748-0234	Hex Jam Nut 5/8-11 Thd.* Shoulder Spacer		80 81	712-026 720-014		Hex Nut 5/16-18 Thd.*	
35	710-0604	Hex Wash. Hd. Scr. 5/16-18 x		82	15644	,	Grip Deck Drive Control Brkt.	
		.62" Lg.		~	10044		Ass'y.	N
36	15653	Belt Guard Ass'y.	N	83	712-0798	8	Hex Nut 3/8-16 Thd.*	
37	08253	Bearing Housing 1.85" I.D.	- 1	84	15600	.	Deck Link Ass'y.—Rear	N
38	741-0919	Ball Brg787" I.D. x 1.85"	İ	85	710-0866		Deck Adj. Scr. 3/8-16 Thd.	N
39	15628	O.D. x .551 26" Deck Ass'y.	N	86	736-030)	Fl-Wash385" I.D. x .87"	
40	714-0388	#61 Hi-Pro Key 3/16" x 5/8"	"	87	714-011	5	O.D. x .06 Cotter Pin 1/8" Dia. x 1.00"	
Ī		Dia.	ļ	•	, , , ,		Lg.*	
41	711-0405	Blade Spindle		88	15609		Deck Lift Brkt. Ass'y.—R.H.	N
42	714-0365	#6 Hi-Pro Key 5/32" x 5/8"		89	715-0114	4	Spring Pin Spir. 1/4" Dia. x	
43	13703	Dia. Bearing Shield		90	738-0550	,	1.50" Lg.	
44	742-0147	26" Blade	l	91	741-031		Rear Height Adj. Shaft Flange Brg630" I.D. x .810"	N
45	736-0217	L-Wash. 3/8" I.D. Heavy Duty		٠. ا	5510	-	O.D.	
"⋅46	710-0459	Hex Bolt 3/8-24 x 1.50" Lg.	-	92	715-0134	1	Spring Pin Spir. 3/16" Dia. x	
	1	(Grade 5)	l i	1			4 FÕ# 1 '	ı
47	710-0117	Hex Bolt 5/16-24 x 1.00" Lg.		- 1	15630	l	1.50" Lg. 26" Deck Ass'y. Comp.	l

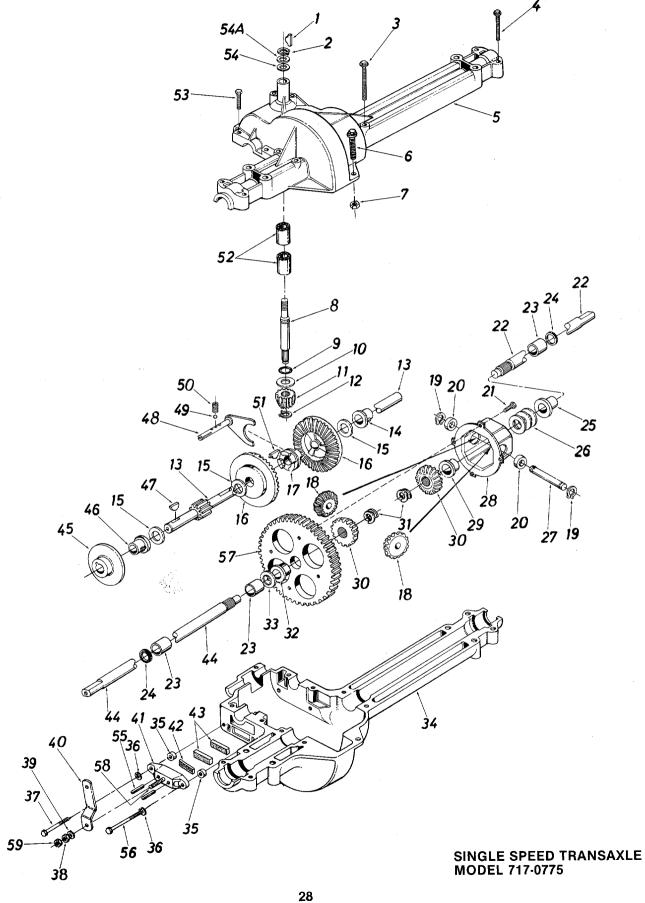

PARTS LIST FOR SINGLE SPEED TRANSAXLE 717-0775

REF. NO.	PART COLOR NO. CODE	DESCRIPTION	NEW PART		PART NO.	COLOR CODE	DESCRIPTION	NEW PART
1	714-0129	#4 Hi-Pro Key 3/32 x 5/8" Dia.		32	741-03	376	Flange Bearing 3/4" I.D. x	
2	716-0115	Snap Ring .625" Shaft					.587	
3	710-0854	Hex Bolt 1/4-20 x 1.75" Lg.*	N	33	736-01	188	FI-Wash760" I.D. x 1.49"	
4	710-0809	Hex Bolt 1/4-20 x 1.25" Lg.*	N				O.D.	
5	717-0764	Upper Housing	N	34	717-07	761	Lower Housing	N
6	710-0889	Hex FI-Bolt 1/4-20 x .88" Lg.*	N	35	750-05		Spacer .53" O.D. x 3/8" Lg.	N
7	712-0298	Hex Jam Nut 1/4-20 Thd.*		36	736-03		L-Wash. 1/4 " I.D.*	
.8	717-0634	Input Shaft	N	37	710-08	386 ·	Hex Bolt 1/4-20 x 1.50" Lg.	
9	721-0178	Square Seal 5/8" I.D.	N				(Grade 5)	N.
10	736-0335	Thrust Washer 5/8" I.D. x		38	712-01		Hex Nut 5/16-24 Thd.*	
	747.000	1.25" O.D.	N	39	736-01	159	FI-Wash344" I.D. x .875"	
11	717-0633	Pinion Input 14T	N				O.D.	
12	716-0108	Retaining Ring 7/16" Ext.		40	717-07		Actuating Arm	N
13	717-0768	Drive Shaft	N	41	717-06		Brake Yoke	N
14	741-0336	Flange Brg. 5/8" I.D. x 3/4"		42	717-06		Puck Plate	N
15	**	Lg.*	N	43	717-06		Brake Puck	N
16	717-0757	FI-Wash. (See Below) Bevel Gear 42T	N	44	717-07 717-06		Axle L.H.	N
17	717-0757	Clutch Collar	N	45 46	741-03		Brake Disc	N
18	717-0674	Miter Gear 15T	N	40	141-03	001	Flange Bearing 5/8" I.D. x 15/16" Lg.	N
19	716-0142	Snap Ring	14	47	714-01	161	Woodruff Key 3/16 x 5/8 HT	"
20	717-0690	Thrust Bearing ½" I.D. x 1.0"		48	717-07		Shift Fork Ass'y.	N
	7 11 0000	O.D.	N	49	741-08		Ball Detent .250" Dia.	'`
21	710-0862	Pan Head Scr. 1/4-20 x .50"	'`	50	732-08		Spring Detent	
	. 10 0002	Lg. w/Patch	N	51	714-01		#9 Hi-Pro Key 3/16" x 3/4"	
22	717-0771	Axle R.H.	N	٠.			Dia. HT	
√23	741-0340	Sleeve Bearing 3/4" I.D. x	- 1	52	741-03	335	Needle Brg. 5/8" I.D. x 1/2"	1
-)		1.0" Lg.	N	-			Lg.	
24	721-0179	Oil Seal 3/4" I.D.	N	53	710-08	355	Hex Bolt 1/4-20 x 1.00" Lg.	N
25	741-0339	Flange Bearing 3/4" I.D. x		54	736-03	36	FI-Wash. 5/8" I.D. x .030	
i		15/16" Lg.	N	54A	736-03	337	FI-Wash. 5/8" I.D. x .040	
26	736-0188	Fl-Wash760" I.D. x 1.49"	l	55	741-03		Actuating Pin 5/16" Dia.	
		O.D.	l	56	710-08	886	Hex Bolt 1/4-20 x 1.50" Lg.	
27	717-0673	Cross Shaft	N				(Grade 5)	N
28	717-0669	Housing Differential	N	57	717-07		Differential Gear 72T	N
29	741-0338	Flange Bearing 34" I.D. x		58	717-06		Sq. Hd. Bolt 5/16-24 Thd.	N
		.53" Lg.	N	59	712-02		Hex Jam Nut 5/16-24 Thd.*	
30	717-0687	Miter Gear	N		737-01	48	Grease—Shell (10 oz.)	
31	716-0144	Retaining Ring				-	·	
			1					

^{**}Ref. No. 15 736-0349 FI-Wash. 5/8" I.D. x 1.0" O.D. 736-0336 FI-Wash. 5/8" I.D. x .030" O.D. 736-0337 FI-Wash. 5/8" I.D. x .040" O.D.

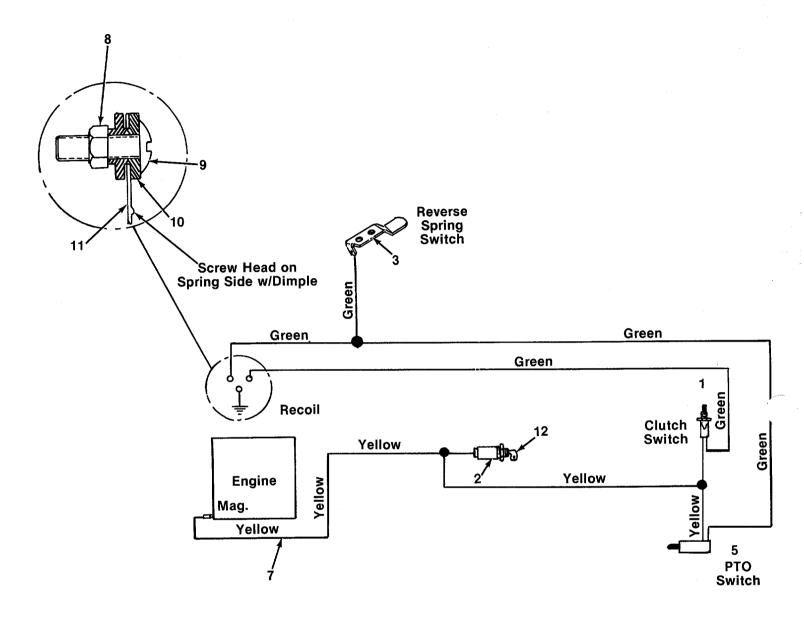

PARTS LIST FOR ELECTRICAL SYSTEM RIDING MOWER MODEL 500

REF.	PART NO.	COLOR CODE	DESCRIPTION	NEW PART
1 2 3 4 5 7 8 9	725-026 725-046 732-042 725-085 725-085 731-065 712-012 710-042 736-035	69 64 20 59 19 52 21 25 38	Safety Switch Key Switch Spring Switch Wire Harness Safety Switch Convoluted Conduit 24" Lg. Hex Nut #10-24 Truss Mach. Scr. #10-24 x .62 Fiber Washer	
11 12	732-029 725-029		Spring Switch Ignition Key	

PARTS INFORMATION

POWER EQUIPMENT PARTS AND SERVICE

Parts and service for all MTD manufactured power equipment are available through the authorized service firms listed below. All orders should specify the model number of your unit, part numbers, description of parts and the quantity of each part required.

BRIGGS AND STRATTON, TECUMSEH AND PEERLESS PARTS AND SERVICE

Briggs & Stratton, Tecumseh and Peerless parts and service should be handled by your nearest authorized engine service firm. Check the yellow pages of your telephone directory under the listing **Engines—Gasoline**, Briggs & Stratton or Tecumsel Lauson.

NOTE: If any parts are found to be missing or defective upon assembly of this unit, write to advise the factory so that immediate replacement can be made.

Auto Floatria & Carburatar Ca	BIRMINGHAM . 2625 4th Ave. S 35233 NORTH LITTLE ROCK 5301 Roundtop Drive Box 368, Rt. 4
CALIFORNIA Billious	
FLORIDA Radco Distributors	JACKSONVILLE 4909 Victor St.
Small Eng. Dist	OPA LOCKA 2351 N.W. 147th St 33054 EAST POINT 2834 Church St 30344
ILLINOIS	8615 Oaden Ave 60534
Power Lawn & Garden Fouin	ELKHART 2101 Industrial Pkwy 46514 DUBUQUE 2551 J.F. Kennedy 52001
Mid-South Power	700 Pine St
MARTLAND	6967 Now Hampehire
MICHIGAN	Ave
Power Equipment Dist	340 Hubbard48043
Hance Distributing Inc	420 Excelsior Ave. W55343 BILOXI 506 Caillavet St 39533
MISSOURI	KANSAS CITY 3117 Holmes St 64109 ST. JOSEPH 8th and Monterey 64503
Henzler, Inc.	ST. LOUIS 2015 Lemay Ferry Road
NEW JERSEY Lawnmower Parts Inc	BELLMAWR717 Creek Rd08030 ALBUQUERQUE1023 Third Ave. N.W87103 CARTHAGE
Spitzer Eng. & Parts NEW YORK Gamble Dist., Inc.	1023 Third Ave. N.W 8/103 CARTHAGE West End Ave

NORTH CAROLINA	GOLDSBORO
Smith Hardware Co	GOLDSBORO 515 N. George St 27530
	CREENSRORO
Dixie Sales Company	335 N. Green27402
OHIO	CARROLL
Stebe's Mid-State Mower Supply	. Box 366, 71 High St 43112 CLEVELAND
Plookrio Inc	7900 Lorain Ave 44102
	WADSWORTH
National Central	687 Seville Rd44281
	YOUNGSTOWN
Burton Supply Co	1301 Logan Ave. Box 929
OVI ALIOMA	MUSKOGEE
Material Motoro Inc	605 S. Charokea 74401
OREGON	PORTLAND
Kenton Supply Co	PORTLAND 8216 N. Denver Ave 97217
PENNSYLVANIA EECO Inc	HARRISBURG
EECO Inc.	4021 N. 6th St 17110
	PHILADELPHIA . 5222-24 N. Fifth St 19120
Thompson Rubber Co	PITTSBURGH
Bluemont Co	11125 Frankstown Rd 15235
Bidemont oo.	PUNXSUTAWNEYR.D. 2
Frank Roberts & Sons	R.D. 2 15767
TENNESSEE	KNOXVILLE 2000 Western Ave 37921
Master Repair Service	2000 Western Ave 37921 MEMPHIS
American Salan & Sarvice Inc	3035-43 Bellbrook 38116
TEVAC	DALLAS
Mary Brothers Inc	423 F. Jefferson 7520.
, , , , , , , , , , , , , , , , , , , ,	FORT WORTH 1702 N. Sylvania 76111
Woodson Sales Corp	1702 N. Sylvania 76111
D. 11 - 1 0 1 - 0	HOUSTON 2409 Commerce St 77003
Bullard Supply Co	SAN ANTONIO
Engine House Inc	8610 Botts Lane
	P.O. BOX 1/00//021/
UTAH .	SALT LAKE CITY
A-1 Engine & Mower Co	439 E. 900 So 84111
VIRGINIA	ASHLAND
RBI Corp	Lake Ridge Rd. 101 Cedar Run Dr23005
WASHINGTON	CEATTLE
Railey's Inc	SEATTLE 1414 14th Ave98122
WISCONSIN	MARSHFIELD
Power ac	MARSHFIELD 301 E. 29th St54449
	APPLETON
Appleton Automotive Supply C	o 123 S. Linwood Ave. P.O. Box 798 54911
	TWIN LAKES
E.K on Small Engine Spec	TWIN LAKES 122 Lance Dr53181
E-K off offiall Eliginic opec	

WARRANTY PARTS AND SERVICE POLICY

(0782)

The purpose of warranty is to protect the customer from defects in workmanship and materials, defects which are NOT detected at the time of manufacture. It does not provide for the unlimited and unrestricted replacement of parts. Use and maintenance are the responsibility of the customer. The manufacturer cannot assume responsibility for conditions over which it has no control. Simply put, if it's the manufacturer's fault, it's the manufacturer's responsibility; if it's the customer's fault, it's the customer's responsibility.

CLAIMS AGAINST THE MANUFACTURER'S WARRANTY INCLUDES:

- 1. Replacement of Missing Parts on new equipment.
- 2. Replacement of Defective Parts within the warranty period.
- 3. Repair of Defects within the warranty period.

All claims MUST be substantiated with the following information:

- 1. Model Number of unit involved.
- 2. Date unit was purchased or first put into service.
- 3. Date of failure.
- 4. Nature of failure.