

New Holland

P1000 Series Air Cart Specifications

P1030 P1040 P1050 P1060



MODEL

Capacity, bu. (l)
Compartments
Splits, bu. (l)

P1030

280 (9866)
Two
169/118 (5955/4158)

P1040

330 (11628)
186/142 (6554/5004)

DIMENSIONS

Ground clearance, in. (m)	.25 (0.64)
Height, ft. in. (m)	14' 11" (4.3)
Overall width, ft. in. (m)	
Single wheels	.12' 6" (3.81)
Dual wheels	.16' 8" (5.08)
Tow-behind length, ft. in. (m)	.25' 4" (7.72)
Tow-behind weight (empty), lb. (kg)	10,013 (4546)
Tow-between length, ft. in. (m)	.26' 4" (8)
Tow-between weight (empty), lb. (kg)	10,013 (4546)
	10,052 (4569)
	10,052 (4569)

TIRES

Front caster	Dual
(on tow-behind model only)	.22.5 L x 16.1 STII tires
Rear axle, in. (m)	.30.5L x 32, 12 ply AWT single tire @ 120 (3.05) tracking width
Valves	Single-/double-shoot
Primary lines	Up to 8
Fan drive	Hydraulic dual fan
Meter drive system	Mechanical ground drive
Fill auger, in. (cm) x ft. (m)	.10" (25.4) x 19' (5.8) Steel cupped flighting

MODEL

Capacity, bu. (l)
Compartments

P1050

380 (13390)
Three

P1060

430 (15153)

DIMENSIONS

Ground clearance, in. (m)	.25 (0.64)
Height, ft. in. (m)	14' 11" (4.55)
Overall width, ft. in. (m)	
Single wheels	.12' 8" (3.86)
Dual wheels	.16' 2" (4.93)
Tow-behind length, ft. in. (m)	.28' 3" (8.61)
Tow-behind weight (empty), lb. (kg)	10,900 (4955)
Tow-between length, ft. in. (m)	.29' 4" (8.94)
Tow-between weight (empty), lb. (kg) est.	10,900 (4955)
	186/102/142 (6554/3594/5004)
	142/102/186 (5004/3594/6554)

TIRES

Front caster	Dual
(on tow-behind model only)	.22.5 x 16.1 STII tires
Rear axle, in. (m)	.30.5L x 32, 12 ply AWT single tire @ 120 (3.05) tracking width
Valves	Single-/double-/triple-shoot
Primary lines	Up to 8
Fan drive	Hydraulic dual fan
Meter drive system	Mechanical ground drive
Fill auger, in. (cm) x ft. (m)	.10" (25.4) x 19' (5.8) steel cupped flighting

Visit our Web site at www.newholland.com/na. Or, call toll-free 866-NEW-HLND (866-639-4563).

Design, materials and/or specifications are subject to change without notice and without liability therefor. Specifications are applicable to units sold in Canada, the United States, its territories and possessions, and may vary outside these areas.



Safety begins with a thorough understanding of the equipment. Always make sure you and your operators read the Operator's Manual before using the equipment. Pay close attention to all safety and operating decals and never operate machinery without all shields, protective devices and structures in place.