

Caution

RCX400 Telescopes

Caution: When using AC power, use only the RCX400 AC Wall Adapter (optional accessory). The RCX400 telescopes require a 5-amp, 12-volt power supply. A power supply, rated less than 5-amps, may cause the telescope to fail in operation. Using a non-conforming power supply may void your Meade warranty.



MEADE®

6001 Oak Canyon, Irvine, California 92618
(800) 626-3233 ■ www.meade.com

Ver. 11-05 14-7584-00

Caution

RCX400 Telescopes

Caution: When using AC power, use only the RCX400 AC Wall Adapter (optional accessory). The RCX400 telescopes require a 5-amp, 12-volt power supply. A power supply, rated less than 5-amps, may cause the telescope to fail in operation. Using a non-conforming power supply may void your Meade warranty.



MEADE®

6001 Oak Canyon, Irvine, California 92618
(800) 626-3233 ■ www.meade.com

Ver. 11-05 14-7584-00

Caution

RCX400 Telescopes

Caution: When using AC power, use only the RCX400 AC Wall Adapter (optional accessory). The RCX400 telescopes require a 5-amp, 12-volt power supply. A power supply, rated less than 5-amps, may cause the telescope to fail in operation. Using a non-conforming power supply may void your Meade warranty.



MEADE®

6001 Oak Canyon, Irvine, California 92618
(800) 626-3233 ■ www.meade.com

Ver. 11-05 14-7584-00