


# LAVATHERM 56800

Condenser dryer

User information

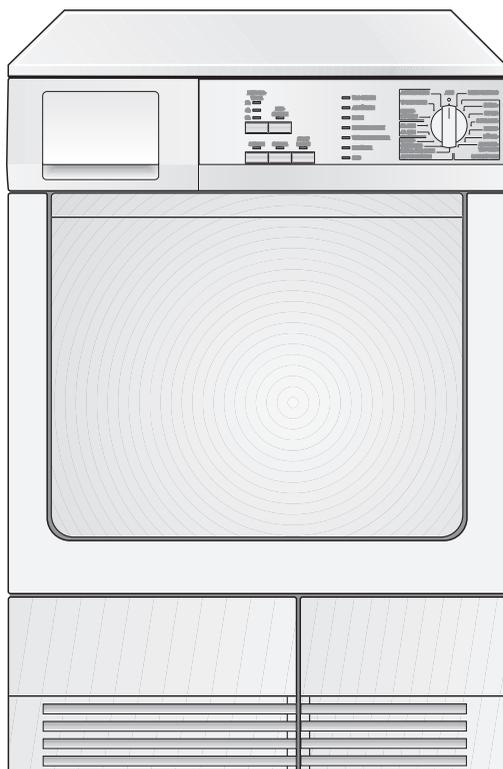

## Dear Customer,

Please read this user information carefully and keep it to refer to later. Please pass the user information on to any future owner of the appliance.

### The following symbols are used in the text:



Safety instructions

**Warning!** Information that affects your personal safety.

**Important!** Information that prevents damage to the appliance.



Useful tips and hints



Environmental information

---

# Contents

<b>Operating Instructions</b> .....	5
<b>Safety</b> .....	5
<b>Disposal</b> .....	6
<b>Environmental tips</b> .....	7
<b>Description of machine</b> .....	8
<b>Operating screen</b> .....	8
<b>Before the first drying cycle</b> .....	9
<b>Sorting and preparing laundry</b> .....	9
<b>Overview of programmes</b> .....	10
<b>Drying</b> .....	12
Switching machine on / switching light on .....	12
Opening loading door / loading laundry.....	12
Selecting the programme .....	12
Selecting additional functions .....	12
AUDIBLE SIGNAL.....	13
SPECIAL CARE.....	13
SENSITIVE .....	13
Setting time delay .....	13
Starting the programme .....	13
Changing programme .....	14
Removing laundry or loading laundry when necessary.....	14
Drying cycle complete / removing laundry.....	14
<b>Cleaning and maintenance</b> .....	15
Cleaning lint filter .....	15
Cleaning the door seal.....	16
Emptying the water reservoir.....	17
Cleaning heat exchanger .....	18
Cleaning the drum.....	19
Clean operating screen and housing .....	19
<b>What to do if...?</b> .....	19
Troubleshooting by yourself.....	19
Changing bulb for interior light.....	21
<b>Programming options</b> .....	22

---

<b>Technical data</b> .....	23
<b>Consumption values</b> .....	23
<b>Installation and connection instructions</b> .....	24
<b>Installation safety instructions</b> .....	24
<b>Removing transport safety packaging</b> .....	24
<b>Electrical connection</b> .....	25
<b>Door reversal instructions</b> .....	26
<b>Special accessories</b> .....	28
<b>Service and Spare Parts</b> .....	35

---

# Operating Instructions



## Safety

### Prior to initial start up

- Note the **"Installation and connection instructions"**
- Before first starting up, check the machine for any damage incurred during transport. Never connect a damaged machine. If parts are damaged, contact your supplier.

### Intended use

- The dryer is intended for drying standard laundry in domestic environments.
- Conversions or modifications to the dryer are not permitted.
- The laundry must not contain flammable solvents (benzene, alcohol, stain remover, etc.) . Risk of fire and/or explosion! Laundry which has come into contact with such substances must be rinsed thoroughly by hand before drying.
- When using dry-cleaning sets: Only use those products which are declared as suitable for the dryer by the manufacturer.
- Do not place items of laundry in the dryer which contain foam rubber or materials similar to rubber. Risk of fire!
- Do not place heavily worn laundry items in the dryer. Risk of fire!
- Do not place laundry items with loose fillings (e.g. cushions) in the dryer. Risk of fire!
- Parts with rigid components (e.g. door mats) may cover the air slots. Risk of fire! Do not place such items in the dryer.
- Do not overfill the dryer. Risk of fire! Observe max. loading volume of 6 kg.
- Ensure that explosive objects (e.g. cigarette lighters, spray cans, etc.) do not enter the dryer with the laundry. Risk of fire and/or explosion!
- Clean the micro-fine filter and fine strainer after each drying cycle.
- Do not use the machine if there are no lint filters or if these are damaged. Risk of fire!
- Clean the heat exchanger regularly.
- With stacked washer and dryer: Do not place objects on the dryer. These may fall off during operation.
- The lampcover for the interior light must be screwed down tightly.

## Child safety

- Keep packaging away from children. Risk of suffocation!
- Children can often not see the dangers associated with electrical appliances. Never leave unsupervised children near the dryer.
- Ensure that children and small animals cannot climb into the dryer's drum. Risk of death! Keep the dryer door shut whenever it is not being used.

## General safety

- Only our qualified engineers may undertake repairs on the dryer.
- Never start up the dryer if the mains cable is damaged or if the operating screen, operating plate or base area are damaged so that the inside of the machine is open and accessible.
- Switch off the dryer before all cleaning, care or maintenance work. Also disconnect the mains plug from the socket or – with permanent connections – switch off the LS switch in the fuse box and/or remove the fuse.
- Disconnect the machine from the power supply when it is not in use.
- When removing from the socket, never pull the mains plug by the cable, instead take a hold of the plug.
- Adapter plugs, couplings and extension cables must not be used. Risk of fire from overheating!
- Do not spray down the dryer with jets of water. Risk of electric shock!
- Do not lean on the open door. The machine may tip over.
- Once the drying cycle has been interrupted, the laundry and drum may be hot. Risk of burns! Take care when removing the laundry.

## Disposal



### Packaging material

The packaging materials are environmentally friendly and can be recycled. The plastic components are identified by markings, e.g. >PE<, >PS<, etc. Please dispose of the packaging materials in the appropriate container at your local waste disposal facilities.



## Old appliance

The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.



**Warning!** When your appliance has finished its working life, remove the plug from the mains socket. Cut off the cable and plug and dispose of them.

Destroy the door lock. This prevents children from trapping themselves inside and endangering their lives.




## Environmental tips


- Your dryer will function most economically if you:
  - always keep the ventilation slots on the base of the dryer unobstructed;
  - use the loading volumes specified in the programme overview;
  - ensure you have good ventilation in the installation room;
  - clean the micro-fine filter and fine strainer after each drying cycle;
  - spin the laundry well before drying. Example: Consumption data – depending on spinning speed – for 6kg of laundry, dried using the COTTONS STORAGE DRY programme.

Revolutions per minute	Pre-draining		Drying cycle	
	Residual dampness in litres	as a %	Required time in minutes	Energy in kWh
800	4.2	70	130	4.3
1000	3,6	60	115	3,7
1200	3.2	53	110	3.3
1400	3.0	50	105	3.1
1800	2.5	42	90	2.6

# Description of machine

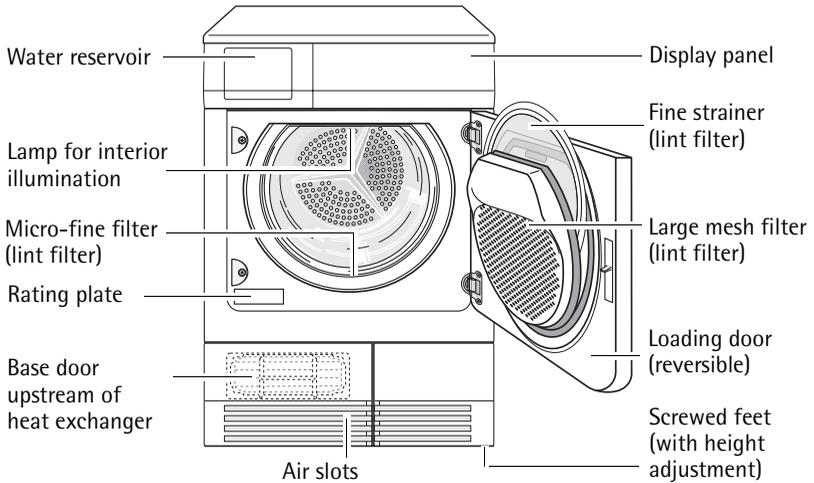

# Operating screen

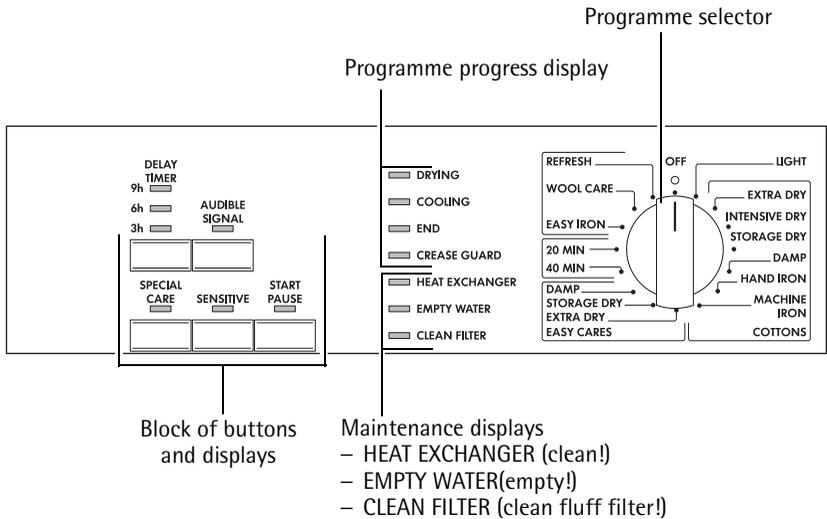

## Before the first drying cycle

In order to remove any residue which may have been produced during production, wipe the dryer drum with a damp cloth or undertake a brief drying cycle (20 MIN) with damp cloths.

## Sorting and preparing laundry

### Sorting laundry

- Sort by fabric type:
  - Cotton/linen for programmes in COTTONS programme group.
  - Mixtures and synthetics for programmes in EASY CARES programme group.
- Sorting by care label. The care labels mean:

			
Basic drying in tumble dryer possible	Drying at normal temperature	Drying at reduced temperature (press SPECIAL CARE button!)	Drying in tumble dryer <b>not</b> possible

- Do not dry new, coloured textiles together with light-coloured laundry items. Textile colours may bleed.
- Do not dry tricot or knitted items with the EXTRA DRY programme. Items may become stuck!
- Do not dry wool in the dryer. May become entangled! After air-drying, wool may be dried with the WOOL CARE programme.

### Preparing laundry

- To avoid laundry becoming tangled: Close zips, button up coverings and tie loose bands or ribbons (e.g. of aprons).
- Empty pockets. Remove metallic items (paperclips, safety pins etc).
- Turn items with double-layered fabrics inside out (e.g. with cotton-lined anoraks, the cotton layer should be outermost). These fabrics will then dry better.

# Overview of programmes

Programme		max. loading volume (weight when dry)	Additional functions			Application/properties	Care symbols
			AUDIBLE SIGNAL	SPECIAL CARE <sup>1)</sup>	SENSITIVE <sup>1)</sup>		
COTTONS	EXTRA DRY	6 kg	•	•	•	Drying thick or multi-layered textiles, e.g. terry towelling items, bathing costumes.	
	INTENSIVE DRY	6 kg	•	•	•	Drying thick textiles, e.g. terry towelling items, towels.	
	STORAGE DRY	6 kg	•	•	•	Drying textiles of even thicknesses, e.g. terry towelling items, knitted items, towels.	
	DAMP	6 kg	•	•	•	For thin textiles which are still to be ironed, e.g. knitted items, cotton shirts.	
	HAND IRON	6 kg	•	•	•	For normal thickness cotton or linen laundry, e.g. bedding, table linen.	
	MACHINE IRON	6 kg	•	•	•	For cotton or linen laundry which are still to be put through a machine, e.g. bedding, table linen.	
EASY CARES	EXTRA DRY	3 kg	•	•	•	Drying thick or multi-layered textiles, e.g. pullovers, bedding, table linen.	<sup>2)</sup>
	STORAGE DRY	3 kg	•	•	•	For thin textiles which are not ironed, e.g. easy care shirts, table linen, baby's clothes, socks, corsetry.	<sup>2)</sup>
	DAMP	3 kg	•	•	•	For thin textiles which are still to be ironed, e.g. knitted items, cotton shirts.	<sup>2)</sup>

1) SPECIAL CARE and SENSITIVE cannot both be selected at the same time.

2) Press the SPECIAL CARE button!

Programme	max. loading volume (weight when dry)	Additional functions			Application/properties	Care symbols
		AUDIBLE SIGNAL	SPECIAL CARE <sup>1)</sup>	SENSITIVE <sup>1)</sup>		
20 MIN 40 MIN	1 kg	•	•	-	For drying individual items of laundry or for small volumes of less than 1 kg.	  <sup>2)</sup> 
EASY IRON	1 kg	•	•	-	Special programme with anti-crease mechanism for easy care textiles such shirts and blouses; for minimum ironing effort. The result depends on the type and quality of textiles. (The loading volume corresponds to approx. 5 to 7 shirts.) Recommendation: Place textiles in the dryer straight after spinning. Once dried, immediately remove textiles and place on clothes hanger.	  <sup>2)</sup> 
WOOL CARE	1 kg	•	•	-	Special programme for briefly treating woollens with warm air after they have been dried naturally, worn or stored for long periods. Wool fibres are aligned and the wool becomes soft and snugly. Recommendation: Remove textiles immediately after drying.	
REFRESH	1 kg	•	•	-	Special programme, lasting around 35 minutes, for refreshing or gently cleaning textiles with commercially available dry cleaning sets. (Only use those products which are declared as suitable for the drier by the manufacturer; please observe the manufacturer's instructions for use.)	

1) SPECIAL CARE and SENSITIVE cannot both be selected at the same time.

2) Press the SPECIAL CARE button!

# Drying

## Switching machine on / switching light on

Turn the programme selector to any programme or turn it to LIGHT. The machine has been switched on. When the door is opened, the drum is illuminated.

## Opening loading door / loading laundry

1. Open loading door:  
Push against the loading door (push point )
2. Load your laundry (do not force it in/overload the machine).




**Caution!** Be careful not to trap laundry in between the loading door and rubber seal.

3. Close loading door securely. Lock must audibly lock.


## Selecting the programme

Use the programme selector to set the programme you require.

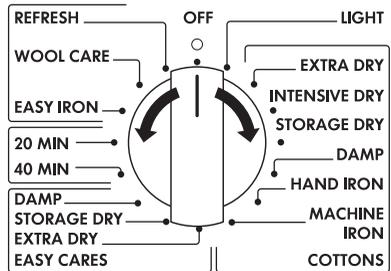

## Selecting additional functions

If required, press the AUDIBLE SIGNAL, SPECIAL CARE or SENSITIVE buttons.

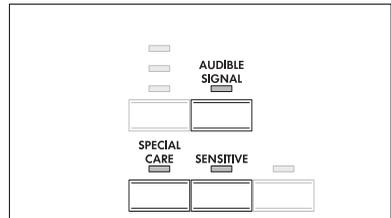

## AUDIBLE SIGNAL

When the drying cycle has finished, an intermittent audible signal will sound.

## SPECIAL CARE

For especially gentle drying of sensitive fabrics with the  care label and for temperature-sensitive textiles (e.g. acrylic, viscose). Programme is executed with reduced heat.

SPECIAL CARE is only suitable for use with loads of up to 3 kg!

## SENSITIVE

For gentle drying of frequently-worn textiles. Programme starts on full heat setting, which is then reduced towards the end of the programme to ensure gentle care of laundry.



SPECIAL CARE and SENSITIVE cannot be selected together.

## Setting time delay



The DELAY TIMER button allows you to delay the start of a programme by 3, 6 or 9 hours.

1. Select the programme
2. Press the DELAY TIMER button as many times as necessary until the required display is illuminated:
  - 9h display for programme to start in 9 hours.
  - 6h display for programme to start in 6 hours.
  - 3h display for programme to start in 3 hours.



By pressing the DELAY TIMER button again, the time delay is cancelled. The display goes out.

3. To activate the delay timer, press the START/PAUSE button.

**Note:** If a time delay of 9 hours is selected, the display **9h** is illuminated. After 3 hours, the display will jump round and **6h** will be illuminated; after another 3 hours, **3h** is illuminated. After a total of 9 hours, the programme will start.

## Starting the programme

Press the START/PAUSE button. The programme is started. The programme progress display show drying progress.

## Changing programme

To change a programme which has been selected by mistake once the programme has started, first turn the programme selector to OFF and then reset the programme.

-  The programme can no longer be changed directly once the programme has started. If nevertheless there is an attempt to change the programme on the programme knob, the programme progress display and the maintenance indicators flash. If an option button (excluding the AUDIBLE SIGNAL button) is pressed, the corresponding indicator flashes several times. The drying programme is not however affected by this (laundry protection).

## Removing laundry or loading laundry when necessary

1. Open loading door

 **Warning!** Laundry and drum can become hot. Risk of burns!

2. Load or remove laundry items.
3. Close the door securely. Lock must audibly lock.
4. Press the START/PAUSE button to continue the drying cycle.

## Drying cycle complete / removing laundry

Once the drying cycle is complete, the END and CREASE GUARD displays light up. If the AUDIBLE SIGNAL button has been pressed, an audible signal sounds intermittently.

-  The drying cycle is automatically followed by a crease guard phase which lasts around 30 minutes. The drum rotates in intervals during this phase. The laundry thereby remains relaxed and free of creases. The laundry can be removed at any time during the crease guard phase. (The laundry should be taken out towards the end of the crease guard phase at the latest to prevent creases from forming.)

1. Open loading door
2. Before removing the laundry, remove lint from the micro-fine filter. It is best to use a damp hand for this purpose (refer to "Cleaning and maintenance" section).
3. Remove laundry.
4. Turn the programme selector to OFF.

**Important!** After each drying cycle

- clean the micro-fine filter and fine strainer,
- drain the condensate tank

(refer to the "Cleaning and maintenance" section).

5. Close loading door.

# Cleaning and maintenance


## Cleaning lint filter

To ensure that the dryer works efficiently, the lint filters (micro-fine filter and fine strainer) must be cleaned after every drying cycle.




**Caution!** Never operate the dryer without fluff filters or with damaged or blocked fluff filters.


1. Open door
2. Use a damp hand to clean the micro-fine filter, which is built into the lower part of the loading aperture.

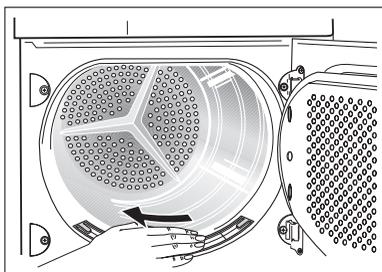

3. Push down unlock button on large mesh filter.  
Large mesh filter elevates.

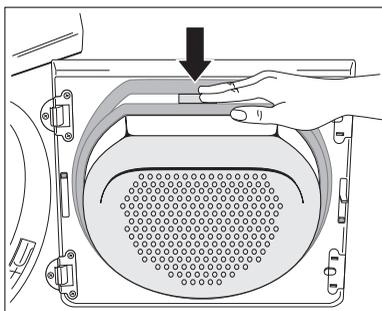

4. Take out fine strainer.
5. Remove fluff from fine strainer. It is best to use a damp hand for this purpose.

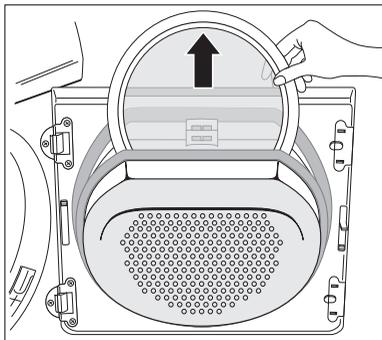


## Clean the entire filter area




The strainer area does not have to be cleaned after every drying cycle, but should be checked regularly and cleaned of fluff if necessary.

6. To do this, grip the top of the large mesh filter and pull it forwards until it comes loose from the two brackets.
7. Remove fluff from the entire filter area. It is best to use a vacuum cleaner for this purpose.
8. Press both lugs of the large mesh filter into the brackets on the loading door until they snap into place.
9. Re-insert fine strainer.
10. Press against the large mesh filter until it locks into the interlock.

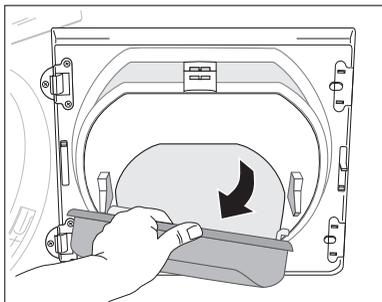

If the fine strainer is not fitted, the large mesh filter will not snap into place and the door cannot be closed.

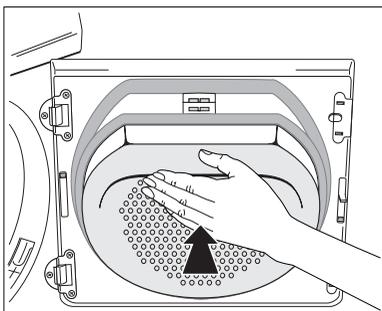

## Cleaning the door seal

Wipe the door seal with a damp cloth immediately after the drying cycle has finished.

## Emptying the water reservoir


Empty water reservoir after every drying cycle.

If the water reservoir is full, an active programme will be interrupted automatically and the EMPTY WATER display will light up. In order to continue the programme, the water reservoir must be emptied.



**Warning!** The condensed water is not suitable for drinking or for preparing foodstuffs.


1. Take out drawer containing water reservoir completely (1) and pull up the water reservoir's drainage pipe as far as it will go (2).

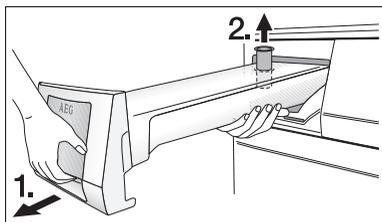

2. Pour condensed water out into a sink or other suitable container.
3. Slide outlet connections in and re-fit water reservoir.

If the programme has been interrupted as a result of the water reservoir being full:

Press the START/PAUSE button to continue the drying cycle.

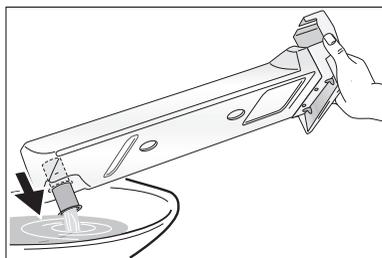

The water reservoir has a volume of approx. 4 litres. This is sufficient for around 6kg of laundry which has previously been spun at 800 revolutions/minute.



The condensed water can be used as distilled water, e.g. for steam ironing. However first filter it (e.g. with a coffee filter) to remove any residue and small pieces of fluff.



## Cleaning heat exchanger

If the HEAT EXCHANGER display is illuminated, the heat exchanger needs to be cleaned.




**Caution!** Operating when the heat exchanger is clogged with lint can damage the dryer. This also increases energy consumption.

1. Open loading door
2. Open base door. To do this, press the release button located beneath the loading aperture and open the base door to the left.
3. Remove lint from the inside of the door and the heat exchange chamber. Wipe the door seal with a damp cloth.
4. Turn both lock washers inwards.

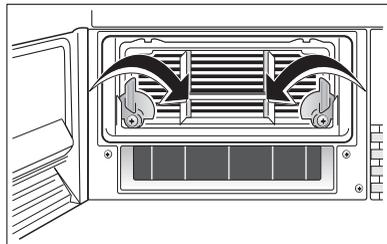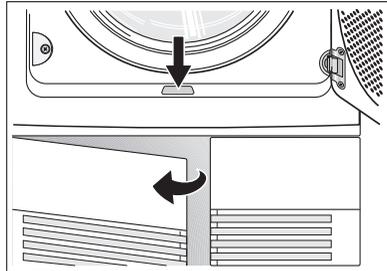

5. Use the handle to pull the heat exchanger out of the base and carry it horizontally to prevent any remaining water from spilling.
6. To empty the heat exchanger, hold vertically over a washing-up bowl.

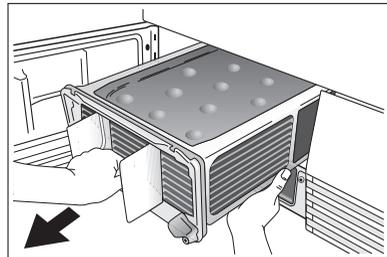

**Caution!** Do not use sharp objects to clean the heat exchanger. You could damage it and cause leaks.

7. Clean heat exchanger.  
It is best to use a brush or to rinse thoroughly with a shower head.
8. Replace heat exchanger and lock into place (turn both lock washers outwards until they snap into place).
9. Close base door.



The dryer will not operate if the HEAT EXCHANGER indicator is still lit.



**Caution!** Never operate the dryer without the heat exchanger.

## Cleaning the drum



**Caution!** Do not use abrasives or steel wool to clean the drum.



Lime in the water or cleaning agents may form a barely visible lining on the inside of the drum. The degree to which the laundry has been dried is then no longer detected reliably. The laundry is damper than expected when removed from the dryer.

Use a damp cloth, which has been soaked in water and a little vinegar, to wipe the inside of the drum and drum ribs.

## Clean operating screen and housing



**Caution!** Do not use furniture cleaners or aggressive cleaning agents to clean the machine.

Use a damp cloth to wipe down the operating screen and housing.

## What to do if...?

### Troubleshooting by yourself

If, during operation, the dryer shows an error display (one or more displays flashing on the programme progress display), check first of all whether you can remedy the problem yourself by means of the table below. If you cannot solve the problem: Switch the machine off and on again. Reset programme. Press the START/PAUSE button.

If the error display is still shown, please contact your local Service Force Centre and inform about flashing displays.

Problem	Possible cause	Remedy
Dryer does not work.	Mains plug is not plugged in or fuse is not working correctly.	Plug in at mains socket. Check fuse in fuse box (domestic installation).
	Loading door is open.	Close loading door.
	Have you pressed the START/PAUSE button?	Press the START/PAUSE button again.

<b>Problem</b>	<b>Possible cause</b>	<b>Remedy</b>
Drying results unsatisfactory.	Wrong programme selected.	Select a different programme the next time you dry (see "Overview of programmes" section).
	Lint filter clogged.	Clean lint filter.
	Heat exchanger clogged with lint.	Clean heat exchanger.
	Overloading of laundry.	Observe recommended loading volumes.
	Ventilation slots in base area covered up.	Uncover ventilation slots in base area.
	Residue on inside surface of drum or drum ribs.	Clean inside surface of drum and drum ribs.
	Conductance of water at installation site differs from standard setting of machine.	Re-programme standard setting for degree of drying (see 'Programming options' section).
Loading door does not close.	Fine strainer not in place and/or large mesh filter not locked in place.	Install fine strainer and/or snap large mesh filter into place.
When pressing a button, the corresponding button flashes several times.	Washing protection. After the start of the programme, the option can no longer be set.	Turn the programme knob to OFF. Set the programme again.
Drum light does not work.	Programme selector in OFF position.	Turn programme selector to LIGHT or to any programme.
	Defective lamp.	Replace lamp (see next section).
Programme inactive, EMPTY WATER display illuminated.	Condensate tank is full.	Empty condensate tank, then start programme with START/PAUSE button.
Drying cycle ends shortly after programme starts. END display illuminated.	Not enough washing loaded or washing loaded is too dry for selected programme.	Select time programme or higher drying level (e.g. INTENSIVE DRY instead of STORAGE DRY).

Problem	Possible cause	Remedy
Drying cycle lasts an unusually long time. Note: After up to 5 hours the drying cycle finishes automatically (see "Drying cycle complete").	Lint filter clogged.	Clean lint filter.
	Heat exchanger clogged with lint.	Clean heat exchanger.
	SPECIAL CARE button pressed and load volume too big.	SPECIAL CARE is only suitable for use with loads of up to 3 kg!
	Load volume too big.	Reduce load volume.
	Laundry insufficiently spun.	Laundry must be adequately spun.

## Changing bulb for interior light

Only use a special bulb which is designed specially for dryers. The special bulb is available from the local Service Force Centre.



**Warning!** Do not use standard bulbs! These develop too much heat and may damage the machine!



**Warning!** Before replacing the bulb, disconnect the mains plug; with a permanent connection: fully remove the fuse.

1. Unscrew the lampcover (this can be found directly behind the loading aperture, at the top; refer to "Description of machine" section.)
2. Replace defective bulb.
3. Replace the lampcover.



**Warning!** For reasons associated with safety, the lampcover must be screwed down tightly. If this is not done, the dryer must not be operated.

# Programming options

Objective	Implementation
<p>Permanently programme in the audible signal which reminds you that the programme is complete.</p>	<ol style="list-style-type: none"> <li>1. Turn the programme selector to any programme.</li> <li>2. Press the AUDIBLE SIGNAL button and hold down for approx. 5 seconds. A brief signal sounds several times. The AUDIBLE SIGNAL display flashes several times. The setting is permanently programmed.</li> </ol> <p>The setting is cancelled as described under 1 and 2.</p>
<p>Adjust 'level of dryness' detection: If the laundry is slightly drier or slightly damper at the end of the programme than with the standard setting.</p>	<ol style="list-style-type: none"> <li>1. Turn the programme selector to any programme.</li> <li>2. Press the AUDIBLE SIGNAL and SENSITIVE buttons at the same time and hold down for approx. 5 seconds. The current setting is displayed on the programme progress display:               <ul style="list-style-type: none"> <li>– END display: Setting for drier laundry</li> <li>– COOLING display: Standard setting</li> <li>– DRYING display: Setting for damper laundry</li> </ul> </li> <li>3. Press the START/PAUSE button until the setting required appears on the programme progress display.</li> <li>4. Turn the programme selector to OFF. The setting is permanently programmed.</li> </ol>
<p>To deactivate the EMPTY WATER display when using an external drain for the condensed water.</p>	<ol style="list-style-type: none"> <li>1. Turn the programme selector to any programme.</li> <li>2. Press the DELAY TIMER and SPECIAL CARE buttons at the same time and hold down for approx. 5 seconds. The EMPTY WATER display flashes briefly. The EMPTY WATER display is permanently deactivated. Settings may be cancelled as under 1 and 2, but the EMPTY WATER display is briefly illuminated (instead of flashing).</li> </ol>

## Technical data

- CE** This appliance conforms with the following EU Directives:
- 73/23/EEC dated 19.02.1973 Low Voltage Directive
  - 89/336/EEC dated 03.05.1989 EMC Directive inclusive of Amending Directive 92/31/EEC
  - 93/68/EEC dated 22.07.1993 CE Marking Directive

Height x width x depth	85 x 60 x 60 cm
Depth with loading door open	109 cm
Height can be adjusted by	1.5 cm
Weight when empty	approx. 40kg
Loading volume (depends on programme) <sup>1)</sup>	max. 6kg
Energy consumption in accordance with IEC 1121 s. e. (6kg of cotton, pre-drained at 1000 rpm, COTTONS STORAGE DRY programme)	3.7 kWh
Use	Domestic
permissible ambient temperature	+ 5°C to + 35°C

1) Different loading volume data may be needed in some countries as a result of different measuring methods.

## Consumption values

The consumption values have been established under standard conditions. They may deviate when the machine is operated in domestic circumstances.

Programme	Loading volume in kg	Energy consumption in kWh
COTTONS STORAGE DRY <sup>1)</sup>	6	3,70
COTTONS HAND IRON <sup>1)</sup>	6	3,00
EASY CARES STORAGE DRY <sup>2)</sup>	3	1,35

1) pre-drained at 1000 rpm

2) pre-drained at 1200 rpm

# Installation and connection instructions



## Installation safety instructions

- Before first starting up, all parts of the transport safety devices must be removed. The machine may otherwise be damaged.
- Before using for the first time, ensure that the nominal voltage and type of current specified on the machine rating plate match the nominal voltage and type of current at the installation site. The electrical fuses required can also be found on the rating plate.
- Always connect the plug into a protection contact socket which has been installed as specified.
- With permanent connections: A permanent connection may only be established by an authorised specialist electrician.
- Do not install machine in rooms at risk of frost.
- Ensure that the door of the machine cannot be blocked by interior doors of the house or the doors of other appliances.
- Do not install on deep pile carpets. Air circulation will be hindered at the ventilation slots.
- Ensure that the machine is not placed on its mains cable.
- The tumble dryer must be level when installed.
- Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.

## Removing transport safety packaging

 **Caution!** Before first using all parts of the transport packaging must be removed.

1. Open loading door
2. Pull off adhesive strips from inside machine on top of drum.
3. Remove foil hose and polystyrene padding from the machine.

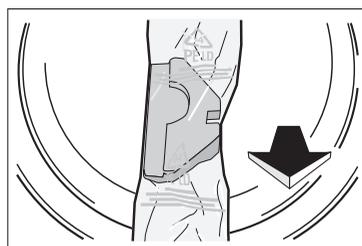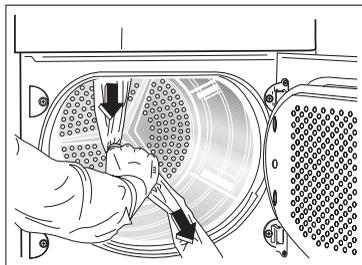

# Electrical connection

Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.



## **WARNING – THIS APPLIANCE MUST BE EARTHED.**

The manufacturer declines any liability should these safety measures not be observed.

Before switching on, make sure the electricity supply voltage is the same as that indicated on the appliance rating plate.

### **Important:**

The plug must be accessible after the appliance has been installed.


The appliance is supplied with a 13 amp plug fitted. In the event of having to change the fuse in the plug supplied, a 13 amp ASTA approved (BS 1363) fuse must be used.

Should the plug need to be replaced for any reason, proceed as described below.

The wires in the mains lead are coloured in accordance with the following code:

Green and Yellow:	Earth
Blue:	Neutral
Brown:	Live

- The wire coloured green and yellow must be connected to the terminal marked with the letter "E" or by the earth symbol  $\oplus$  or coloured green and yellow.
- The wire coloured blue must be connected to the terminal "N" or coloured black.
- The wire coloured brown must be connected to the terminal marked "L" or coloured red.
- Upon completion there must be no cut, or stray strands of wire present and the cord clamp must be secure over the outer sheath.

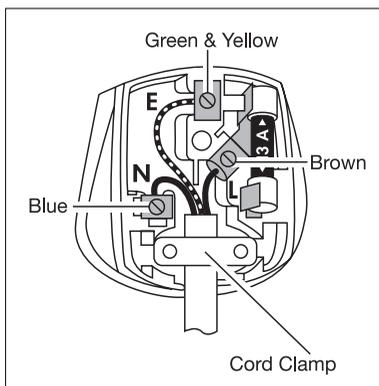

**WARNING!** A cut off plug inserted into a 13 amp socket is a serious safety (shock) hazard. Ensure that the cut off plug is disposed of safely.

## Permanent Connection

In the case of a permanent connection it is necessary that you install a double pole switch between the appliance and the electricity supply (mains), with a minimum gap of 3 mm between the switch contacts and of a type suitable for the required load in compliance with the current electrical regulations.

The switch must not break the yellow and green earth cable at any point.

This appliance complies with the requirements laid out in the EEC Directive 76/899.

Voltage 240 V AC: Fuse rating 13 amps

See rating plate for further information.

This appliance meets VDE requirements.

Particular regulations of local electricity authorities must be observed. This appliance conforms to EEC Directive No. 82/499/EWG on radio interference.



**WARNING!** Repairs to electrical appliances must only be carried out by trained personnel. Improper repairs may lead to serious risks for the user.

## Door reversal instructions





**Warning!** The door may only be reversed by a specialist.

If necessary, please contact your local Service Force Centre.

**Warning!** Before reversing the door, disconnect the mains plug; with a permanent connection: remove the fuse.

1. Open door.
2. Unscrew hinge A from the front of the machine and take off the door.
3. Carefully pry off cover plates B and C. To do this, insert a thin screwdriver into the slots as shown in the illustration, press downwards slightly and pry out the cover plates.
4. Unfasten locking block D from the snap-on fixture, take out and reinsert on the other side, having rotated the block through 180°.
5. Unscrew hinge A from the door, rotate through 180°, reinsert on the opposite side and screw down.
6. Reinsert cover plates B and C on the opposite site having first rotated them through 180°.
7. Unscrew cover plates E from the front of the machine, rotate through 180, screw on the opposite side.
8. Unscrew door lock F, push down slightly and remove from the front of the machine.
9. Press snap-in button G in and down, press cover down slightly and remove from front of the machine.
10. Transfer door lock F to the opposite-side and screw down.
11. Fix cover G on to the other side and allow the snap-in button to lock in place.
12. Insert door and hinges into recesses on the front of the machine and screw down.

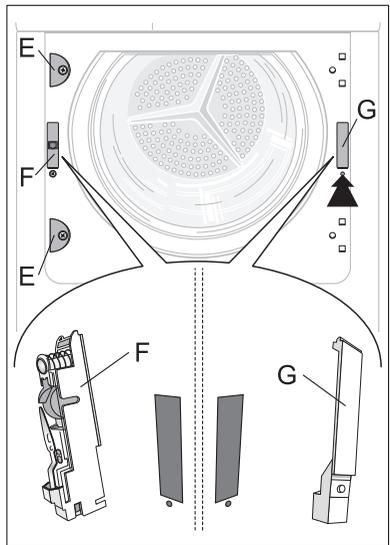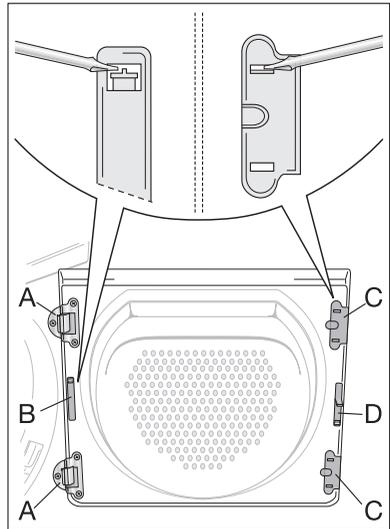

**Note regarding contact protection:** The machine is only secure for operations again once all plastic parts have been inserted.

## Special accessories

The following special accessories are available from your Service Force Centre or your specialist dealer:

### **Intermediate installation kits for stacked washer and dryer:**

These intermediate installation kits can be used to arrange the dryer and an automatic AEG-Electrolux washing machine (60cm wide, front loading) as a space-saving washer/dryer stack. The automatic washing machine is at the bottom and the dryer is at the top.

Two versions can be supplied:

- without stacker plate 916 019 102
- with extractable stacker plate 916 019 103

### **Installation kit for external condensate drain**

Installation kit (125 122 510) for direct draining of condensate into a basin, siphon, gully, etc. The condensate tank then no longer has to be drained, it must however remain in its intended position in the machine. Refer to the "Programme options" section for how to deactivate the EMPTY WATER display.

Max. displacement height: 1 m from the base of the dryer; max. displacement length: 3 m

# WARRANTY CONDITIONS

## Great Britain

### Standard guarantee conditions

We, AEG, undertake that if within 12 months of the date of the purchase this AEG appliance or any part thereof is proved to be defective by reason only of faulty workmanship or materials, we will, at our discretion repair or replace the same FREE OF CHARGE for labour, materials or carriage on condition that:

- The appliance has been correctly installed and used only on the electricity or gas supply stated on the rating plate.
- The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer's operating and maintenance instructions.
- The appliance has not been serviced, maintained, repaired, taken apart or tampered with by any person not authorised by us.
- All service work under this guarantee must be undertaken by a Service Force Centre. Any appliance or defective part replaced shall become the Company's property.
- This guarantee is in addition to your statutory and other legal rights.
- Home visits are made between 8.30am and 5.30pm Monday to Friday. Visits may be available outside these hours in which case a premium will be charged.

### Exclusions

This guarantee does not cover:

- Damage or calls resulting from transportation, improper use or neglect, the replacement of any light bulbs or removable parts of glass or plastic.
- Costs incurred for calls to put right an appliance which is improperly installed or calls to appliances outside the United Kingdom.
- Appliances found to be in use within a commercial environment, plus those which are subject to rental agreements.
- Products of AEG manufacture which are not marketed by AEG.

### European Guarantee

If you should move to another country within Europe then your guarantee moves with you to your new home subject to the following qualifications:

- The guarantee starts from the date you first purchased your product.
- The guarantee is for the same period and to the same extent for labour and parts as exists in the new country of use for this brand or range of products.
- This guarantee relates to you and cannot be transferred to another user.
- Your new home is within the European Community (EC) or European Free Trade Area.
- The product is installed and used in accordance with our instructions and is only used domestically, i.e. a normal household.
- The product is installed taking into account regulations in your new country.

Before you move please contact your nearest Customer Care centre, listed below, to give them details of your new home. They will then ensure that the local Service Organisation is aware of your move and able to look after you and your appliances.

France	Senlis	+33 (0) 3 44 62 29 29
Germany	Nürnberg	+49 (0) 800 234 7378
Italy	Pordenone	+39 (0) 800 117511
Sweden	Stockholm	+46 (0) 8 672 5360
UK	Slough	+44 (0) 1753 219899

### **Weitere Kundendienststellen im Ausland**

In diesen Ländern gelten die Garantiebedingungen der örtlichen Partner. Diese können dort eingesehen werden.

### **Further after-sales service agencies overseas**

In these countries our AEG-Electrolux agents' own guarantee conditions are applicable. Please obtain further details direct.

### **Autres agences étrangères assurant le service après-vente**

Dans ces pays, les conditions de garantie des concessionnaires de la région sont valables. Vous pouvez les consulter sur place.

### **Otros puntos de Postventa en el extranjero**

En estos países rigen las condiciones de nuestros representantes locales, las cuales pueden ser consultadas allí mismo.

### **Ulteriori uffici del servizio tecnico assistenza clienti all'estero**

In questi paesi sono valide le condizioni di garanzia dei partner locali. Queste condizioni possono essere esaminate sul luogo.

### **Serviços de assistência técnica no estrangeiro**

Nestes países são válidas as condições de garantia dos concessionários locais, podendo aí ser consultadas.

### **További vevőszolgálati irodák külföldön**

Ezekben az országokban a mi AEG-Electrolux vevőszolgálatainknál saját jótállási feltételek alkalmazhatók. A további adatokat kérjük közvetlenül szerezzék be.

### **Servisne službe**

Na garancijskem listu boste našli seznam pooblaščenih servisnih služb AEG-Electrolux.

#### **U.A.E. Abu Dhabi**

Universal Trading Company  
P.O. Box 43 99  
Tel.: 6335331  
Service Center 6733974

#### **Jordan**

Jordan Household  
Supply Co. Ltd.  
P.O. Box 3/68  
Amman/Tel.: 69 70 50

#### **Malta**

ITC  
International Trading  
Company  
White House Building  
Mountbatte Street  
Blata L-Bajda/Tel.:  
220644

#### **Egypt**

Middle East Commercial  
Center  
4 Salah El Dein St. - 2nd floor  
Heliopolis, Kairo  
Egypt  
Tel.: 2024181719

#### **Canada**

EURO-LINE Appliances  
2150 Winston PARK Drive 20P.O. 7 54  
Oakville, Ontario L6H 5V1  
Tel.: 905 829 3980  
Fax: 905 829 3985

#### **Mauritius**

Happy World Centre Ltd.  
1 Chausee Street  
Port Louis  
Tel.: 25355

**Australia**

The Andi-Co Group  
1 Stamford Road  
Oakleigh VIC 3166  
Tel.: (03) 9569 1255  
Fax: (03) 9569 1450  
www.andico.com.au

**Bahrain/Arabian Gulf**

A.A. Zayani & Sons  
P.O. Box 9 32  
Bahrain  
Tel.: 17311124

**Bulgaria**

Electrolux Bulgaria E.O.O.D.  
91 Levski Blvd.  
1000 Sofia  
Tel.: 2 806676  
Fax. 2 980 5276

**Cyprus**

Hadjikyrlakos & Sons Ltd.  
Prodromou 121  
P.O. Box 21587  
Nicosia 1511  
Service Telephones:  
Nicosia 02 481226  
Limassol 05 562182  
Larnaca 04 633929  
Paphos 06 932 699

**Estonia**

Electrolux Estonia Ltd.  
Mustamäe tee 24  
EE0006 Tallinn  
Tel.: (372) 6 650 090  
Fax: (372) 6 650 092

**Korea (South)**

Core Incorp.  
3/F Chewoo Bldg.  
200 Nonhyun-Dong  
Kangnam-Ku 135-010  
Seoul  
Telefon 82 2 549 89 61

**Croatia**

Electrolux D.O.O.  
Suplova 7  
10000 Zagreb  
Tel.: 1 61 19512  
Fax: 1 61 19513

**Kuwait/Arabian Gulf**

Ali Al-Ghanim Est.  
P.O. Box 21540 - Safat  
Tel.: 4822190  
Fax: 4820116

**Lebanon**

Adib & Assaferi  
P.O. Box 539  
Tripoli

**Latvia**

Electrolux Latvija Ltd.  
Kr.Barona iela 130/2  
Riga, LV-1012  
Tel.: 371 7313626  
Fax: 371 7845954

**Namibia**

AEG NAMIBIA (PTY)  
LIMITED-Jeppe Street  
Northern Industrial Area  
Windhoek  
Tel.: (061) 21-6082/4  
Fax: (061) 217838

**New Zealand**

Monaco Corporation Ltd.  
10 Rothwell Avenue  
Albany - Auckland  
4399 Auckland 1  
New Zealand  
Tel.: 00 64-92 59 11 11  
Fax: 00 64-92 59 11 12

**Syria**

WATTAR CO.  
P.O. Box 36109  
Mazze - Damascus  
Direct Phone:  
00963116132649  
Fax: 00963116119537

**Iran**

ARIAN International  
Development Co.  
AEG Showroom  
Shariati, Balatar as Safar  
Teheran / Iran  
Phone No. Showroom:  
021 / 285 513 / 4  
Phone No. Service:  
021 / 312 27 67 / 8

**Poland**

Electrolux Poland Sp.  
zo.o.  
ul. Domaniewska 41  
02-034 Warszawa  
tel.: 022 874 33 33  
fax: 022 874 33 00

**Hong Kong**

Dah Chong Hong Ltd.  
20 Kai Cheung Road  
Kowloon Bay  
Kowloon - Hong Kong  
Tel.: 0085222621620  
Fax: 0085227550333

**Israel**

Evis Ltd.  
Tadiran-Ampa Service  
10 Gibonay Israel Street  
New Industrial Zone  
Netanya, 42504  
Israel

**Japan**

Electrolux Japan Ltd.  
Domestic Appliances Department  
Maruzen Showa Warehouse  
Building  
Tookai 4-5-12, Ota-ku  
143-006 Tokyo  
Tel.: 0120-13-7117  
Fax: 03-3790-5257

**Thailand**

Olympia Thai Tower, 444  
Rachadapiser Road  
Samsennok- Huaykwang  
10320 Bangkok  
Thailand  
Tel.: 006625136111  
Fax: 006625136334

**Hungary**

Electrolux Lehel KFT  
(AEG Div)  
Erzsébet Királyné útja 87.  
1142 Budapest  
Tel.: 00361/467-3200

**Lithuania**

Electrolux Lithuania  
Verkui 29  
2600 Vilnus  
Tel.: 372 272 3326  
Fax: 372 272 3366

**Malaysia**

Arzbergh Engineering  
No. 49A/B, Jalan Petaling  
Utama 7  
4600 Petaling Jaya  
Tel.: 3 795 1084  
Fax: 3 795 1082

**Singapore**

Group Pte Ltd.  
833 Bukit Timah Road  
Unit no. 01-11 Royalville  
279887 Singapore  
Tel.: 0065 64638484  
Fax: 0065 64638488

**Slovakia Rep.**

Electrolux Slovakia S.R.O.  
Seberiniho 1  
821 03 Bratislava  
Tel.: 02 4333 4322, 4355  
Fax: 02 4333 6976

**Russia**

Electrolux Russia Ltd.  
16 Olympiyskiy prospekt  
129090 Moscow  
Tel.: (095) 937 7837  
Fax: (095) 926 5513

**Saudi Arabia**

Awad Badi Nahas Est  
Shara Siteen  
Jeddah 21463  
Phone: 6646583  
Alia Trading Co  
Mecca Road  
Riyadh 11491  
Phone 4645977

**Slovenia**

Electrolux Slovenia D.O.O.  
Traska Ul. 132  
1000 Ljubljana  
Tel.: 61 1234 137  
Fax: 61 1234 238

**South Africa**

AEG (Pty) Ltd.  
55, 12th Road  
P.O. Box 1 02 64  
Kew/Johannesburg 2000  
Tel.: 8069111





# Service and Spare Parts

If the event of your appliance requiring service, or if you wish to purchase spare parts, please contact Service Force by telephoning:

**0870 5 929 929**

Your telephone call will be automatically routed to the Service Force Centre covering your post code area.

For the address of your local Service Force Centre and further information about Service Force, please visit the website at


**www.serviceforce.co.uk**

Before calling out an engineer, please ensure you have read the details under the heading „What to do if...“

When you contact the Service Force Centre you will need to give the following details:

1. Your name, address and post code.
2. Your telephone number.
3. Clear and concise details of the fault.
4. The model and serial number of the appliance (found on the rating plate)
5. The purchase date.

Please note that a valid purchase receipt or guarantee documentation is required for in-guarantee service calls.

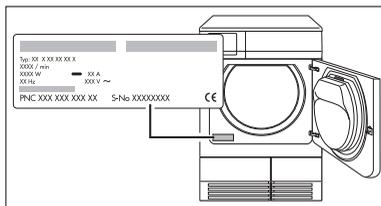

## Customer Care

For general enquiries concerning your AEG-Electrolux appliance, or for further information on AEG-Electrolux products please contact our Customer Care Department by letter or telephone at the address below or visit our website at **www.aeg.co.uk**.

Customer Care Department  
Major Appliances  
AEG-Electrolux  
Domestic Appliances  
Addington Way  
Luton  
Bedfordshire, LU4 9QQ  
Tel: 08705 350350 (\*)

**For Customer Service in the Republic of Ireland** please contact us at the address below:

AEG/ Electrolux Group (Ire) Ltd  
Long Mile Road/ Dublin 12  
Republic of Ireland  
Tel: +353 (0) 1 4090754  
Email: service.eid@electrolux.ie

(\*) Calls may be recorded for training purposes

 **From the Electrolux Group. The world's No. 1 choice.**

*The Electrolux Group is the world's largest producer of powered appliances for kitchen, cleaning and outdoor use. More than 55 million Electrolux Group products (such as refrigerators, cookers, washing machines, vacuum cleaners, chain saws and lawn mowers) are sold each year to a value of approx. USD 14 billion in more than 150 countries around the world.*

AEG Hausgeräte GmbH  
Postfach 1036  
D-90327 Nürnberg

<http://www.aeg-electrolux.de>

© Copyright by AEG

822 944 561-01-230306-03

Subject to change without notice