

Hot Air Popcorn Popper

USE AND CARE GUIDE
MODELS 6202 AND 6202CAN



READ AND SAVE THESE INSTRUCTIONS

WARNING: A risk of fire and electrical shock exists in all electrical appliances and may cause personal injury or death. Please follow all safety instructions.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- ◆ Read all instructions before using appliance.
- ◆ Cover must be in place before plugging appliance in.
- ◆ This appliance pops with hot air. Do not place oil, shortening, butter or margarine in the popping chamber. Use of these substances will damage the unit and may result in injury.
- ◆ Do not touch hot surfaces. Cover will become hot during popping.
- ◆ To protect against electrical shock, do not immerse cord, plug or appliance base in water or other liquid. See instructions for cleaning.
- ◆ Close supervision is necessary when any appliance is used near children.
- ◆ This appliance is not for use by children.
- ◆ Unplug from outlet when not in use. Unplug and allow to cool before putting on or taking off parts, and before cleaning.
- ◆ Do not operate any damaged appliance. Do not operate with a damaged cord or plug or after the appliance malfunctions or has been dropped or damaged in any manner. Contact Consumer Service for return authorization, examination, repair or electrical or mechanical adjustment.
- ◆ The use of accessory attachments not recommended by Toastmaster Inc. may cause injuries.
- ◆ Do not use outdoors or while standing in a damp area.
- ◆ Do not let cord hang over edge of table or counter or touch hot surfaces.
- ◆ Do not place on or near a hot gas or electric burner or in a heated oven.
- ◆ To disconnect, switch off, then remove plug from wall outlet.



- ◆ Do not use pre-packaged salt/oil/popcorn combinations as they will damage the appliance.
- ◆ Do not use appliance other than for intended in these instructions.
- ◆ Do not leave appliance unattended while in use.
- ◆ This appliance will not shut off automatically. To avoid over-heating, add corn before operating.
- ◆ Extreme caution must be used when unloading popcorn.

SAVE THESE INSTRUCTIONS

 
CAUTION: A short power supply cord is provided to reduce the risk of personal injury resulting from becoming entangled in or tripping over a longer cord. Extension cords are available from local hardware stores and may be used if care is exercised in their use. If an extension cord is required, special care and caution is necessary. Also the cord must be: (1) marked with an electrical rating of 125 V, and at least 13 A., 1625 W., and (2) the cord must be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over accidentally.

POLARIZED PLUG: This appliance has a polarized plug, (one blade is wider than the other). As a safety feature to reduce the risk of electrical shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

ELECTRIC POWER: If electric circuit is overloaded with other appliances, your appliance may not operate properly. It should be operated on a separate electric circuit from other appliances.

This product is for household use only.


CAUTION: UNPLUG APPLIANCE FROM ELECTRICAL OUTLET WHEN ASSEMBLING, REMOVING PARTS OR CLEANING. NEVER PLACE BASE OR CORD IN WATER OR OTHER LIQUIDS.

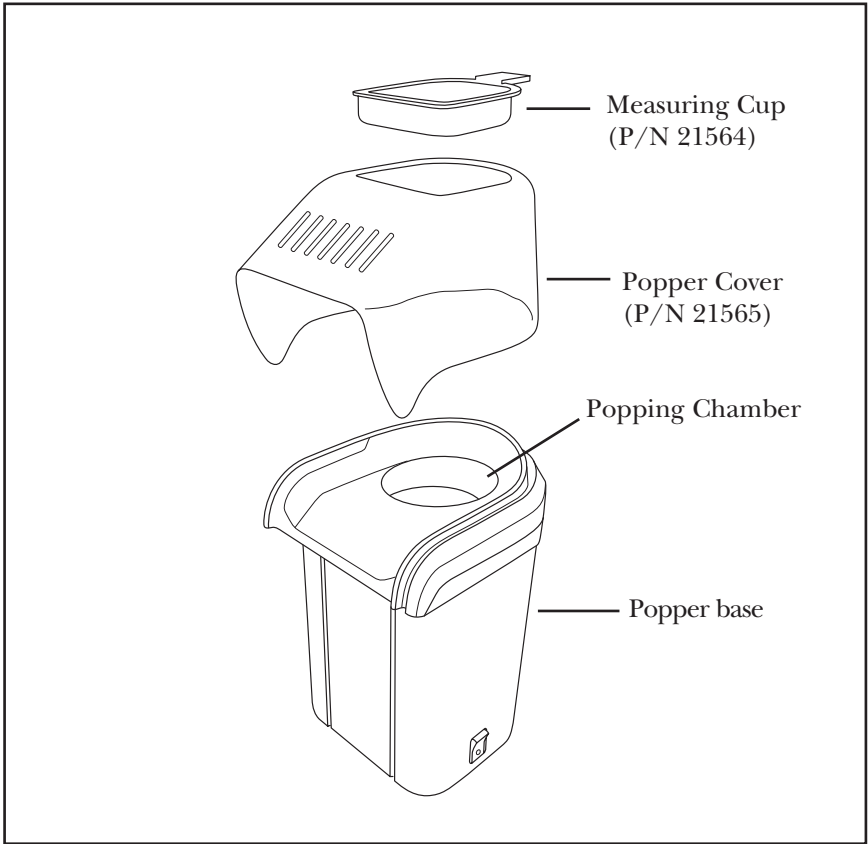

Using Your Hot Air Popcorn Popper

Fill out warranty information that follows the limited warranty in this book.

 1. Before using for the first time, wash popper cover and measuring cup in warm, soapy water; rinse and dry thoroughly.
2. Remove popper cover and measuring cup from popper base. Fill the measuring cup with kernels and add to popping chamber. Do not overfill measuring cup - kernels should be level in measuring cup. Measuring cup = $\frac{1}{2}$ cup. Never add more than $\frac{1}{2}$ cup of popcorn kernels to the popping chamber at one time. Do not put any other ingredients such as oil, shortening, butter, margarine, salt and sugar into popping chamber as damage will occur.
3. Place popper cover onto base, positioning bottom edge of cover into groove of base. Place measuring cup onto popper cover. Never pop corn without popper cover and measuring cup in position.
4. Plug unit into a 120V ~ 60 Hz outlet and press the On/Off Switch to On (I). *Note: The measuring cup may be used to melt butter while the unit pops the kernels. Never add more than $\frac{1}{2}$ cup of butter to the measuring cup. For best results, cut butter into $\frac{1}{4}$ slices before placing in measuring cup. When using the measuring cup to measure kernels, always wash and dry the measuring cup after each batch of popcorn when melting butter.*
5. Press the On/Off Switch to Off (O) and unplug the unit when popping is complete. Do not operate this unit empty. Due to variances in the popcorn type, freshness and moisture content, some popped or unpopped kernels may remain in the chamber after the popping has stopped. To prevent scorching, unplug the popper without waiting for this corn to clear the unit.

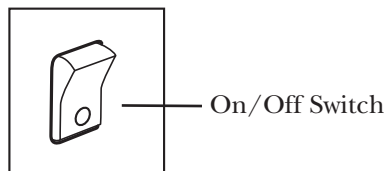

CAUTION: AS KERNELS MAY CONTINUE TO POP EVEN AFTER UNIT IS UNPLUGGED, MAKE SURE ALL POPPING HAS STOPPED BEFORE REMOVING COVER.

CAUTION: USE OVEN MITTS WHEN HANDLING HOT SURFACES OF THE UNIT. TO AVOID TEMPORARY MALFORMATION OF THE COVER, ALLOW IT TO COOL ON THE UNIT BASE AFTER POPPING.

6. For additional batches, unplug unit. Make sure the popping chamber is empty. Carefully remove excess popcorn or left over unpopped kernels. Then repeat steps 2 through 6. *Note: When popping more than one or two batches of corn, allow the popper to cool down for at least 10 minutes.*

Helpful Hints

- ◆ This popcorn popper is designed to pop regular and premium brands of popcorn. Try different brands to find the one you like best. Yellow kernels generally pop larger than white. One half cup unpopped kernels will yield approximately 3 quarts of popcorn.
- ◆ Always use fresh popcorn. Stale or dried-out popcorn pops poorly and may cause scorching or smoking.
- ◆ Carefully select the bowl you will be using to collect popped corn. A metal bowl may become very hot to the touch due to the flow of hot air from the chute and must be handled carefully. It will, however, tend to keep the popcorn warm. If a plastic bowl is used, be certain it can withstand the heat caused by the warm air flow without melting.
- ◆ Never use more than ½ cup of kernels per batch.
- ◆ Never add salt, sugar or other flavorings into popping chamber.
- ◆ This is an AIR corn popper. Popcorn will pop by circulating hot air. Oils, fats or shortening are not needed and should never be used. Do not use microwave popcorn in this appliance.



How to Clean Your Popcorn Popper

1. Unplug and allow unit to cool before cleaning.
2. Wash the popper cover and measuring cup in warm, soapy water. Rinse and dry thoroughly. Do not wash in dishwasher. Wipe the corn popper base, including the popping chamber, clean and dry with a soft dry cloth. Never immerse the corn popper base in water or other liquid. Do not scour surfaces with steel wool or abrasive cleaners.
3. Store fully assembled with cover in place.

Any servicing requiring disassembly other than the above cleaning must be performed by a qualified appliance repair technician.

Service Information

Please refer to warranty statement to determine if in-warranty service applies. This appliance must be serviced by a Toastmaster authorized service center. Unauthorized service will void warranty.

If an authorized service center is not available locally, your appliance may be returned postage prepaid to our National Service Center at the address shown on the back of this book. Call Consumer Service for return authorization.

Products must be adequately protected to avoid shipping damage. Surround your appliance with three inches of protective padding and include a copy of your dated sales receipt and a note explaining the problem you have experienced. We recommend insuring your package. No CODs accepted.

LIMITED ONE-YEAR WARRANTY

Warranty Coverage: This product is warranted to be free from defects in materials or workmanship for a period of one (1) year from the original purchase date. This product warranty is extended only to the original consumer purchaser of the product and is not transferable. For a period of one (1) year from the date of original purchase of the product, our Repair Center will, at its option, either (1) repair the product or (2) replace the product with a reconditioned comparable model. These remedies are the purchaser's exclusive remedies under this warranty.

Warranty Service: To obtain warranty service, you must call our warranty service number at 1-800-233-9054 for return instructions on how to deliver the product, in either the original packaging or packaging affording an equal degree of protection to the Repair Center specified below. You must enclose a copy of your sales receipt or other proof of purchase to demonstrate eligibility for warranty coverage.

To return the appliance, ship to:

ATTN: Repair Center
708 South Missouri Street
Macon, MO 63552 USA

To contact us, please write to, call, or email:

Consumer Relations Department
PO Box 7366
Columbia MO 65205-7366 USA
1-800-233-9054
E-mail:
consumer_relations@toastmaster.com

What Is Not Covered: This warranty does not cover damage resulting from misuse, accident, commercial use, improper service or any other damage caused by anything other than defects in material or workmanship during ordinary consumer use. This warranty is invalid if the serial number has been altered or removed from the product. This warranty is valid only in the United States and Canada.

LIMITATION ON DAMAGES: THERE SHALL BE NO LIABILITY FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY OR CONDITION ON THIS PRODUCT.

DURATION OF IMPLIED WARRANTIES: EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ALL IMPLIED WARRANTIES AND CONDITIONS, INCLUDING, WITHOUT LIMITATION, IMPLIED WARRANTIES AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE OR USE ON THIS PRODUCT ARE LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may have other rights under the laws of your jurisdiction.

For more information on our products, visit our website: www.maxim-toastmaster.com.

©2001 toastmaster Inc.

All Right reserved

P/N 60797A

Printed in China



toastmaster®

7.

 
Keep Dated Sales Receipts for Warranty Service.

Keep this booklet. Record the following for reference:

Date purchased _____

Model number _____

Date code (stamped on bottom) _____

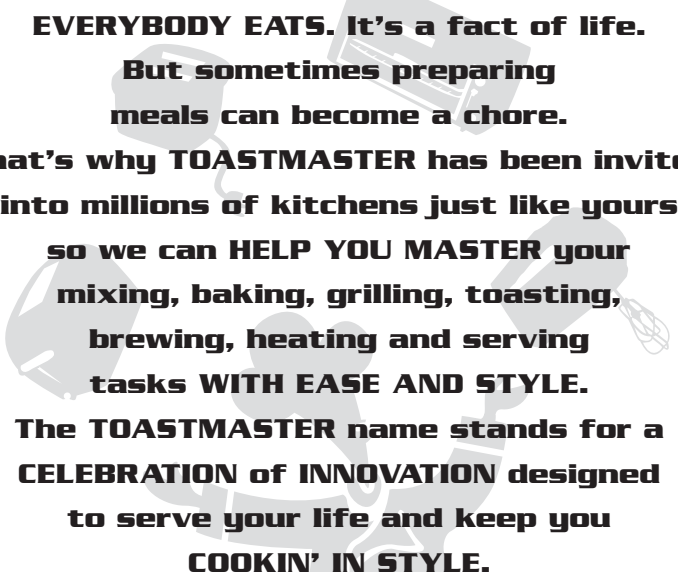

**EVERYBODY EATS. It's a fact of life.
But sometimes preparing
meals can become a chore.
That's why TOASTMASTER has been invited
into millions of kitchens just like yours
so we can HELP YOU MASTER your
mixing, baking, grilling, toasting,
brewing, heating and serving
tasks WITH EASE AND STYLE.
The TOASTMASTER name stands for a
CELEBRATION of INNOVATION designed
to serve your life and keep you
COOKIN' IN STYLE.**



toastmaster®

- No oil needed
- Provides a healthy alternative for low-fat snacks
- Removable lid for easy filling
- Pops up to 4 quarts per cycle
- On/off switch
- Butter lid



Questions

Call toll free 1-800-233-9054

Monday–Friday, 8:00 a.m.-5:30 p.m. CST

www.maxim-toastmaster.com

6202 AND 6202CAN