PD100 TIME CLOCK USER MANUAL






5640 Departure Drive Raleigh, NC 27616-1841 919.872.5800 Toll free USA: 800.334.7190

Toll free Canada: 866.514.3249

Fax: 919.850.0720 Email: sales@acroprint.com www.acroprint.com

Easy to Use:

The PD100 was designed as a time clock or time stamp, tracking day, hours and minutes. Simply align your time card and press down to stamp the day and time.

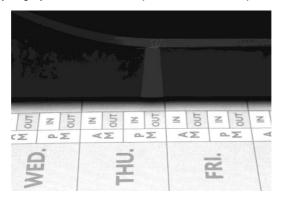



CAUTION:

- Read and understand all instructions in the PD100 Time Clock User Manual before installing and operating the time clock.
- Do not install the PD100 in areas where it may be exposed to direct sunlight or high temperatures, such as near a heater.
- Do not install the PD100 where it may be exposed to excessive dust or to high humidity, resulting in condensation.
- Do not use this product near water or when you are wet. If the product comes in contact with any liquids, unplug the electric cord immediately. Do not plug the product back in until it has thoroughly dried.
- Securely install the PD100 on a stable, level surface. Place the PD100 where
 no one can step or trip over the cord. Do not place objects on the power cord
 that can cause damage or abrasion.

Cover Removal and Installation:

Removal

- Insert key and turn counterclockwise
- Lift cover straight up

Installation

- · Place cover straight down on unit
- Align tabs in slots on base
- Turn key clockwise to lock


Setting

Use a pencil point or eraser on the raised letters to move the wheel to the desired location. Do not use sharp objects; they may damage the printing characters.

 Plug in unit until cam is aligned as shown in (Figure 1). Unplug unit when the cam reaches the position shown.

The wheels can only be turned toward the front of the unit (Figure 1).


PM Hours are denoted by an underscore (eg. 12, 5, 3)

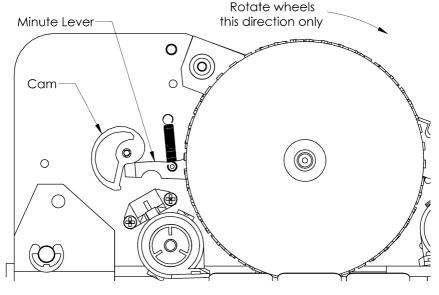

(Figure 1)

Day Setting

- Set hour wheel (center wheel) to 4 (4 AM) by moving the hour wheel toward the front of the unit and align 4 to Red Notch (Figure 2)
- Take a test print to check the day printed
- Adjust the day wheel by moving wheel toward the front of the unit
- Take a test print to confirm correct day is printing

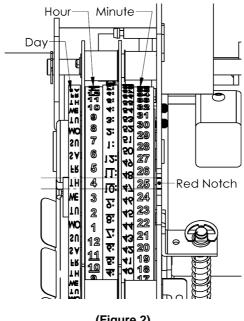

(Figure 2)

Hour Setting

Note: PM Hours are denoted by an underscore (eg. 12, 5, 3)

- Adjust hour wheel by moving the center wheel toward the front of the unit
- Align the correct hour with the Red Notch

Minute Setting

- Hold down the minute lever (Figure 1)
- Adjust the minute wheel to **One Minute Before** the current time by moving the wheel toward the front of the unit and aligning the Red Notch
- Release the minute lever
- The correct minute should now line up with the Red Notch

Completion


- Take test print and verify correct time
- Confirm ribbon is properly seated as shown in (Figure 3)
- Plug in PD100
- Replace cover

Ribbon Replacement

An Acroprint PD122 Replacement Ribbon will provide the best, trouble free performance of your PD100.

Warning: Ribbon ink can stain your hands and clothes. Please use extra care when handling ribbon spools (your pants will thank you).

- Remove cover
- Grasp both ribbon spools
- Pull spools straight out from the side of the unit
- The new empty ribbon spool must be placed on the forward post (Figure 3)
- Pull new ribbon spools apart about 3-4 inches
- Push new spools straight onto posts, while aligning the tab on the spool with the slot on the PD100
- · Remove ribbon slack by turning rear spool tabs clockwise
- Verify proper printing
- Install cover

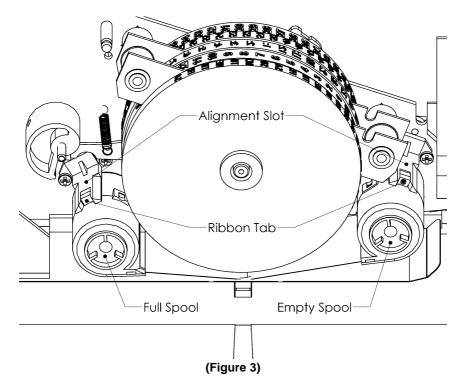

Warranty

This product is guaranteed to the original purchaser for a period of one (1) year from original purchase date against defective materials and workmanship when used under normal operating conditions. The repair or replacement of any defective component or part and any necessary adjustments will be made free of charge provided that the machine is shipped prepaid to the factory service center shown below, securely packaged and shipped in the original shipping container. The guarantee is not applicable if the device has been subject to misuse, abuse, negligence, accidents, power surges and lightning. The guarantee is not applicable if the serial number has been altered, defaced or removed or if the device has been tampered with or taken apart by other than authorized service personnel.

Please return the warranty card to Acroprint to register your product. If you would like to register online, please go to www.acroprint.com. For your reference fill out the information below and keep it in safe place.

Model Number	PD100
Serial Number	
Date Purchased	
Purchased From	
Location	

Acroprint Time Recorder Co. 5640 Departure Drive Raleigh, NC 27616-1841 www.acroprint.com

Product Registration Card Fax to 919.850.0720 or Drop in envelope Acroprint Time Recorder Co. 5640 Departure Dr. Raleigh, NC 27616, USA

PD100			
Model No.	Serial No.	Serial No.	
First Name	Last Name		
Title			
Company Name			
Address			
City	State	Zip	
Daytime Phone with Area Code	Email Address	Fax#	
Purchased From		Purchase Date	
(01) Manufacturing (02) Wholesale (03) Retail (04) Government (05) University/School (06) Restaurant	☐ (07) Hotel/N ☐ (08) Bankin ☐ (09) Medica ☐ (10) Constru ☐ (11) Other	g/Financial Il/Dental	
Number of Employees usin (20) 1-10 (21) 11-25 (22) 26-49	g this product (23) 50-75 (24) 76-100 (25) 100+		
Annual Sales in dollars (30) Under \$100,000 (31) \$100,000 – 250,0 (32) \$250,000 – 500,0	000 🔲 (34) \$1 milli	00 – 1,000,000 on – 5 million 5 million	
Are you interested in receiv ☐ (40) Yes	ring additional product infor ☐ (41) No	mation?	



5640 Departure Drive Raleigh, NC 27616-1841 Toll free USA: 800.334.7190 Toll free Canada: 866.514.3249 www.acroprint.com