

*Sunbeam*

# Therapeutics BRITA® Water Filter & Chiller

**BRITA**<sup>®</sup>  
Water Technology

Instruction Booklet  
WF5900

Please read these instructions carefully and retain for future reference.





# Contents

Sunbeam's Safety Precautions	2
Features of your BRITA® Water Filter & Chiller	4
Using your BRITA® Water Filter & Chiller	6
Care and Cleaning	9
Help Line	9

## Important instructions – retain for future use.

تأكد من تفهم احتياطات السلامة المذكورة اعلاه

請務必理解上述的安全預防措施。

Assurez-vous que les précautions ci-dessus relatives à la sécurité sont bien comprises

Versichern Sie sich, dass die obenstehenden Sicherheitsmaßnahmen Verstanden werden

Βεβαιώνετε πως οι παραπάνω προφυλάξεις ασφαλείας γίνονται κατανοητές

Pastikan bahwa tindakan-tindakan keselamatan seperti di atas dimengerti anda

Accertatevi che le suddette norme di sicurezza siano comprese a dovere

上記の注意事項をよくお読みになり、安全を御確認ください

Уверете се дека погоре споменатите мерки на претпазливост се добро разбрани

Asegúrese de que las precauciones de seguridad precedentes sean bien comprendidas

کاری بکنید کہ احتیاط‌های بالا حتماً درک بشوند

ต้องแน่ใจว่า ข้อควรระวังเรื่องความปลอดภัยข้างต้น เป็นที่เข้าใจกันดี

Yukarda belirtilen güvenlik önlemlerinin anlaşılığundan emin olunuz

Xin kiểm chắc rằng những biện pháp làm an toàn kể trên được hiểu rõ

# Sunbeam's Safety Precautions

## SAFETY PRECAUTIONS FOR YOUR BRITA® WATER FILTER & CHILLER

Please read this instruction booklet carefully before using your BRITA® Water Filter & Chiller. It will enable you to get the most out of your new product and to safely enjoy its many benefits. Please retain this booklet for future reference.

- This water filter must only be used with municipally treated water. Do not attempt to filter untreated, raw water or water of unknown quality.
- Filter replacement is essential for the product to perform as represented. The filter must be replaced every eight weeks.
- To protect against electric shock do not place the cord, plug or appliance in water or any other liquid.
- Always place the appliance on a flat, even surface.
- Always unplug the appliance before changing the filter.
- This appliance has been designed to be used continuously.
- Do not operate without a filter cartridge in place.

If you have any concerns regarding the performance and use of your appliance, please visit [www.sunbeam.com.au](http://www.sunbeam.com.au) or contact the Sunbeam Consumer Service Line.

Ensure the above safety precautions are understood.

تأكد من تفهم احتياطات السلامة المذكورة اعلاه

請務必理解上述的安全預防措施。

Assurez-vous que les précautions ci-dessus relatives à la sécurité sont bien comprises

Versichern Sie sich, dass die obenstehenden Sicherheitsmaßnahmen Verstanden werden

Βεβαιώστε πως οι παραπάνω προφυλάξεις ασφαλείας γίνονται κατανοητές

Pastikan bahwa tindakan-tindakan keselamatan seperti di atas dimengerti anda

Accertatevi che le suddette norme di sicurezza siano comprese a dovere

上記の注意事項をよくお読みになり、安全を御確認ください

Уверете се дека погоре споменатите мерки на претпазливост се добро разбрани

Asegúrese de que las precauciones de seguridad precedentes sean bien comprendidas

کاری بکنید کہ احتیاطهای بالا حتماً درک بشوند

ต้องแน่ใจว่า ข้อควรระวังเรื่องความปลอดภัยข้างต้น เป็นที่เข้าใจกันดี

Yukarda belirtilen güvenlik önlemlerinin anlaşıldığından emin olunuz

Xin kiểm chắc rằng những biện pháp làm an toàn kể trên được hiểu rõ

# Sunbeam's Safety Precautions

## SAFETY PRECAUTIONS FOR ALL ELECTRICAL APPLIANCES

Sunbeam are very safety conscious when designing and manufacturing consumer products, but it is essential that the product user also exercises care when using an electrical appliance. Listed below are precautions which are essential for the safe use of an electrical appliance:

- Read carefully and save all the instructions provided with an appliance.
- Always turn the power off at the power outlet before you insert or remove a plug. Remove by grasping the plug – do not pull on the cord.
- Turn the power off and remove the plug before cleaning.
- Do not use your appliance with an extension cord unless this cord has been checked and tested by a qualified technician or service person.
- Always use your appliance from a power outlet of the voltage (A.C. only) marked on the appliance.
- This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible adult to ensure that they can use the appliance safely.
- Never leave an appliance unattended while in use.
- Young children should be supervised to ensure that they do not play with the appliance.
- Do not use an appliance for any purpose other than its intended use.
- Do not place an appliance on or near a hot gas flame, electric element or on a heated oven. Do not place on top of any other appliance.
- Do not let the power cord of an appliance hang over the edge of a table or bench top or touch any hot surface.
- For safety reasons and to avoid maintenance by unskilled persons, some appliances are 'sealed' using tamperproof screws. Such appliances should always be returned to the nearest Sunbeam Appointed Service Centre for adjustment or repair if required.
- Do not operate any electrical appliance with a damaged cord or after the appliance has been dropped or damaged in any manner. If damage is suspected, return the appliance to the nearest Sunbeam Appointed Service Centre for examination, repair or adjustment.
- For additional protection, Sunbeam recommend the use of a residual current device (RCD) with a tripping current not exceeding 30mA in the electrical circuit supplying power to your appliances.
- Do not immerse the appliance in water or any other liquid unless recommended.

 
# Features of your BRITA® Water Filter

Memo display

2 litre filtering tank

Power on and chilled indicator LED

Water dispenser lever

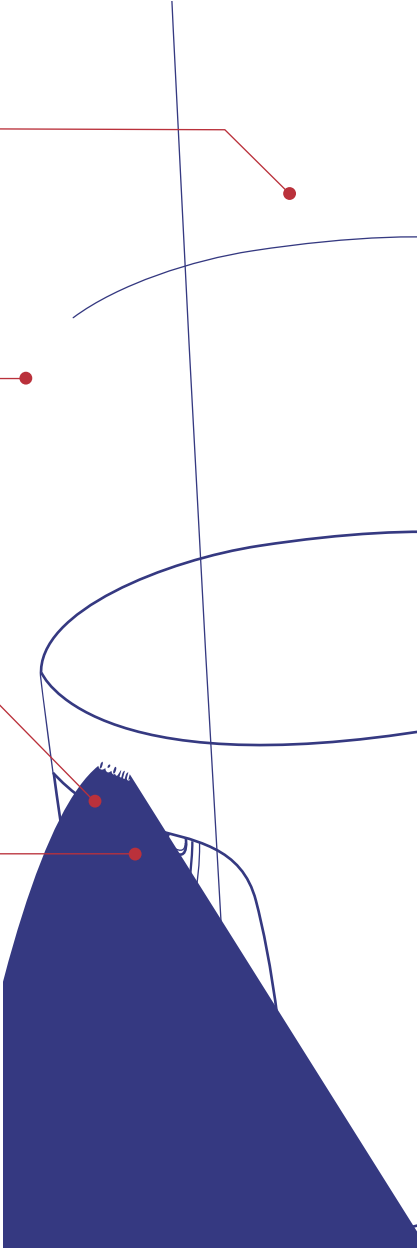

# & Chiller

Lid

BRITA® Maxtra cartridge

4 litre filtered water tank

Filter funnel

1.2 litre chilling reservoir



# Using your BRITA® Water Filter & Chiller

## Before using your BRITA® Water Filter & Chiller

- Remove any packaging and promotional material from the packaging.
- Remove the filter cartridge and keep in a safe place.
- Remove the lid and filtering tank and wash in warm soapy water, rinse and wipe dry.
- Wipe out the filtered water tank with a damp cloth which has been soaked in soapy water.
- Position the appliance on a dry, level and secure bench top.
- Allow good airflow around the appliance.
- Do not place directly against a wall.
- Plug the appliance into a suitable power outlet and switch on.

## Preparing the BRITA Maxtra water filter cartridge for use

- Remove the cartridge from its wrapping (cartridge and inside wrapper may appear moist, this is simply condensation).
- Immerse the cartridge in cold tap water and agitate gently to remove any air bubbles. See figure 1.

the cartridge i

the filtee ou



# Using your BRITA Water Filter & Chiller continued

## Filtering time

Please note that on average it will take 5½ minutes to filter 1 litre of water through the BRITA® Maxtra cartridge.

## Using the Memo function

It is important to change your filter cartridge regularly to enjoy the benefits of filtered water. The BRITA Memo system automatically reminds you when your filter cartridge needs to be changed.

When you have fitted and prepared your filter cartridge, start the Memo system as follows:

- Press and hold the Start button until 4 bars appear on the display and flash twice. The Memo is now set. The flashing dot in the corner of the display indicates that the Memo is working. See figure 2.

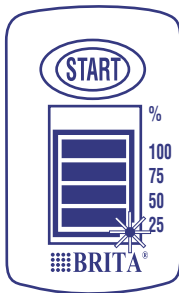 


Figure 2

- After flushing the filter, the water will need to chill. When switched on, a blue power on LED will be illuminated to show that the appliance is switched on and working. When the water has been chilled the light will appear white.
- On first use the appliance should be left overnight to chill. On subsequent uses, it will take approximately 90 minutes to chill the contents of the chilling reservoir.
- The light may flicker between blue and white as water is dispensed and if the ambient temperature increases. The fan may also be activated in these conditions and will remain so until the required temperature has been reached.
- At the end of every two weeks, one bar will disappear to indicate the remaining cartridge life. When only one bar is showing, check that you have a replacement BRITA Maxtra water filter cartridge available. See figure 3.


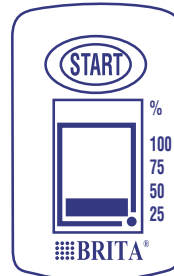 


Figure 3

## Using your BRITA Water Filter & Chiller continued

 - After 8 weeks, all four bars will disappear and a flashing arrow will appear to indicate that the cartridge should be replaced. See figure 4.

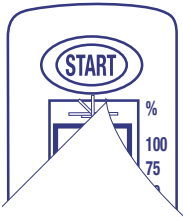

Wash and dry the filter funnel, insert a new cartridge (see 'Preparing the filter cartridge for use') and restart the BRITA Memo as described above.

**Note:** The Memo system is only intended to be used with BRITA® filter cartridges.

### Removing the filter cartridge

- When it is time to replace the cartridge after 8 weeks use, simply lift the handle on top of the cartridge to remove. See figure 5.
- The cartridge may be disposed of in household waste or contact the BRITA® consumer service for advice on recycling schemes.
- Always ensure that you have spare BRITA Maxtra cartridges available.

# Care and Cleaning

- Do not use harsh detergents or abrasive cleaners.
- Do not place any part of this appliance in a dishwasher
- Wipe the base with a clean cloth or paper towel.
- Wash the filtering tank in warm, soapy water using a mild detergent.
- Wipe the inside of the filtered water tank with a damp cloth which has been soaked in soapy water.
- Do not immerse the base in water or any other liquid.
- If the unit is to be moved or stored for a prolonged period of time without being used, we recommend that you drain the internal tank of any water.
- Before using the water filter & chiller again take out the BRITA Maxtra water filter cartridge, clean the water tank and

repeat the steps as described on page 6 ("Preparing the BRITA Maxtra filter cartridge for use").

## Emptying the internal tank

- Switch off the appliance and unplug from the mains
- Remove the lid and the filtering tank and any water in the filtered water tank.
- Turn the appliance upside down to reveal a drain plug located in the centre of the base.
- Using a \$2 coin or a suitable screw driver, turn the plug anti clockwise until it is fully loosened. Please note that it cannot be completely removed.
- Drain the tank.
- Insert the plug after draining and using a \$2 coin or suitable screwdriver, turn it clockwise until it stops.
- Do not over tighten as this may damage the plug.

---

## Help Line

If you have any additional questions about using the BRITA® Water Filter & Chiller, please call the Sunbeam help line in Australia on 1800 025 059. In New Zealand, please call 0800 786 232.

**For BRITA® filter cartridge and Memo queries, contact BRITA® Consumer Care.**

Australia

1300 557 762

New Zealand

0800 427 482

## Consumer Hotline

Australia

1800 025 059

New Zealand

0800 786 232

[www.sunbeam.com.au](http://www.sunbeam.com.au)

For more information or advice on the BRITA water filter cartridge or the BRITA Memo see BRITA brochure or contact the BRITA consumer service (see contact details on the back page of the BRITA brochure).

 is a registered Trademark of Sunbeam Corporation Limited. ACN 000 006 771.

© Sunbeam Corporation Limited 2006.

*'Sunbeam', is a registered trademark of Sunbeam Corporation. Made in China. Due to minor changes in design or otherwise, the product may differ from the one shown in this leaflet. Backed by Sunbeam's 2 Year Replacement Guarantee and National Service Network.*

© Copyright. SUNBEAM CORPORATION LIMITED 2006.

(INCORPORATED IN N.S.W.) A.C.N. 000 006 771

Sunbeam Corporation is a division of GUD Holdings Ltd.

*For more information or advice on this or any other Sunbeam appliance, visit [www.sunbeam.com.au](http://www.sunbeam.com.au) or contact the Sunbeam Consumer Service Line.*

*Australia 1800 025 059*

*New Zealand 0800 786 232.*