

## KIT No. 312 DUAL LIFT LEVER

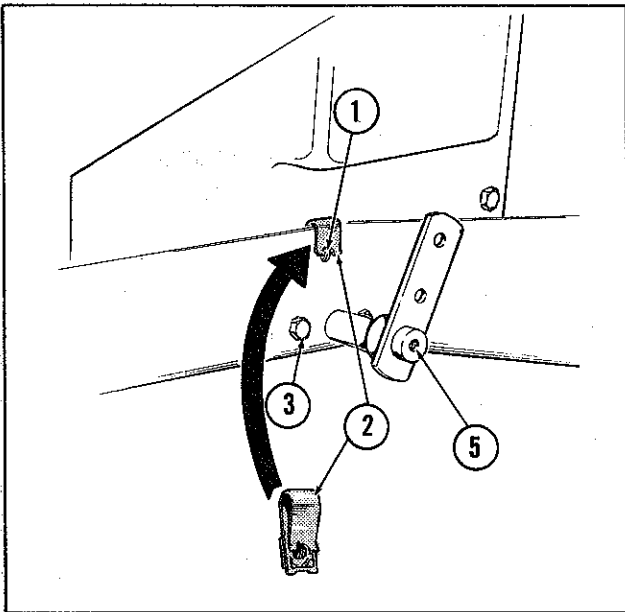


Figure 1

1. On the right hand side of the tractor frame, locate a mounting hole, No. 1-Fig. 1, above the lift lever shaft and at the upper edge of the tractor frame. Attach the nut retainer, No. 2-Fig. 1, at this point, with the nut on the inner surface of the frame as shown.

2. Remove the 2 hex capscrews from each side, No. 3-Fig. 1, of the lift lever shaft and mount the quadrant assembly, No. 4-Fig. 2, to the side of the tractor frame as shown in Figure 2, using the 2 hex capscrews previously removed. Insert a hex capscrew, 5/16-18 x 3/4" lg. SAE Grade 5, and 5/16 lock washer into the upper mounting hole of quadrant and tighten into the nut retainer installed during step 1.

NOTE: FOR 1967 MODEL TRACTORS & EARLIER

3. Place the spacer, "F" -page 2, within the hole in the end of the lift lever assembly, "E" -page 2, and position a washer, "G" -page 2, on each side of the spacer. Insert a hex capscrew 7/16-14 x 1 1/2" lg., "J" -page 2, with lock washer, through the washers and spacer and attach the lift lever assembly to the end of the lift lever shaft. Refer to No. 5-Figs. 1 & 2. Tighten the hex capscrew securely.

NOTE: FOR 1968 MODEL TRACTORS & LATER

4. Place the lift lever assembly on the lift lever shaft and secure with the 5/16-18 x 5/8" lg. capscrew, 5/16 lockwasher and 5/16 plain washer.

5. For use with "Front-Mounted" equipment, attach the front lift rod, "X" -page 2, to the mounting hole in lift lever assembly and secure with spring clip.

6. For use with "Center-Mounted" equipment, use the lift lever, "T" -page 2, for attaching equipment to lift lever assembly. Assemble the lift lever to the inside flat face of the lift lever assembly with a 3/8-16 x 7/8" lg. hex capscrew, 3/8" lockwasher, and 3/8-16 hex nut as shown on page 2.


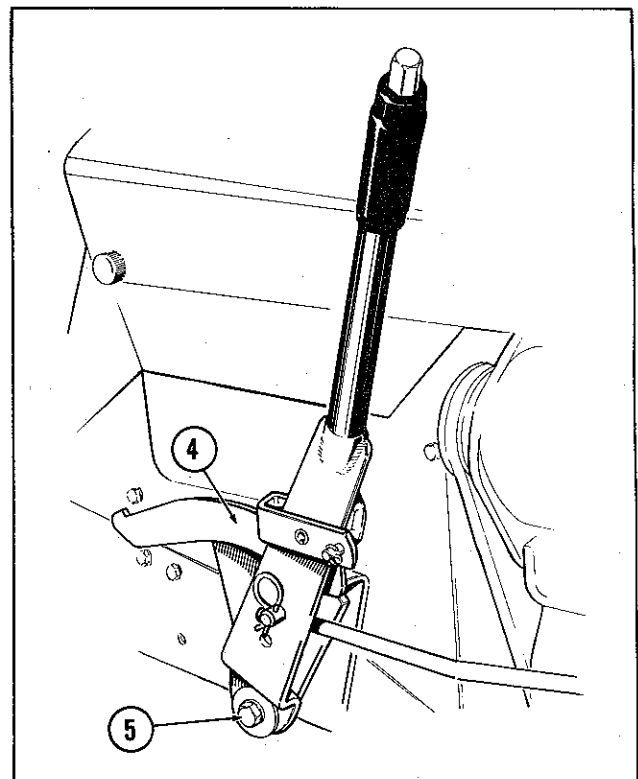


Figure 2

1259

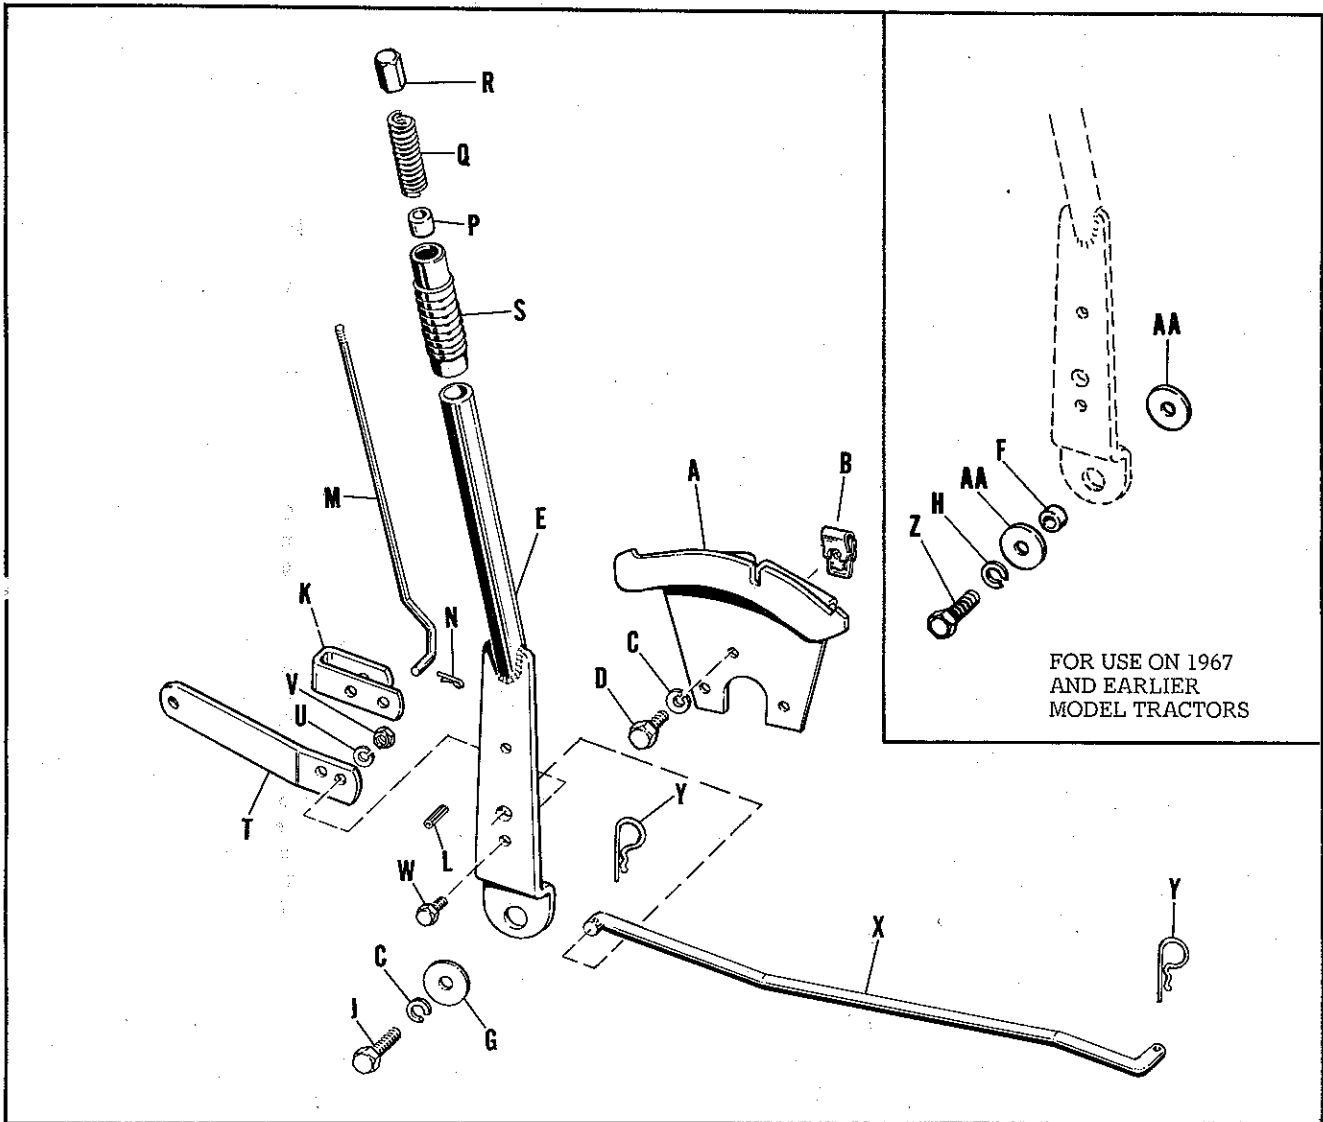

Ref. Letter	Part No.	Description
A	157163	Quadrant Assembly, R.H.
B	718030	Nut Retainer
C	720001	Lock Washer, 5/16"
D	715048	Capscrew, Hex., 5/16"-18 x 3/4" lg., SAE Grade 5
E	157160	Lift Lever Assembly, R.H.
F	157168	Spacer
G	719002	Washer, Plain, 5/16"
H	720006	Lock Washer, 7/16"
J	705012	Hex Capscrew, 5/16"-18 x 5/8" lg.
K	157166	Lift Lever Latch
L	723007	Roll Pin, 3/8" x 1"
M	157167	Latch Rod, R.H.
N	722001	Cotter Pin, 3/32" x 3/4" lg.
P	154226	Spacer
Q	152006	Spring
R	154227	Thumb Button
S	154306	Handle Grip
T	157170	Lift Lever
U	720002	Lock Washer, 3/8"
V	717003	Hex Nut, Full, 3/8"-16
W	705031	Hex Capscrew, 3/8"-16 x 7/8" lg.
X	107046	Front Lift Rod
Y	8161045	Spring Clip
Z	705039	Hex Capscrew, 7/16"-14 x 1 1/2" lg.
AA	157169	Washer, Plain, 7/16"