INSTALLATION INSTRUCTIONS

A DANGER

Disengage PTO before attempting engine rpm adjustments, and set parking brake. use extreme care to avoid contacting hot engine parts and ignition wiring.


KIT PARTS Qty. Part No.

Description

1	1702944	Decibel Decal - 100 Decibels
1	1703117	Decibel Decal = 105 Decibels

These Installation instructions provide the information necessary to correctly set engine R.P.M. for the Model **16CFC** Export Tractor, and provide the correct installation location and part number of the Decibel Decal.

- 1. The engine rpm is preset at 2,500 **+.00/-.25** rpm when shipped from the factory.
- 2. If equipped with a 42" mower deck, engine rpm setting should be 2,500 +.00/-.25 rpm, and the required Decibel Decal is **#1702944** - 100 Decibels.
- 3. If equipped with a 48" mower deck, engine rpm setting should be 3,200 +.00/-.25 rpm, and the required Decibel Decal is **#1** 703117 - 105 Decibels.
- 4. Location of Decibel Decal: On top of seat deck in front of seat. See Illustration at right.

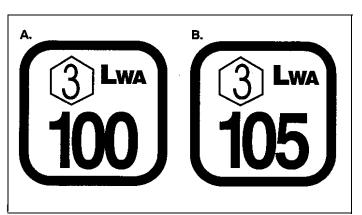

DECIBEL DECALS A. 1702944 • 100 Decibels B. 1703117 • 105 Decibels

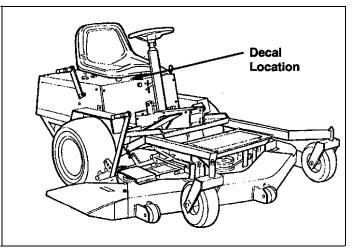


Figure 1. Decibel Decal Location