

BEER CHILLER™

BC-4600



FOR HOUSEHOLD USE ONLY
Read These Instructions Before Using
This Unit!
Save These Instructions!

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

Read all instructions before operating this appliance.

1. To protect against electrical shock, do not immerse cord, plug, or any part of the main base unit in water or other liquids.
2. Close supervision is necessary when this or any appliance is used by or near children.
3. Unplug from outlet when not in use, before removing parts and before cleaning.
4. DO NOT operate any appliance with a damaged cord or plug or if the appliance has been damaged in any manner. Return the appliance to the nearest repair shop for examination or repair or send back to company as stated in this booklet in the warranty.
5. The appliance manufacturer does not recommend the use of any accessory attachments. This may cause injuries.
6. Never use an abrasive sponge or cloth on the unit.
7. Do not let the cord hang over the edge of the table or counter top or touch hot surfaces.
8. DO NOT place on or near a hot gas or electric burner or in a heated oven.
9. Use caution when moving this appliance when it contains liquids.
10. DO NOT use this appliance for other than its intended use.
11. A unit that is plugged into an outlet should not be left unattended.
12. A short power supply cord is provided to reduce the risk resulting from becoming entangled or tripping over a long cord.
13. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electrical shock, this plug is indented to fit into a polarized outlet only one way.
14. Check the inside of the unit for presence of foreign objects prior to inserting the keg to ensure the keg is level and in position for tapping.

IMPORTANT PRECAUTIONS

Appliance Specifications:

110 Volts
50 Watts

- A. NEVER immerse the main base unit in water.
- B. NEVER use a scouring pad or abrasive cleaners on this unit.
- C. NEVER leave unattended while in use.
- D. Unplug unit from power outlet source when not in use and when cleaning.

IMPORTANT PRECAUTIONS (Continued)

- E. DO NOT put in dishwasher, microwave or oven.
- F. DO NOT operate this appliance with a damaged cord or plug or in the event the appliance ever malfunctions.
- G. Keep out of the reach of children.
- H. ALWAYS have the 5 Liter keg in the proper position when operating your BEER CHILLER™.
- I. Use extreme caution when inserting the keg into the dispenser well to avoid pinching fingers or catching on jewelry.
- K. This appliance is NOT A TOY.
- L. This appliance is not intended for use by young children or infirm persons without supervision.
- M. Young children should be supervised to ensure that they do not play with this appliance.

SAVE THESE INSTRUCTIONS!

INTRODUCTION AND FEATURES

Your BEER CHILLER™ is a truly portable beer chilling appliance. This beer cooler and dispenser is equipped with both AC and DC capabilities so it is versatile and can be used indoors or outdoors - in the home, boat, RV or camper to serve beer anywhere, anytime!

The sleek, chrome-laden design is visually attractive for your home or office and will take a limited amount of space on the counter. The unit is easy to use, and with a removable drip tray - easy to clean! The BEER CHILLER™ features a thermoelectric cooling system.

This highly versatile unit is the only dispenser of its kind that is compatible with both the standard 5 Liter mini gravity kegs such as those used by COORS and pressurized kegs such as those used by HEINEKEN™.

The BEER CHILLER™ is a must-have for beer lovers everywhere and is designed to be used anywhere such as:

- Home Bar
- RV's
- Boats
- Barbeques
- Fundraisers ...and more!

HOW TO USE YOUR BEER CHILLER™

It is recommended that after unpacking your BEER CHILLER™, you remove any packing debris and clean all parts. Wipe clean the inside of the unit with a non abrasive moist sponge or cloth. Dry with a non-abrasive dry towel. DO NOT submerge the main unit with motor base in water. The removable drip tray can be submerged in soapy water and rinsed off.

SELECTING AC OR DC POWER

The plug location for either AC or DC power is located at the bottom backside of the unit. Plug the power cord into the **Left** side if you are using **AC power** for home use. Plug the power cord into the **Right** side if using **DC power** for your boat or RV.

HOW TO USE YOUR BEER CHILLER™ (Continued)

INSTRUCTIONS


First, find a stable surface near an electrical outlet before starting. Make sure you have not blocked ventilation needed for proper running of the unit and that your cord is away from any water source. If needed, it is acceptable to use an extension cord.

FOR BEST RESULTS, MAKE SURE YOUR 5 LITER KEG IS ICE COLD FROM THE FRIDGE OR HAS BEEN CHILLING FOR 12 HOURS IN THE BEER CHILLER™ TO INSURE BEST TASTE.

USING PRESSURIZED™ 5 LITER KEG SUCH AS THOSE USED BY HEINEKEN tm.

Open the large top lid on your BEER CHILLER™. Set the Keg down inside, so that the spigot extrudes through the small designed opening in the front top of the BEER CHILLER™ and close the lid. The small window in the top of the unit opens to allow you to lift the tap vat tab up when you want to dispense beer. Plug the cord into your chosen power source and you are ready to enjoy. (See illustration A, below)


Using one hand, place your glass or mug up under the spigot. With your other hand pull the tab (extruding from the top opening) forward to pull and fill your glass. Release when you have a desired amount of beer. (See Illustration B, below) follow instructions on keg of manufacturer.

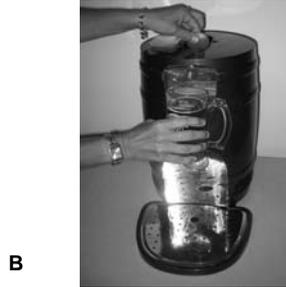

USING GRAVITY 5 LITER KEGS SUCH AS THOSE USED BY COORS™.

Open the large top lid on your BEER CHILLER™ and open the small clear window located on the front of the bottom chrome face. Set the Coors™ mini-keg down inside, so that the spigot at the front base of the keg is positioned to allow the vat tab to be accessed and pulled when you want to dispense beer. Plug the cord into your chosen power source and you are ready to enjoy. (See illustration C, below)

Using one hand, place your glass or mug under the spigot at the front base of the keg. With your other hand, pull the tab forward to pull and fill your glass. Release when you have a desired amount of beer. (See illustration D, below)

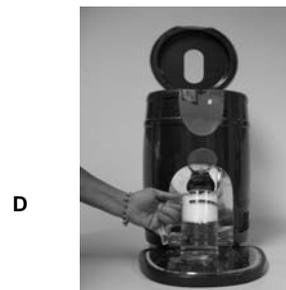

HOW TO USE YOUR BEER CHILLER™ (Continued)

IMPORTANT BEER RELATED NOTES

The thermoelectric cooling system will maintain the proper temperature 40°- 45° F (4.4°C - 7.2° C) required for your keg while plugged into your power source.

Keep in mind that beer is a perishable product.

PRESSURIZED KEG BEER WILL LAST ABOUT 30 DAYS AFTER IT IS OPENED

GRAVITY KEG BEER IS MEANT TO BE CONSUMED WITHIN A 24 HOUR PERIOD TO MAINTAIN ITS FRESHNESS AND CARBONATION

Though this unit can be used for camping, boating, and other places both in and away from home – we stress the importance of sensible use and consumption. **BOATING, DRIVING AND ALCOHOL DO NOT MIX.**

CLEANING

1. Unplug the unit from the electrical outlet. Never yank or twist cord to unplug the unit.
2. Remove the keg from the unit.
3. Wipe clean the inside and outside of the unit with a damp, non-abrasive cloth or sponge and dry with a soft, non-abrasive towel.
NOTE: DO NOT immerse main base unit in water, this holds all of the electrical components.
4. Carefully empty the removable drip tray in the sink. The drip tray can be washed in warm sudsy water and rinsed under the water faucet. Dry with a towel and reposition in place with the unit.

To prolong the life of your BEER CHILLER™, be sure to follow the cleaning instructions after each keg empties and clean the removable drip tray often to maintain attractive appearance.

COORS is a registered trademark of Coors Global Properties, Inc.

HEINEKEN and Draughtkeg are registered trademarks or trademarks of Heineken Brouwerijen B.V. and Heineken Supply Chain B.V., respectively.

RETURNS & WARRANTY

SHOULD YOUR UNIT NOT WORK OR IS DAMAGED WHEN YOU FIRST TAKE IT OUT OF THE BOX, PLEASE RETURN IT TO THE PLACE OF PURCHASE IMMEDIATELY.

Should you have any questions, please contact us via email or at the customer service number listed below between the hours of 8:00 AM and 5:00 PM, Monday through Friday, Central Standard Time.

Distributed by:

Nostalgia Products Group LLC
1471 Partnership Dr.
Green Bay, WI 54304-5685

Customer Service

Phone: (920) 347-9122
Web: www.nostalgielectrics.com

Customer Service Inquiry

To submit a Customer Service inquiry, go to www.nostalgielectrics.com and fill out the **Customer Service Inquiry** form and click the Submit button. A representative will contact you as soon as possible.

BEER CHILLER™

BC-4600
Limited Warranty

This appliance is designed and built to provide many years of satisfactory performance under normal household use. The distributor pledges to the original owner that should there be any defects in material or workmanship during the first 90 days of purchase, we will repair or replace the unit at our option. Our pledge does not apply to damages caused by shipping, mishandling or unit being dropped. A product deemed defective either from manufacturing or being mishandled is up to the distributor's discretion. In order to obtain service under this warranty, please contact Nostalgia Products Group, LLC at the telephone number listed above or by filling out the Customer Service Inquiry Form located at www.nostalgielectrics.com.

This warranty does not apply to re-manufactured merchandise.

Please read these instructions carefully. Failure to comply with these instructions, damages caused by improper replacement parts, abuse or misuse will void this pledge to you and is being made in place of all other expressed warranties.



Nostalgia Products Group LLC
1471 Partnership Dr.
Green Bay, WI 54304-5685

Visit Us Online at
www.nostalgielectrics.com

©2009 Nostalgia Products Group LLC