

#6-0935 & #6-1238 GRASS BAG KIT for SNAPPER 21" WALK BEHIND MOWERS

INSTALLATION INSTRUCTIONS:

This kit includes a grass catcher bag and an adapter for installing in place of the side discharge chute on 21" walk mowers. Install the kit as follows with engine off!

STEP 1: Remove the side chute by removing the retaining hardware. Save the chute for use later and the hardware for securing the adapter. **NOTE:** If wingnuts were used, replace these with Snapper #9-0951 flange locknuts for improved retention.

STEP 2: Guide the adapter in from the side of the mower deck until the stud located behind the right front wheel protrudes through the raised boss on front edge of adapter. Secure here with a flange locknut, but do not completely tighten at this time (Figure 2).

STEP 3: Rotate and push the rear edge of the adapter in from the side until the slot on front inside edge of adapter slides around the stud on top of deck.

STEP 4: Push the lower rear edge of the adapter in over the stud protruding from the rear side of the mower deck and secure here with a flange locknut. Install locknut on the stud on top of deck then securely tighten the retaining locknuts at all three points.

NOTE! Make sure the gusset on inside rear edge of the adapter has engaged the interlock spring and has pushed the spring inward. If this spring remains outside the gusset, the interlock will prevent engine starting.

STEP 5: The grass catcher can now be installed. Slide the connector over the adapter and hook upper handles over the middle handle of the mower as shown in figure 3. Some operational hints are listed below.

USING CATCHER

When the catcher becomes full, stop engine and lift the support hooks up over the handle then lift the connector off and continue lifting while moving the catcher forward until the bag clears the mower. To empty the bag, raise the connector end up and release the handle of the door flap. Shake the catcher back and forth to dump the clippings. Use the following procedure to empty clippings in trash bag. After removing catcher from mower, place connector end on ground, open door flap, slip trash bag over the catcher, turn catcher over so that large opening is down inside bag, lift catcher by connector and door handles and shake until clippings are dumped in the trash bag.

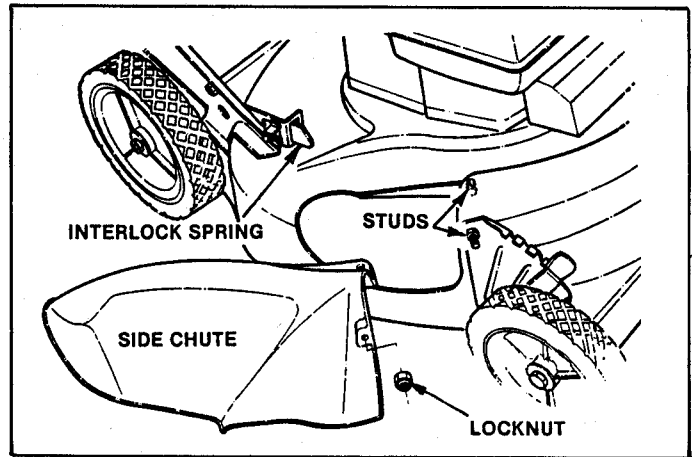


FIGURE 1 - REMOVING SIDE CHUTE

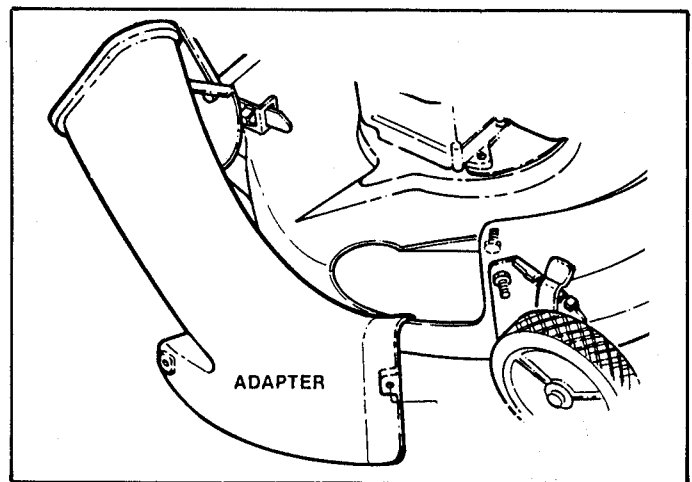


FIGURE 2 - INSTALLING ADAPTER

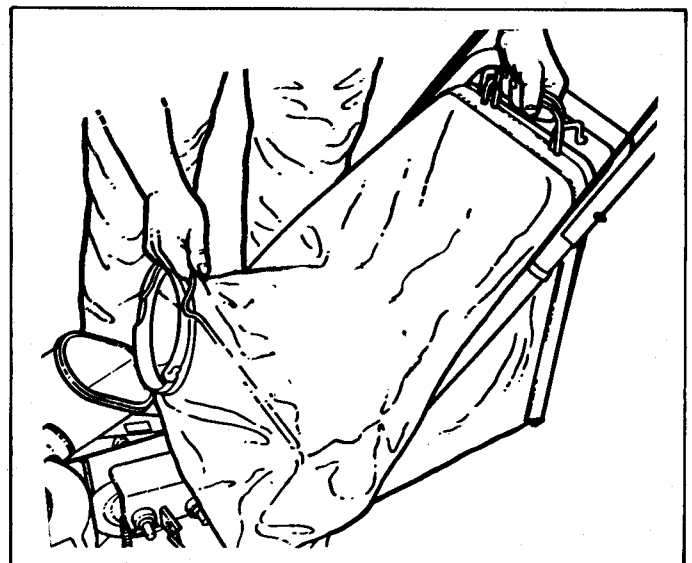


FIGURE 3 - INSTALLING CATCHER

SNAPPER®McDonough, GA., 30253 U.S.A.