


LAWN ROLLER
WITH SEAT & SCRAPER

MFR'S. NO. 990147

1959

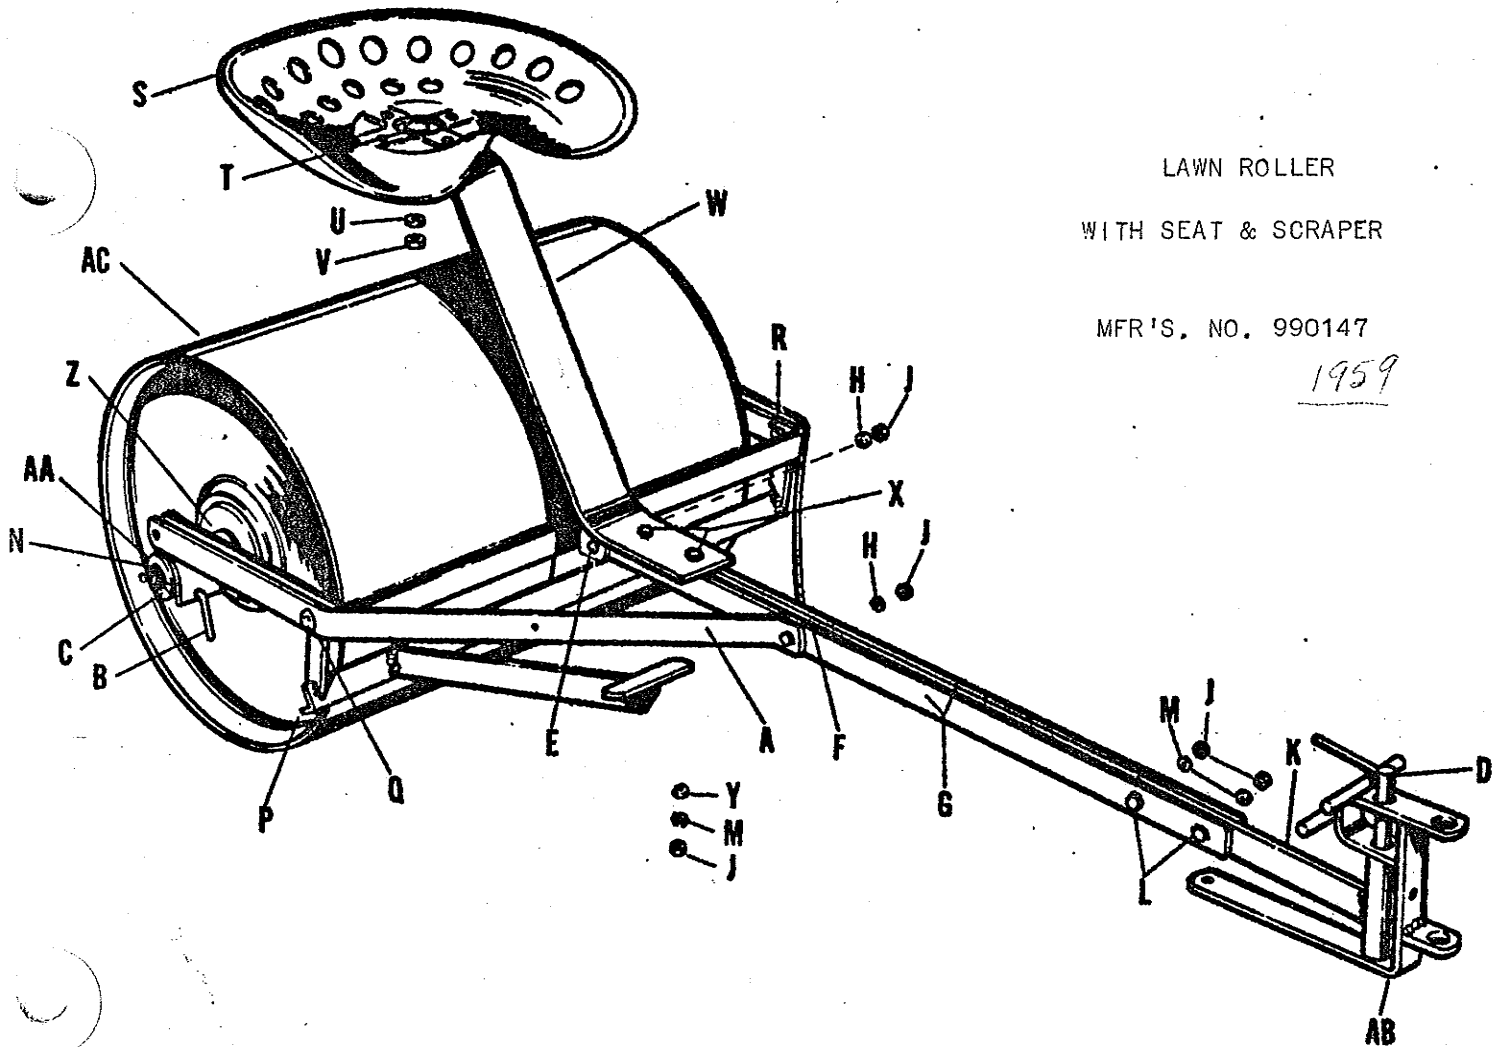

THE LAWN ROLLER WITH HITCH & SCRAPER IS ASSEMBLED BY FIRST PUTTING TOGETHER THE HITCH PARTS FOUND IN THE CARTON. THEN ASSEMBLE SEAT & SUPPORT AND ATTACH TO FRAME ASSEMBLY WITH BOLTS (X) AS SHOWN ABOVE, HITCH SHOULD BE ATTACHED TO ROLLER WITH PIN (B) AND SECURED WITH COTTER PIN (N) AS SHOWN.

PARTS LIST FOR LAWN ROLLER WITH SEAT AND SCRAPER

REF. No.	PART No.	DESCRIPTION	REF. No.	PART No.	DESCRIPTION
A	102035	FRAME ASSEMBLY	Q	102004	PIN PIVOT
B	C-A204	PIN <i>8011204</i>	R	722006	PIN COTTER
C	61-A45A	CLIP SPRING <i>8161045</i>	S	121029	SEAT PAN
D	100035	HITCH PIN ASSEMBLY	T	702010	BOLT CARRIAGE 1/2"-13 N.C. x 1" LG. SHORT NECK
E	705006	SCREW HEX HD CAP 3/8"-16 N.C. x 2" LG.	U	720004	WASHER LOCK 1/2" REG.
F	719004	WASHER PLAIN 1/2"	V	717006	NUT HEX FULL 1/2"-13 N.C.
G	102053	TONGUE	W	102059	SUPPORT SEAT
H	720002	WASHER LOCK 3/8" REG.	X	705016	SCREW HEX HD CAP 3/8"-16 N.C. x 2-1/4" LG.
J	717003	NUT HEX FULL 3/8"-16 N.C.	Y	719001	WASHER PLAIN 3/8" REG.
K	102054	PIVOT ASSEMBLY	Z	719005	WASHER PLAIN
L	705009	SCREW HEX HD CAP 3/8" 16 N.C. x 1-1/2" LG.	AA	102008	ROLLER BEARING ASSEMBLY
	720002	WASHER LOCK 3/8" REG.	AB	100033	FRAME EXT. ASSEMBLY
	722004	PIN COTTER	AC	102001	ROLLER LAWN
	102057	BRAKE ASSEMBLY			

