



Quick Setup Guide

Self-Propelled Mower

Models
SPXV2270HW
NSPVX2270HW

Questions?

Do not return to the store. We can help.
Call Customer Service Toll-Free 1-800-317-7833
Or visit our website www.snapper.com



Overview



Items that you will need

Utility Knife
Unleaded Fuel (minimum 87 octane)

Items Included



1 Unpack the mower

- Cut all four corners of the box from top to bottom.
- Remove all packing materials from the mower.
- Locate and identify the items included with the mower.



Figure 1

2 Raise the handle assembly

- Loosen, but do not remove, the knobs (A, Figure 1) on both sides of the upper handle.
- Unfold the upper handle so that it is aligned with the lower handle, and tighten the upper knobs.
- Remove the handle knobs, washers and carriage bolts from the lower handle (B).
- Raise the lower handle, aligning it with one of the three sets of holes in the handle bracket. (Most users will prefer the middle position). Replace the hardware, tightening securely.



Figure 2

3 Set Up the starter rope handle

- Squeeze the blade control (A, Figure 2) against the drive control (B). NOTE: The blade control and drive control can be operated from either side.
- Pull the starter rope handle (C) out of the engine to the rope guide (D). Hook the starter rope into the rope guide (it might be a tight fit).



Figure 3

4 Add oil and fuel

- Move the mower outside to a flat, level surface.
- Remove the oil fill cap (A, Figure 3). Add the entire contents of the supplied oil container to the engine. Replace the oil fill cap.

IMPORTANT Mower is shipped without oil in engine.
Failure to add oil before starting engine will result in engine damage.

- Remove the fuel fill cap (B). Following the three-step instructions on the FreshStart® card, snap the fuel preserver cartridge into the bottom of the fuel fill cap.
- Add clean, fresh, UNLEADED fuel with a minimum of 87 octane, leaving one inch of space from the top of the tank for fuel expansion. NOTE: Fuel blends containing more than 10% ethanol are not recommended.

IMPORTANT Fuel tank holds less than 1/2 gallon.
IMPORTANT DO NOT mix oil with fuel.
IMPORTANT DO NOT use E85 fuel.

- Replace the fuel fill cap, and wipe up any spills.

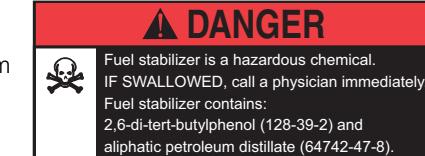


Figure 4

5 Final preparation

- Move the cutting height adjust levers (A, Figure 4) to the desired cutting height.
- Set the mower to mulch, bag, or discharge. (See 3-in-1 instructions below.)



Figure 5

6 Read the manuals

- Carefully read all the manuals supplied with the mower. They contain important safety, operating, and maintenance information.



Figure 6

3-in-1: Convert from mulching to bagging to side-discharge:

1 For mulching:

- Leave the mulching cover and the installed mulching plug in place (Figure 5).



Figure 5

- Holding the rear door open, attach the grass bag to the rear of the mower (Figure 7).



Figure 7

2 To convert to bagging:

- Lift the rear door and remove the installed mulching plug (Figure 6).



Figure 6

- Make sure the hooks on both sides of the bag frame hook onto the rear door rod (Figure 8).



Figure 8

- Release the rear door (it will rest on top of the grass bag).



Figure 9

3 To convert to side discharge:

- Make sure the mulching plug is installed in the rear of the mower, and the grass bag is removed.
- Lift the mulching cover, and install the side discharge deflector onto the mower deck (Figure 9).
- Make sure the deck tabs stick up through the locking slots (Figure 10).
- Release the mulching cover (it will rest on top of the discharge deflector).



Figure 10



GUÍA DE INSTALACIÓN RÁPIDA

Cortacésped tipo Walk Behind autopropulsado

Modelos
SPXV2270HW
NSPVX2270HW

¿Alguna pregunta?

No vuelva a la tienda. Nosotros podemos ayudarle.
Llame al número gratuito de atención al cliente: 1-800-317-7833
O visite nuestra página Web www.snapper.com



Información general



Elementos que necesitará

Cuchilla
Combustible sin plomo (mínimo de 87 octanos)

Componentes incluidos



1 Desembale el cortacésped

- Corte las cuatro esquinas de la caja de arriba a abajo.
- Quite todo el material de embalaje del cortacésped.
- Localice e identifique todos los componentes incluidos con el cortacésped.



Figura 1

2 Levante el conjunto de la manilla

- Afloje, pero no quite, los nudos (A, Figura 1) de ambos lados de la manilla superior.
- Desenvuelva la manilla superior de manera que quede alineada con la manilla inferior y apriete las perillas superiores.
- Quite la perilla del manilla, las arandelas y los pernos de transporte del manilla inferior (B).
- Levante el manilla inferior, alineándolo con uno de los tres juegos de orificios en la abrazadera. (La mayoría de los usuarios prefieren la posición intermedia). Vuelva a colocar los aditamentos que quitó y apártelos de un modo seguro.



Figura 2

3 Instalación de la manilla del motor de arranque

- Apriete el control de la cuchilla (A, Figura 2) contra el control de transmisión (B). NOTA: El control de la cuchilla y el control de transmisión pueden manejar desde cualquier lado.
- Tire de la manilla del motor de arranque (C) hacia fuera del motor hasta la guía para la cuerda (D). Enganche la cuerda del motor de arranque en la guía para la cuerda (debe quedar tensa).



Figura 3

3 en 1: Puede pasar del triturado a la aspiración y a la descarga lateral:

1 Para la trituración:

- Deje la tapa de la trituradora y el tapón de cubrición colocados (Figura 5).



Figura 5

2 Para pasar a aspirar:

- Levante la puerta trasera y quite el tapón de cubrición instalado (Figura 6).



Figura 6

- Manteniendo la puerta trasera abierta, conecte la bolsa para hierba a la parte trasera del cortacésped (Figura 7).



Figura 7

- Asegúrese de que los ganchos de ambos lados de la estructura de la bolsa se enganchen en la varilla de la puerta trasera (Figura 8).
- Libere la puerta trasera (descansará sobre la parte superior de la bolsa para la hierba).



Figura 8

3 Para pasar a la descarga lateral:

- Asegúrese de que el tapón de cubrición esté instalado en la parte posterior del cortacésped y que la bolsa para la hierba esté quitada.
- Levante la cubierta de la cubridora de suelos e instale el deflector de descarga lateral en la cubierta del cortacésped (Figura 9).
- Asegúrese de que las fichas de la cubierta se adhieran por las ranuras de bloqueo (Figura 10).
- Libere la tapa de la trituradora (descansará sobre la parte superior del deflector de descarga).



Figura 9



Figura 10