

\$1.00

YARD-MAN

OUTDOOR POWER EQUIPMENT
for all seasons



Spring



Summer



Fall



Winter

Owner's Manual


- ASSEMBLY
- OPERATION
- MAINTENANCE
- PARTS LIST

IMPORTANT:

Read Safety Rules and
Instructions Carefully

Thank you for purchasing
an American-built product.

VARIABLE SPEED RIDING MOWERS

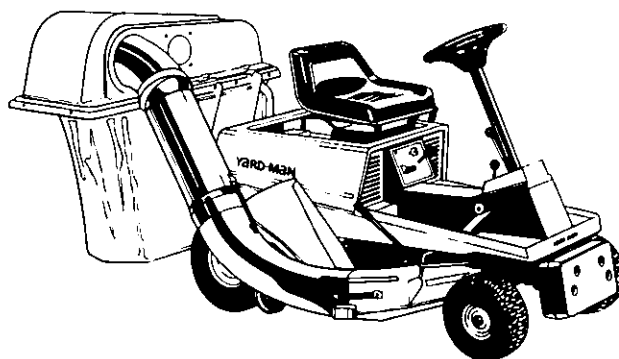

(Model 13518 Shown With
Optional Grass Collector)

Model Number

13504-8

13518-8

INDEX

Slope Gauge	3
Contents of Hardware Pack	4
Rules for Safe Operation Practices	5
Assembly Instructions	6
Controls	12
Operation	13
Adjustments	15
Lubrication	18
Maintenance	18
Off-Season Storage	22
Electrical System	22
Illustrated Parts for Lawn Tractor	23-31
Illustrated Parts for Transaxle	32, 33
Trouble Shooting Charts	34, 35
Parts Information	Back Cover

Dear Customer,

So often throughout the year we are all in a rush to meet our daily obligations.

However, we at YARD-MAN COMPANY are taking a quick moment out to say . . .

"Thank you for your business."

Sincerely,

YARD-MAN COMPANY



INSTRUCTIONS GIVEN WITH THIS SYMBOL ARE FOR PERSONAL SAFETY. BE SURE TO FOLLOW THEM.

LIMITED WARRANTY

For two years from the date of original retail purchase, YARD-MAN COMPANY will either repair or replace, at its option, free of charge, F.O.B. factory or authorized service firm, any part or parts found to be defective in material or workmanship. Transportation charges for the movement of any power equipment unit or attachment are the responsibility of the purchaser. Transportation charges for any parts submitted for replacement under this warranty must be paid by the purchaser unless such return is requested by YARD-MAN COMPANY.

This warranty will not apply to any part which has become inoperative due to misuse, excessive use, accident, neglect, improper maintenance, alterations, or unless the unit has been operated and maintained in accordance with the instructions furnished. This warranty does not apply to the engine, Peerless components, the motor, battery, battery charger or component parts thereof. Please refer to the applicable manufacturer's warranty on these items.

Warranty on units used commercially is limited to sixty (60) days.

Warranty service is available through your local authorized service dealer or distributor. If you do not know the dealer or distributor in your area, please write to the Customer Service Department of YARD-MAN.

The return of a complete unit will not be accepted by the factory unless prior written permission has been extended by YARD-MAN.

This warranty gives you specific legal rights. You may also have other rights which vary from state to state.

WARNING: This unit is equipped with an internal combustion engine and should not be used on or near any unimproved forest-covered, brush-covered or grass-covered land unless the engine's exhaust system is equipped with a spark arrester meeting applicable local or state laws (if any). If a spark arrester is used, it should be maintained in effective working order by the operator.


In the State of California the above is required by law (Section 4442 of the California Public Resources Code). Other states may have similar laws. Federal laws apply on federal lands. A spark arrester for the muffler is available through your nearest engine authorized service center.

SLOPE GAUGE

(Keep this sheet in a safe place for future reference.)

Cut Along This Line

USE THIS SHEET AS A GUIDE TO DETERMINE SLOPES WHERE YOU MAY NOT OPERATE SAFELY.

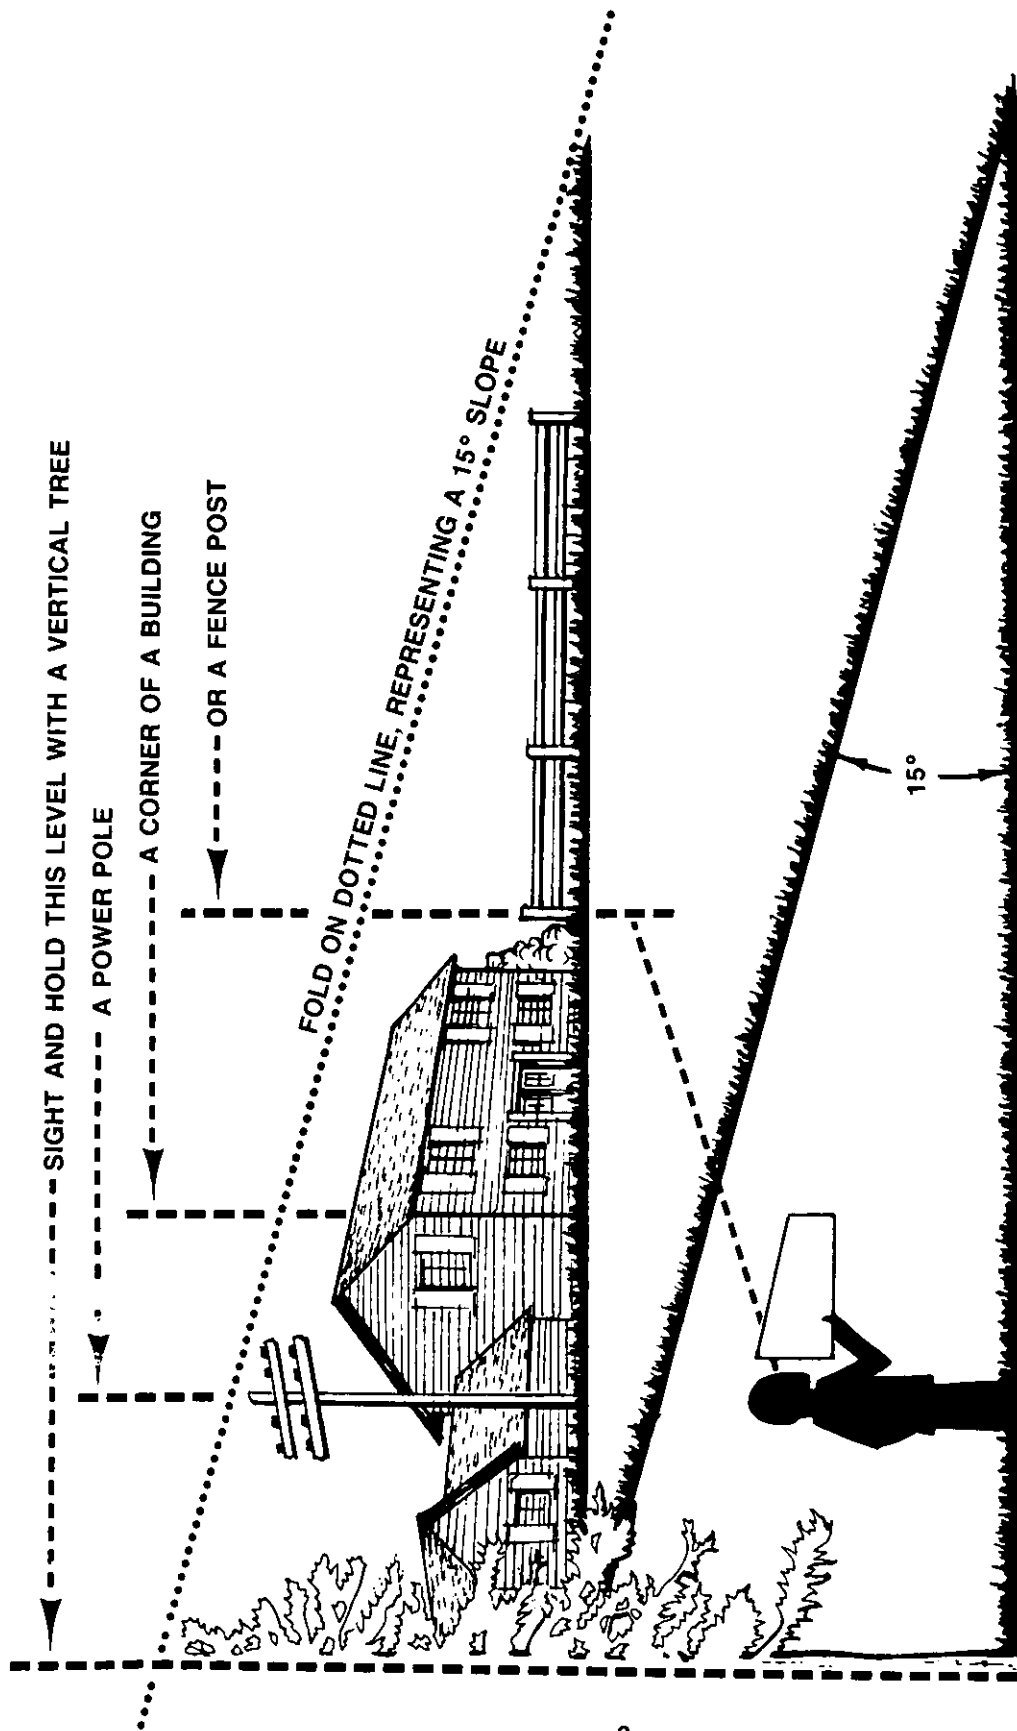

Do not mow on inclines with a slope in excess of 15 degrees (a rise of approximately 2½ feet every 10 feet). A riding mower could overturn and cause serious injury. If operating a walk-behind mower on such a slope, it is extremely difficult to maintain your footing and you could slip, resulting in serious injury.

Operate RIDING mowers up and down slopes, never across the face of slopes.


Operate WALK-BEHIND mowers across the face of slopes, never up and down slopes.

CONTENTS OF HARDWARE PACK


Remove this sheet from your owner's manual and separate the hardware according to the illustration for identification purposes. Parts are illustrated approximately half size. Refer to the separate deck manual for any assembly instructions concerning the deck. After assembly, keep the Slope Gauge which is on the reverse side of this sheet for future use.

(Hardware pack may contain extra items which are not used on your unit.)


A ATTACHING THE STEERING MECHANISM

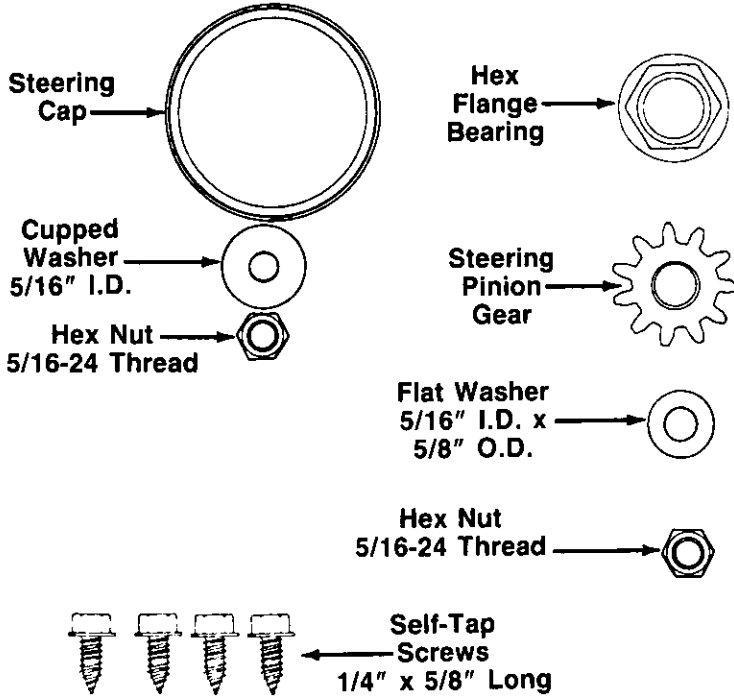

Model 13504 Only:

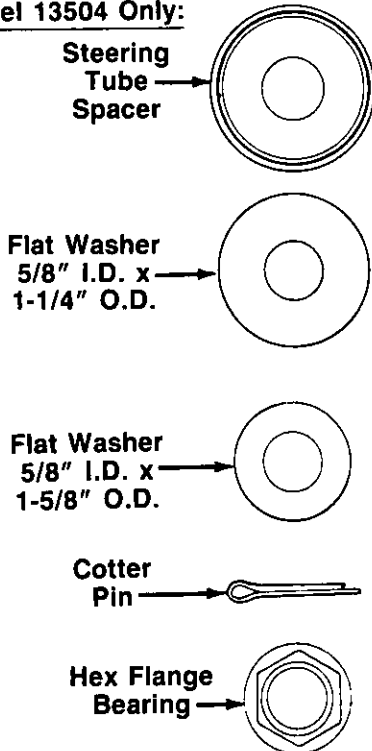


Model 13518 Only:

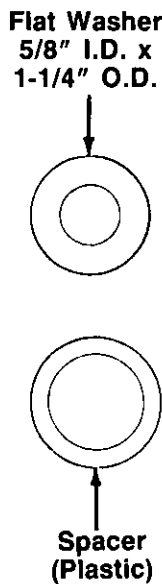


B ATTACHING THE CHUTE DEFLECTOR

Model 13504 Only:

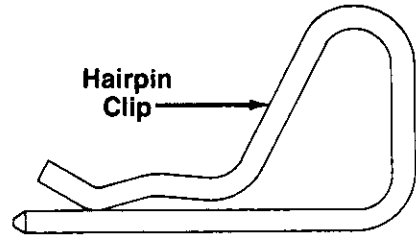


C ATTACHING THE SEAT

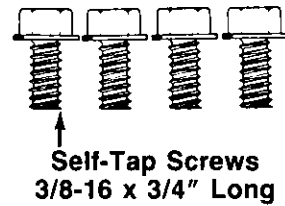


D INSTALLING THE BATTERY

Cable Tie (Black Plastic Cover Is Not Shown)

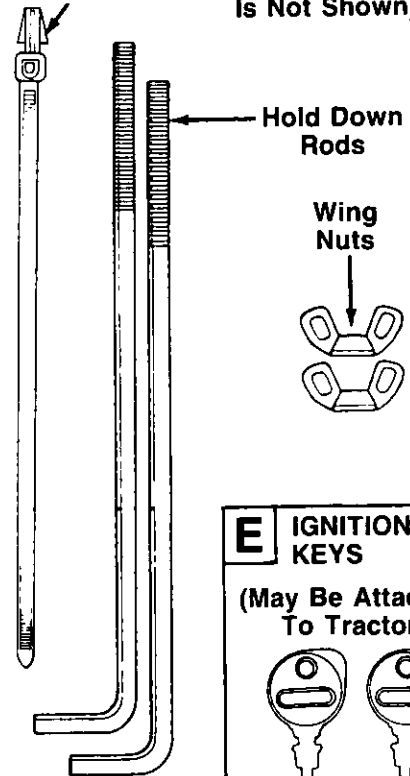

E IGNITION KEYS


(May Be Attached To Tractor)

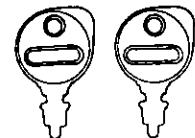

IMPORTANT

RULES FOR SAFE OPERATION



THIS SYMBOL POINTS OUT IMPORTANT SAFETY INSTRUCTIONS WHICH, IF NOT FOLLOWED, COULD ENDANGER THE PERSONAL SAFETY AND/OR PROPERTY OF YOURSELF AND OTHERS. READ AND FOLLOW ALL INSTRUCTIONS IN THIS MANUAL BEFORE ATTEMPTING TO OPERATE YOUR UNIT. FAILURE TO COMPLY WITH THESE INSTRUCTIONS MAY RESULT IN PERSONAL INJURY. WHEN YOU SEE THIS SYMBOL—  **HEED ITS WARNING.**



Your unit was built to be operated according to the rules for safe operation in this manual. As with any type of power equipment, carelessness or error on the part of the operator can result in serious injury. If you violate any of these rules, you may cause serious injury to yourself or others.

1. READ THIS OWNER'S MANUAL carefully in its entirety before attempting to assemble or operate this unit. Keep this manual in a safe place for future and regular reference and for ordering replacement parts.
2. This unit is a precision piece of power equipment, not a plaything. Therefore exercise extreme caution at all times.
3. Know the controls and how to stop the machine quickly.
4. Do not allow children to operate vehicle. Do not allow adults to operate it without proper instruction. Only persons well acquainted with these rules of safe operation should be allowed to use your mower.
5. Wear sturdy, rough-soled work shoes and close-fitting slacks and shirts to avoid entanglement in the moving parts. Never operate a unit in bare feet, sandals, or sneakers.
6. To prevent injury, do not carry passengers or give rides. Keep children, pets and bystanders out of the area while mowing. Only the operator should ride on the unit and only ride in the seat.
7. Check overhead clearance carefully before driving under power lines, guy wires, bridges or low hanging tree branches, before entering or leaving buildings, or in any other situation where the operator may be struck or pulled from the unit, which could result in serious injury.
8. To maintain control of the unit and reduce the possibility of upset or collision, operate the tractor smoothly. Avoid erratic operation and excessive speed.
9. Keep the area of operation clear of all persons, particularly small children and pets. Stop engine when they are in the vicinity of your mower. Although the area of operation should be completely cleared of foreign objects, a small object may have been overlooked and could be accidentally thrown by the mower in any direction and cause injury to you or a bystander.
10. Stop the blade(s) when crossing gravel drives, walks or roads.
11. Disengage all attachment clutches and shift into neutral before attempting to start engine.
12. Disengage power to attachment(s) and stop engine before leaving operating position.
13. Do not put hands or feet near or under rotating parts. Keep clear of the discharge opening at all times as the rotating blade(s) can cause injury.
14. Disengage power to attachment(s) and stop engine before making any repairs or adjustments. Disconnect the spark plug wire and keep the wire away from the plug to prevent accidental starting.
15. Before attempting to unclog the mower or discharge chute, stop the engine. The mower blade(s) may continue to rotate for a few seconds after the engine is shut off. Therefore, be sure the blade(s) have stopped completely. Disconnect the spark plug wire and keep the wire away from the plug to prevent accidental starting.
16. Disengage power to attachment(s) when transporting or not in use.
17. Take all possible precautions when leaving vehicle unattended such as disengaging power take-off, lowering attachments, shifting into neutral, setting parking brake, stopping engine and removing key.
18. For your safety, use the slope gauge included as part of this manual to measure slopes before operating this unit on a sloped or hilly area. If the slope is greater than 15° as shown on the slope gauge, do not operate this unit on that area or serious injury could result.
19. Do not stop or start suddenly when going uphill or downhill. Mow up and down face of steep slopes; never across the face. Use extreme caution if it is necessary to drive the tractor up an incline or back the tractor down an incline because the front of the tractor could lift and rapidly flip over backward which could cause serious injury.
20. Reduce speed on slopes and in sharp turns to prevent tipping or loss of control. Always keep the tractor in gear when going down steep hills to take advantage of engine braking action.
21. Stay alert for holes in terrain and other hidden hazards which may cause the unit to tip over.
22. Use care when pulling loads or using heavy equipment.
 - A. Use only approved drawbar hitch points.
 - B. Limit loads to those you can safely control.
 - C. Do not turn sharply. Use care when backing.
 - D. Use counterweight(s) or wheel weights when suggested in owner's manual.
23. Watch out for traffic when crossing or near roadways.
24. When using any attachments, never direct discharge of material toward bystanders nor allow anyone near vehicle while in operation.
25. Handle gasoline with care. It is highly flammable.
 - A. Use approved gasoline container.
 - B. Never remove cap or add gasoline to a running or hot engine or fill fuel tank indoors. Wipe up spilled gasoline.
 - C. Open doors if engine is run in garage. Exhaust fumes are dangerous. Do not run engine indoors.

Rules for Safe Operation (continued)

26. Keep the vehicle and attachments in good operating condition, and keep safety devices in place. Use guards as instructed in operator's manual.
27. Keep all nuts, bolts, and screws tight to be sure the equipment is in safe working condition.
28. Never store the machine with fuel in the fuel tank inside a building where ignition sources are present, such as hot water and space heaters, clothes dryers, and the like. Allow the engine to cool before storing in any enclosure.
29. To reduce fire hazard, keep engine free of grass, leaves or excessive grease.
30. The vehicle and attachments should be stopped and inspected for damage after striking a foreign object. The damage should be repaired before restarting and operating the equipment.
31. Do not change the engine governor settings or overspeed the engine.
32. When using the vehicle with mower, proceed as follows:
 - (1) Mow only in daylight or in good artificial light.
 - (2) Never make a cutting height adjustment while engine is running if operator must dismount to do so.
 - (3) Shut the engine off and wait until the blade comes to a complete stop before removing the grass catcher.
 - (4) Check blade mounting bolts for proper tightness at frequent intervals.
33. Check grass catcher bags frequently for wear or deterioration. For safety protection, replace only with new bag meeting original equipment specifications.
34. Look behind to make sure the area is clear before placing the transmission in reverse and continue looking behind while backing up. Disengage blades before shifting into reverse and backing up.
35. This unit should not be driven up a ramp onto a trailer or truck under power, because the unit could tip over, causing serious personal injury. The unit must be pushed manually to load properly.

IMPORTANT: This unit is shipped **WITHOUT GASOLINE** or **OIL**; however, a small amount of oil may be present from the factory. Do not overfill. After assembly, service engine with gasoline and oil as instructed in the separate engine manual packed with your unit.

NOTE: Reference to right or left hand side of the unit is observed from the driver's seat, facing forward. Refer to the separate deck manual for all information concerning the deck.

ASSEMBLY

UNPACKING

1. Remove the riding mower from the carton as follows. Open the top flaps. Remove all loose parts and carton inserts. Cut the front corners of the carton. Make certain brake is released, and push the unit out of the carton.
2. Remove page four from this manual and separate the contents of the hardware pack according to the illustration for identification.

← **Loose Parts in Carton: (See Figure 1)**

- A (1) Seat
- B (1) 12 Volt Battery
- C (1) Steering Wheel
- D (1) Steering Gear Cover
- E (1) Steering Tube—Chrome (Model 13504)
- F (1) Steering Shaft (Model 13504)
- G (1) Steering Shaft Assembly (Model 13518)—Not Shown

ATTACHING THE STEERING MECHANISM (Hardware A)

NOTE

Steps 1 through 5 are for Model 13504 only. For Model 13518, proceed with step 6.

← **Model 13504 Only:**

1. Insert the **cotter pin** into the hole on **steering shaft (F)**. Secure in place by bending the ends of the cotter pin in opposite directions. See figure 2.

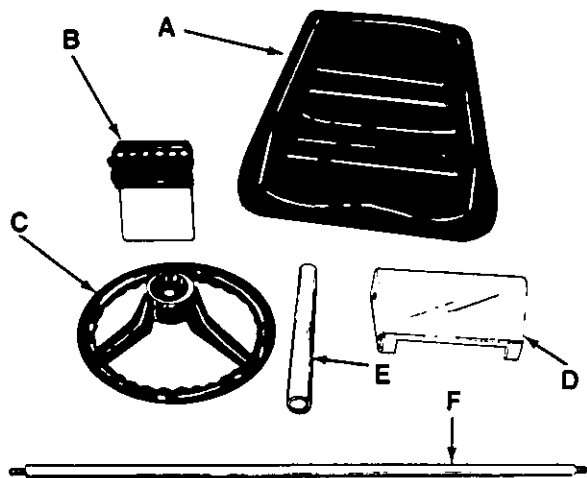


FIGURE 1.

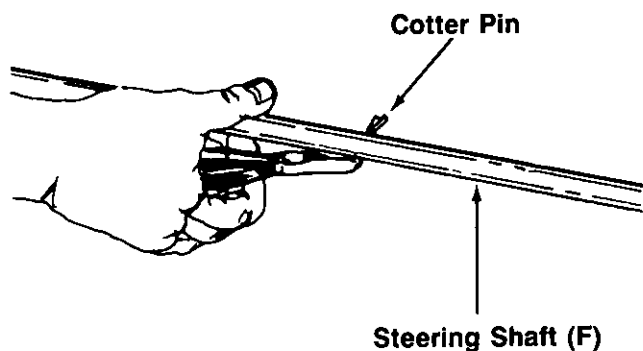


FIGURE 2.—Model 13504 Only

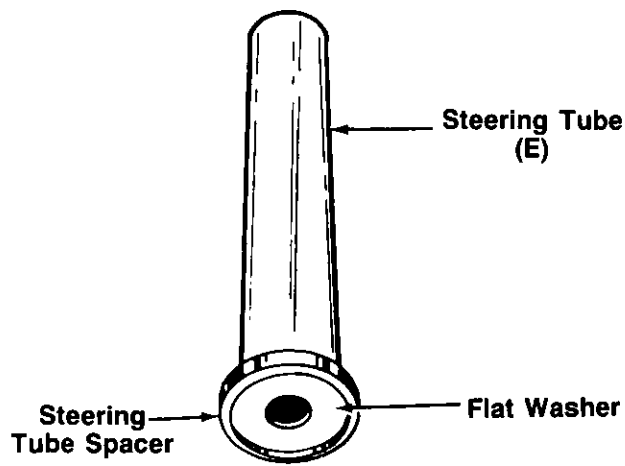


FIGURE 3.—Model 13504 Only

2. Press the large flat washer (1-5/8" diameter) into the open side of the black plastic steering tube spacer. See figure 3.
3. Press the steering tube spacer into one end of the chrome-plated steering tube (E). See figure 3. Make certain spacer is seated securely into tube.

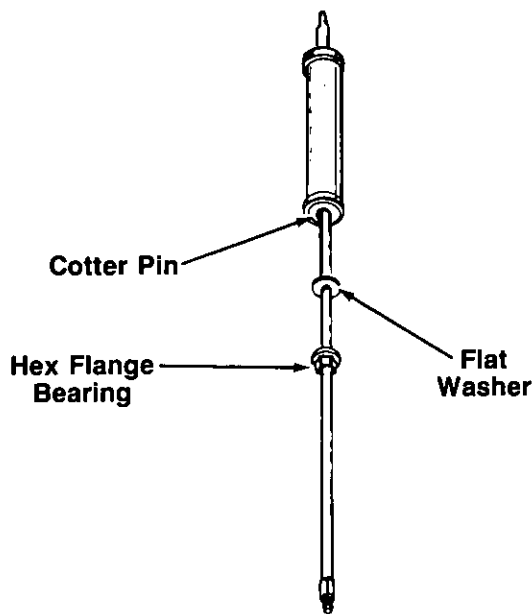


FIGURE 4.—Model 13504 Only

4. Hold the steering shaft upright, so that the cotter pin is closer to the top of the shaft. Slide the steering tube spacer and steering tube down over the shaft (above the cotter pin). See figure 4.
5. Slip flat washer (1 1/4" diameter) on the steering shaft immediately below the cotter pin. Place one plastic hex flange bearing flat side up, below the washer. See figure 4.

6. **Model 13504:** Insert the steering shaft with assembled parts through the steering housing cover. The lower end of the shaft should extend through the hole in the front end of the steering gear support bracket (Ref. No. 12 on page 28). See figure 5.

Model 13518: Insert the steering shaft through the steering housing cover. Place flat washer and plastic spacer over end of steering shaft before inserting the shaft through the hole in the front end of the steering gear support bracket (Ref. No. 12 on page 28).

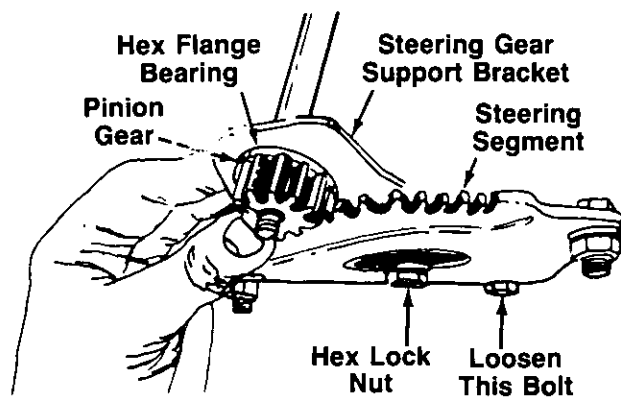


FIGURE 5.

7. Loosen the hex nut located at the rear of the steering gear segment (Ref. No. 27 on page 28) so that the steering gear segment can be pushed about 1/4" toward the rear of the rider, to permit easier assembly of the pinion gear. Two 9/16" wrenches are required.
8. Place hex flange bearing, flat side down, over the end of the steering shaft, and seat it into the steering gear support bracket. See figure 5.
9. Raise steering shaft slightly so pinion gear can be placed in position (teeth of gear must mesh with teeth of steering gear segment). Insert steering shaft through pinion gear (splined collar on steering shaft is inside of pinion gear). Then place flat washer (5/8" diameter) on shaft and secure with hex nut (5/16" I.D.). Do not tighten at this time.

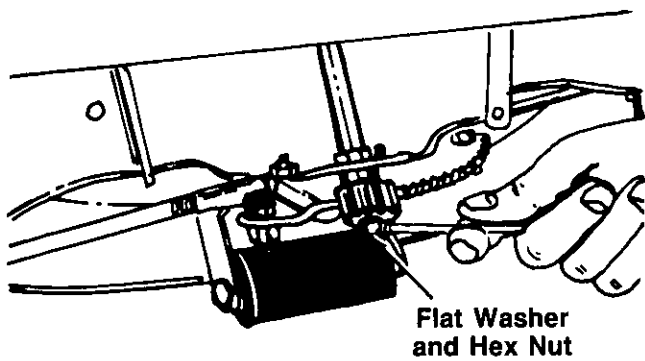


FIGURE 6.

- ← 10. Push the **steering gear segment** (loosened in step 7) forward toward its original position, until it **engages solidly into the teeth of the pinion gear**. Retighten the nut at the rear of the steering gear segment. Two 9/16" wrenches are required.



WARNING

Steering gear must be adjusted as instructed in step 10, and hex lock nut must be adjusted as instructed in step 12. **Improper adjustment will cause excessive wear on the steering gear segment.**

11. Now tighten the hex nut which secures the pinion gear. See figure 6.

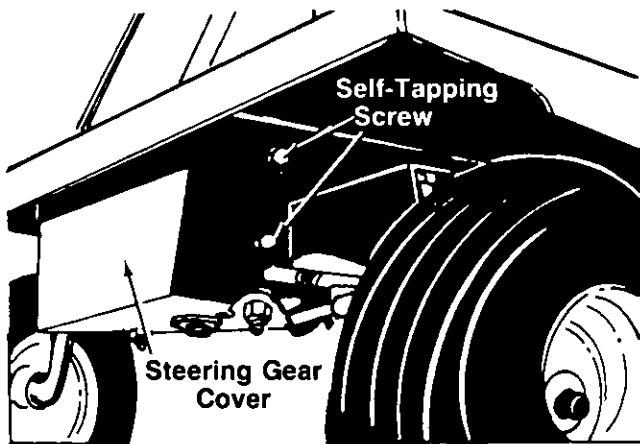


FIGURE 7.

12. Make certain the hex lock nut which secures the steering segment to the steering gear support bracket (shown in figure 5) is tightened so there is no play between the two parts. Do not over-tighten as the steering segment must be free to turn.

13. Lubricate the teeth of the pinion gear and steering gear segment with an automotive chassis grease.

14. Install the **steering gear cover (D)** as shown in figure 7, to cover the underside of the steering mechanism. Secure with two **self-tapping screws** on each side of the cover. Do not completely tighten any of these screws until all four of them are positioned correctly.

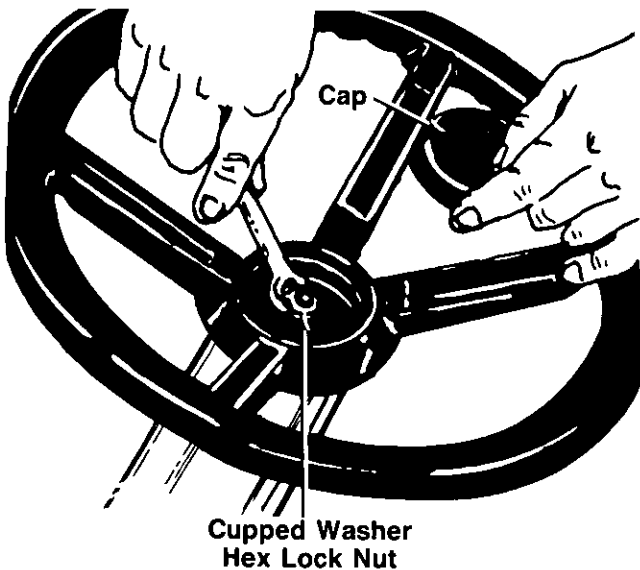


FIGURE 8.

15. Position the front wheels of the riding mower so they are pointing straight forward.

16. Place **steering wheel (C)** in position desired. Make certain the steering wheel is seated over the end of the steering tube.

17. Place the **cupped washer** with the cupped side down over the **steering shaft**. Secure with 5/16" **hex lock nut**. See figure 8.

18. Place the **steering wheel cap** over the center of the **steering wheel** and seat it with your hand.

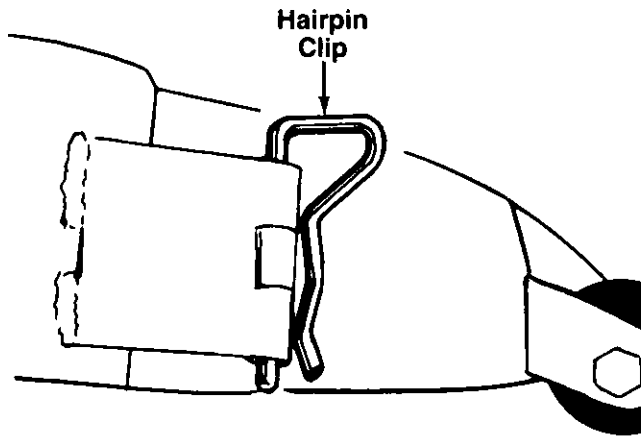


FIGURE 9.—Model 13504

**ATTACHING THE CHUTE DEFLECTOR (Hardware B)
Model 13504:**

Secure the chute deflector to the deck by placing the large hairpin clip in the chute deflector bracket, located on the front of the deck. See figure 9.

Model 13518: If the chute deflector has not been assembled to the deck, assemble the chute deflector as instructed in the separate deck manual.



WARNING

Do not operate your unit unless the chute deflector has been properly installed.

ATTACHING THE SEAT (Hardware C)

1. The slots in the seat pivot bracket allow the seat to be adjusted to different positions. Place the seat against the seat pivot bracket in the position desired, and secure with four self-tapping screws. See figure 10.

2. Route the wire lead which is in the wire harness beneath the seat in front of the right hand seat bracket. Plug the lead into the plug on the wire lead extending from the right hand side of the seat. See figure 10.

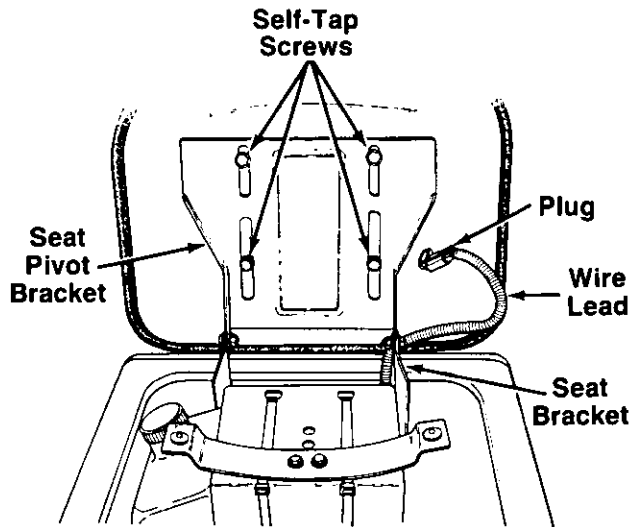


FIGURE 10.

IMPORTANT

When raising or lowering the seat, be careful not to pinch the wire leads.

TIRE PRESSURE

For shipping purposes, the tires on your unit may be over-inflated. Tire pressure should be reduced before unit is put into operation. Recommended operating tire pressure should be 10 p.s.i.

Check sidewall of tire for manufacturer's maximum tire pressure. If this information does not appear on your tire, maximum tire pressure under any circumstances is 30 p.s.i. Equal tire pressure should be maintained on all tires.

BATTERY INFORMATION



WARNING

- A. Battery acid must be handled with great care as contact with it can burn and blister the skin. It is also advisable to wear protective clothing (goggles, rubber gloves and apron) when working with it.*
- B. Should battery acid accidentally splatter into the eyes or onto the face, rinse the affected area immediately with clean cold water. If there is any further discomfort, seek prompt medical attention.
- C. If acid spills on clothing, first dilute it with clean water, then neutralize with a solution of ammonia/water or baking soda/water.
- D. Since battery acid is corrosive, do not pour it into any sink or drain. Before discarding empty electrolyte containers, rinse them with a neutralizing solution.

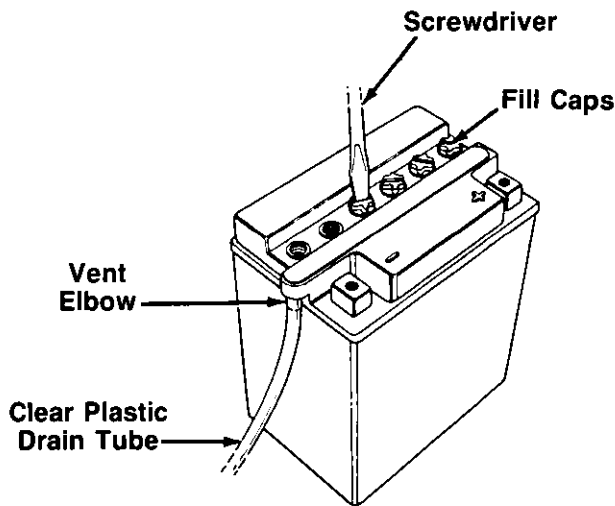


FIGURE 11.

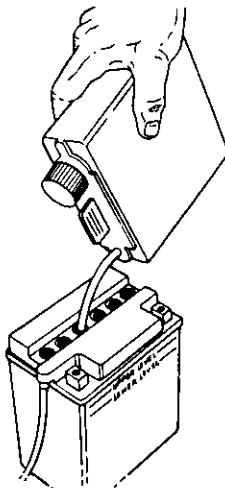


FIGURE 12.

- E. NEVER connect or disconnect charger clips to battery while charger is turned on as it can cause sparks.
- F. Keep all lighted materials (cigarettes, matches, lighters) away from the battery as the hydrogen gas generated during charging can be combustible.
- G. As a further precaution, only charge the battery in a well-ventilated area.

***Always shield eyes, protect skin and clothing when working near batteries.**

ACTIVATING THE BATTERY

Do not activate battery (fill with battery acid) until battery is actually placed in service. Be certain to read previous warnings before activating the battery.

1. Open the battery pack. Be careful not to puncture the box. It contains the battery with a long plastic tube attached, battery fluid (acid) in a plastic container, one short plastic tube and one hardware pack (two hex bolts and nuts).
2. Place the battery on a table or workbench. Make certain the long plastic drain tube is in place on the vent elbow.
3. Remove the six fill caps from the top of the battery with a screwdriver. Be careful not to damage the fill caps. See figure 11.
4. Place the battery fluid container on the table or workbench. Carefully cut off tip of the spout and attach the short plastic tube provided. Do not squeeze the container when cutting tip.
5. Fill each battery cell slowly and carefully to the UPPER LEVEL line marked on battery. See figure 12. Use caution as the acid level will rise rapidly after the bottom of the cell is filled.
6. Allow battery to stand for 30 minutes with the fill caps removed, while the plates absorb acid.
7. If acid level has fallen after the 30 minute standing period, refill each cell with battery acid to the UPPER LEVEL line on battery. Replace the fill caps.
8. Before discarding the empty container, neutralize any residue with baking soda and rinse container with water. Puncture container several times before discarding.
9. Charge the battery after the 30 minute standing period. SLOW CHARGE THE BATTERY (DO NOT FAST CHARGE) at a maximum bench rate of 1.4 amperes until the specific gravity reading is 1.260-1.280. Charge for a minimum of 2 hours and a maximum of 8 hours.



WARNING

Battery contains sulfuric acid. Refer to warning on page 10. Antidote: EXTERNAL—Flush with water. INTERNAL—Drink large quantities of water or milk. Follow with milk of magnesia, beaten egg or vegetable oil. Seek prompt medical attention. EYES: Flush with cool water for at least 15 minutes, then seek immediate medical attention.

Since batteries produce explosive gases, keep all lighted materials (cigarettes, lighters, matches, etc.) away. Be sure to charge battery only in well-ventilated areas. Make certain venting path of battery (drain tube) is always open.

**KEEP BATTERIES
OUT OF THE REACH OF CHILDREN!**

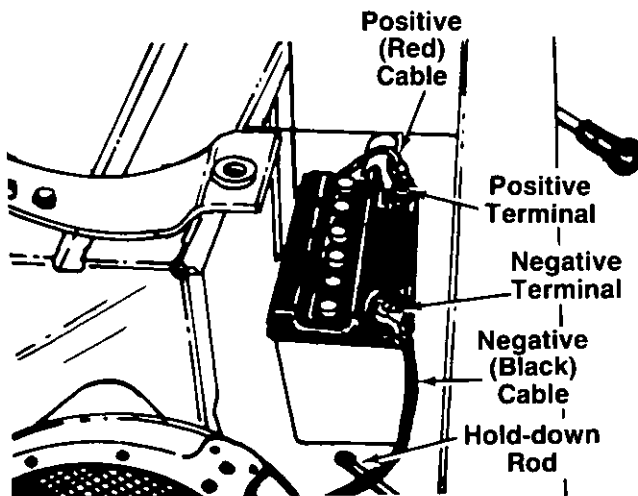


FIGURE 13.

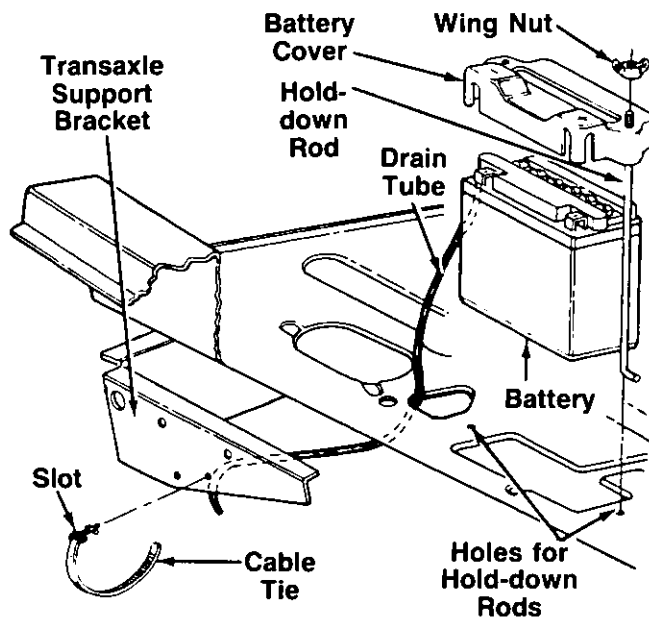


FIGURE 14.

NOTE

Charging rate after battery has been put into operation: The battery is to be charged for a period of 14-16 hours, NO LONGER THAN 30 HOURS.

After battery has been charged, add only distilled water. Do not add acid.

During normal operation, it is only necessary to charge the battery:

1. When it is activated for the first time.
2. Before winter storage.
3. Before using the lawn tractor after winter storage.

INSTALLING THE BATTERY (Hardware D)

1. Hook the battery hold-down rods into the holes in the frame. See figures 13 and 14.
2. Place the battery in the rider with the positive terminal to the front. The negative terminal goes to the rear of the unit. See figure 13.
3. Place the positive (heavy red) cable and small red wire with in-line fuse on the positive terminal. Secure with bolt, nut and lock washer provided with battery.
4. Place the negative (heavy black) cable on the negative terminal. Secure with bolt, nut and lock washer provided with battery. See figure 13.

5. Secure the battery in place with battery cover and hold-down rods. Secure with two wing nuts. See figure 14.
6. Route the clear plastic drain tube down through the hole in the frame, next to the engine drain plug, shown in figure 14.
7. Push the locking end of cable tie through the hole in transaxle support bracket. See figure 14. Place the end of cable tie through the slot so a loop is formed around the drain tube to secure it. Tighten cable tie and cut off excess end.

CONTROLS

This manual should be read in its entirety before operating the riding mower. **Be certain to service the engine with gasoline and oil as instructed in the separate engine manual before starting the engine.** Study the operating instructions and safety precautions thoroughly to insure proper functioning of your mower and to prevent injury to yourself and others. Be sure to save this manual for future reference.

THROTTLE CONTROL

The throttle control is used to regulate the engine speed. The engine should be operated from 3/4 to full throttle when operating the cutting deck. See figure 16.

CHOKE CONTROL

The choke control is located on the console and is operated manually. Details for the choke operation are covered in the separate engine manual packed with your unit. See figure 15.

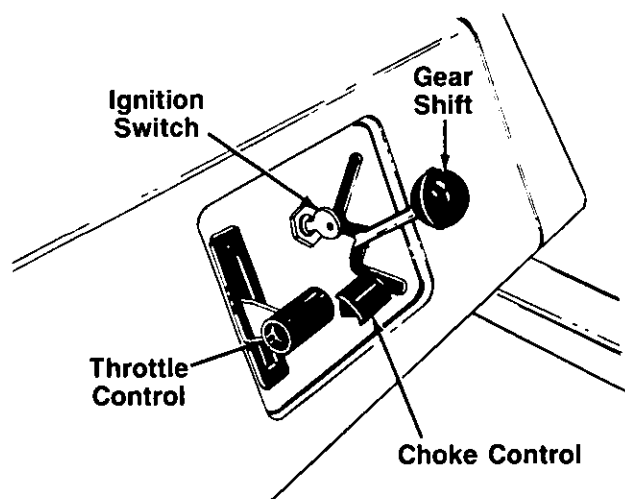


FIGURE 15.

IGNITION KEY

The key must be turned to the START position to start the engine. After the engine is running, let the key return to the ON position. Turn the key to the OFF position to stop the engine. Remove the key when the rider is not in use. See figure 15.

SHIFT LEVER

The shift lever is located on the left hand side of the console and has three positions, FORWARD, NEUTRAL and REVERSE. See figure 15. The clutch-brake pedal must be depressed and the riding mower must not be moving when shifting gears. Do not force the shift lever. Release the clutch-brake pedal slightly to line up the shifting collar in the transmission. Then try to shift gears.

SPEED CONTROL LEVER

The speed control lever allows you to regulate the ground speed of the riding mower to one of six settings. See figure 16. To set, depress clutch pedal. Push speed control lever outward and move backward to slow rider, move forward to increase speed. When desired speed has been obtained, place lever in that position. Whenever clutch is engaged, rider will automatically go to the pre-set speed.

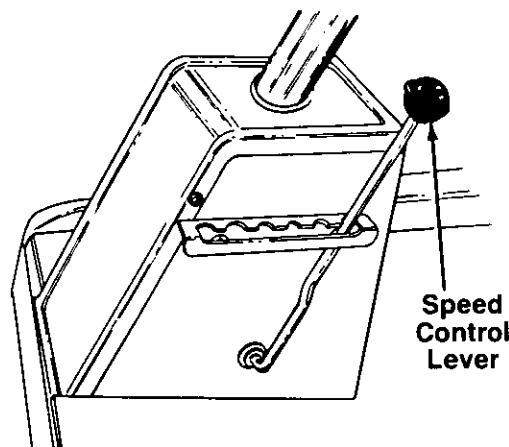


FIGURE 16.—Model 13504 Shown
GASOLINE GAUGE

The gasoline gauge is located in the gasoline fill cap. The gauge indicates the amount of fuel in the tank.

CLUTCH-BRAKE PEDAL

The clutch-brake pedal is located on the right side of the rider. Depressing the clutch-brake pedal part way disengages the clutch. Pressing the pedal all the way down disengages the clutch and engages the disc brake. See figure 17.

NOTE

The clutch-brake pedal must be depressed to start the engine.

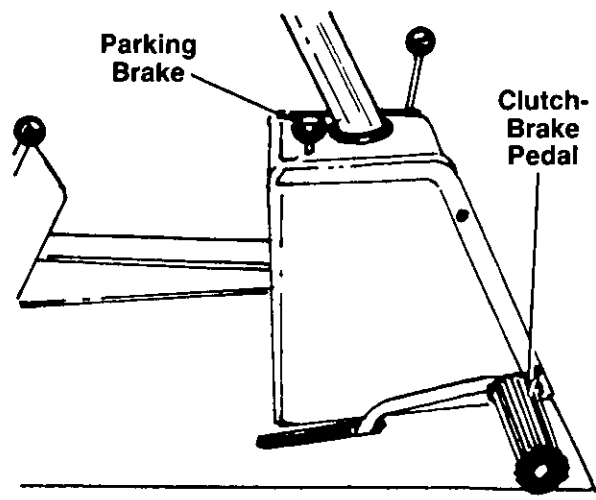


FIGURE 17.—Model 13504 Shown

PARKING BRAKE

To set the parking brake, depress the clutch-brake pedal and press the parking brake knob down. To release the parking brake, depress and release the clutch-brake pedal. See figure 17.

BLADE ENGAGEMENT LEVER

The blade engagement lever is located on the right hand side of the deck. Figure 18 shows the blade engagement lever in the disengaged position.

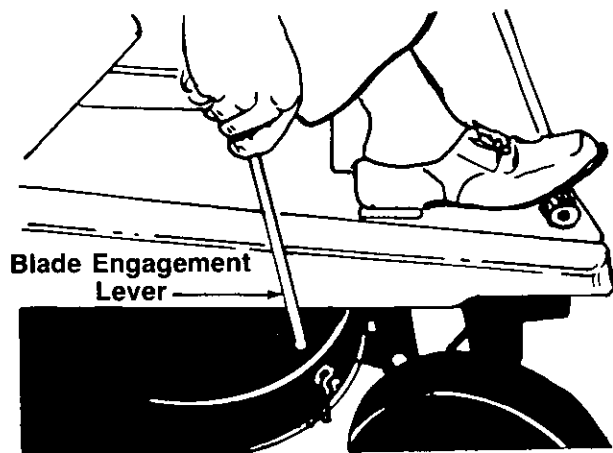


FIGURE 18.

To engage the blade, move the blade engagement lever toward the front of the unit. Move the lever toward the rear to disengage the blade.

DECK CUTTING HEIGHT LEVER

The deck cutting height lever is used to raise and lower the cutting deck, which sets the cutting height.

Move the lever outward, select desired cutting height and release lever. The lever may be set in any one of the six cutting height positions. See figure 19.



CAUTION

The blade does not shut off when the deck is raised. You must place the Blade Engagement Lever in the disengaged (OFF) position.

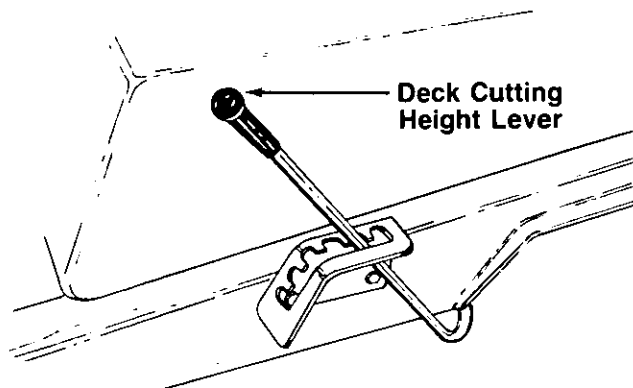


FIGURE 19.

SAFETY INTERLOCK SYSTEM

Interlock safety switches are located on the clutch-brake pedal, the blade engagement-lever, shift lever and the seat.

Before the engine will start, the clutch pedal must be depressed all the way and the blade engagement lever must be in the disengaged position.

Before the unit can be shifted into reverse, or if the operator leaves the seat, the blade engagement lever must be in the disengaged position.

OPERATION

CAUTION

- READ OPERATOR'S MANUAL(S) • NEVER CARRY CHILDREN
- KNOW LOCATION AND FUNCTION OF ALL CONTROLS
- KEEP SAFETY DEVICES (GUARDS, SHIELDS AND SWITCHES) IN PLACE AND WORKING
- REMOVE OBJECTS THAT COULD BE THROWN BY BLADE(S)
- DO NOT OPERATE THE UNIT WHEN CHILDREN AND OTHERS ARE AROUND
- ALWAYS LOOK BEHIND THE UNIT BEFORE BACKING UP
- DO NOT OPERATE THE UNIT WHERE IT COULD SLIP OR TIP
- IF THE UNIT STOPS GOING UPHILL, STOP BLADE(S) AND BACK SLOWLY DOWNHILL
- BE SURE BLADE(S) AND ENGINE ARE STOPPED BEFORE PLACING HANDS OR FEET NEAR BLADE(S)
- BEFORE LEAVING OPERATOR'S POSITION, SHUT ENGINE OFF AND REMOVE KEY

NOTE

This unit is equipped with a **safety interlock system** for your protection. The purpose of the safety interlock system is to prevent the engine from cranking or starting unless the clutch-brake pedal is depressed and the blade engagement lever is in the disengaged position. In addition, the blade engagement lever must be in the disengaged position when the unit is put into reverse or the engine will shut off. If the operator leaves the seat with the blade engagement lever engaged, the engine will shut off.



WARNING

Do not operate the rider if the interlock system is malfunctioning because it is a safety device, designed for protection.

STARTING THE ENGINE



CAUTION

Get on and off the unit from the left hand side to avoid possible contact with the blade engagement lever (located on the right hand side).

1. Be sure the crankcase is filled with oil as recommended in the engine manual. Fill fuel tank with clean, fresh, lead-free gasoline. Leaded gasoline is an acceptable substitute; however, using lead-free gasoline results in fewer combustion deposits and longer valve life.
2. Attach the wire to the spark plug.
3. Depress the clutch-brake pedal and lock it down.
4. Move the blade engagement lever back to the disengaged position.
5. Set throttle control in the FAST position. Pull out the choke control.

NOTE

A warm engine may not require choking.

6. Place the shift lever in the NEUTRAL position.
7. Turn the ignition key to the START position. As soon as the engine starts, let the key return to the ON position. See figure 16.
8. Push choke knob in gradually. Move throttle control to desired engine speed.
9. To stop, turn the ignition key to the OFF position. Remove the key when the rider is not in use.

PUTTING THE RIDING MOWER IN MOTION

NOTE

Parking brake **must** be disengaged before unit is put into motion.

1. Advance the throttle control from 3/4 to full throttle to prevent strain on the engine and to operate the cutting blades.
2. Place the shift lever in either the FORWARD or REVERSE position.



CAUTION

Look to the rear before backing up.

3. Slowly release the clutch-brake pedal.
4. To stop, depress the clutch-brake pedal.

NOTE

When operating the unit initially, there will be little difference between the highest two speeds until after the belts have seated themselves into the pulleys during the break-in period.

5. The blades can be engaged either while moving or while standing still. Move the blade engagement lever forward slowly until the blades are turning.



WARNING

When the blades are engaged, keep feet and hands away from the discharge opening, the blades or any part of the deck.

STOPPING

Engine—Turn the ignition key to the left to the OFF position.

Rider—Depress the clutch-brake pedal.

Blades—Pull the blade engagement lever all the way back.



CAUTION

If the unit is not to be used for a long period, place the shift lever in NEUTRAL, stop the engine, set the parking brake and remove the key. **DO NOT** leave the machine on an incline.

NOTE

A brief break-in period is essential to ensure maximum engine and mower life. The break-in consists of running the engine at half speed for a period of time required to use one tank of gasoline. It is also recommended to change crankcase oil after the first 5 hours of operation.

Be sure that the lawn is clear of stones, sticks, wire, or other objects which could damage lawn mower or engine. For best results and to insure more even grass distribution, do not mow when lawn is excessively wet.

IMPORTANT

If you strike a foreign object, stop the engine. Remove wire from spark plug, thoroughly inspect the mower for any damage, and repair the damage before restarting and operating the mower.

NOTE

If any problems are encountered, refer to the Trouble Shooting Charts on pages 34 and 35.

If unit stalls with speed control in high speed, or if unit will not operate with speed control lever in a low speed position, proceed as follows.

1. Place shift lever in Neutral.
2. Restart engine.
3. Place speed control lever in high speed position.
4. Release clutch-brake pedal fully.
5. Depress clutch-brake pedal.
6. Place speed control lever in desired position.
7. Place shift lever in either Forward or Reverse, and follow normal operating procedures.

GRASS CATCHER Model 19055 is available as optional equipment for Model 13504 riding mower and Model 19073 for Model 13518 riding mower.



The mower should not be operated without the entire grass catcher or chute deflector in place.

NOTE

Under normal usage bag material is subject to wear, and should be checked periodically. Be sure any replacement bag complies with the mower manufacturer's recommendations.

For replacement bags, use only factory authorized replacement bag.

ADJUSTMENTS



Do not at any time make any adjustment to riding mower without first stopping engine and disconnecting spark plug wire.

THROTTLE CONTROL

If adjustment is needed, refer to the separate engine manual packed with your unit.

SPEED CONTROL LEVER ADJUSTMENT

NOTE

When operating the unit initially or after replacing the belts, there will be little difference between the highest two speeds until after the belts have gone through a break-in period and have seated themselves into the pulleys.

If the full range of speeds cannot be obtained on your unit, adjust the speed control lever as follows.

1. Start the engine.
2. Place the shift lever in Neutral position.
3. Place the speed control lever in high speed position.
4. Release the clutch-brake pedal completely, then slowly depress the pedal all the way (to park position). Hold the pedal in this position.
5. Turn the engine off.
6. After engine stops completely, release the clutch-brake pedal.
7. Disconnect the speed control rod by removing the hairpin cotter and flat washer. See figure 20.
8. Place the speed control lever in 2nd speed position.
9. Adjust the rod by threading it in or out of the ferrule until it is all the way to the front of the slot as shown in figure 20.
10. Secure the speed control rod using the flat washer and hairpin cotter.

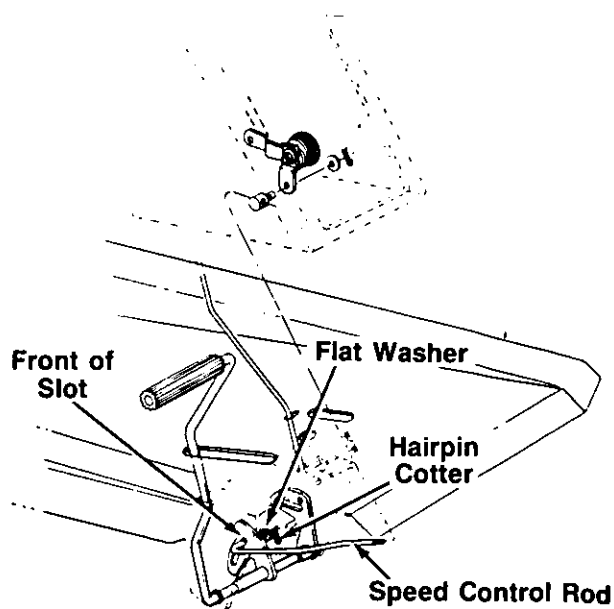


FIGURE 20.

NEUTRAL ADJUSTMENT (See Figure 21)

1. Place the transmission in neutral. (The unit will move freely when pushed forward and backward with the parking brake released).
2. Loosen the bolt which secures the shift lever assembly to the shift lever adjusting link.
3. Place the shift lever in the neutral slot.
4. Tighten the hex bolt to 13 foot pounds.

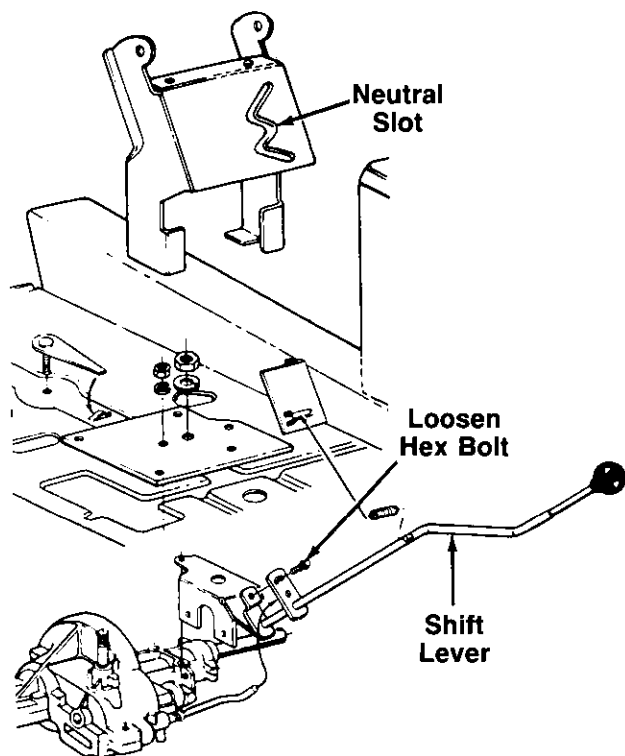


FIGURE 21.

BRAKE ADJUSTMENT (See Figure 22)

The brake is located by the left rear wheel inside the frame. During normal operation of this machine, the brake is subject to wear and will require periodic examination and adjustment.

To adjust the brake, remove the cotter pin. Adjust the castle nut so the brake starts to engage when the brake lever is $\frac{1}{4}$ " to $\frac{5}{16}$ " away from the axle housing.

NOTE

Figure 22 is shown with the unit tipped up on rear wheels for clarity only.

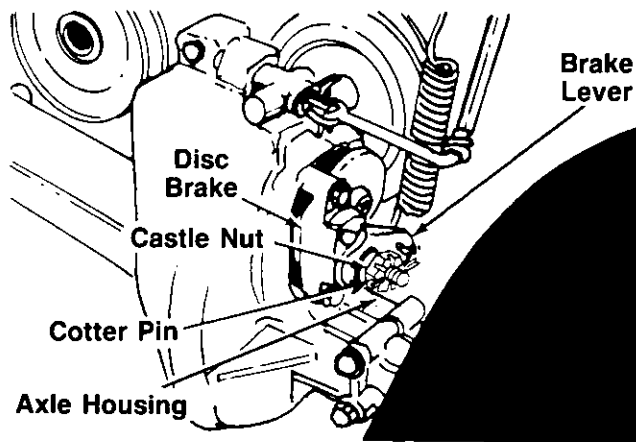


FIGURE 22.

WHEEL ALIGNMENT

The caster (forward slant of the king pin) and the camber (tilt of the wheels out at the top) require no adjustment. Automotive steering principles have been used to determine the caster and camber on the mower. The front wheels should toe-in $\frac{1}{8}$ inch. See figure 23. To adjust, follow these steps:

1. Remove the cotter pin and flat washer which hold the tie rod to the axle bracket. See figure 23.
2. Adjust the tie rod in or out until the wheels toe-in approximately $\frac{1}{8}$ ".
3. Replace the tie rod into the wheel bracket, and replace the cotter pin and flat washer.

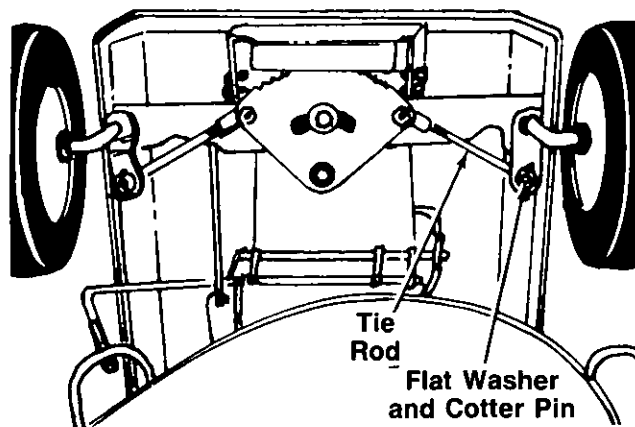


FIGURE 23.

DECK ADJUSTMENT

If an uneven cut is obtained, the deck may be adjusted as follows.

NOTE

Make certain tire pressure is 15 p.s.i. in all tires before adjusting the deck.

Side to Side Adjustment

Model 13504:

A deck adjustment rod is located on the right side of the unit. See figure 24A.

To adjust the deck, loosen the two hex nuts at the left rear deck link assembly. Thread the hex nuts up or down the deck adjustment rod as necessary. Retighten the hex nuts.

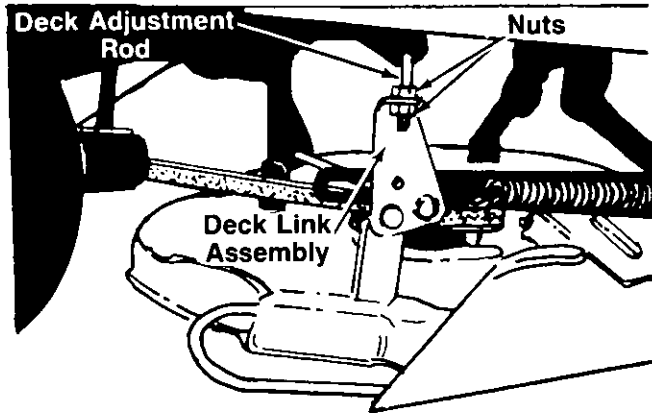


FIGURE 24A.—Model 13504

Model 13518:

1. Raise the deck to its highest position.
2. With the unit on a hard, level surface, measure the distance from the bottom edge of both the left rear and right rear of deck to the ground.
3. If adjustment is needed, loosen the hex nut on the adjusting screw, located under the right side of the frame. See figure 24B. Move the adjusting screw inward to lower the right side of the deck, or outward to raise the right side of the deck.
4. Remeasure the deck as described in step 2, and readjust if necessary. Tighten the hex nut to secure the adjusting screw when the deck is level.

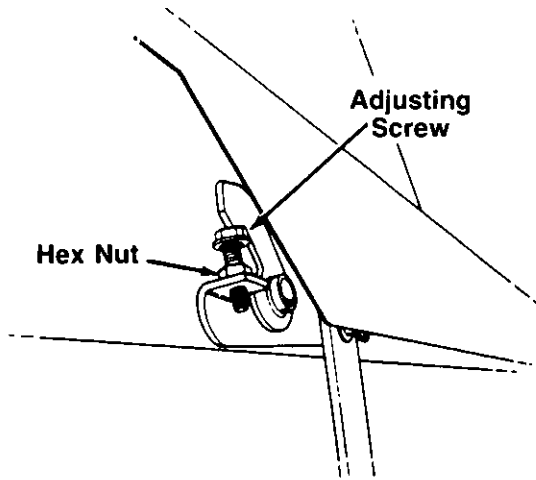


FIGURE 24B.—Model 13518

Deck Pitch

The front of the deck should be approximately 1/4" to 3/8" lower than the rear of the deck. Adjust the pitch as follows.

Model 13504:

1. Place the deck in the engaged position.
2. Remove the hairpin cotter and flat washer which hold the deck lift connecting rod to the front deck lift assembly. See figure 25A.
3. Remove the connecting rod from the deck lift assembly and thread it in or out of the ferrule as necessary. See figure 25A. Replace the rod.

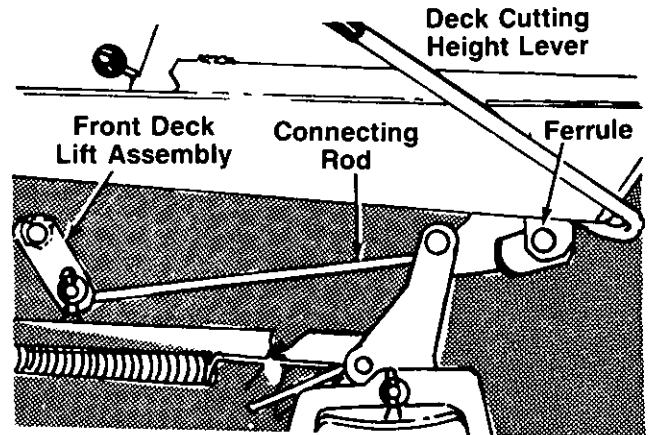


FIGURE 25A.—Model 13504

Model 13518:

1. Make the side to side adjustment as instructed previously.
2. Measure the distance from the bottom edge of the front and right rear of deck to the ground.
3. If the front is not between 1/4" and 3/8" lower than the rear, remove the hairpin cotters and flat washers which secure the J-bolts to the front of the deck, both right and left sides. See figure 25B. Thread the J-bolts into or out of the ferrules as necessary.
4. Reassemble J-bolts and recheck the adjustment. Readjust as necessary. Secure with flat washers and hairpin cotters when adjustment is correct.

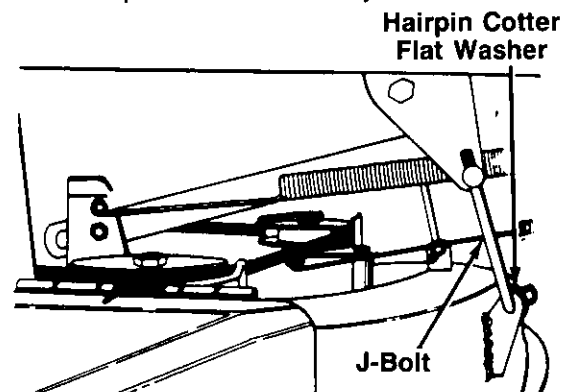


FIGURE 25B.—Model 13518

BLADE BRAKE ADJUSTMENT (See figure 26) (Model 13504 Only)



WARNING

Make certain spark plug wire is disconnected and grounded against the engine while making this adjustment.

To adjust the blade brake, proceed as follows.

1. Disconnect the brake cable from the lower inside belt guard on the rider by removing the hairpin cotter, flat washer and clevis pin.
2. Lower the deck to its lowest position. Place the blade engagement lever in the **disengaged** position.
3. Pull the brake cable back so there is no slack in the cable. **Do not** put tension on the cable. Select the hole in the lower inside belt guard which aligns with the end of the cable. Move the end of the brake cable **forward** to the next hole in the belt guard (which will give a small amount of slack in the cable), and reassemble.

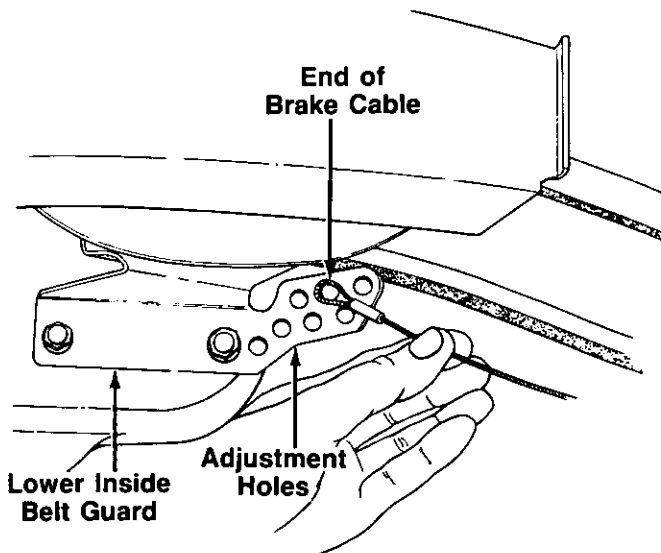


FIGURE 26.

CARBURETOR ADJUSTMENT



WARNING

If any adjustments are made to the engine while the engine is running (e.g. carburetor), disengage all clutches and blades. Keep clear of all moving parts. Be careful of heated surfaces and muffler.

Minor carburetor adjustment may be required to compensate for differences in fuel, temperature, altitude and load. To adjust the carburetor, refer to the separate engine manual packed with your unit.



NOTE

A dirty air cleaner will cause an engine to run rough. Be certain air cleaner is clean and attached to the carburetor before adjusting carburetor.

LUBRICATION



WARNING

Always stop engine and disconnect spark plug wire before cleaning, lubricating or doing any kind of work on riding mower.

1. **Engine.** Maintain the engine oil according to the engine manual.
2. **Front Wheels.** The front wheels are provided with grease fittings. Lubricate at least once a season with automotive multi-purpose grease.
3. **Linkage.** Oil all deck linkage and height adjustment linkage.
4. **Transaxle.** It is lubricated at the factory and does not require checking. Lubricate with 10 oz. of grease (Part No. 737-0148) if disassembled.

MAINTENANCE



WARNING

Disconnect spark plug wire and ground it against the engine before performing any repairs or maintenance.

CUTTING BLADE

A. Removal for Sharpening or Replacement



WARNING

Be sure to disconnect and ground the spark plug wire before working on the cutting blade to prevent accidental engine starting. Protect hands by using heavy gloves or a rag to grasp the cutting blade.

1. Remove the large bolt and lock washer which holds the blade and adapter to the blade spindle. See figure 27.
2. Remove the blade and adapter from the spindle.

- If the blade or blade adapter needs replacing, remove the two small bolts, lock washers and nuts which hold the blade to the adapter. See figure 27.

B. Sharpening

Remove the cutting blade by following the directions of the preceding section.

When sharpening the blade, follow the original angle of grind as a guide. It is **extremely important** that each cutting edge receives an equal amount of grinding to prevent an unbalanced blade. An unbalanced blade will cause excessive vibration when rotating at high speeds, may cause damage to the mower and could break, causing personal injury.

The blade can be tested for balance by balancing it on a round shaft screwdriver. Remove metal from the heavy side until it balances evenly.

➔ NOTE

It is recommended that the blade always be removed from the adapter for the best test of balance.

C. Reassembly

Before reassembling the blade and the blade adapter to the unit, lubricate the spindle and the inner surface of the blade adapter with light oil. Lubricating the bolt holes, bolts and inner surface of the nuts with light oil is also recommended. A 4 oz. plastic bottle of light oil lubricant is available. Order part number 737-0170. Engine oil may also be used.

When replacing the blade, be sure to install the blade with the side of the blade marked "Bottom" (or with part number) facing the ground when the mower is in the operating position.

Blade Mounting Torque

3/8" Dia. Bolt 375 in. lb. min., 450 in. lb. max.

5/16" Dia. Bolt 150 in. lb. min., 250 in. lb. max.

➔ NOTE

To insure safe operation, ALL nuts and bolts must be checked periodically for correct tightness.

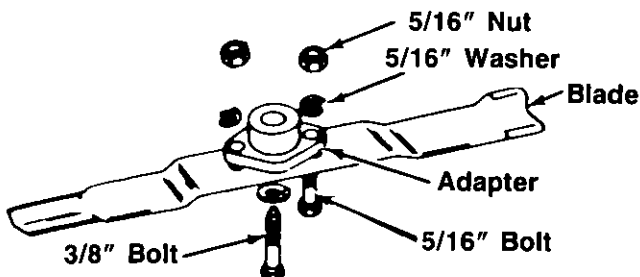


FIGURE 27.

FUEL FILTER

Your unit is equipped with a replaceable in-line fuel filter. Replace filter whenever contamination or discoloration is noticed. Order replacement filter through your engine authorized service dealer.

CLEANING ENGINE AND BLADE HOUSING

Any fuel or oil spilled on the machine should be wiped off promptly. Grass, leaves, and other dirt must not be left to accumulate around the cooling fins of the engine or on any part of the machine.

Clean the underside of the blade housing after each mowing.

BELTS

Check that belts are free of oil or dirt. Wipe the belts periodically with a clean rag.

ENGINE

Refer to separate engine manual for all engine maintenance instructions.

Maintain **engine oil** as instructed in the separate engine manual packed with your unit. Read and follow instructions carefully.

Service **air cleaner** every 25 hours under normal conditions. Clean every few hours under extremely dusty conditions. Poor engine performance and flooding usually indicates that the air cleaner should be serviced.

The **spark plug** should be cleaned and the gap reset once a season. Spark plug replacement is recommended at the start of each mowing season; check engine manual for correct plug type and gap specification.

BATTERY MAINTENANCE

- Check periodically (every two weeks or before and after charging) to be sure electrolyte level is above the lowest line on battery. Add only distilled water or good quality drinking water. NEVER add additional acid or other chemicals to battery after initial activation.
- The battery should be checked with a hydrometer after every 25 hours of operation. If the specific gravity is less than 1.225, remove battery and recharge.
- Coat the terminals and exposed wiring with a thin coat of grease or petroleum jelly for longer service and protection against electrolyte corrosion.
- The battery should be kept clean. Any deposits of acid should be neutralized with soda and water. Be careful not to get this solution in the cells.

BATTERY STORAGE

1. Charge battery using normal methods. NEVER store discharged battery as it will not recover.
2. When storing battery for extended periods, disconnect battery cables. Removing battery from unit is recommended.
3. Store in cold, dry place.
4. Recharge battery whenever the specific gravity is less than 1.225, before returning to service, or every two months, whichever occurs first.

COMMON CAUSES FOR BATTERY FAILURE ARE:

1. Overcharging
2. Undercharging
3. Lack of water
4. Loose hold downs and/or corroded connections
5. Excessive loads
6. Battery electrolyte substitutes
7. Freezing of electrolyte

➔ NOTE

THESE FAILURES DO NOT CONSTITUTE WARRANTY.

INSTALLATION OF TIRE TO RIM



WARNING

The following procedure must be followed when removing or installing a tire to the rim.

1. Be sure rim is clean and rust free.
2. Lubricate both the tire and rim generously.
3. Never inflate to over 30 p.s.i. to seat beads. Excessive inflation pressure when seating beads may cause tire/rim assembly to burst with force sufficient to cause serious injury.

DRIVE BELT REMOVAL AND REPLACEMENT

➔ NOTE

It is recommended that the entire instructions on belt removal and replacement be read before changing the belts.

1. Remove the battery from the unit.
2. To prevent gasoline from leaking from the engine, remove the fuel tank cap, place a piece of thin plastic over the neck of the fuel tank and screw on the cap.
3. Disconnect the spark plug wire and ground it against the engine.

4. Remove the deck as described in the separate deck manual.
5. Unhook the idler spring from the rider frame. See figure 28.
6. Remove the hex bolt, nut and lock washer at the torque rod bracket and transaxle. See figure 28.

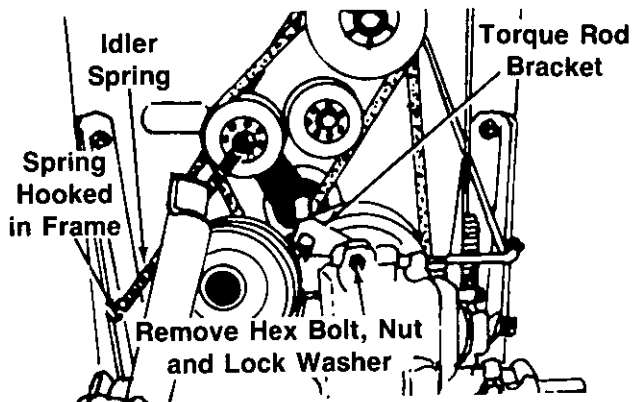


FIGURE 28.

7. Remove the hex bolt which holds the torque rod bracket to the torque rod, and remove bracket. See figure 29.

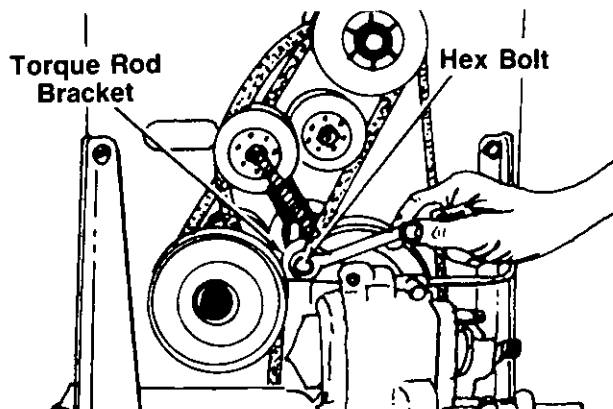


FIGURE 29.

8. Slip the "V"-belt off the variable speed pulley and transaxle pulley. See figure 30.

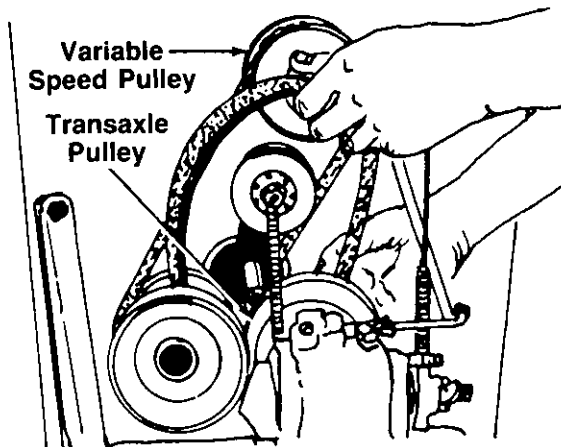


FIGURE 30.

- Remove two hex bolts, nuts and lock washers from the engine pulley belt guard at rider frame to allow the engine pulley belt guard to drop down out of the way. See figure 31.

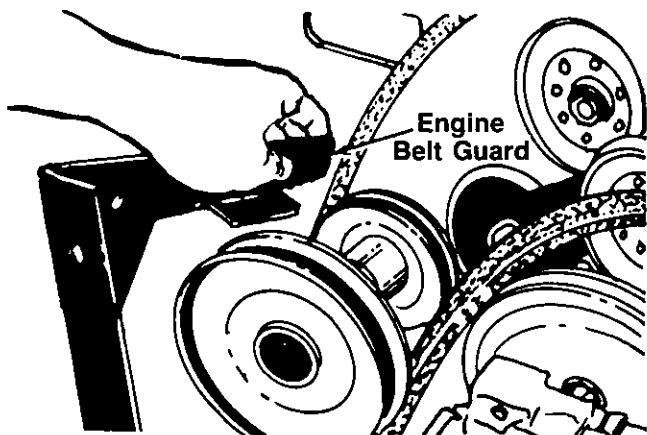


FIGURE 31.

- Remove the idler pulley by removing the hex lock nut. See figure 32.

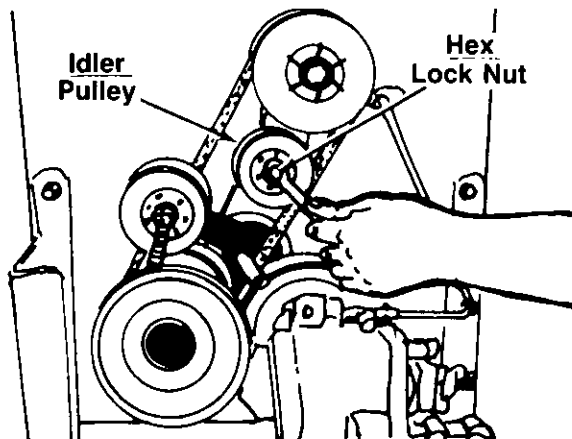


FIGURE 32.

- Remove and replace the "V"-belt. See figure 33.

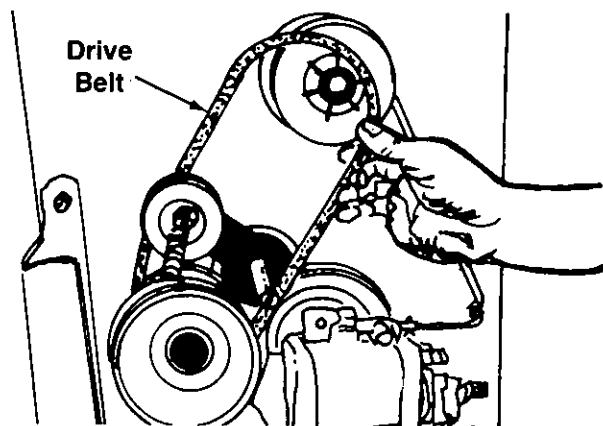


FIGURE 33.

- Upon reassembly of idler pulley, be certain the hub side of idler goes against the idler bracket. See figure 34.

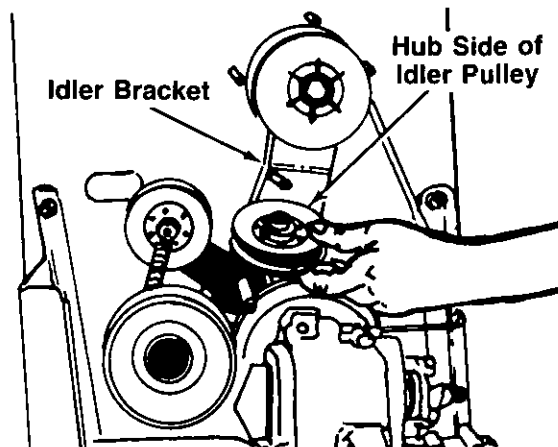


FIGURE 34.

- When sliding the idler pulley on the idler bracket, be certain the belt is between the pulley and guide pin. See figure 35.

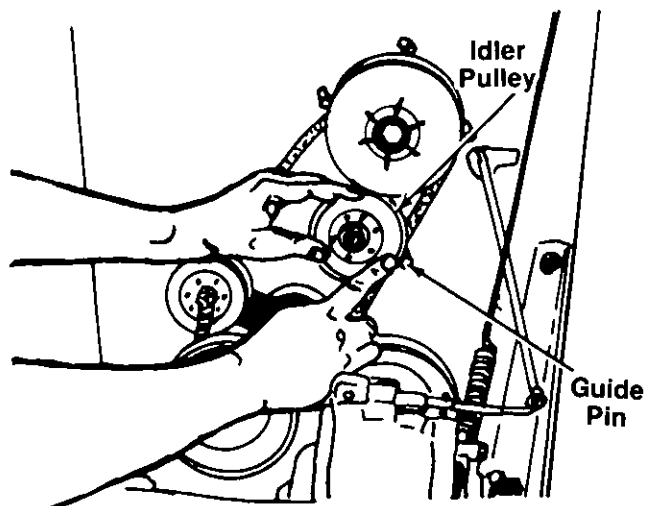


FIGURE 35.

- Reverse the above steps (paying close attention to steps 12 and 13) when reassembling the new belts.

NOTE

Be certain all belts are inside belt guards and keepers. Also, be sure to reassemble the safety wire (orange) at the deck chute.

OFF-SEASON STORAGE

If the machine is to be inoperative for a period longer than 30 days, prepare for storage as follows.

1. Clean the engine and the entire unit thoroughly.
2. Lubricate all lubrication points. Wipe the entire machine with an oiled rag to protect the surfaces.
3. Refer to the engine manual for correct engine storage instructions. The engine must be completely drained of fuel to prevent gum deposits from forming on essential carburetor parts, fuel lines and fuel tanks.


4. Refer to battery storage instructions on page 20.

5. Store unit in a clean, dry area.

NOTE

When storing any type of power equipment in an unventilated or metal storage shed, care should be taken to rustproof the equipment. Using a light oil or silicone, coat the equipment, especially any chains, springs, bearings and cables.


13504 13518

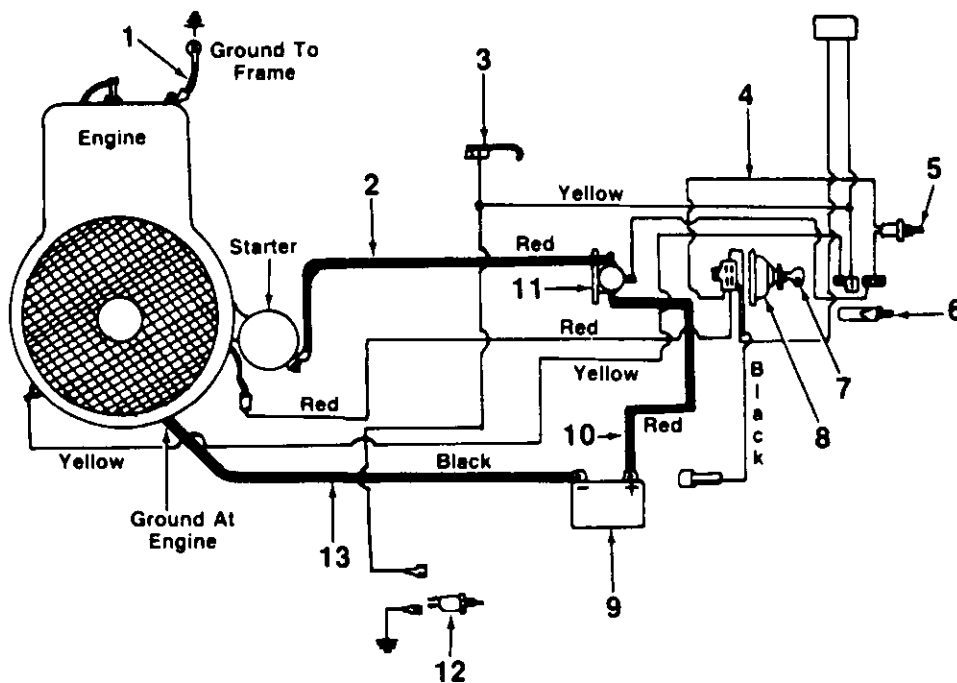


PARTS LIST FOR ELECTRICAL SYSTEM

REF. NO.	PART NO.	DESCRIPTION	NEW PART
1	725-0977	Elec. Wire 8 Ga. x 9.0" Lg.	
2	725-0424	Elec. Wire	
3	732-0420	Spring Switch—Reverse	
4	725-1143	Wire Harness	
5	725-0268	Safety Switch—Black N.O.	
6	725-0819	Safety Switch	
7	725-0201	Ignition Key	
8	725-0267	Ignition Switch	
9	725-0514	Battery 12V	
10	725-0927	Elec. Wire Red w/Boot	
11	725-0771	Solenoid	
12	725-0269	Safety Switch Red N.C.	
13	725-0975	Elec. Wire 8 Ga. x 9.0" Lg.	
14	725-0765	Elec. Wire	
15	725-0977	Elect. Wire 11.5" Lg.	


13504

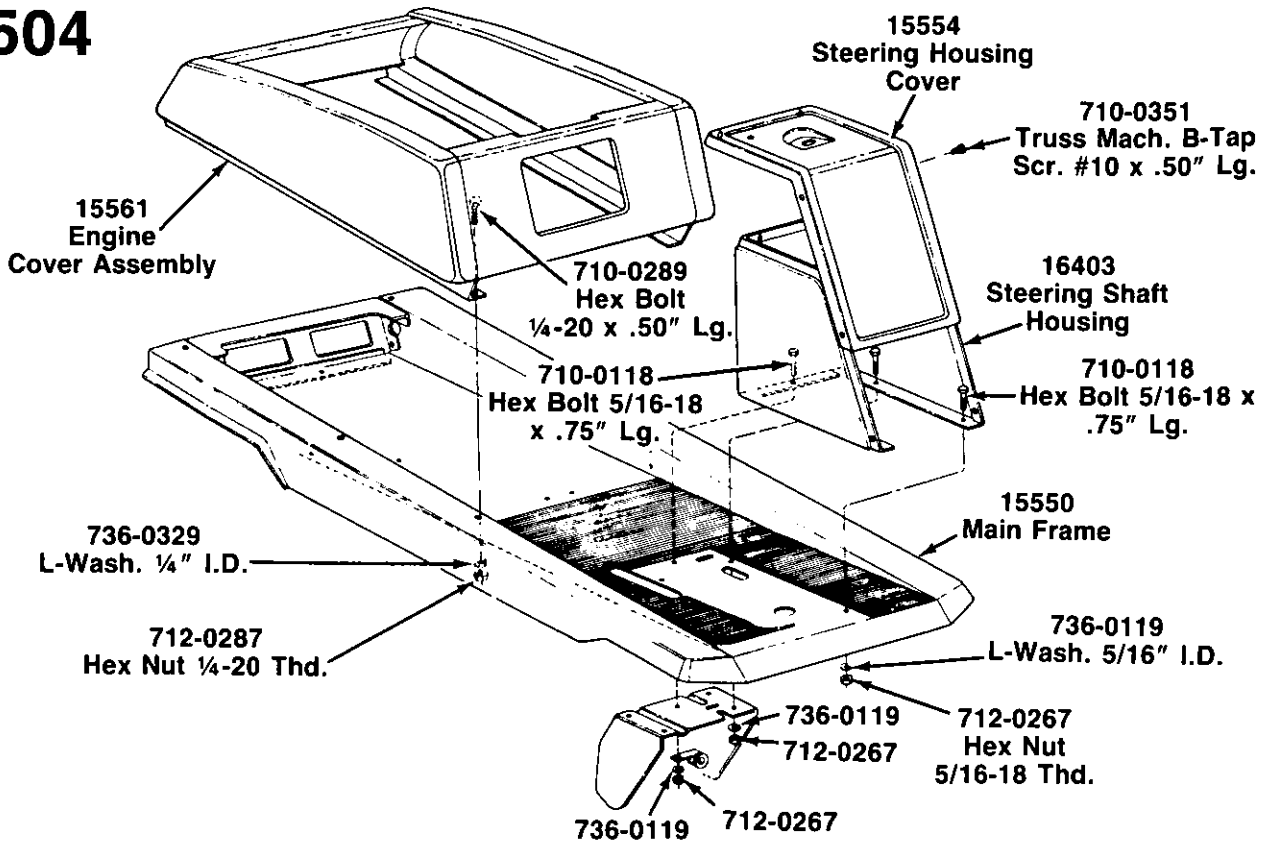

13518

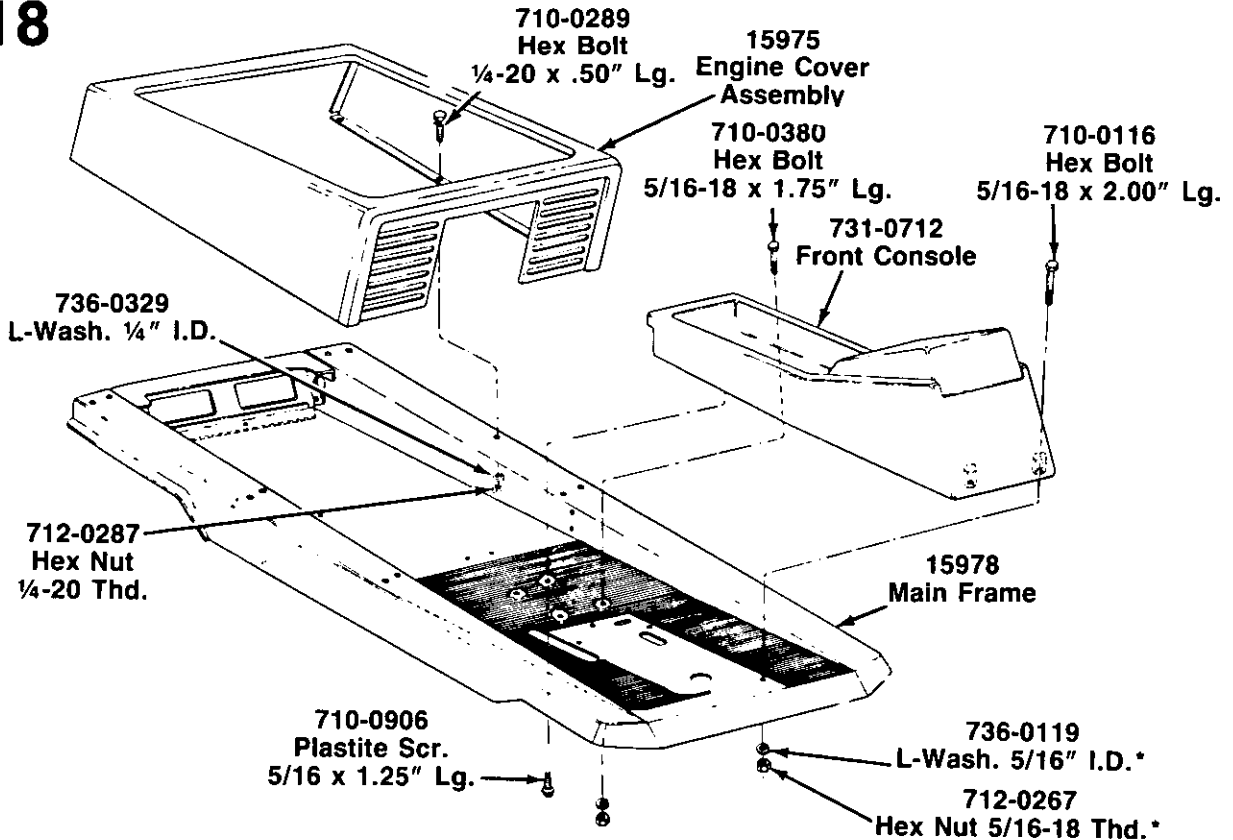

13504
13518

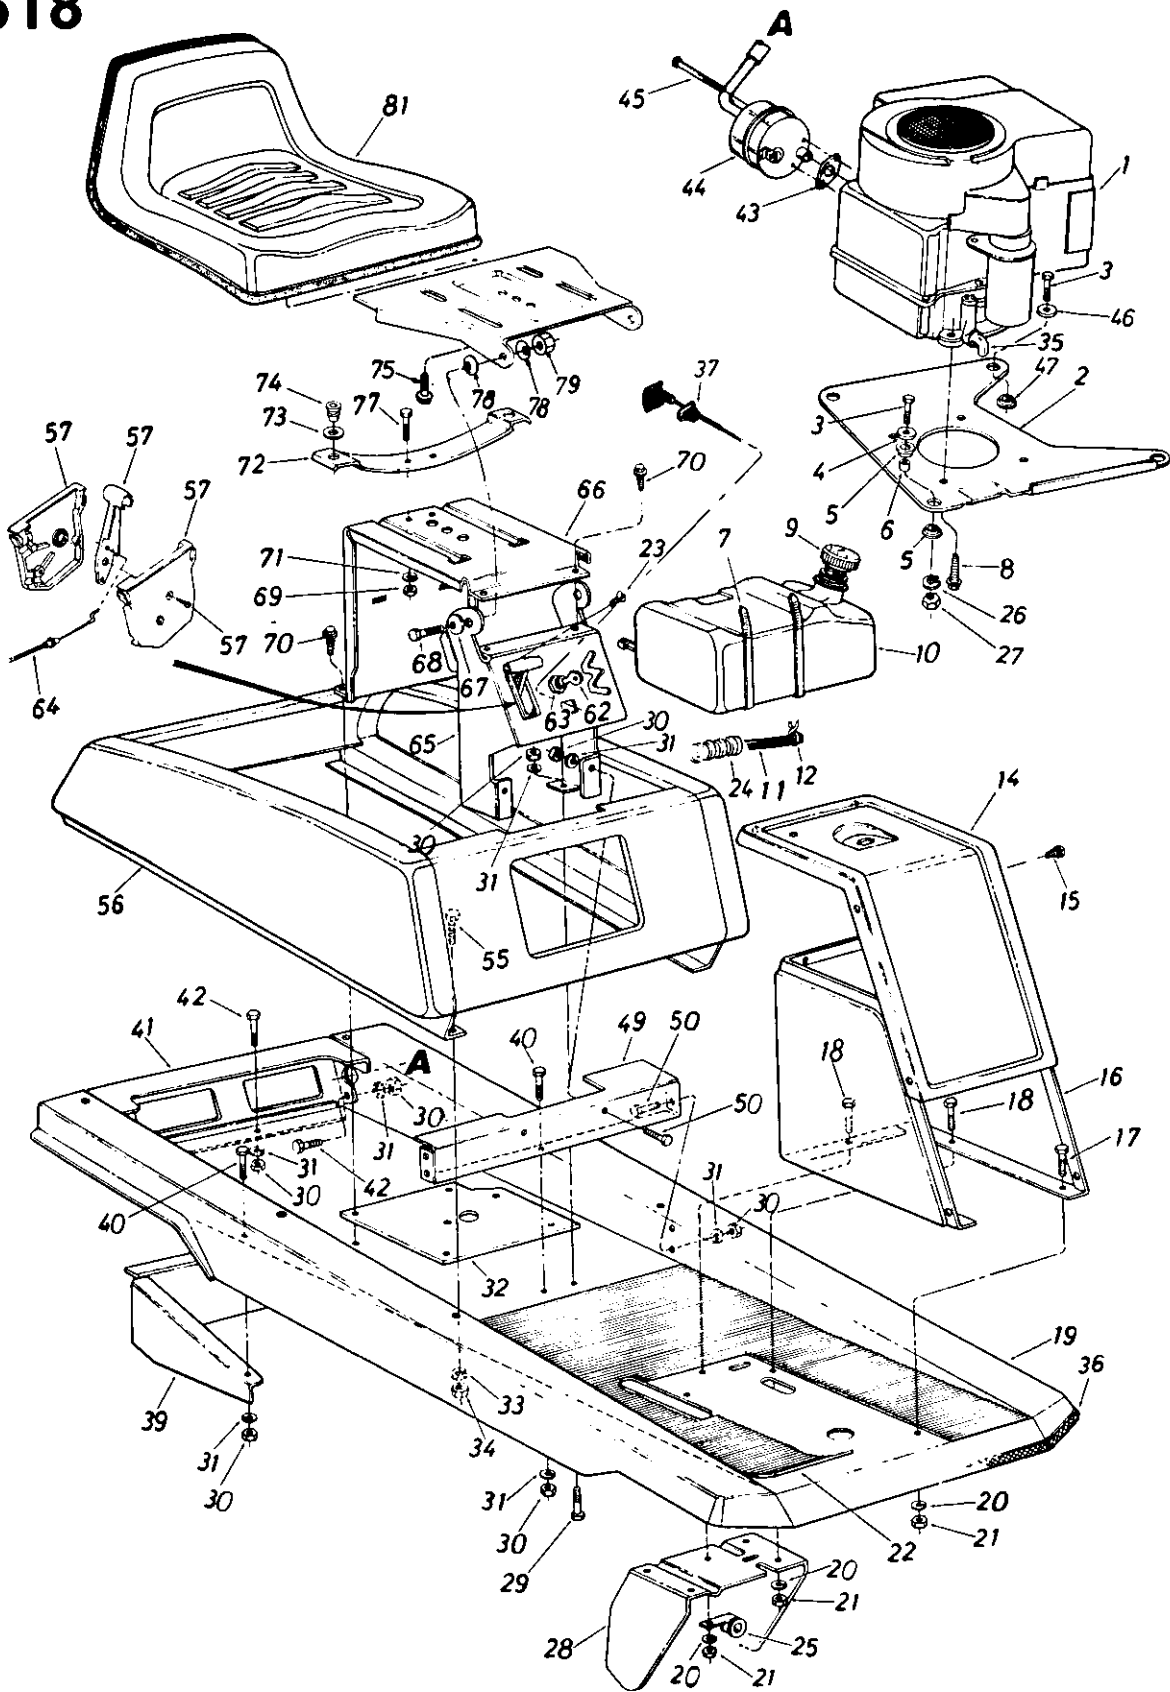

13504 13518

PARTS LIST FOR MODELS 13504 AND 13518 RIDING MOWERS

REF. NO.	PART NO.	COLOR CODE	DESCRIPTION	NEW PART	REF. NO.	PART NO.	COLOR CODE	DESCRIPTION	NEW PART
1	—		Engine		39	15553		Transaxle Support Ass'y.	
2	15572		Engine Mounting Plate		40	710-0118		Hex Bolt 5/16-18 x .75" Lg.*	
3	710-0158		Hex Bolt 5/16-24 x 1.25" Lg.*		41	15571		Rear Frame Panel	
4	736-0231		Fl-Wash. .330" I.D. x 1.125"		42	710-0621		Hex Bolt 5/16-18 x .50" Lg.*	
5	722-0153		Engine Mounting Grommet		43	721-0207		Exhaust Gasket	
6	750-0539		Spacer .315" I.D. x .50" O.D. x .520" Lg.		44	751-0412		Muffler Ass'y.	
7	726-0209		Cable Tie 30.6 Lg.			751-0425		Spark Arrester For 8 H.P. Muffler	
8	710-0502		Hex Wash. Hd. Self-Tap Scr. 3/8-16 x 1.25" Lg.		45	738-0635		Shld. Bolt	
9	723-0155		Gas Gauge		46	736-0343		Fl-Wash. .330" I.D. x 1.25" O.D.	
10	751-0368		Fuel Tank		47	736-0392		Flange Wash. .320" I.D. x .750" O.D.	
11	751-0173		Gas Line		49	15604		Seat Support & Frame Brkt.	
12	726-0207		Hose Clamp—.406" Dia.		50	710-0118		Hex Bolt 5/16-18 x .75" Lg.*	
14	—		Refer to Page 23		55	710-0289		Hex Bolt 1/4-20 x .50" Lg.*	
15	—		Refer to Page 23		56	—		Refer to Page 23	
16	—		Refer to Page 23		57	831-0823		Throttle Control Box Ass'y.	
17	—		Refer to Page 23		62	725-0201		Ignition Key	
18	—		Refer to Page 23		63	725-0267		Ignition Switch	
19	—		Refer to Page 23		64	746-0503		Throttle Control Wire	
20	—		Refer to Page 23		65	16483		Front Seat Bracket	
21	—		Refer to Page 23		66	15606		Rear Seat Bracket	
22	735-0220		Floor Mat		67	736-0242		Bell-Wash. .345" I.D. x .88"	
23	710-0779		Truss Mach. AB-Tap Scr. #10 x .50" Lg.		68	710-0118		Hex Bolt 5/16-18 x .75" Lg.*	
24	731-0757		Convuluted Conduit		69	712-0267		Hex Nut 5/16-18 Thd.*	
25	726-0175		Clamp		70	710-0601		Hex Self-Tap Scr. 5/16-18 x .75" Lg.	
26	736-0119		L-Wash. 5/16" I.D.*		71	736-0329		L-Wash. 1/4" I.D.*	
27	712-0123		Hex Nut 5/16-24 Thd.*		72	732-0431		Seat Spring	
28	15562		Clutch-Brake Pedal Ass'y.		73	736-0160		Fl-Wash. .531" I.D. x .930"	
29	710-0118		Hex Bolt 5/16-18 x .75" Lg.*		74	731-0555		Grommet	
30	712-0267		Hex Nut 5/16-18 Thd.*		75	710-0623		Hex Wash. Hd. Tap Scr. 3/8-16 x 3/4" Lg.	
31	736-0119		L-Wash. 5/16" I.D.*		77	710-0118		Hex Bolt 1/4-20 x .75" Lg.*	
32	15588		Mounting Brkt. Variable Speed Pulley		78	736-0242		Bell-Wash. .345" I.D. x .88"	
33	736-0329		L-Wash. 1/4" I.D.*		79	712-0158		Hex Cent. L-Nut 5/16-18 Thd.	
34	712-0287		Hex Nut 1/4-20 Thd.*		80	15607		Seat Pivot Bracket	
35	737-0125		90° Elbow Male To Female		81	757-0343		Seat Ass'y. Comp.	N
36	731-0511		Trim Strip 18" Lg.						
37	746-0614		Choke Control						

*For faster service obtain standard nuts, bolts and washers locally. If these items cannot be obtained locally, order by part number and size as shown on parts list.

(499—Beige)
(621—Brilliant Fire Mist)

If color or finish is important when ordering parts, use the appropriate color code shown above [i.e. (part no.)-621 for Brilliant Fire Mist Finish].


NOTE: The engine is not under warranty by the mower manufacturer... If repairs or service is needed on the engine, please contact your nearest authorized engine service outlet. Check the "Yellow Pages" of your telephone book under "Engines—Gasoline."

Find It Fast
In The
Yellow Pages



Specifications subject to change without notice or obligation.

13504
13518

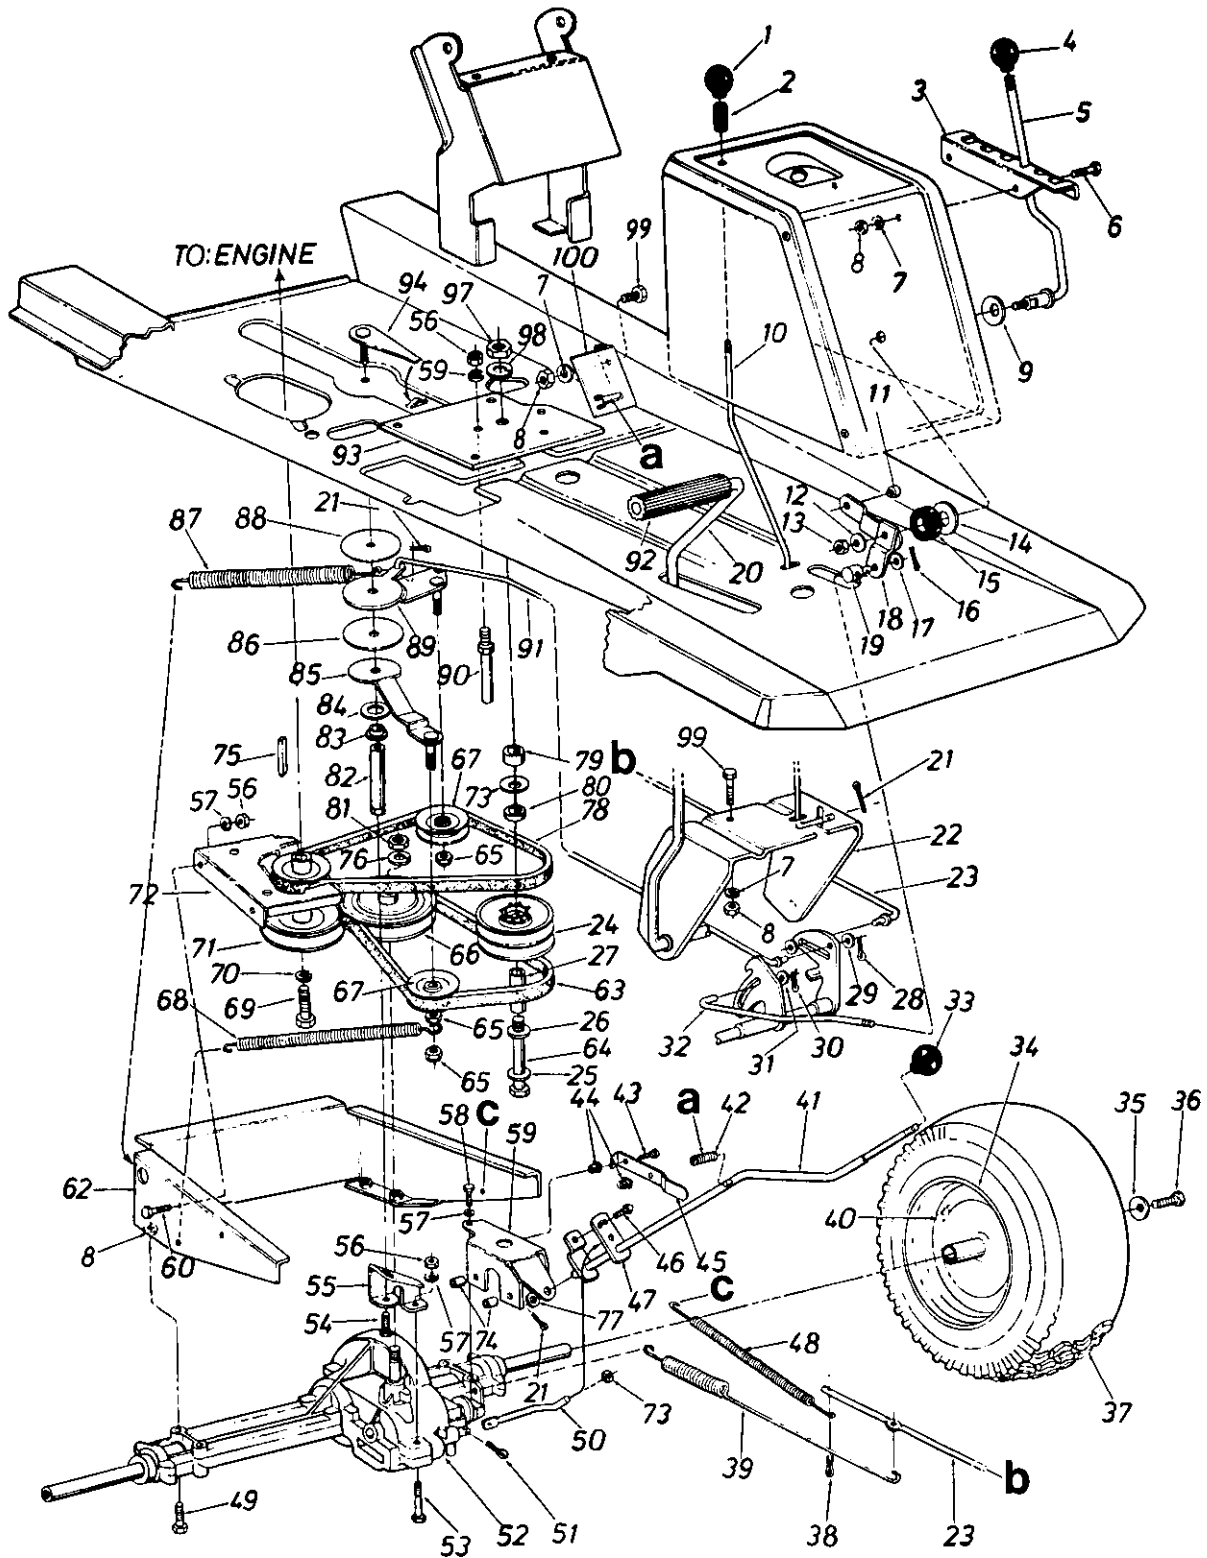

13504 13518


PARTS LIST FOR MODELS 13504 AND 13518 RIDING MOWERS

REF. NO.	PART NO.	COLOR CODE	DESCRIPTION	NEW PART	REF. NO.	PART NO.	COLOR CODE	DESCRIPTION	NEW PART
1	720-0187		Ball Knob 1/4-20 Thd. 1.25"		46	710-0289		Hex Bolt 1/4-20 x .50" Lg.*	
2	732-0437		Compression Spring		47	16476		Shift Lever Adjusting Link	
3	16389		Speed Index Bracket		48	732-0487		Ext. Spring 8 1/4" Lg.	
4	720-0165		Ball Knob		49	710-0378		3/16-18 x 2.50 Hex Bolt	
5	747-0652		Speed Control Lever		50	747-0668		Shift Rod	
6	710-0323		Truss Mach. Scr. 5/16-18 x .75" Lg.*		51	714-0149		Intern. Cotter Pin	
7	736-0119		L-Wash. 5/16" I.D.*		52	717-0775V		Transaxle (See Breakdown)	
8	712-0267		Hex Nut 5/16-18 Thd.*		53	710-0136		Hex Bolt 1/4-20 x 1.75" Lg.*	
9	736-0253		Bell-Wash. .345" I.D. x .88"		54	710-0180		Hex Bolt 3/8-24 x .75" Lg.*	
10	747-0427		Brake Locking Rod†		55	15564		Torque Rod Bracket	
	747-0450		Brake Locking Rod††		56	712-0287		Hex Nut 1/4-20 Thd.*	
11	731-0493		Cap		57	736-0329		L-Wash. 1/4" I.D.*	
12	736-0242		Bell-Wash. .345" I.D. x .08"		58	710-0965		Self-Tap Mach. Scr. Type "C" 1/4-20 x 1.37" Lg.	
13	712-0158		Hex Cent. L-Nut 5/16-18 Thd.		59	16478		Shift Lever Support Brkt.	
14	736-0100		Fl-Wash. .531" I.D. x 1.25"†		60	710-0597		Hex Bolt 1/4-20 x 1.00" Lg.*	
	736-0154		Fl-Wash. .50" I.D. x 1.5"††		62	15553		Transaxle Support Ass'y.	
15	735-0129		Rubber Washer		63	754-0240		V-Belt	
16	714-0145		Intern. Cotter Pin 1/2" Dia.		64	710-0693		Hex Bolt 3/8-16 x 4.5" Lg.	
17	736-0275		Fl-Wash. .34" I.D. x .68" O.D.		65	712-0116		Hex Ins. L-Nut 3/8-24 Thd.	
18	16396		Speed Control Lever Brkt. Ass'y.		66	756-0390		5/8 V-Pulley .500" I.D. x 6"	
19	711-0677		Ferrule—Engagement		67	756-0116		V-Belt Idler .38" I.D. x 3.06"	
20	15562		Clutch/Brake Pedal Ass'y.		68	732-0308		Ext. Spring .50" O.D. x 6.37"	
21	714-0507		Cotter Pin 3/32" Dia. x .75"*		69	710-0314		Hex Bolt 7/16-20 x 1.00" Lg.	
22	15562		Clutch/Brake Pedal Ass'y.		70	736-0171		L-Wash. 7/16" I.D.	
23	747-0431		Brake Rod		71	756-0391		Engine Pulley .500" O.D. & 3.56" O.D.	
24	717-0884		Variable Speed Pulley Ass'y.		72	15623		Upper Eng. Belt Guard	
25	736-0247		Washer .4" I.D. x 1.25" O.D.		73	736-0219		Bell-Wash. .4" I.D. x 1.12" O.D.	
26	741-0405		Thrust Brg. 1.25" O.D. x .56" I.D.		74	750-0686		Spacer .256" I.D. x .50" O.D.	
27	750-0705		Spacer Sleeve 2.71"		75	714-0114		Sq.-Key 1/4" x 2.00" Lg.	
28	714-0115		Cotter Pin 1/8" Dia. x 1.25"*		76	736-0921		L-Wash. 1/2" I.D.*	
29	736-0275		Fl-Wash. .34" I.D. x .60" O.D.		77	736-0226		Fl-Wash. .469" I.D. x .88" O.D.	
30	714-0104		Intern. Cot-Pin 5/16" Dia.		78	754-0241		V-Belt	
31	736-0275		Fl-Wash. .34" I.D. x .60" O.D.		79	750-0706		Spacer 1.00" x .380" O.D.	
32	747-0394		Speed Control Rod†		80	736-0405		Washer .56 I.D. x 1.25" O.D.	
	747-0451		Speed Control Rod††		81	712-0922		Hex Nut 1/2-20 Thd.	
33	720-0165		Ball Knob		82	711-0676		Torque Rod	
34	734-0594		Rear Wheel Rim Only		83	748-0294		Flange Bearing .378	
35	736-0242		Bell-Wash. .345" I.D. x .88"		84	736-0187		Fl-Wash. .640" I.D. x 1.24"	
36	710-0627		Hex L-Bolt 5/16-24 x .75" Lg.		85	15569		Idler Bracket Ass'y.	
37	734-0591		Rear Wheel Ass'y. Comp. Tire Only		86	736-0283		Thrust Wash. .635" I.D.	
	734-0275				87	732-0436		Extension Spring 7.58" Lg.	
38	714-0470		Cotter Pin 1/8" Dia. x 1.25"*		88	736-0284		Thrust Wash. .385" I.D.	
39	732-0389		Extension Spring 17.0" Lg.		89	15585		Idler Bracket Ass'y. For Clutch	
40	734-0255		Air Valve		90	711-0747		Belt Guard Pin 1/4" Dia.	
41	16475		Shift Lever Ass'y.		91	747-0422		Clutch Rod	
42	732-0499		Compression Spring 1.50" Lg.		92	735-0196		Foot Pad	
43	710-0789		C Sink AB S-Tap Scr. #8 x .50" Lg.		93	17100		Mtg. Brkt. Variable Pulley	
44	726-0206		Push-in Nut #10		94	15642		Weld Bolt Brkt. Ass'y.	
45	732-0420		Spring Switch		97	712-0798		Hex Nut 3/8-16	
					98	736-0217		L-Wash. 3/8 Heavy Duty	
					99	710-0118		Hex Bolt 5/16-18 x .75" Lg.*	
					100	16482		Shift Lever Spring Brkt.	

†Model 13504 Only.
††Model 13518 Only.

*For faster service obtain standard nuts, bolts and washers locally.
If these items cannot be obtained locally, order by part number and size as shown on parts list.

13504
13518

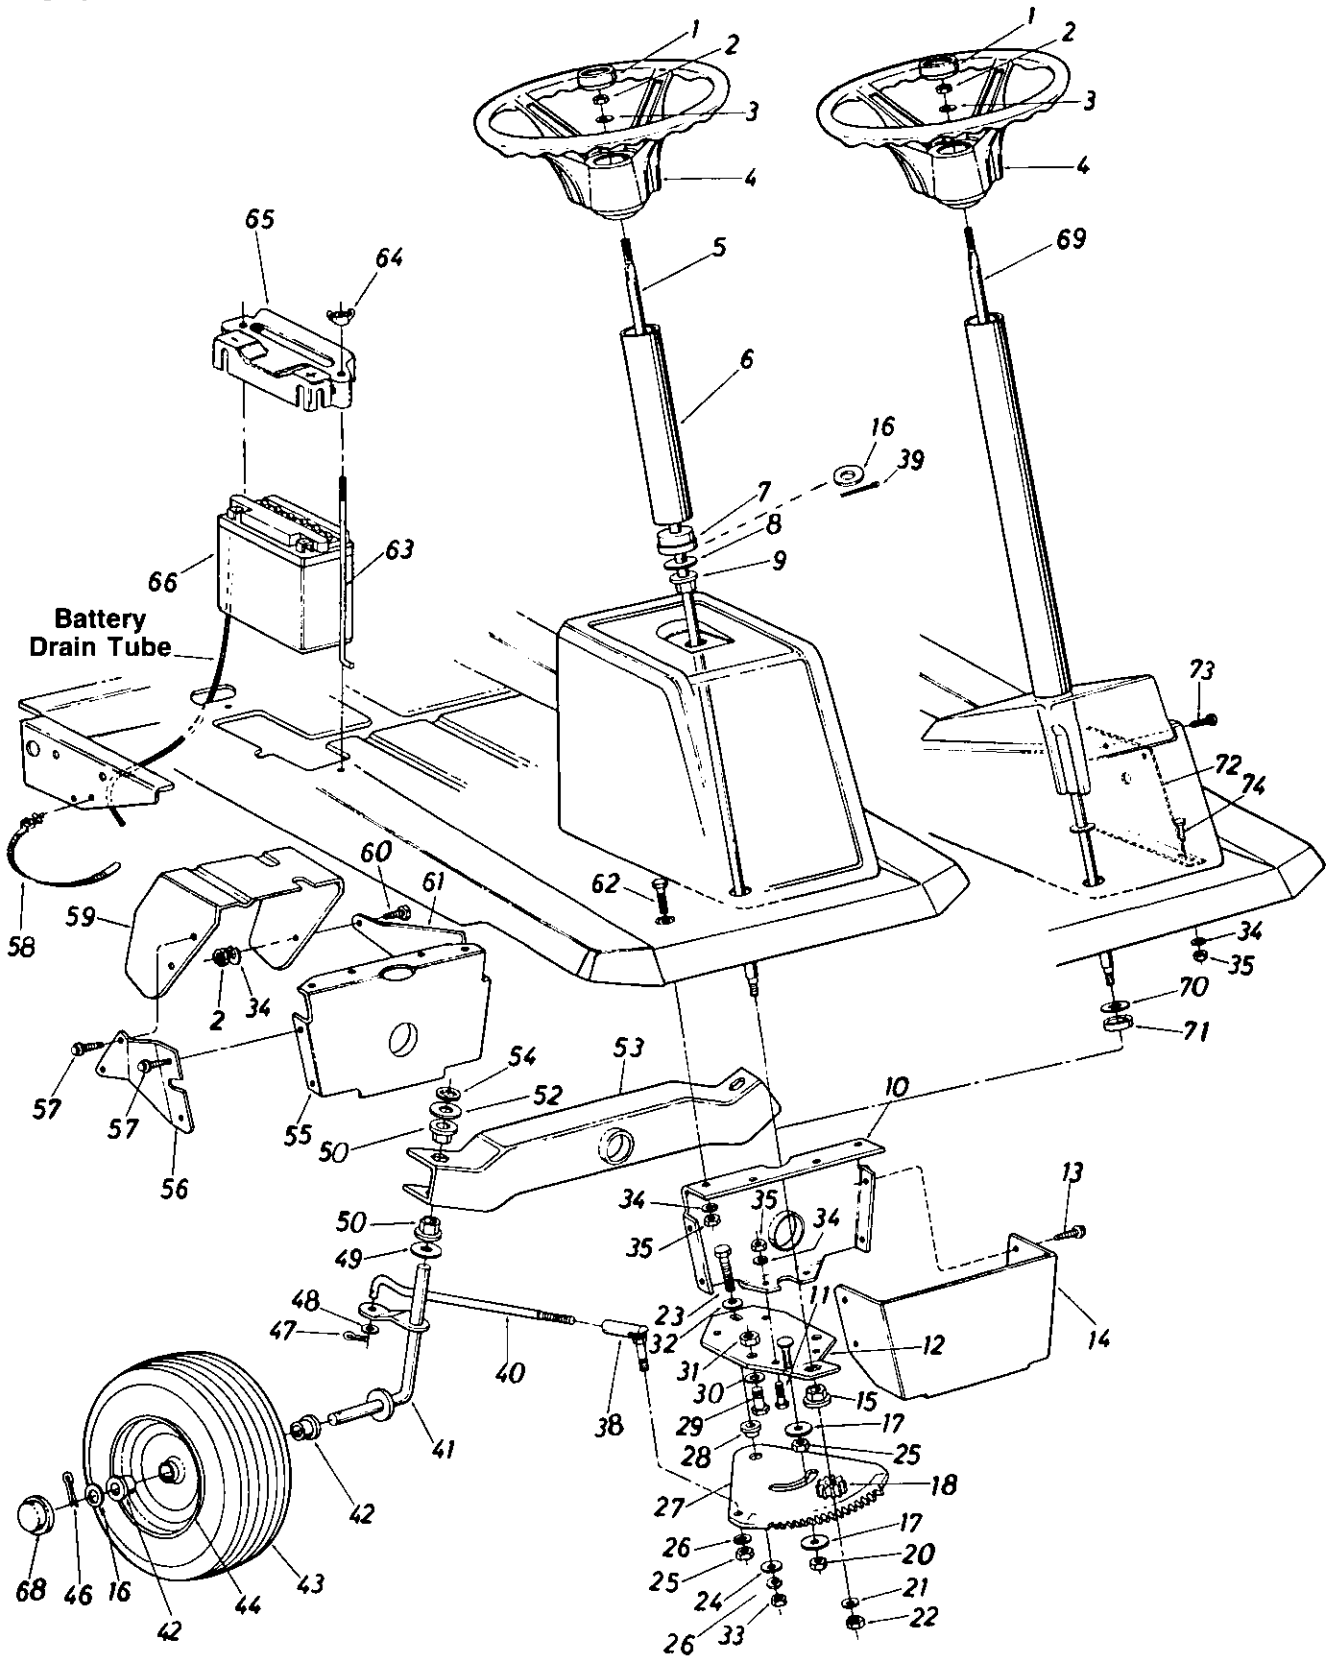

13504 13518

PARTS LIST FOR MODELS 13504 AND 13518 RIDING MOWERS


REF. NO.	PART NO.	COLOR CODE	DESCRIPTION	NEW PART	REF. NO.	PART NO.	COLOR CODE	DESCRIPTION	NEW PART
1	731-0220		Steering Wheel Cap		39	714-0115		Cotter Pin 1/8" Dia. x 1.0"†	
2	712-0237		Hex L-Nut 5/16-24 Thd.		40	747-0417		Steering Tie Rod	
3	736-0242		Bell-Wash. .345" I.D. x .88"		41	15616		Front Axle Ass'y.—R.H.	
4	731-0805		Steering Wheel Ass'y.			15617		Front Axle Ass'y.—L.H. (Not Shown)	
5	738-0700		Steering Shaft†						
6	750-0568		Steering Tube Spacer†		42	741-0487		Flange Bearing .632" I.D.	
7	731-0651		Steering Tube Spacer†		43	◀		Front Wheel Ass'y. Comp.	
8	736-0187		FI-Wash. .635" I.D. x 1.24"†		44	◀		Front Wheel Rim Only	
9	741-0225		Hex Flange Bearing†		46	714-0470		Cotter Pin 1/8" Dia. x 1.25"*	
10	15613		Pivot Bar Bracket		47	714-0115		Cotter Pin 1/8" Dia. x 1.00"*	
11	710-0118		Hex Bolt 5/16-18 x .75" Lg.*		48	736-0300		FI-Wash. .385" I.D. x .87"	
12	17130		Steering Gear Support Brkt.		49	736-0187		FI-Wash. .635" I.D. x 1.24"	
13	710-0776		Hex Wash. Hd. AB-Tap Scr. 1/4 x .62" Lg.		50	741-0225		Hex Flange Bearing	
14	15608		Steering Gear Cover		52	736-0156		FI-Wash. .635" I.D. x 1.12"	
15	741-0225		Hex Flange Bearing		53	15610		Pivot Bar Ass'y.	
16	736-0285		FI-Wash. .640" I.D. x 1.5"		54	726-0159		Speed Nut 5/8" I.D.	
17	736-0320		FI-Washer 3/8" I.D. x 1.37"		55	15613		Pivot Bar Bracket	
18	748-0290		Steering Pinion Gear		56	15694		Bracket Reinforcement—R.H.	
19	736-0320		FI-Wash. .385" I.D. x 1.38"		57	710-0776		Hex Wash. Hd. AB-Tap Scr. 1/4 x .62" Lg.	
20	712-0116		Hex L-Nut 3/8-24		58	726-0154		Cable Tie	
21	736-0275		FI-Wash. .34" I.D. x .68"		59	15562		Clutch-Brake Pedal Ass'y.	
22	712-0123		Hex Nut 5/16-24 Thd.*		60	710-0118		Hex Bolt 5/16-18 x .75" Lg.*	
23	710-0191		Hex Bolt 3/8-24 x 1.25" Lg. (Grade 5)		61	15699		Bracket Reinforcement—L.H.	
24	736-0320		FI-Wash. .385" I.D. x 1.38"		62	710-0118		Hex Bolt 5/16-18 x .75" Lg.*	
25	712-0241		Hex Nut 3/8-24 Thd.*		63	711-0222		Battery Hold Down Rod	
26	736-0169		L-Wash. 3/8" I.D.*		64	712-0113		Wing Nut Solid 1/4-20 Thd.	
27	717-0472		Steering Gear Segment		65	731-0708		Battery Hold Down Cover	
28	738-0541		Shoulder Spacer .622" Dia.		66	725-0514		12V Battery	
29	710-0689		Hex Bolt (Nylon) 1/2-13 x .75"		68	731-0484		Plastic Hub Cap	
30	736-0160		FI-Wash. .530" I.D. x .930"		69	16513		Steering Shaft Ass'y.††	
31	712-0206		Hex Nut 1/2-13 Thd.*		70	736-0187		FI-Wash. .635" I.D. x 1.24"††	
32	736-0105		Bell-Wash. .385" I.D. x .88"		71	750-0532		Spacer (Plastic)††	
33	712-0241		Hex Nut 3/8-24 Thd.*		72	16069		Reinf. Brkt. Ass'y.††	
34	736-0119		L-Wash. 5/16" I.D.*		73	710-0323		Truss Mach. Scr. 5/16-18††	
35	712-0267		Hex Nut 5/16-18 Thd.*		74	710-0116		Hex Bolt 5/16-18 x 2.00" Lg.††	
38	723-0156		Ball Joint Ass'y. 3/8-24 Thd.						

†Model 13504 Only.

††Model 13518 Only.


◀FRONT WHEEL CHART

Description	11 x 4.0
Wheel Assembly Comp.	734-1454
Tire Only	734-1382
Rim Only	734-1455
Bearing	741-0487
Air Valve	734-0255
Grease Fitting	737-0146

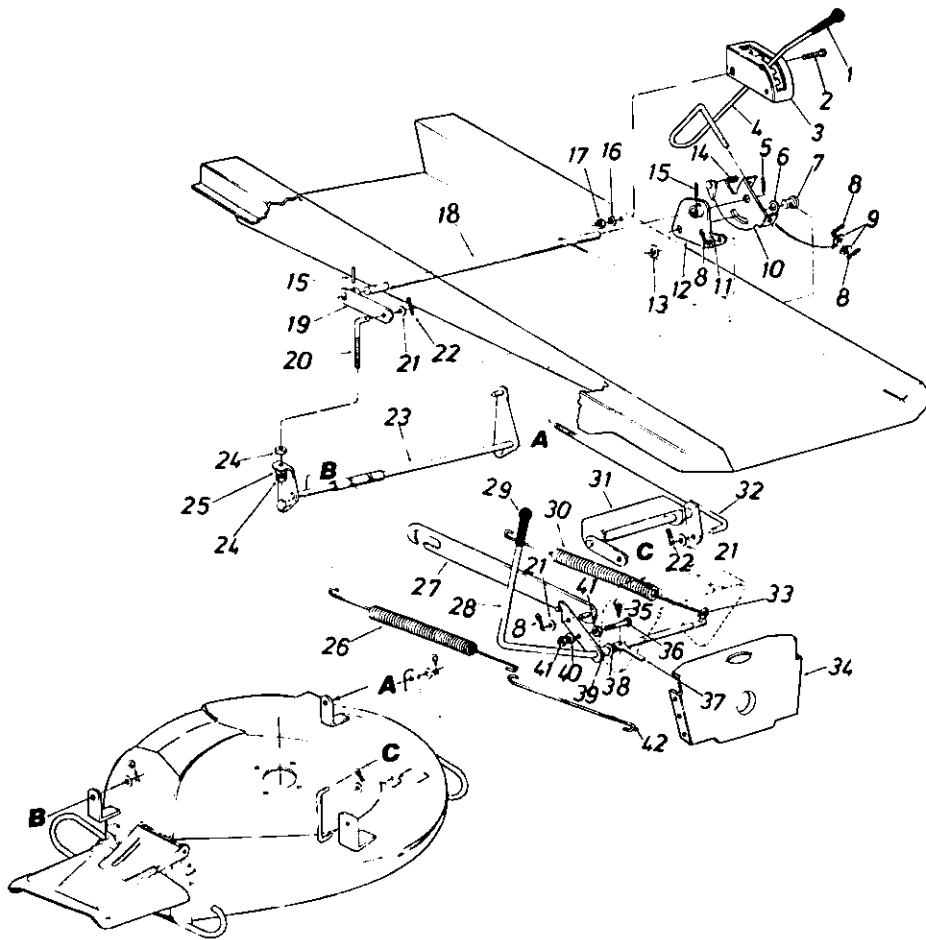

PARTS LIST FOR MODEL 13504 RIDING MOWER

REF. NO.	PART NO.	COLOR CODE	DESCRIPTION	NEW PART	REF. NO.	PART NO.	COLOR CODE	DESCRIPTION	NEW PART
1	720-0143		Grip		22	714-0145		Intern. Cotter Pin 1/2" Dia.	
2	710-0323		Truss Mach. Scr. 5/16-18 x .75" Lg.*		23	15600		Deck Link Ass'y.—Rear	
3	16397		Deck Index Bracket		24	712-0798		Hex Nut 3/8-16 Thd.*	
4	747-0651		Deck Lift Handle		25	736-0169		L-Wash. 3/8" I.D.*	
5	715-0134		Spring Pin Spir. 3/16" Dia. x 1.50" Lg.		26	732-0540		Extension Spring .73" O.D. x 13.84" Lg.	
6	736-0187		FI-Wash. .385" I.D. x .87"		27	15644		Deck Drive Control Bracket	
7	711-0749		Adj. Ferrule Deck Lift Handle		28	15568		Blade Engagement Lever Ass'y.	
8	714-0115		Cotter Pin 1/8" Dia. x 1.0"*		29	720-0143		Grip	
9	736-0160		FI-Wash. .531" I.D. x .930"		30	732-0540		Extension Spring .73" O.D. x 13.89" Lg.	
10	16402		Deck Lift Handle Retainer Ass'y.		31	15573		Deck Lift Ass'y.—Front	
11	736-0300		FI-Wash. .385" I.D. x .87"		32	747-0426		Deck Lift Connecting Rod	
12	15578		Deck Lift Brkt. Ass'y.—L.H.		33	711-0753		Clevis Pin Special .250" Dia.	
13	736-0162		FI-Wash. .635" I.D. x 1.04"		34	15613		Pivot Bar Bracket	
14	732-0430		Compression Spring .50" Dia. x 1.0" Lg.		35	710-0642		Hex TT-Tap Scr. 1/4-20 x .75"	
15	715-0114		Spring Pin Spir. 1/4" Dia. x 1.50" Lg.		36	710-0805		Hex Bolt 5/16-18 x 1.50" Lg. (Grade 5)	
16	736-0119		L-Wash. 5/16" I.D.*		37	732-0435		Switch Actuator	
17	712-0267		Hex Nut 5/16-18 Thd.*		38	736-0160		FI-Wash. .531" I.D. x .930"	
18	738-0550		Rear Hgt. Adj. Shaft		39	750-0515		Spacer .511" I.D. x .70" O.D. x .38" Lg.	
19	15609		Deck Lift Brkt. Ass'y.—R.H.		40	736-0119		L-Wash. 5/16" I.D.*	
20	710-0866		Deck Adj. Scr. 3/8-16 Thd.		41	712-0267		Hex Nut 5/16-18 Thd.*	
21	736-0300		FI-Wash. .385" I.D. x .87"		42	732-0451		Spring Hook	

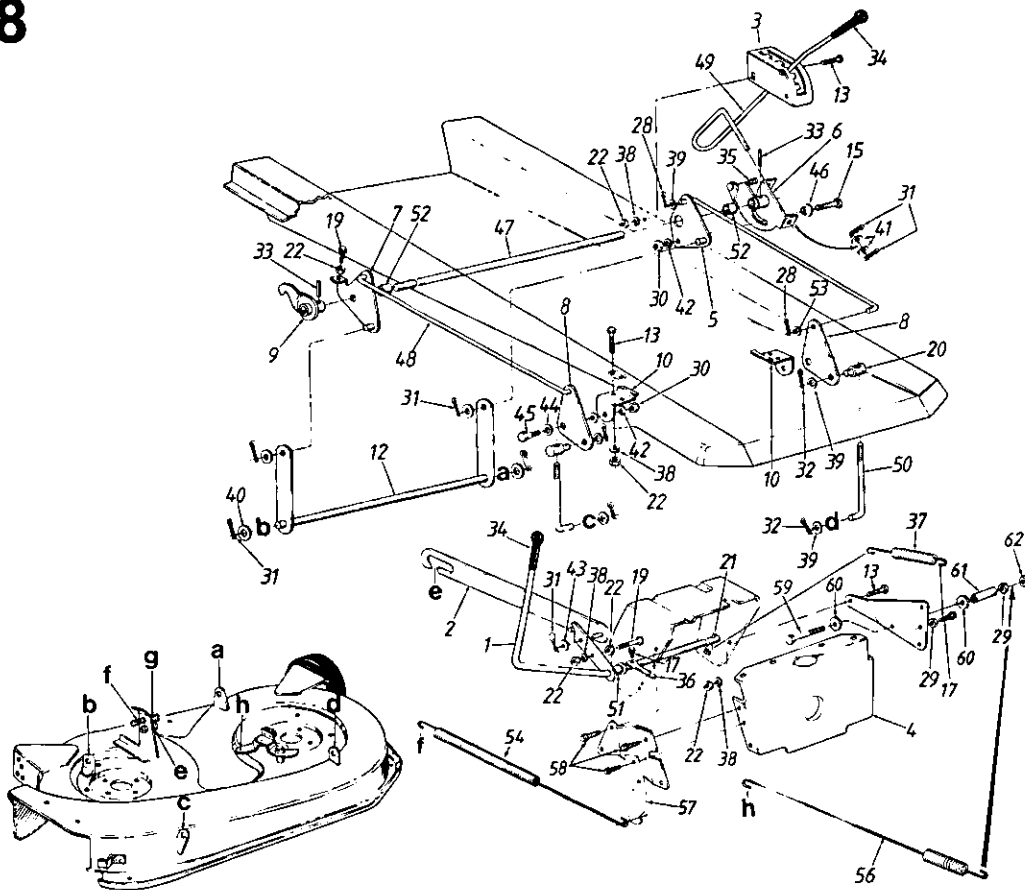


PARTS LIST FOR MODEL 13518 RIDING MOWER

REF. NO.	PART NO.	COLOR CODE	DESCRIPTION	NEW PART	REF. NO.	PART NO.	COLOR CODE	DESCRIPTION	NEW PART
1	15568		Blade Engagement Lever Ass'y.		34	720-0143		Grip	
2	15644		Deck Drive Control Brkt. Ass'y.		35	732-0430		Compression Spring 1.04"	
3	16397		Deck Index Bracket		36	732-0435		Switch Actuator	
4	15613		Pivot Bar Brkt.		37	732-0565		Ext. Spring 5.86" Lg.	
5	17108		Deck Lift Brkt. Ass'y.		38	736-0119		L-Wash 5/16" I.D.	
6	17109		Deck Lift Handle Retainer Ass'y.		39	736-0140		FI-Wash. .385 I.D. x .62	
7	17111		Deck Lift Brkt. Ass'y.		40	736-0156		FI-Wash. .635 I.D. x 1.12	
8	17112		Deck Lift Bracket		41	736-0160		FI-Wash. .531 I.D. x .930	
9	17114		Deck Lift Float Brkt Ass'y.		42	736-0169		L-Wash. 3/8" I.D.*	
10	17115		Deck Lift Pivot Brkt.		43	736-0300		FI-Wash. .385 I.D. x .87 O.D.	
12	17123		Stabilizer Shaft Ass'y.		44	736-0232		Spring Washer .530 I.D.	
13	710-0118		Hex Bolt 5/16-18 x .75" Lg.		45	738-0183		Shld. Bolt .500" Dia. x .215"	
15	710-0253		Hex Bolt 3/8-16 x 1" Lg.		46	738-0347		Shld. Spacer .625" I.D.	
17	710-0778		Hex Wash. Hd. Scr. 1/4-20 x 1.5" Lg.		47	738-0550		Rear Hot Adj. Shaft	
19	710-0817		Hex Wash.-Tap Scr. 5/16-18 x 1.25" Lg.		48	747-0557		Connecting Rod	
20	711-0198		Ferrule		49	747-0651		Deck Lift Handle	
21	711-0753		Clevis Pin (Special)		50	747-0690		J-Bolt 5.4" Lg.	
22	712-0267		Hex Nut 5/16-18 Thd.*		51	750-0515		Spacer .511 I.D.	
28	714-0507		Cotter Pin 3/32" Dia.		52	750-0707		Spacer .885 I.D.	
29	712-0287		Hex Nut 1/4-20 Thd.		53	736-0264		FI-Wash. 5/16" I.D.*	
30	712-0798		Hex Nut 3/8-16 Thd.		54	732-0531		Ext. Spring 22.05" Lg.	
31	714-0115		Cot-Pin 1/8" Dia. x 1" Lg.		56	732-0563		Ext. Spring 15.38" Lg.	
32	714-0145		Int. Cot. Pins 3/8" Dia.		57	17310		Spring Anchor	
33	715-0114		Spring Pin Spir. 1/4" Dia.		58	710-0776		Hex Wash. Hd. AB-Tap Scr. 1/4 x .62" Lg.	
					59	710-0102		Hex Bolt 1/4-20 x 2.5" Lg.	
					60	736-0176		FI-Wash. .25" I.D. x .93"	
					61	750-0583		Spacer .255" I.D.	
					62	712-0291		Hex L-Nut 1/4-20 Thd.	

N

13504
13518

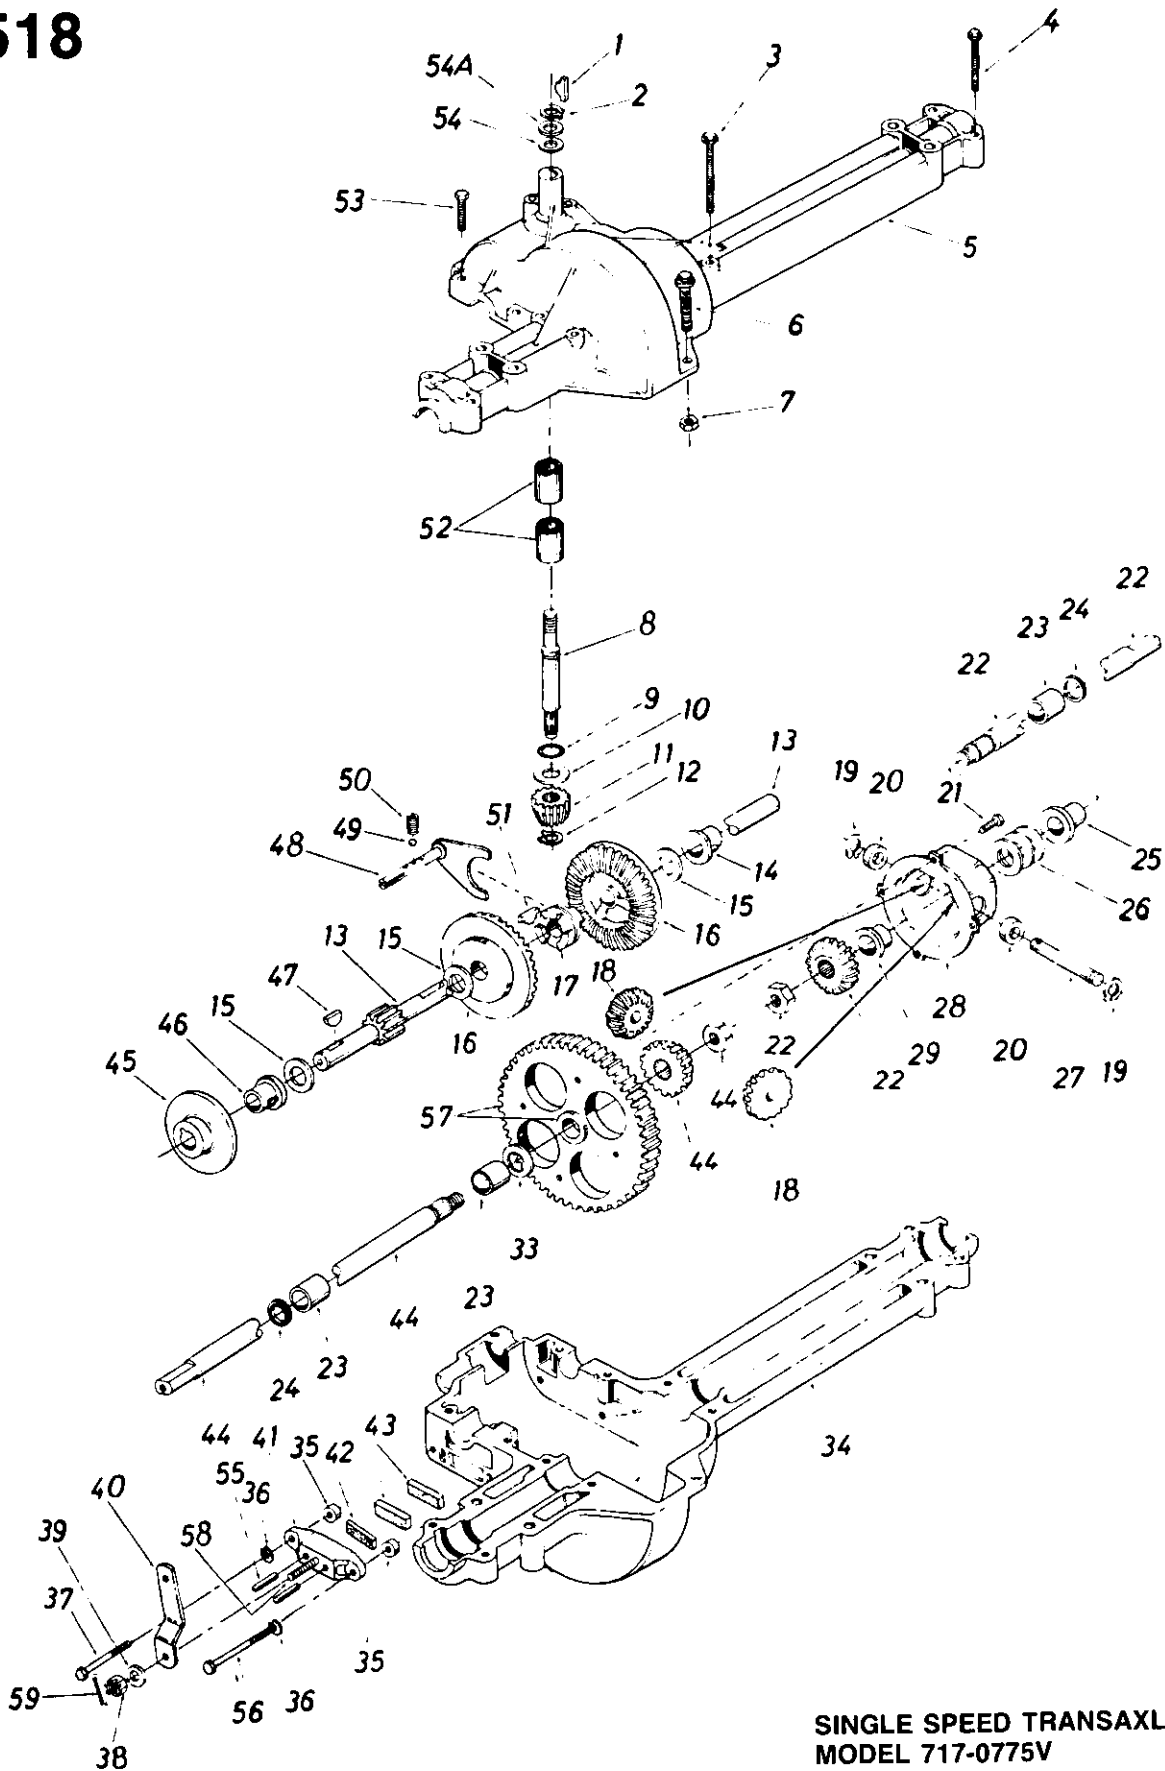

SINGLE SPEED TRANSAXLE—L.H.
MODEL 717-0775V

13504

13518

PARTS LIST FOR SINGLE SPEED TRANSAXLE LEFT HAND 717-0775V

REF. NO.	PART NO.	COLOR CODE	DESCRIPTION	NEW PART	REF. NO.	PART NO.	COLOR CODE	DESCRIPTION	NEW PART
1	714-0129		#4 Hi-Pro Key 3/32 x 5/8" Dia.		34	717-0761		Lower Housing	
2	716-0115		Snap Ring .625" Shaft		35	750-0555		Spacer .53" O.D. x 3/8" Lg.	
3	710-0854		Hex Bolt 1/4-20 x 1.75" Lg.*		36	736-0329		L-Wash. 1/4" I.D.*	
4	710-0378		Hex Bolt 5/16-18 x 2.5"		37	710-0886		Hex Bolt 1/4-20 x 1.50" Lg. (Grade 5)	
5	717-0764		Upper Housing		38	712-0335		Castle Nut 5/16-24 Thd.	
6	710-0889		Hex FI-Bolt 1/4-20 x .88" Lg.*		39	736-0159		FI-Wash. .344" I.D. x .875" O.D.	
7	712-0287		Hex Nut 1/4-20 Thd.*		40	717-0772		Actuating Arm	
8	717-0634		Input Shaft		41	717-0679		Brake Yoke	
9	721-0178		Square Seal 5/8" I.D.		42	717-0682		Puck Plate	
10	736-0335		Thrust Washer 5/8" I.D. x 1.25" O.D.		43	717-0678		Brake Puck	
11	717-0633		Pinion Input 14T		44	717-0765		Axle L.H. Ass'y.—Kit	
12	716-0108		Retaining Ring 7/16" Ext.		45	717-0677		Brake Disc	
13	717-0768		Drive Shaft		46	741-0337		Flange Bearing 5/8" I.D. x 15/16" Lg.	
14	741-0336		Flange Brg. 5/8" I.D. x 3/4" Lg.*		47	714-0161		Woodruff Key 3/16 x 5/8 HT	
15	**		FI-Wash. (See Below)		48	717-0754		Shift Fork Ass'y.	
16	717-0757		Bevel Gear 42T		49	741-0862		Ball Detent .250" Dia.	
17	717-0667		Clutch Collar		50	732-0863		Spring Detent	
18	717-1020		Miter Gear 15T (H.D.)		51	714-0169		#9 Hi-Pro Key 3/16" x 3/4" Dia. HT	
19	716-0142		Snap Ring		52	741-0335		Needle Brg. 5/8" I.D. x 1/2" Lg.	
20	717-0690		Thrust Bearing 1/2" I.D. x 1.0" O.D.		53	710-0855		Hex Bolt 1/4-20 x 1.00" Lg.	
21	710-0862		Pan Head Scr. 1/4-20 x .50" Lg. w/Patch		54	736-0336		FI-Wash. 5/8" I.D. x .030	
22	717-0766		Axle R.H. Ass'y.—Kit		54A	736-0337		FI-Wash. 5/8" I.D. x .040	
23	741-0340		Sleeve Bearing 3/4" I.D. x 1.0" Lg.		55	741-0343		Actuating Pin 5/16" Dia.	
24	721-0179		Oil Seal 3/4" I.D.		56	710-0966		Hex Bolt 1/4-20 x 2.50" Lg. (Grade 5)	
25	741-0339		Flange Bearing 3/4" I.D. x 15/16" Lg.		57	717-0767		Differential Gear 72T Ass'y. w/Bearing	
26	736-0188		FI-Wash. .760" I.D. x 1.49" O.D.		58	717-0681		Sq. Hd. Bolt 5/16-24 Thd.	
27	717-0673		Cross Shaft		59	1544-013		Cotter Pin 3/32" Dia. x .50" Lg.	
28	717-0777		Differential Housing Ass'y.		—	737-0148		Grease—Shell (10 oz.)	
29	—		Part of Ref. 28						
33	736-0188		FI-Wash. .760" I.D. x 1.49" O.D.						

**Ref. No. 15 736-0349 FI-Wash. 5/8" I.D. x 1.0" O.D. x .020" Thk.
736-0336 FI-Wash. 5/8" I.D. x 1.0" O.D. x .030" Thk.
736-0337 FI-Wash. 5/8" I.D. x 1.0" O.D. x .040" Thk.

TROUBLE SHOOTING CHART FOR ELECTRIC START MODELS

TROUBLE	LOOK FOR	REMEDY
Engine will not crank	Battery installed incorrectly	The battery must be installed with the negative terminal, identified at the terminal post by (Neg, N or -), grounded. The positive terminal (Pos, P or +) attaches to the large cable from the solenoid. The small red wire from the fuse holder or circuit breaker is also attached to the positive terminal.
	Blown fuse or circuit breaker	Replace fuse with 7½ amp. fuse ¼ x 1¼" lg. Circuit breaker will reset itself when it cools off. Fuses or circuit breakers seldom open or fail without a reason. The problem must be corrected. Check for loose connections in the fuse holder. Replace fuse holder if necessary. A dead short may be in the cranking or charging circuit where the insulation may have rubbed through and exposed the bare wire. Replace the wire or repair with electrician's tape if the wire strands have not been damaged. Note: Look for a wire pinched between body panels, burned by the exhaust pipe or muffler or rubbed against a moving part.
	Battery is dead or weak	<p>Use a hydrometer to check the condition of the battery. The Specific Gravity (s.g.) should be 1.265 at 80°F. (1.215 s.g. minimum needed for cranking engine). The reason for the battery failing must be determined. (1) Defective battery. Battery will not accept or hold a full charge. (2) Short circuit. Check for grounded wire. (3) Engine alternator charging system not working. The charging system is an alternator located under the flywheel. It is unregulated and rated 3 amp. at 3600 r.p.m. A diode (rectifier) is located in the output lead just before the wire harness plug on the engine side.</p> <div style="text-align: center;"> </div> <p>The diode changes A.C. to D.C. to charge the battery. A bad diode can either fail to charge the battery or discharge the battery if the alternator is shorted as well as the diode. To test: (1) Disconnect charger lead from the battery (small red wire). (2) Connect 12 V small test lamp between the 3 amp. D.C. charge lead and the positive terminal of the battery. (3) With the engine off, the lamp should not light. If it does, the diode and possibly the alternator should be replaced. (4) Start the engine. The lamp should light. If it does not, the alternator (stator) or lead wire is bad and should be replaced.</p>
Mechanical failure. (Wires and switches)	The interlock system includes two mechanical activated switches which are wired in series in the circuit used to energize the starter solenoid. While testing the interlock system, you will make the mower temporarily unsafe by permitting the engine to be started with the blade and clutch engaged. WARNING: While testing, disengage the clutch, shut off the blade control, set the parking brake and place the gear shift lever in neutral. Attach a wire (minimum 18 gauge) to the positive terminal of the battery and touch the other end to the small terminal on the solenoid. If the engine does not crank: (1) There is a loose connection or poor ground. (2) The solenoid may be bad. The solenoid can be checked by using a heavy wire (#8 gauge minimum) and jumping between the two large terminals. If the engine cranks, the solenoid is bad. (3) If the engine does not crank when you jump the solenoid, have the starter motor tested by an authorized engine dealer. If the engine does crank, the problem is with one of the safety switches, ignition switch or the wire between the fuse holder (or circuit breaker) and the small terminal on the solenoid. Note: Look for a poor connection at the switches or a defective switch. Replace if necessary.	
Engine cranks but will not start	Throttle or choke not in starting position	Check owner's guide for correct position for throttle control and choke for starting.
	No spark to spark plug	<p>Spark plug lead disconnected. Connect lead. Hold spark plug lead away from engine block about 1/8". Crank engine. There should be a spark. If not, have engine repaired at authorized engine service dealer.</p> <p>Faulty spark plug. To test, remove spark plug. Attach spark plug lead to spark plug. Ground the spark plug body against the engine block. Crank the engine. The spark plug should fire at the electrode. Replace if it does not.</p>

TROUBLE SHOOTING CHART FOR ELECTRIC START MODELS

TROUBLE	LOOK FOR	REMEDY
	No fuel to the carburetor	Gasoline tank empty. Fill. Fuel line or in-line fuel filter plugged. Remove and clean fuel line. Replace filter if necessary.
	Air filter dirty	If the air cleaner is dirty, the engine may not start. Clean or replace as recommended by the engine manufacturer.
Engine smokes	Engine loses crankcase vacuum	Dipstick not seated or broken. Replace defective part. Engine breather defective. Replace.
Excessive vibration	Bent or damaged blade spindle	Stop engine immediately. Check all pulleys, blade adapters, keys and bolts for tightness and damage. Tighten or replace any damaged parts.
	Bent blade	Stop engine immediately. Replace damaged blade. Only use original equipment blades.
Mower will not discharge grass or leaves uncut strips	Engine speed low Transmission selection Blades short or dull	Throttle must be set between 3/4 and full throttle. Use lower transmission speed. The slower your ground speed, the better the quality of cut. Sharpen or replace blades (uncut strip problem only).

BELT TROUBLE SHOOTING CHART

Failure	Probable Cause	Corrective Action
1 Broken Belt	1A Sudden stop or shock load to belt 1B Incorrect belt used 1C Abrupt engagement 1D Defective or damaged belt	1A Inspect rider for cause such as foreign objects stuck in between deck and frame or belt path. Remove obstruction and inspect for damage. Replace belt per parts list in this manual. 1B Replace with proper belt only. See parts list in this manual. Roll belt onto pulley. Do not use a screwdriver to push or pry belt onto pulley. The sharp bend can damage internal cords. 1C Slower engagement required. 1D Refer to 1B.
2 Belt Shreds	2A Belt guides or guards incorrectly adjusted 2B Pulleys not aligned 2C Bad pulley—rough, rusty, chipped, bent, frozen bearing, etc.	2A Belt guides and guards should be adjusted to approximately 1/16 to 1/8 inch from belt when in the engaged position. 2B Realign pulleys to be within approximately 1/16 inch of each other. Check with straight edge. Be sure fastening hardware is tight. 2C Replace as necessary. Adjust as per 2B.
3 Belt Comes Off	3A Belt stretched 3B Broken or weak idler spring	3A Adjust as necessary when applicable. Refer to 1B. 3B Replace.

YARD-MAN PARTS INFORMATION

POWER EQUIPMENT PARTS AND SERVICE

Parts and service for all YARD-MAN manufactured power equipment are available through local Authorized Service Dealers. Check the yellow pages. All orders should specify the model number of your unit, part numbers, description of parts and the quantity of each part required. **DO NOT SEND PARTS ORDERS TO FACTORY.** Service Distributors listed below, identified by state abbreviation, may be contacted for service assistance.

NC ALLISON-ERWIN CO.
SC 2920 N. Tryon Street
S VA P.O. Box 32308
Charlotte, NC 28232
(704) 334-8621

CT COBBLE MOUNTAIN SUPPLY
RI 615 West Johnson Ave.
E-MA Cheshire, CT 06410
(203) 272-1866

ME M. L. COFFIN CO.
NH 725 Broadway
Bangor, ME 04401
(207) 942-8289

MS DICKERSON DISTRIBUTORS,
AL INC.
P.O. Drawer 231
127 N. W. Depot
Durant, MS 39063
(601) 653-3004

S-FL FLORIDA TURF & GARDEN
EQUIP.
7275 NW 64th St.
Miami, FL 33166
(305) 592-3846

UP-NY GAMBLE DISTRIBUTING INC.
P.O. Box 389
West End Ave.
Carthage, NY 13619
(315) 493-2270

CO GENERATOR CITY
1845 N Federal Blvd.
Denver, CO 80204
(303) 455-2800

MI IDEAL MOWER SALES
NW-OH 811 Woodward Heights
Ferndale, MI 48220
(313) 541-4660

C-FL MANLEY TRACTOR SALES
5909 E. Broadway
Tampa, FL 33619
(813) 626-5900

WI MERCO CORP.
N-MI 4080 N. Pt. Washington Rd.
P.O. Box 12145
Milwaukee, WI 53212
(414) 961-3200

MN MERCO CORP. MINN.
7428 Washington Ave.
Eden Prairie, MN 55344
(612) 941-3550

NJ DE NIEMEYER CORP.
NY MD 1135 Phoenixville Pike
PA N-VA P.O. Box 1477
WA-DC West Chester, PA 19380-0037
(215) 431-7200

MO OZARK EQUIPMENT CO.
E-KS Hwy. 63 & Black Street
Rolla, MO 65401
(314) 364-2180

N-FL POWER EQUIP. DIST. INC.
GA 565 S. Edgewood Ave.
Jacksonville, FL 32205
(904) 387-1512

UT MT POWERED PRODUCTS
NV S-ID 1661 N. Beck St.
Salt Lake City, UT 84116
(801) 359-9767

OH RAHRIG SALES INC.
IN 108-110 W. Lima St.
W-WV Forest, OH 45843
(419) 273-2556

KY TN RASCHE CYCLE CO.
S-IL 713 Kentucky Ave.
Paducah, KY 42001
(502) 443-5698

ND ROTT-KELLER CO.
65-28th St. S.
Fargo, ND 58107
(701) 235-0563

BRIGGS & STRATTON, TECUMSEH AND PEERLESS PARTS AND SERVICE

Briggs & Stratton, Tecumseh and Peerless parts and service should be handled by your nearest authorized engine service firm. Check the yellow pages of your telephone directory under the listing **Engine—Gasoline**, Briggs & Stratton or Tecumseh Lauson.

NM HUGO SCHULTE & CO.
6666 Fourth St.
Albuquerque, NM 87107
(505) 345-2633

VT J & I SILLICH COMPANY
W-MA 311 River Dr.
Hadley, MA 01035
(413) 549-7500

SD STERN OIL CO. INC.
394 South Main
P.O. Box 218
Freeman, SD 57029
(605) 925-7999

TX TIMBERLAND SAW CO.
OK Hwy. 31 South
AR P.O. Box 1227
LA Marshall, TX 75671
(214) 935-5251

IL TRYSON DISTRIBUTING
COMPANY
670 Bonnie Lane
Elk Grove Village, IL 60007
(312) 593-3010

OR R. M. WADE & CO.
AK 10025 S. W. Allen Blvd.
Beaverton, OR 97005
(503) 641-1865

WA R. M. WADE & CO.
W-ID 5808 S. 196th St.
Kent, WA 98032
(206) 872-9233

CANADA MTD PRODUCTS CANADA
97 Kent Ave.
Kitchener, Ontario
Canada, N2G 4J1
(519) 579-5500

EXPORT DRAKE AMERICA CORP.
#2 Gannett Drive
White Plains, NY 10604
(914) 697-9800

WARRANTY PARTS AND SERVICE POLICY

(0687)

The purpose of warranty is to protect the customer from defects in workmanship and materials, defects which are NOT detected at the time of manufacture. It does not provide for the unlimited and unrestricted replacement of parts. Use and maintenance are the responsibility of the customer. The manufacturer cannot assume responsibility for conditions over which it has no control. Simply put, if it's the manufacturer's fault, it's the manufacturer's responsibility; if it's the customer's fault, it's the customer's responsibility.

CLAIMS AGAINST THE MANUFACTURER'S WARRANTY INCLUDES:

1. Replacement of Missing Parts on new equipment.
2. Replacement of Defective Parts within the warranty period.
3. Repair of Defects within the warranty period.

All claims MUST be substantiated with the following information:

1. Model Number, Serial Number and/or Data Code of unit involved.
2. Date unit was purchased or first put into service.
3. Date of failure—Date Repaired.
4. Nature of failure—Correction.