
user **manual** guide de l'utilisateur

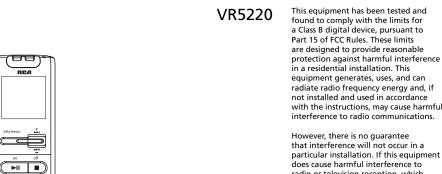

radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the wing measures:

FCC information

This device complies with Part 15 of the FCC Rules. Operation is subject to the

following two conditions: (1) This device

nterference that may cause undesired

may not cause harmful interference, and (2) this device must accept any

interference received, including

interference by one or more of the Reorient or relocate the receiving

antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from

that to which the receiver is

experienced radio/TV technician for Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

Consult the dealer or an

his Class B digital apparatus co vith Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003

tional details should any discrepancies

arise in other languages.)

Service information FC This product should be serviced only by those specially trained in appropriate

servicing techniques. For instructions on how to obtain service, refer to the war ranty included in this user manual. Manufacturer/Responsible party Audiovox Electronics Corp, 150 Marcus Blvd, Hauppauge, NY 11788 For your records In the event that service should be The English version serves as the final reference on all products and opera-

RAIN OR MOISTURE

HE LIGHTNING

THE TRIANGLE IS A

OLTAGE" INSIDE THI

FLASH AND

required, you may need the model number and the serial number. In the space below, record the date and place of purchase and the serial number Date of Purchase Place of Purchase

IE EXCLAMATI RIANGLE IS A Precautions for the unit LERTING YOU O after transportation from a STRUCTIONS cold place to a warm place;

condensation problem may be resulted. Avoid shock to the unit especially during recording. Recorded data

Maintenance

Clean the unit with a soft cloth, or

a damp chamois leather. Never use

can be damaged.

Do not store the unit near fire,

places with high temperature or places with direct sunlight. Do not operate or store unit

in places with frequent static electricity or electrical noise (e.g. speaker. TV set). Clean the unit with a soft cloth or

a damp chamois leather. Never use solvents.
The unit must only be opened by qualified personnel

Do not expose this appliance to rain or moisture.

Important battery precautions Any battery may present a risk of

fire, explosion, or chemical burn if abused. Do not try to charge a battery that is not intended to be recharged, do not incinerate, and do not puncture. Non-rechargeable batteries, such as alkaline batteries, may leak if left

in your product for a long period of time. Remove the batteries from the product if you are not going to use it for a month or more. If your product uses more than

one battery, do not mix types and make sure they are inserted correctly. Mixing types or inserting Discard any leaky or deformed battery immediately. They may

cause skin burns or other persona injury. Please help to protect the environment by recycling or disposing of batteries according to federal, state, and local regulations.

Before you begin

Unpacking your player You should have the following one voice recorder one user manual one quick start guide

Installing batteries

door to open.

indications.

This player can be operated by 2

"AAA" batteries (not included).

Insert the two supplied

"AAA" batteries with

polarities matching

Replace the battery

compartment door

the indicator is empty.

on display for batteries level.

Turn off the player first

If power interruption

before replacing batteries.

time have to be set again.

Basic operations

To select folders:

the display.

₩ or **VOL**

(A/B/C/D)

To select files:

Press I◄◄/

Press ■ .

Selecting folders and files

Press and hold info/menu

for about 2 seconds and then

menu item FOLDER flashes on

+/- to select a specific folder

Select the folder you need.

you can press I≪/→I to select

it directly in both stop and

Press ▶II to start playback

2. Press I≪/►►I to select

the file you want.

If the file you want is

in the current folder,

ABCD

02/

103

release the button. The first

exceeds 20 seconds, date and

Slide the battery compartment

Refer to the battery level indicator

Replace with new batteries when

Using earphones and

external microphone When earphones are connected, sound output from

Auto power shut down

The player will be automatically

turned off if left idle for three

speaker will be muted. When external microphone is connected, no record can be made from built-in

microphone. Player on/off Press on > 11 to turn on the player. Press off to turn off the player.

Keys lock

To avoid accidental key activation, slide the key lock selector toward the lock icon (a) to lock the keys Reverse the step to unlock them

5. Press and hold I← or ▶ to

make quick search within a

Quick search skips by second

within the first minute of

a recording. After that, the

search skips by minute. To

resume searching by second,

release the button once and

then press and hold I≪ or ▶

one file forward or backward.

6. Press (← or →) once to skip

7. Press ■ to stop playback.

To display file Information:

Press info/menu repeatedly to

Record date of current file


Record time of current file

Bookmark (if available) of

show various information of the

General controls

Player controls

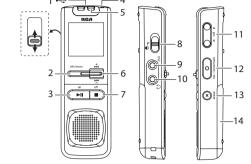

It is important to read this user manual prior to using your new product for the first time

- 1. USB connector press the button on the back and then slide to extend or retreat the connector.
- Press repeatedly to show information of current file. or pauses playback.
- 5. Built-in microphone
- External microphone jack 2. info/menu - press and hold 10. External earphones jack 11. **+ Vol –** – adjusts volume, to access the player menu.
- 3. **on ▶II** turns on player, starts 4. Recording indicator
- 6. + **I**← / **▶**I − skips / searches backward or forward, selects / browses in the player menu.
- 7. off – turns off player, stops playback or recording 8. Key lock selector
 - 12. O, rec/bookmark starts and pauses recording, inserts bookmarks.

selects / browses in the player

13. x. erase - erases files. bookmarks or format memory. 14. Battery compartment door

Day (month/day)

12/24 hour time

Time (hour/minute)

2. Press I≪/▶ or VOL +/- to


3. Press ■ to confirm your

make selections or adjust

selection and exit setting.

Exit player menu

values.

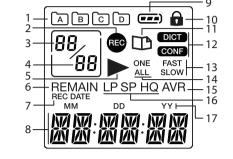

- 1. Folder (A/B/C/D) 10. Key lock function activated 2. Recording in progress 11. Bookmark 12. Recording conditions File selected 4. Total number of files in a 13. Playback speed
- 5. Playback in progress Remaining time for recording Recording date 8. Area for displaying messages
 - activated 16. Recording quality 17. Month (MM), Day (DD) and Year (YY)

Display messages

The messages show at the bottom of the display during operation. Refer to the below for their meanings:

(

THE PRODUCT.

Power Supply

(battery power) 2 x "AAA"

ESD Remark: In case of misfunction

due to electrostatic discharge just reset the product (disconnect and reconnect

of the power source may be required) to resume normal operation.

CAUTION

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK), NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

SEE MARKING ON BOTTOM / BACK OF PRODUCT

WARNING: TO PREVENT FIRE OR ELECTRICAL

SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO

12 HOUR 12 hour time display mode 24 HOUR 24 hour time display mode ADD BK Insert bookmark Appendix (Adding Appendix) BATTLO Batteries are weak CUT-E Cut End (Cutting) CUT-S Cut Start (Cutting) **DEL 01** Delete the current file Delete all files in a folder Delete all bookmarks in the current file Format the memory **FORMAT** FULL Memory full INSERT Key locked NO BK MK

OFF

SEN MI

Insertion (Inserting New Segments) No bookmark created in the current file NO TONE No beeping sound (Setting Beep Sound) Off (Automatic Voice Recording) On (Automatic Voice Recording) Playback or recording is paused **PCLINK** Player is connected to the computer

SPEED Speed of playback Beeping sound on (Setting Beep Sound) TONE **VOL 15** Volume (Setting Volume) Memory rearrangement/System is busy

Sensitivity Level (AVR)

Setting day and time

With day and time set, you can always read on the display the recording date and time of your recorded messages. Normal recording is still possible without setting. However, no correct recording date and time can be referenced in your recorded

To set the date and time: 1. Press on ▶II to turn on the player.

messages.

2. In stop mode, press and hold info/menu for about 2 seconds FOLDER and then release the button. The first menu item FOLDER


flashes on the display. 3. Press info/menu repeatedly until YY flashes on the display. 4. Press (◄◄/▶►) or **Vol** +/- to adjust the value (default year:

2009) and then press info/ menu to confirm. · If day and time have not been set previously, the player goes to step 4 automatically after

Setting recording

condition

5. After year is set, you will then be guided to set month, day, 12/24 hour display, hour and minute. Follow the operations in step 4 for settings.

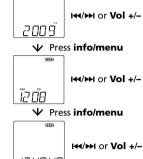

Press **info/menu** to confirm and

exit settings.

12 HO UR

RM 12:00

 ✓ Press info/menu Basic playback To play back recorded files: **I**←/**>>I** or **Vol** +/-Select a folder and a file.

> Press ▶II to pause playback, press again to resume. You can press Vol +/- to adjust listening volume

play modes.

current location

current file:

Remaining record time playback)

Current clock time

Elapsed play time (during

Player menu

Press and hold info/menu for about 2 seconds and then release the button. The first menu item **FOLDER** flashes on the display.

To access the player menu:

FOLDER To change settings in the

1. In the player menu, press info/menu repeatedly to view

Folder (A/B/C/D) Record conditions (DICT/CONF)

the following menu items:

Record quality (LP/SP/HQ)

AVR (on/off) Playback speed (FAST/SLOW)

Playback mode (one/all)

(refer to the next section) 9. Battery level indicator

Recording Setting recording mode **Manual Recording** 1. While playback is stopped,

(A/B/C/D) (refer to "Basic operations"). 2. Press O to start recording. (recording time will be displayed once you press the button)

once, press again to resume recording. 4. To stop recording, press ■

This feature allows the player to sense sound and to record only when you are speaking into the microphone. When dictation stops for about three seconds, recording will pause and then start again

1. While playback is stopped, select a destination folder (A/B/C/D) (refer to "Basic operations"). 2. Press and hold info/menu

> for about 2 seconds and then release the button. The first

the display.

the display. 3. To pause recording, press O menu.

7. Start dictation. Recording starts automatically. **AVR (Automatic Voice** Recording)

automatically when you resume dictation.

menu item **FOLDER** flashes on 3. Press info/me select a destination folder repeatedly until

> \Box N 4. Press I◄/▶▶I or VOL +/- to select between AVR ON and AVR OFF. Press ■ to exit the player 6. Press O to enter AVR mode.

AVR flashes on

14. Playback mode: play one or

15. Automatic voice recording

play all

8. During AVR recording, adjust SEN HI the sensitivity of the microphone by pressing Vol +/-, SEN with sensitivity level will show on display (e.g. increase sensitivity level when recording source is far from the player or the recording environment is quiet).

9. Press ■ to end AVR recording Repeat step 2-5 and select

During recording, the recording indicator lights. When in AVR standby mode or when recording is paused, the recording indicator flashes.

You can record up to 99 files in one folder, not exceeding 396 files in total. When the maximum limit is reached, FULL will be The first syllable or two

may be lost when you start recording because this 'sound' is used to turn on the AVR feature. It is a good practice to make some 'sounds' or say a short word to activate the AVR before you begin actual dictation To view the remaining

time and other recording information, press info/ **iu** repeatedly during

Setting recording quality To select among thre recording qualities (default Definition:

• LP (Long Play) – allows about 202 hours recording. Recording format: .voc SP (Standard Play) – allows

about 35 hours recording.

Recording format: .voc

HQ (High Quality) - allows Recording format: .wav 1. Press and hold info/menu for about 2 seconds and

then release the button. The first menu item **FOLDER** flashes on the display.

repeatedly until LP, SP or HQ shows on the display. 3. Press I≪/►►I or VOL +/- to select among LP, SP and HQ. 4. Press ■ to exit the player

To select between two recording conditions (default is DICT): Definition

CONF (Conference) – in a more open area and recording source is far from the player. **DICT (Dictation)** – in a more enclosed area and recording source is close to the player

1. Press and hold info/menu for about 2 seconds and then release the button. The first menu item FOLDER flashes on the display. 2. Press info/menu

repeatedly until **DICT** or **CONF** flashes on the display. Press I◄◄/▶▶I or

DICT and **CONF** 4. Press ■ to exit the player

microphone freely exposed to the sound source as close as convenient. A built-in automatic recording level control will set the optimum record level during manual recording. Avoid recording near unwanted noise sources, such as air

place the recorder with the

For conferences, to

obtain optimum

recording quality,

conditioners or fans. If power supplied from the battery fails suddenly (e.g. batteries are removed accidentally) during recording, the recoding in progress will be interrupted The recorded file may also be corrupted and cannot be

played back.

Erasing files and bookmarks

Erasing mode To erase files or bookmarks, while playback is stopped: Press x once

2. Press (◄/>►) to select one of the erasing options: Delete the current file (DEL

DEL DI Delete all files in the current folder (**DEL AL**) JEL RL

 Format the memory of the player (FORMAT) (Caution! All data inside the me will be erased) FORMAT

Delete all bookmarks in the current file (DEL BK) DEL BK

3. With one of the above options selected, press and to confirm your selection and start the deletion.

File numbers that come after erased one

> by one automatically. Press ■ to cancel erasing all files. The undeleted files are saved automatically

will be moved forward

Formatting the internal memory may be required when encountering compatability problem, etc.

You may also format the player when connected to a PC (by right-clicking on the player's drive name or letter and select "Format" from the menu). Make sure you select FAT or FAT32 as the file system.

(

Editing

CAUTION • The edit function does not operate when battery power is too low.

segments, adding appendix and cutting cannot be performed when PLAY ALL files is selected After editing a message, WAIT may be displayed. Do not power off the player until WAIT disappears. Otherwise,

rearranging could not be read

or released until the player is

the memory which is

formatted.

Make sure PLAY ALL files is

not selected. Inserting new

Editing mode To insert bookmarks, new segments or appendix to a recorded file

 Select the desired file and start playback 2. Press O during playback to enter editing mode. Playback

Insert an interception point (bookmark) into the current file for quick reference (ADD R]]]]K Insert a new segment into the

3. Press I◄/►►I to select one of

the editing options:

current file (INSERT) INSERT Insert an appendix at the end of the current file (APPEND)

RPPENI) 4. With one of the above options selected, press

selection and start the editing.

available). O again to confirm your

To create bookmarks: Once **O** is pressed (refer to step 4 in the section "Editing

mode"), the bookmark icon flashes and a newly created the display.

You can create up to 29 bookmarks in a file. When

during playback: 1. During playback, press ₩I to go to the bookmark (if

Insert

bookmark number shows on bookmark

2. Press → again to go to the

Refer to section "Erasing files and bookmarks".

1. Once **O** is pressed (refer to step 4 in the section "Editing mode"), 00:03:05 pause mode is

released and the **REC** icon shows. The recording of a new segment is started from where the pause mode is released.

Append To insert an appendix at the end of the current file: 1. Once **O** is pressed (refer to

and the recording of appendix is started 2. Press ■ to stop the recording of the appendix. Do not power off the player if

WAIT appears on the display.

Cut

To erase unwanted parts from the current file: 1. Start playback of the desired

2. Press x to mark the start of the unwanted part, CUT-S shows on display. EUT -- 5

shows on display. ⊏ШТ --Е| 4. Press x again to confirm cutting within 3 seconds.

Insert, Append and Cut will only update the recorded time

Advanced operations

Play one/all To play a specific file or all files in a folder: Press and hold info/menu for about 2 seconds and then

release the button. The first menu item FOLDER flashes on the display. 2. Press info/menu repeatedly until

ONE or ALL flashes on display. 3. Press I◄√►► or VOL +/- to select

between ONE and ALL. 4. Press ■ to exit the player

Creating wave file

Self-executable file may be

blocked by some e-mail filters.

When recordings are made in LP

or **SP** quality, you may select to

create wave file if you want to

send your recorded message by

2. Select the destination folder

found in the destination

3. The created file could be

click Save.

1. Highlight a recorded file, click

from the pop up window and

• If ONE is selected, the player

is played. If ALL is selected,

the player will stop after all

files in a folder are played.

will stop after the selected file

pressed (except during playback and recording): Press and hold info/menu for about 2 seconds and then release the button. The first

To activate or deactivate the

beep sound when any key is

menu item FOLDER flashes or menu repeatedly

2. Press info/menu repeatedly until **SPEED** shows on display. Press I◄◄/▶▶I or VOL +/- to select

on the display.

Speed

among **FAST**, **SLOW** and no speed indication (normal

To adjust the playback speed:

for about 2 seconds and ther

release the button. The first

menu item FOLDER flashes

1. Press and hold info/menu

speed). 4. Press ■ to exit the player menu.

be done during playback.

Using your player as a file

The player can function as a

detachable data storage device

You can take along your favorite

pictures and documents wherever

you go. Simply cut-and-paste or

drag-and-drop files to or from it

via USB connection, the player will

appear as a removable drive in

storage device

The above operations can also

Connecting to computer Computer system

or higher) or Windows® 2000 (Service Pack 3 or higher). MAC OS is NOT supported.

ing the Digital Voice Manager. 1. Extend the USB connector on the player and connect it to your computer's USB port. 2. **PCLINK** shows on the player's display. The player appears

as a removable drive in your

computer

Connecting to computer Connect the player before launch-

Installing Digital Voice requirements Manager • PC with Windows Vista™ or Windows® XP (Service Pack 1 previous section.

> installation automatically Follow the instructions on the screen for installation. If the installation does not start automatically, open My Computer and double-click the player driver icon. Then

> > selected during installation.

the Digital Voice Manager

connect the player to your

application will open

computer.

automatically once you

When the player is in Menu mode, during playback or recording, a connection between the player and

transfer.

modes before connecting to the computer. Data transfer is possible even if no batteries are installed in the player. Do not disconnect the USB connection during files

The Digital Voice Manager

www.rcaaudiovideo.com

software can also be

downloaded from

the computer will not be

established. Quit the above

Bookmark

new bookmark

the maximum limit is reached. FULL will be shown.

between bookmarks is 3

To skip to a bookmark anytime

2. Press ■ to stop the recording of new segment. • Do not power off the player if **WAIT** appears on the display.

To delete all bookmarks created in the current file: step 4 in the section "Editing

To insert a new segment into the current file: WRIT

mode"), the REC icon shows

Press x to mark the end of the unwanted part, CUT-E

Otherwise, the cutting operation will be canceled You may also press ■ to cancel the cutting operation.

Do not power off the player if

WAIT appears on the display.

length, without changing recording time and date. All bookmarks will be deleted after Insert, Append or Cut is performed.

the display 2. Press info/

Tones

until **TONE** or **NOTONE** shows on display. Press Idd/bbl or

menu

TONE **VOL** +/- to set beep sound ON/OFF

Press ■ to exit the playe

Refer to the following

• 20MB free hard disk space for software • USB port 1.1 or 2.0 Installed sound card

2. The first time you connect

application will start

sections for details.

I. Connect the player with the computer as instructed in the

the player to your computer,

the Digital Voice Manager

double-click rcaDVM_setup to start the installation. If RCA Detective feature is

Using Digital Voice Manager The RCA Digital Voice Manager can perform playback, organize your bookmarks of the recorded files and create self-executable

Start, select All Programs. select RCA Digital Voice Recorder, then select RCA Digital Voice Manager. If RCA Detective feature is selected during installation of Digital Voice Manager, the application will open automatically once you

connect the player to your

All the drives in the computer

except the removable Digital

Voice Recorder are shown in

the top while the removable

Digital Voice Recorder is

shown in the bottom

computer.

Launching the software

1. To launch the software, click

voice file from the recorded files.

Playback and editing operations 1. To organize your files, click

Digital Voice

buttons in the toolbar to fast backward/forward, skip to a specific time in the file and stop playback of a recorded

 
desired bookmark. To edit bookmarks, click the 2. To play the recorded files,

corresponding buttons to add or clear the bookmarks.

12 months from the date of original purchase, such defect(s) will be repaired or replaced with If AVR ON sensitivity is set to

On a Mac computer, only .WAV file on the player can be played directly via application such as

right of the toolbar



pull down menu. Play from the menu at the top, then select Goto Bookmark and select your

Play

right.

for parts and repair labor. To obtain repair or replacement within the terms of this Warranty, generated static or noise, to correction of antenna problems,

You can play the created file independently without the Digital Voice Management software. Highlight a recorded file, click 2. Select the destination folder

and double-click the created DVE 400 4. Click Play to start playback.

Adjust the volume on the

Some states do not allow limitations on how long an implied

ring content (such as an mp3

advisable to remove any personal content which you would not want exposed to others. IT IS LIKELY AT CONTENTS AND DATA ON THE DEVICE WILL BE LOST DURING SERVICE AND REFORMATTING. AUDIOVOX ACCEPTS NO LIABILITY FOR LOST CONTENT OR DATA, PERSONAL CONTENT OR DATA ON THE RETURNED DEVICE. Product will be returned with factory default settings, and without may have been installed in the originally purchased products. Consumer will be responsible for reloading data and content Consumer will be responsible to

Transfer files with Digital Voice Manager Your player is associated with a drive letter. You can drag the voice files you want to transfer to your player to the A/B/C/D folder in the drive

folders in the player once it is You can also drag the voice files you want to transfer from the A/B/C/D folder in the drive to your computer.

Digital Voice

Your files can be found in these

Windows Do not rename, delete and transfer (drag-anddrop) voice files to your player directly in Windows Explorer. Use the Digital Voice Manager to rename, delete and transfer voice files.

For Canada Customers, please ship

The descriptions and characteristics

given in this document are given as a

general indication and not as a guarantee. In order to provide the highest

quality product possible, we reserve

Audiovox Return Centre

c/o Genco 6685 Kennedy Road,

Unit#3, Door 16,

L5T 3A5

Insure your shipment for loss or damage. Audiovox accepts no liability in case of damage or loss en route to Audiovox.

shipped to you freight prepaid. What we will do: tion, a refurbished unit. The exchange

Marca(s) © Registrada(s) Marque(s) © Deposée(s)

Disconnecting from computer 3. Now you can disconnect the

1. Click the icon from the System Tray and select Unplug or Eject hardware. to your player.

screen will appear. Select the player to be stop for confirmation and click OK.

If you want to go back to USB mode for file transfer at this stage, you need to unplug and connect the player to the PC again.

player from the computer.

Troubleshooting tips

Player doesn't turn on

Check that batteries are properly inserted and not exhausted. Make sure battery compartment door is properly closed.

Cannot record Make sure LOCK function is not activated. Make sure memory is not full.

You have recorded 99 files in one folder. Try record in a new folder. You may have formatted the player with incorrect file system (e.g. NTFS or MAC format)

Refer to section "Erasing files

Incorrect recording date and

player again.

time during playback

and bookmarks" and format the

You may have not set the date

to section "Setting date and

and time before recording. Refer

Make sure LOCK function is not

Cannot activate the player after pressing on keysRemove the batteries to reset the player. Recordable time becomes shorter

You may have set the recording

Make sure the file is playable,

which must be of 8-bit PCM or

designated RCA format. Other

be shown in the player for

formats (e.g. mp3, wma) cannot

No sound from speaker during

Headphones should not be

connected

not activated

Make sure volume is not set to 0.

Make sure PLAY ALL function is

quality to 'High Quality', refer to section 'Setting Recording Delete the Digital Voice Manager setup software from the player to

the corresponding buttons to cut, delete, copy and paste a file (or by drag and drop).

highlight the file and click the

PLAY/PAUSE button on the

left of the toolbar. play/pause skip forward stop clear bookman skip backward skip to a add bookmark specific time

Cannot erase recorded file(s) Make sure you follow each step under section "Erasing files and bookmarks" carefully Cannot stop recording when AVR

You must use the provided DVM To download the software, go to www.rcaaudiovideo.com

properly with other RCA Digital You must use the designated

DVM software for different RCA

Go to www.rcaaudiovideo.com to

Digital Voice Recorder models.

download the correct software.

 To adjust the playback speed, click **Normal Speed** and select desired speed from the To skip to a bookmark, select

Applies to RCA Audio/Video Products
• AUDIOVOX ELECTRONICS CORP. (the Company) warrants to the original retail purchaser of this product that should this product or any part thereof, under normal use and conditions, be proven defective in material or workmanship within

from the pop up window and

This Warranty does not apply to any product or part thereof which. in the opinion of the Company, has suffered or been damaged through alteration, imprope installation, mishandling, misuse neglect, accident, or by removal

PURCHASER FOR THE PRODUCT. This Warranty is in lieu of all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY, ANY ACTION FOR BREACH OF ANY ANY IMPLIED WARRANTY OF MERCHANTABILITY MUST BE BROUGHT WITHIN A PERIOD OF 24

warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights which vary from state to state How to make a warranty claim:

liability other than expressed herein in connection with the sale of this

restore any personal preference Properly pack your unit. Include any remotes, memory cards, cables etc. which were originally provided with the product. However

DO NOT return any removable

batteries, even if batteries were included with the original

purchase. We recommend using

the original carton and packing

Include evidence of purchase date

such as the bill of sale. Also print your name and address and a standard UPS or its equivalent to: Audiovox Electronics Corp. Attn: Service Depart 150 Marcus Blvd Hauppauge N.Y. 11788 1-877-833-3491

Pay any charges billed to you by the Exchange Center for service

unit is under warranty for the remai der of the original product's warranty Audiovox Electronics Corp.

Printed in China/Imprimé en Chine

After you have copied files to or from the player, you can disconnect the player from the

2. The Stop a Hardware player

Properties Stop

Windows will attempt to stop the following devices. After the devices are stopped they may be removed safely.

Display keeps flashing when You may not have set the time Refer to section "Setting date

Quality'

free up more memory space. Cannot perform playback Make sure you have selected

Make sure LOCK function is not

HIGH, recording may not be stopped in noisy environment. Try reconditioned product (at the setting the sensitivity to LOW. Company's option) without charge Cannot keep the saved setting saved settings may be removed Cannot open recorded files in the

Warranty information 12 Month Limited Warranty

> the product is to be delivered with proof of warranty coverage (e.g. dated bill of sale), specification of defect(s), transportation prepaid, to the Company at the address shown This Warranty does not extend to the elimination of externally

> > installation, removal or reinstallation of product, to corruptions caused by computer viruses, spyware or other malware, to loss of media. files, data or content, or to damage to tapes, discs, removable nemory devices or cards, speakers accessories, computers, computer peripherals, other media players ome networks or vehicle electrica

Creating and playing self-

executable file

Go to the destination folder

or defacement of the factory serial number/bar code label(s) THE EXTENT OF THE COMPANY'S IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED HE PURCHASE PRICE PAID BY

COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY No person

to assume for the Company any

If your product is capable of

player, digital voice recorder, etc), it is recommended to make periodic backup copies of content stored on the product. If applicable, before shipping a product, make a back up copy of content or data stored on the device. Also, it is

150 Marcus Blvd., Hauppauge, NY 11788

©2009 Audiovox Electronics Corp. Trademark(s) © Registered