



VR209TP Quick Reference Guide

DESIGNED TO MOVE [YOU]TM

Basic Operation



Power On/Off: Push to turn ON or OFF. Push & hold to turn screen OFF. Touch screen to turn back ON.

AUDIO SETUP: Touch to adjust USER AUDIO SETTINGS.

MENU: Press to access main USER SETTING MENU. Press & hold to access SYSTEM SETUP MENU.

AUDIO: Press & hold to access AUDIO MENU. Press to return to current playback mode.

CAM: Press to access CAMERA mode. Press & hold to access CAMERA SETTINGS MENU.

MUTE: Press to MUTE audio. Press again to release function.

CAMERA SETUP: Touch to adjust USER CAMERA SETTINGS.



EXIT: Touch to EXIT User Setting Menu.

EJECT: Press to EJECT CD.

SOURCE SELECT: Touch to choose current PLAYBACK mode.

DAY/NIGHT: Press to switch between stored DAY/NIGHT user settings. Touch & hold to access DISPLAY SETUP menu to adjust DAY/NIGHT settings..

SYSTEM SETUP: Touch to choose SYSTEM SETUP mode.

AUX IN: Connect portable audio player.

DISPLAY SETUP: Touch to adjust USER DISPLAY SETTINGS.

USB: Connect a USB Jump Drive. NOT FOR IPOD CONTROLS.



AM/FM/WB Tuner Controls

 


Current Tuned Station

TUNE: Touch + or - to tune to NEXT or PREVIOUS station.

SEEK: Touch + or - to seek to NEXT or PREVIOUS strongest station.

BAND: Touch to select preset group FM (18 channel memory locations) or AM (12 channel memory locations).

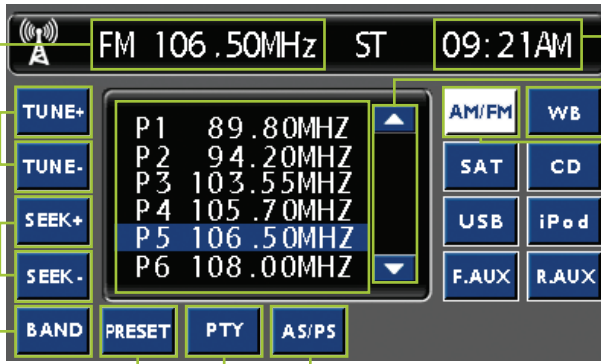

PRESET: Touch to display station preset list. Press & hold desired preset number to store current channel playing. Momentarily press to recall stored channel. NOTE: You can store up to 30 channels (18 FM and 12 AM).

PTY: Touch to view program type categories list. Touch desired program type and then touch SEEK + or - to start search.

AS/PS: Touch to SCAN through currently stored presets. Touch & hold to STORE strongest broadcast stations in your area.

Current Time: SCROLL: Touch to page UP or DOWN in the list.

WB: Touch to listen to WEATHERBAND.

AM/FM: Touch to access AM/FM Mode.

Camera Controls*



Touch here to display the current playback information. Touch again to remove current playback information.

MIC: Touch to turn camera microphone audio ON or OFF.



Touch here while viewing camera image to display the camera controls.

CONTROLS: Touch to adjust BRIGHTNESS, CONTRAST, & COLOR settings.

CHANNELS: Touch to select camera display CH1, CH2, or CH3.

TILT: Touch + or - to TILT camera UP or DOWN.

NOTE: Current playing audio will be muted when vehicle is put into reverse and while the rear camera image appears on the screen. Current audio will resume once vehicle is no longer in reverse.

Clock Settings



1. Press & hold to access SYSTEM SETUP MENU.



2. SYSTEM SETUP: Touch to choose SYSTEM SETUP mode.

 
3. Touch the CLOCK field to view the CLOCK SET screen.

NOTE: If SIRIUS Satellite Radio is activated, SIRIUS will automatically update the clock time based on the user settings for Time Zone and Daylight Savings Time. It is necessary to manually change the Time Zone and Daylight Savings Time settings by accessing the SYSTEM SETUP MENU.

4. Use the on-screen touch pad to enter 4-digits representing the time.

5. Touch AM/FM to toggle between AM and FM mode.

6. Touch OK to set desired time.

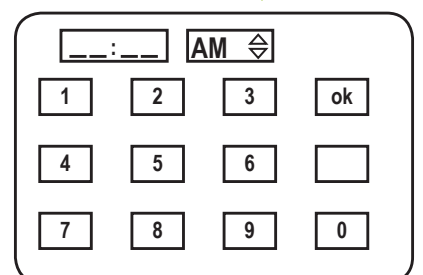


CD/MP3/WMA Controls



DIRECT TRACK ENTRY:
 1. Enter desired track number.
 2. Touch OK to select.
 3. To clear entry touch ←
 4. To EXIT the screen, wait for the screen to time out.

 Total Number of Tracks.
Current Track Playing.
RPT: Touch to REPEAT current track. Touch again to REPEAT current folder. Touch again to release function. (For MP3/WMA CDs ONLY).
SHUF: Touch to random SHUFFLE all tracks. Touch again to SHUFFLE all tracks in current folder (For MP3/WMA CDs ONLY). Touch again for normal play.
INTRO: Touch to preview each song for 10 seconds. Touch to select desired song.

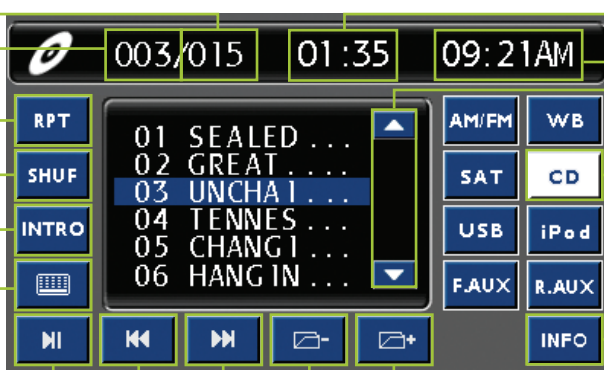

Current Track Play Time.
Current Time
SCROLL: Touch to page UP or DOWN in the list.
CD: Touch access CD Mode.
INFO: Touch to display ALBUM, TITLE, ARTIST, & GENRE information. Touch again to display CD song list. (For MP3/WMA CDs ONLY).

DIRECT ENTRY: Touch to access DIRECT ENTRY KEYPAD.
PLAY/PAUSE: Touch to PLAY or PAUSE current audio.

TRACK: Touch to select NEXT or PREVIOUS track. Touch & hold to FASTFORWARD or REWIND current track. Release to resume play.
FOLDERS: Touch to select NEXT or PREVIOUS folder. (For MP3/WMA CDs ONLY).

 


USB Controls



DIRECT TRACK ENTRY:
 1. Enter desired track number.
 2. Touch OK to select.
 3. To clear entry touch ←
 4. To EXIT the screen, wait for the screen to time out.

Total Number of Tracks.
Current Track Playing.
RPT: Touch to REPEAT current track. Touch again to REPEAT current folder. Touch again to release function. (For MP3/WMA CDs ONLY).
SHUF: Touch to random SHUFFLE all tracks. Touch again to SHUFFLE all tracks in current folder (For MP3/WMA CDs ONLY). Touch again for normal play.
INTRO: Touch to preview each song for 10 seconds. Touch to select desired song.

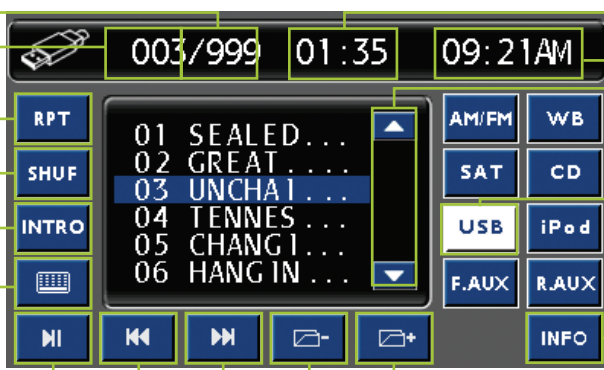

Current Track Play Time.
Current Time
SCROLL: Touch to page UP or DOWN in the list.
USB: Touch to access USB Mode.
INFO: Touch to display ALBUM, TITLE, & ARTIST information. Touch again to display folder song list.

DIRECT ENTRY: Touch to access DIRECT ENTRY KEYPAD.
PLAY/PAUSE: Touch to PLAY or PAUSE current audio.

TRACK: Touch to select NEXT or PREVIOUS track. Touch & hold to FASTFORWARD or REWIND current track. Release to resume play.
FOLDERS: Touch to select NEXT or PREVIOUS folder. (For MP3/WMA CDs ONLY).



iPod Controls*



DIRECT TRACK ENTRY:
 1. Enter desired track number.
 2. Touch OK to select.
 3. To clear entry touch ←
 4. To EXIT the screen, wait for the screen to time out.

Total Number of Tracks.
Current Track Playing.
RPT: Touch to REPEAT current track. Touch again to REPEAT current folder. Touch again to release function.
SHUF: Touch to random SHUFFLE all tracks. Touch again to SHUFFLE all tracks in current folder. Touch again for normal play.
DIRECT ENTRY: Touch to access DIRECT ENTRY KEYPAD.



Current Track Play Time.
Current Time
iPOD: Touch to access iPOD Mode.

PLAY/PAUSE: Touch to PLAY or PAUSE current audio.

 
TRACK: Touch to select NEXT or PREVIOUS track. Touch & hold to FASTFORWARD or REWIND current track. Release to resume play.
SEARCH: Touch to access playlist and available search modes. Touch desired search mode to make selection.
BACK: Touch to go BACK to previous list.

SIRIUS Controls*



DIRECT TRACK ENTRY:
 1. Enter desired channel number.
 2. Touch OK to select.
 3. To clear entry touch ←
 4. To EXIT the screen, wait for the screen to time out.

Current Tuned Channel Number and Name.
Signal Strength Indicator.
TUNE: Touch + or - to TUNE to NEXT or PREVIOUS channel.
CAT: Touch + or - to navigate to NEXT or PREVIOUS category.
DIRECT ENTRY: Touch to access DIRECT ENTRY KEYPAD.

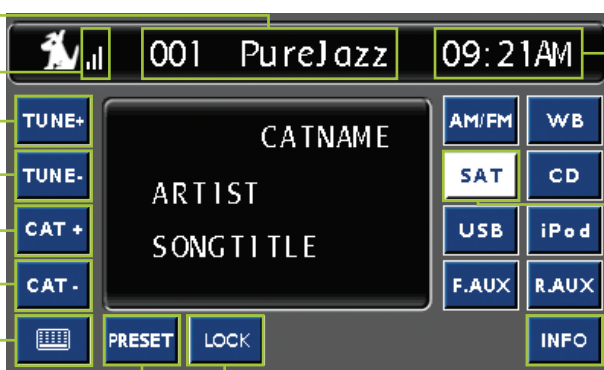

Current Time
SAT: Touch to access SAT Mode.
INFO: Touch to display ALBUM, TITLE, & ARTIST information. Touch again to display folder song list.

PRESET: Touch to display station preset list. Press & hold desired preset number to store current channel playing. Momentarily press to recall stored channel. NOTE: You can store up to 30 channels (18 FM and 12 AM).
LOCK: Touch to LOCK or UNLOCK channels. Enter code using the on-screen number pad.

Activating your SIRIUS® Subscription —

Before you can listen to SIRIUS Satellite Radio, you must subscribe to the service.

- With the radio power ON, press the AUDIO button and then touch SAT to enter SIRIUS Ready mode. After displaying the SIRIUS logo, the Receiver will update all the SIRIUS channels. NOTE: Don't push any buttons or perform any operations until updating has been completed.
- Once updated and the SIRIUS channels are received, the display will change to "Call 1-888-539-SIRIUS to Subscribe" and will place you in SIRIUS Satellite Radio's Preview Channel. Channel 184 is the SIRIUS preview channel. You will not be able to tune to any other SIRIUS Radio channels until you activate your subscription.
- You will need to access your SIRIUS ID, which is displayed on channel 000. Touch the DIRECT ENTRY button on the screen and type in 000 and press OK to enter your selection. This will display your unit's unique 12-digit SIRIUS ID Number.
- Write the SIRIUS ID number down and have your credit card handy.
- Contact SIRIUS on the Internet: <https://activate.SIRIUSradio.com/> Follow the prompts to activate your subscription. You can also call SIRIUS toll-free at: 1-888-539-SIRIUS (1-888-539-7474)