

Customer Experience Center
1-800-331-4331

www.toyotaownersonline.com



moving forward ▶

CAMRY



2006
Pocket Reference Guide

MN 00452-PRG06-CAM
Printed in USA 06/05

2006 Camry

This Pocket Reference Guide is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The Pocket Reference Guide is not intended as a substitute for the Owner's Manual located in your vehicle's glove box. We strongly encourage you to review the Owner's Manual and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor Sales, U.S.A., Inc., wish you many years of satisfied driving in your new Camry.

! A word about safe vehicle operations

This Pocket Reference Guide is not a full description of Camry operations. Every Camry owner should review the Owner's Manual that accompanies this vehicle.


Pay special attention to the boxed information highlighted in yellow throughout the Owner's Manual. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this Pocket Reference Guide is current at the time of printing. Toyota reserves the right to make changes at any time without notice.


Spare tire & tools

Tool location

With compact spare tire

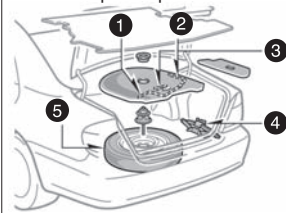


Without compact spare tire

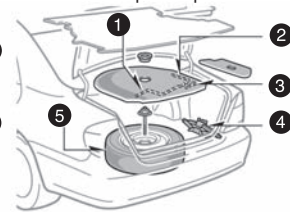

- 1 Jack handle
- 2 Wheel nut wrench
- 3 Front towing eyelet (on some models)
- 4 Jack
- 5 Spare tire


Removing the spare tire

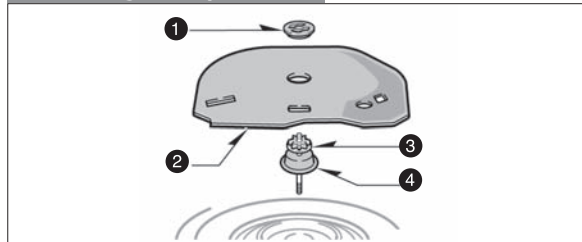

- 1 Loosen and remove the nut.
- 2 Remove the spare tire cover.
- 3 Loosen and remove the bolt.
- 4 Remove the spacer.

Refer to the Owner's Manual for tire changing and jack positioning procedures.

Trunk-Internal release

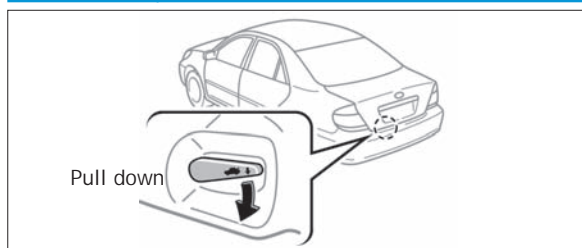

INDEX

Item	Page no.
OVERVIEW	
Engine maintenance	8
Fuel tank door release and cap	6
Hood release	7
Indicator symbols	4-5
Instrument cluster	4
Instrument panel	2-3
Light control-Instrument panel	6
Trunk release	6
FEATURES/OPERATIONS	
Air conditioning/Heating	16
Audio	14-15
Auto lock functions ¹	9
Automatic transmission	9
Clock	18
Cruise control	13
Cup holders	18
Door locks	10
Garage door opener (HomeLink [®]) ²	19
Keyless entry	7
Lights & turn signals	12
Manual transmission	9
Moonroof	18
Parking brake	17
Pedals-Adjustable	10
Power outlets	19
Seat adjustments-Front	11
Seat adjustments-Rear	11
Seat heaters	15
Seats-Head restraints	11
Sunshade-Rear	19
Tilt steering wheel	10
Windows	17
Windshield wiper & washer	13
SAFETY AND EMERGENCY FEATURES	
Child comfort guide	20
Doors-Child safety locks	20
Seat belts	20
Seat belts-Shoulder belt anchor	20
Spare tire & tools	21
Trunk-Internal release	21




¹ Programmable by consumer. Refer to the Owner's Manual for instructions and more information.

²HomeLink[®] is a registered trademark of Johnson Controls, Inc.


OVERVIEW

Instrument panel

Steering wheel switches

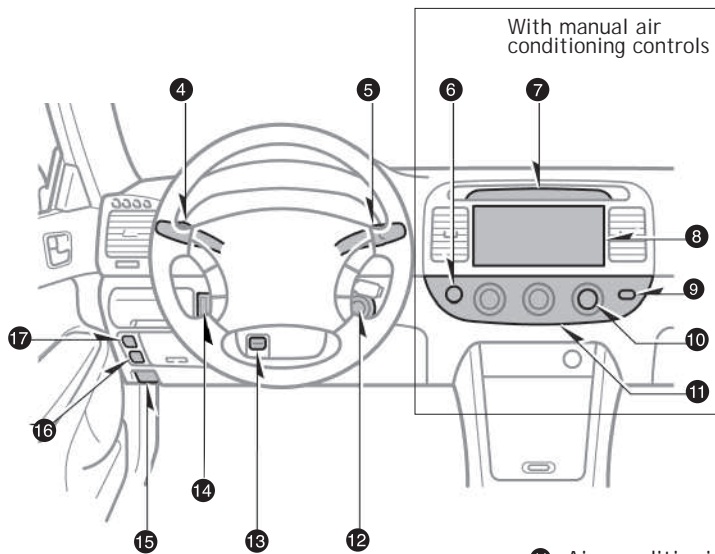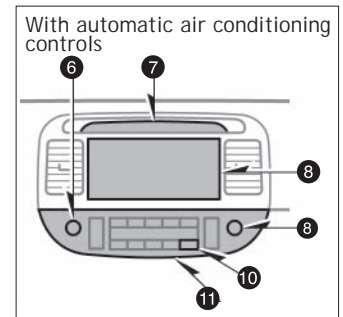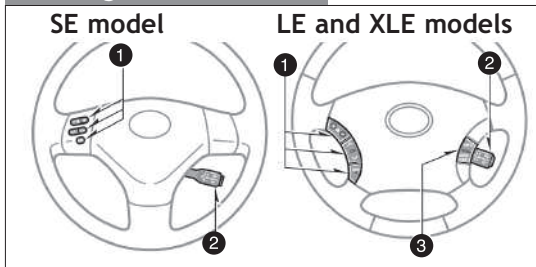

Center console

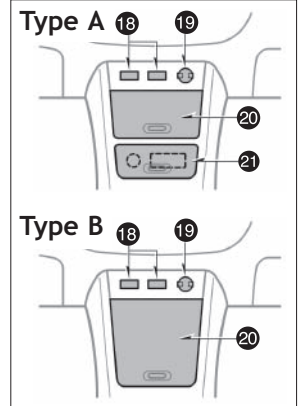


- ❶ Audio steering wheel switches
- ❷ Cruise control
- ❸ Multi-information display switch¹
- ❹ Headlight, turn signal and front fog light¹ controls
- ❺ Wiper and washer controls
- ❻ Emergency flasher switch
- ❼ Clock/outside temperature display, multi-information display¹, and "AIRBAG ON" and "AIRBAG OFF" indicator lights
- ❽ Audio or navigation system^{1,2}
- ❾ Engine immobilizer/Theft deterrent system indicator light¹
- ❿ Rear window and outside rearview mirror defogger¹ switch

- ⓫ Air conditioning/Heater controls
- ⓬ Ignition
- ⓭ Tilt steering lock release
- ⓮ Instrument panel light control
- ⓯ Hood release
- ⓰ Traction Control "OFF"¹
- ⓱ Power adjustable pedals¹
- ⓲ Seat heater switches¹
- ⓳ 12V DC Power outlet
- ⓴ Auxiliary box
- ⓵ 12V DC Power outlet/Cigarette lighter and ashtray¹

¹ If equipped

² For details, refer to the "Navigation System Owner's Manual."

Instrument cluster

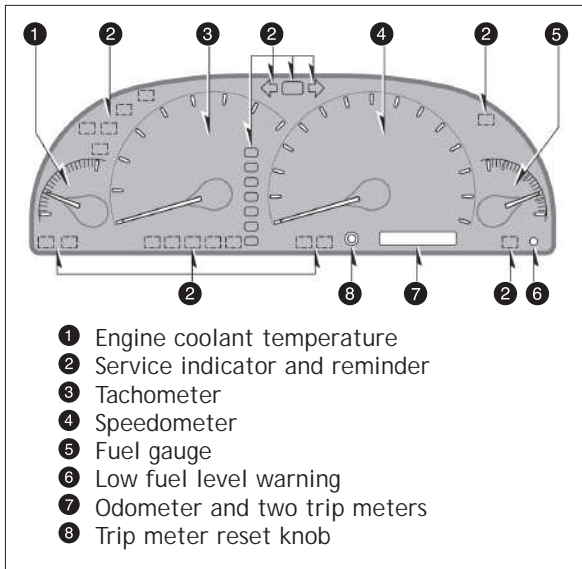

Indicator symbols

BRAKE	Brake system warning ¹
	Driver seat belt reminder ¹
PASSENGER	Front passenger seat belt reminder ¹
	Charging system warning ¹
CHECK	Malfunction/Check Engine indicator ¹
	Low engine oil pressure warning ¹
	Open door warning ¹
	Airbag SRS warning ¹
	Low windshield washer fluid level warning ¹
VSC	Vehicle Stability Control/Traction Control warning ¹

¹ For details, refer to “Service reminder indicators and warning buzzers,” Section 1-6, 2006 Owner’s Manual.


MAINT REQD	Engine oil replacement reminder ¹
AIRBAG ON	“AIRBAG ON” indicator
AIRBAG OFF	“AIRBAG OFF” indicator
	Headlight low beam indicator
	Tail light indicator
	Headlight high beam indicator
	Turn signal indicator
PRND 3 2 L	Automatic transmission indicator
O/D OFF	Overdrive “OFF” indicator
	Slip indicator
TRAC OFF	Traction Control off indicator
CRUISE	Cruise control indicator ²
ABS	Anti-lock brake system warning ¹

CAUTION

When the anti-lock brake system (ABS) function is in action, you may feel the brake pedal pulsating and hear a noise. In this situation, to let the anti-lock brake system work for you, just hold the brake pedal down more firmly. Do not pump the brake as this will result in reduced braking performance.


² If this light flashes, refer to “Cruise control,” Section 1-7, 2006 Owner’s Manual.

Fuel tank door release and cap

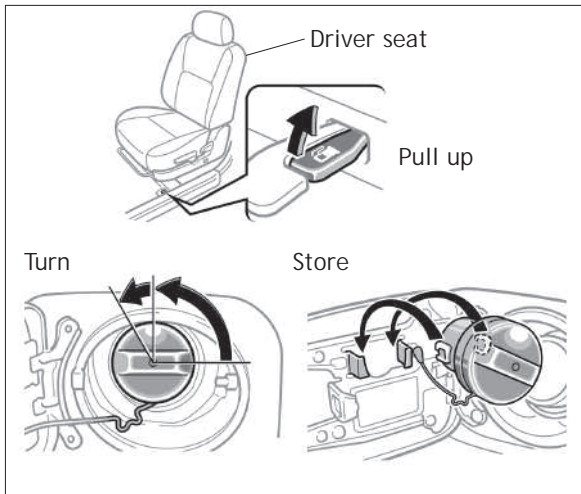


NOTE: If the cap is not tightened enough, Check Engine "CHECK" indicator may illuminate.

Trunk release

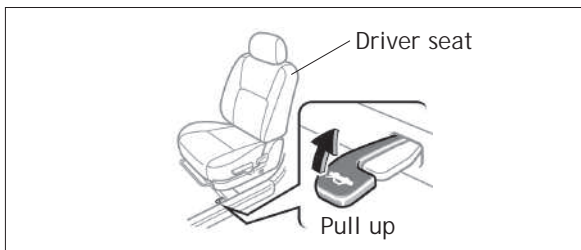


Light control-Instrument panel

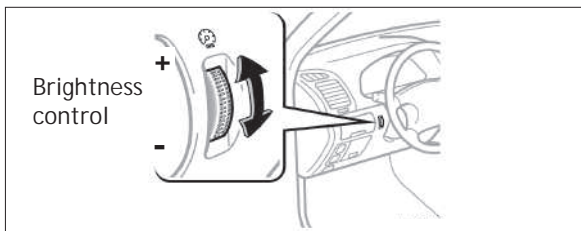


NOTE: Turning headlights on in bright daylight may reduce visibility of instrument panel cluster. For optimum visibility, turn headlights to "AUTO" or "OFF."


Hood release

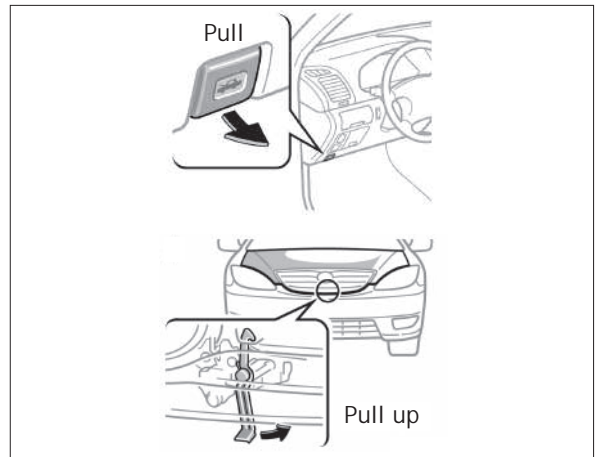

Keyless entry

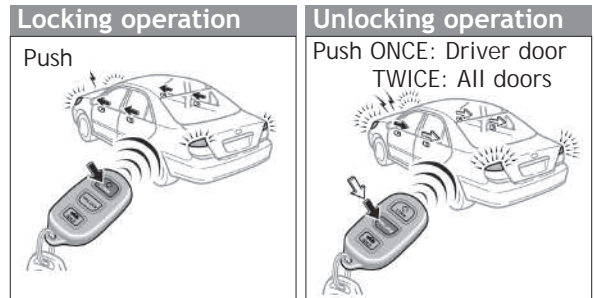


NOTE: After unlocking, if a door is not opened within thirty (30) seconds, all doors will relock for safety.

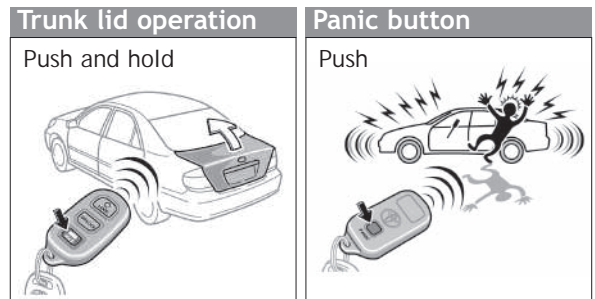


Engine maintenance

4 cylinder (2AZ-FE) engine

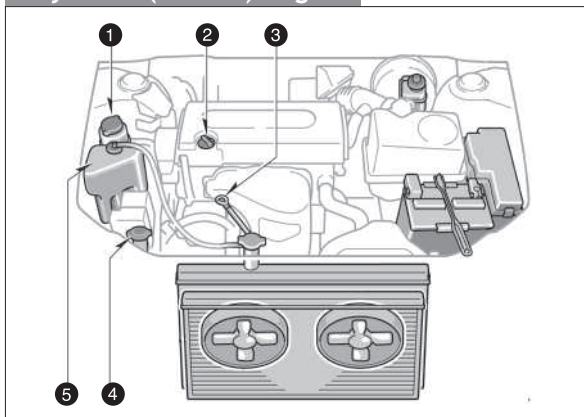

6 cylinder (1MZ-FE and 3MZ-FE) engine

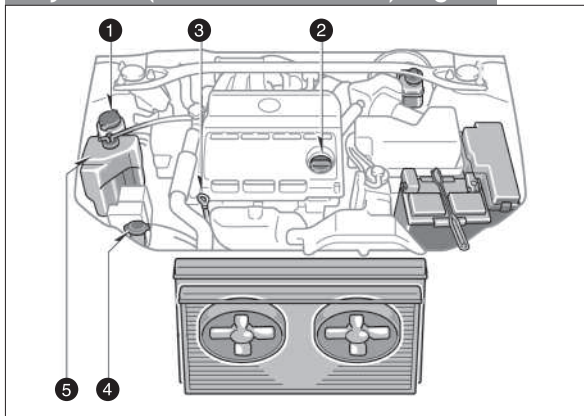

- 1 Power steering fluid reservoir
- 2 Engine oil filler cap
- 3 Engine oil level dipstick
- 4 Windshield washer fluid tank
- 5 Engine coolant reservoir

Note: Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the "Owner's Warranty Information Booklet," "Scheduled Maintenance Guide" or "Owner's Manual Supplement."

FEATURES/OPERATIONS


Auto lock functions (Automatic Transmission only)

Automatic door locks can be programmed to operate in 4 different modes.

- Doors lock when shifting from Park.
- Auto lock function cancelled.
- Doors lock when shifting from park, and unlock when shifting into park.
- Doors lock when shifting from Park, and unlock when the ignition key is turned to the "ACC" or "LOCK" position.

Automatic transmission (if equipped)

P	Park ¹
R	Reverse
N	Neutral
D	Drive
3	Third gear
2	Second gear
L	First gear

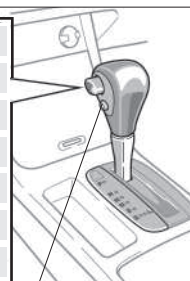

Overdrive switch

¹The ignition must be ON, and the brake pedal depressed.

Downshifting increases power going uphill, or provides engine braking going downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the "D" position.


Overdrive switch

To turn "ON" or "OFF" Depress the overdrive switch to choose either four-speed ("OFF") or five-speed ("ON") operation. During normal driving conditions, always drive with overdrive "ON;" this allows the transmission to shift automatically into five-speed operation at higher speeds, improving fuel economy. If the O/D indicator light on the instrument cluster is illuminated, overdrive is "OFF."


Manual transmission (if equipped)

For safety, the engine will not start unless the clutch pedal is FULLY depressed.

Door locks

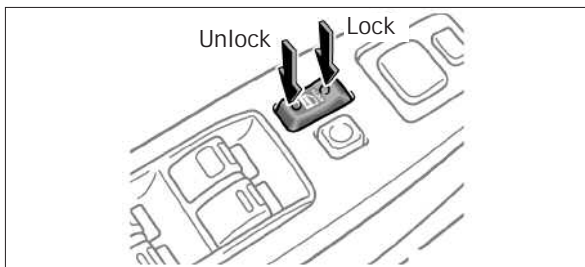


Tilt steering wheel

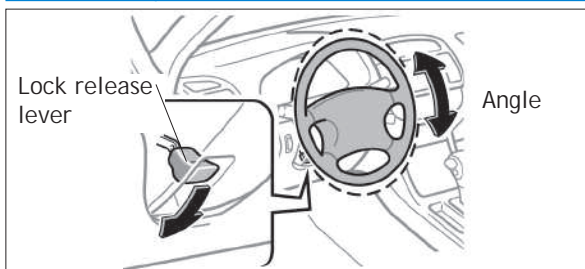

Hold wheel, push lever down, set angle then return lever.

Note: Do not attempt to adjust while the vehicle is in motion.

Pedals-Adjustable (if equipped)

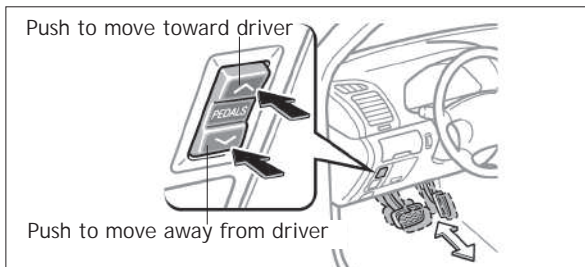

Seat adjustments-Front

Manual Seat




Power Seat




- ① Position
- ② Height crank (driver side only)
- ③ Seatback angle
- ④ Lumbar support
- ⑤ Position and Cushion height
- ⑥ Seatback angle

Seat adjustments-Rear

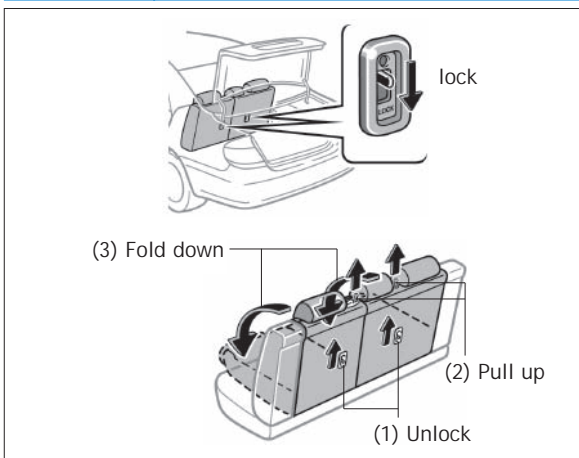


Seats-Head restraints

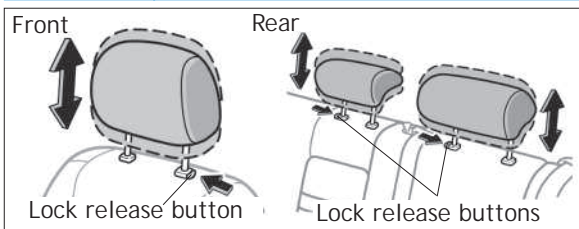

Lights & turn signals


Headlights

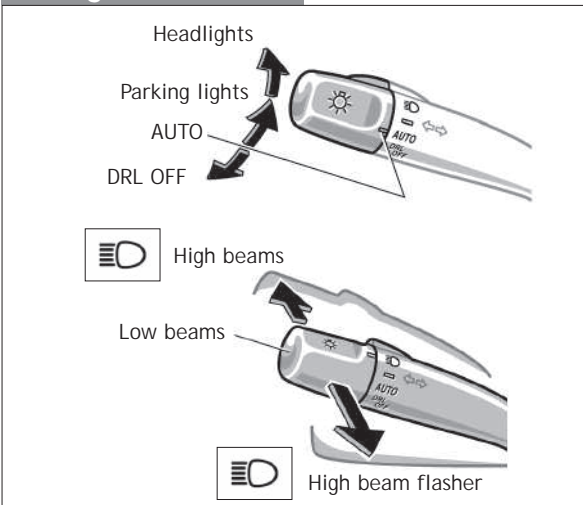


-Daytime running light system Automatically turns on the headlights at a reduced intensity.

-Automatic light cut off system Will automatically turn lights off after a delay of thirty (30) seconds. Or turn off by pushing "LOCK" button on remote twice.


Turn signals

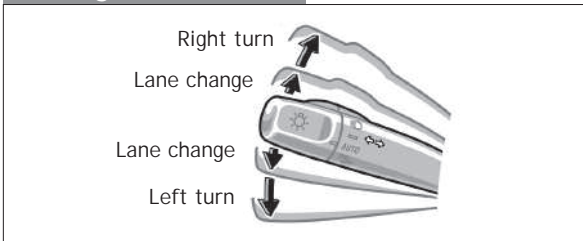

Front fog lights (if equipped)

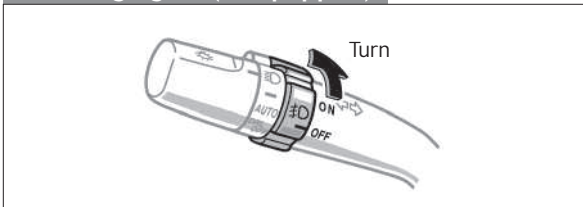


Windshield wiper & washer

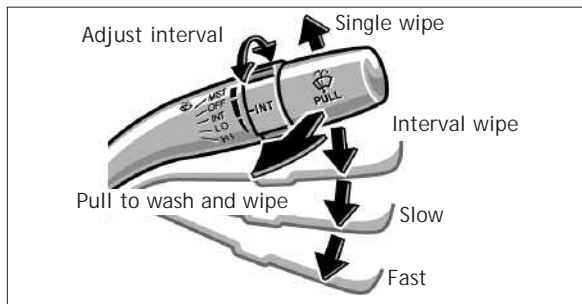


Cruise control

Turning system ON/OFF

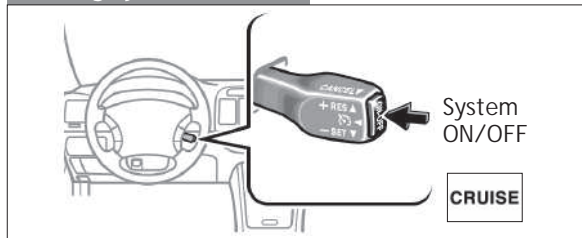


Functions

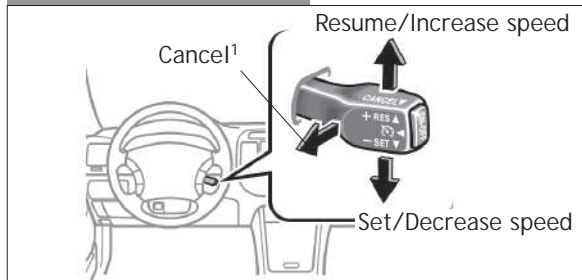


¹ The set speed may also be cancelled by depressing the brake pedal.

Refer to the Owner's Manual for complete system operation.


Audio

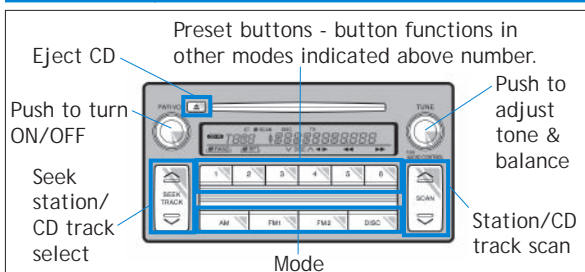

Type 2 other functions

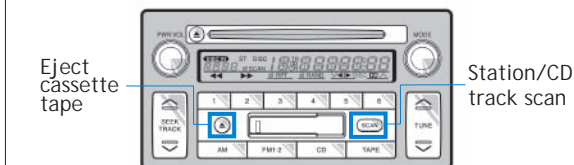

Type 3 other functions

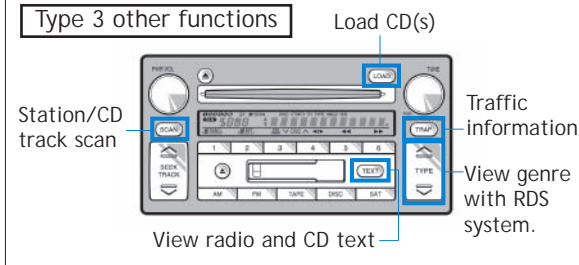

CASSETTE TAPE PLAYER (Type 2 and 3)

- To fast forward** Push "▶▶."
- To rewind** Push "◀◀."
- To change a direction** Push "◀▶."

CD PLAYER

To scan tracks on a disc Push and hold "SCAN." Push again to hold selection.

CD Changer (Type 3 only)

- To load one disc** Push "LOAD" and insert 1 disc.
- To load multiple discs** Push and hold "LOAD" until you hear a beep. Insert one disc. Shutter will close and then re-open for next disc.

RADIO


To scan stations Push "SCAN." Push and hold to scan preset stations. Push again to hold selection.

To preset stations Tune in the desired station and press a preset button (1-6) until you hear a beep. Push desired preset button (1-6) to select.

RDS (Radio Data System-FM only)(Type 3 only)


- Push TYPE "∧" or "∨" to view current program genre. Push again within 6 seconds to select new genre.
- Push "SEEK/TRACK" or "SCAN" to find same genre programs.
- Push "TEXT" to receive information transmitted from radio stations.

Steering wheel switches

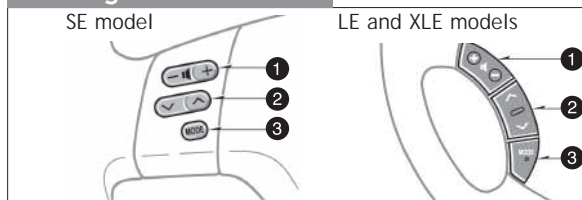


- "- +"**
Volume control
- "∧ ∨"**
-**In radio mode** Push to select a preset station, push and hold to seek the next strong station.
-**In tape mode** Push to skip up or down to a next/previous track, push and hold to fast forward or reverse.
-**In CD mode** Push to skip up or down to a next/previous track.
- "MODE"**
Push to turn audio on and select an audio mode. Push and hold to turn the audio system "OFF."

Seat heaters (if equipped)

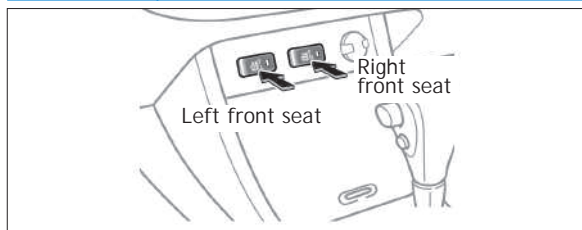


Air conditioning/Heating

Manual air conditioning (if equipped)

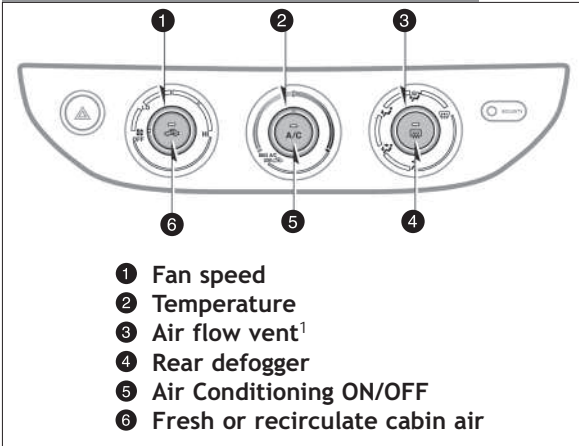

¹ In "☀️" or "❄️" mode, use fresh air ("🚗") indicator light "OFF") to reduce window fogging.


Automatic air conditioning (if equipped)

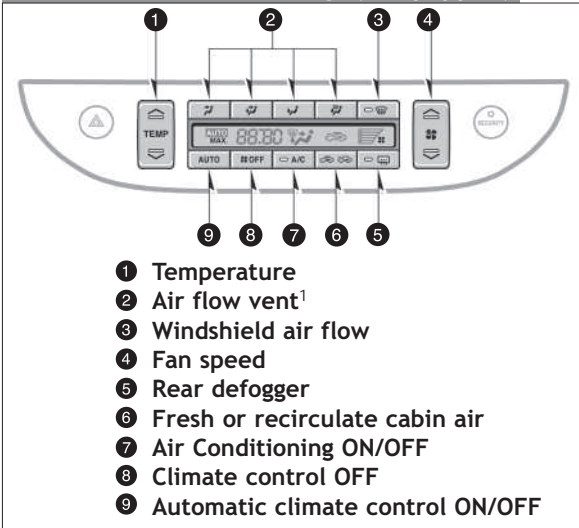

¹ In "☀️" or "❄️" mode, use fresh air ("🚗") indicator light "OFF") to reduce window fogging.

Parking brake

SE and LE models

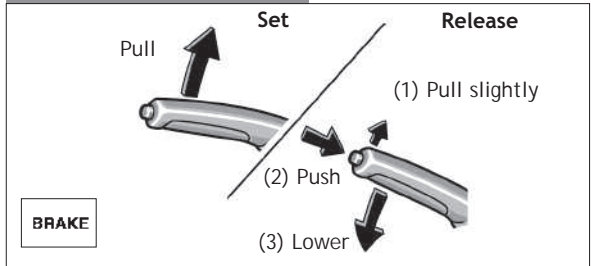


XLE model

Set: Depress
 Release: Depress again



Windows

Driver side

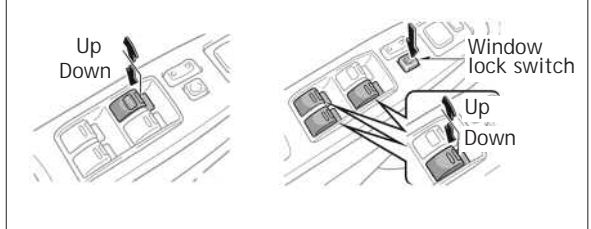


Window operation

Automatic operation (Driver side only) Push the switch completely down or pull it completely up and release to fully open or close*. To stop window midway, lightly push the switch in the opposite direction.


*XLE models only

Moonroof (If equipped)

Sliding operation

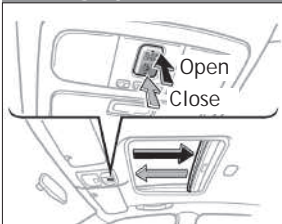


Tilting operation

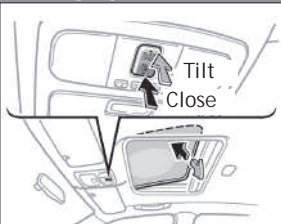

NOTE: If battery is disconnected, the moonroof needs to be reinitialized. Refer to the Owner's Manual for more details


Clock

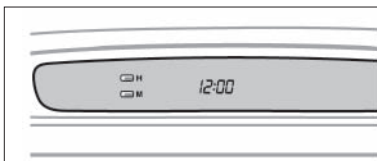

H- Hour set
M- Minutes set

Cup holders

Front

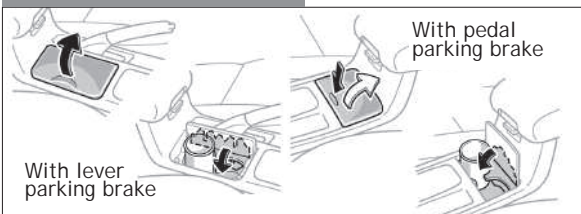


With lever parking brake

With pedal parking brake

Rear




Sunshade-Rear (if equipped)

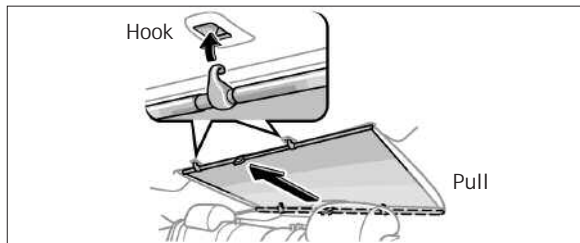

Hook

Pull

Garage door opener (HomeLink®)* (if equipped)

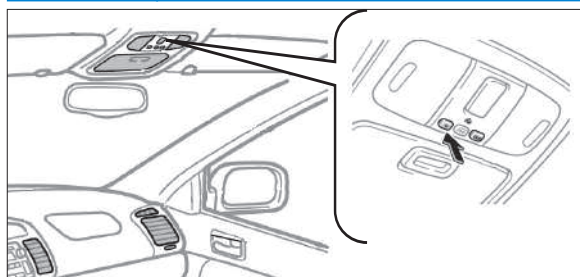


Garage door openers manufactured under license from HomeLink®* can be programmed to operate garage doors, estate gates, security lighting, etc.

Refer to the Owner's Manual for more details. For programming assistance, contact the Toyota Customer Experience Center at 1-800-331-4331, or visit <http://www.homelink.com>

*HomeLink® is a registered trademark of Johnson Controls, Inc.

Power outlets

Instrument panel

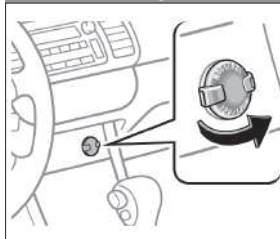


Rear console box



Designed for car accessories. Key must be in the "ACC" or "ON" position to be used.


SAFETY AND EMERGENCY FEATURES

Doors-Child safety locks

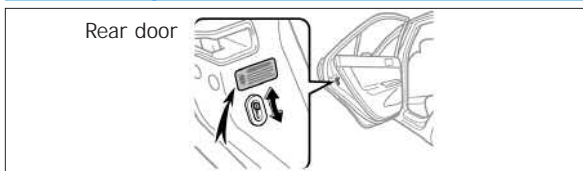

Move the lever to "LOCK," allowing the door to be opened only from the outside.


Seat belts

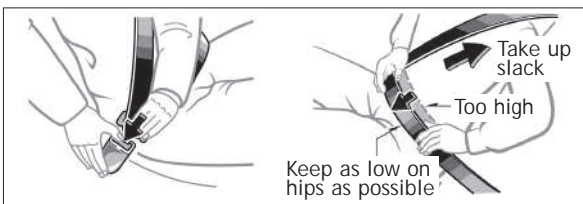

If belt is fully extended, then retracted even slightly, it cannot be re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the Owner's Manual.

Seat belts-Shoulder belt anchor

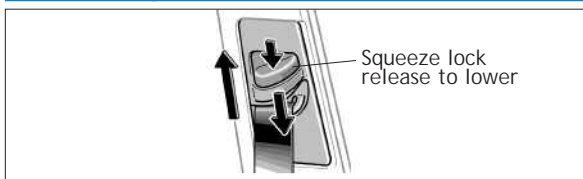

Child comfort guide



Rear seat outside position guides provide added comfort for children who have outgrown child restraints.