


COMPETENCE D8100-1

Build-in Electric Multifunction
Double Oven

Operating Instructions

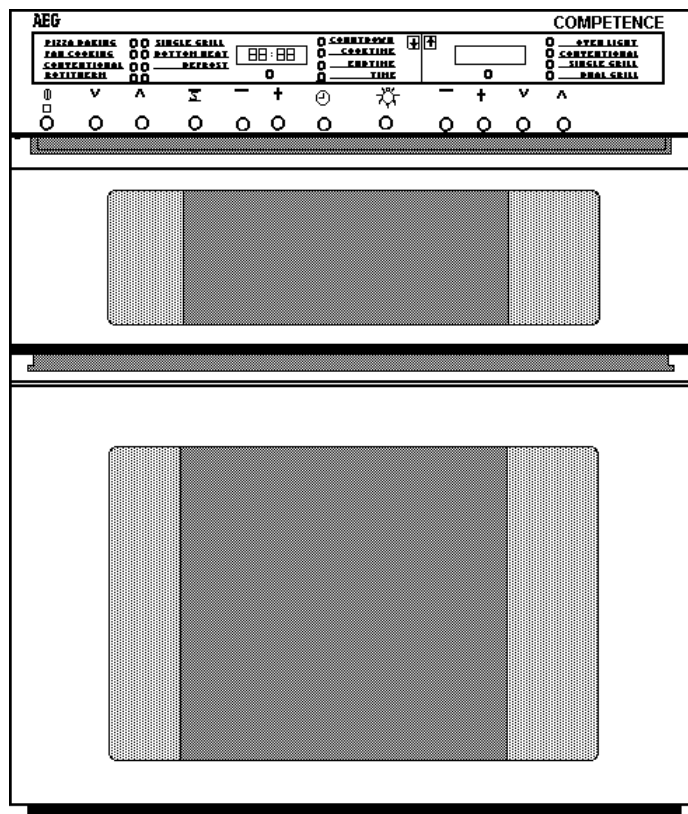

IMPORTANT SAFETY INFORMATION

These warnings are provided in the interests of your safety. Ensure that you understand them all before installing or using the appliance. Your safety is of paramount importance. If you are unsure about any of the information in this book contact the Customer Care Department. Telephone 0870 5 350350

INSTALLATION

The appliance must be installed according to the instructions supplied. The appliance must be installed in an adequately ventilated room.

NOTE: It is imperative that the appliance is left in the base to protect both the appliance and the floor.

This appliance is heavy and care **must** be taken when moving it. **Do not** try to move the appliance by pulling the door handles.

Warning: **Do not** attempt to lift this appliance by the handles.

All packaging, both inside and outside the appliance must be removed before the appliance is used.

It is dangerous to alter the specifications or modify the appliance in any way.

After installation please dispose of the packaging with due regard for safety and the environment. Your local authority can arrange this.

CHILD SAFETY

Do not allow young children to play with any part of the packaging.

This appliance is designed to be operated by adults. Young children **must not** be allowed to tamper with the controls or play near or with the appliance.

CAUTION: Accessible parts may be hot when the grill is in use. Young children should be kept away.

DURING USE

The appliance is not intended for use by young children or infirm persons without supervision.

This appliance has been designed for domestic use to cook edible foodstuffs only, and **must not** be used for any other purpose.

Take great care when heating fats and oils as they will ignite if they become too hot.

Never place plastic or any other material which may melt in or on the oven.

Do not stand too close to the oven or grill while in use as warm air will exhaust from the grill cavity and the vents on the front frame of the appliance.

Always use oven gloves to remove and place food in the oven.

During use the appliance becomes **Hot**. Care should be taken to avoid touching heating elements inside the oven.

Never line any part of the appliance with foil.

Stand clear when opening the drop down oven doors. Support the doors using the handles until fully open.

Never leave the appliance unattended when the oven door is open.

Do not place sealed cans or aerosols inside the oven. They may explode if they are heated. Ensure that all control knobs are in the OFF position when not in use.

Do not stand on the appliance or on the open oven doors.

Do not hang towels, dishcloths or clothes from the appliance or its handles. They are a safety hazard.

CLEANING AND MAINTENANCE

The appliance is heavy and care must be taken when moving it.

For hygiene and safety reasons this appliance should be kept clean at all times. A build-up of fats or other foodstuffs could result in a fire especially in the grill pan.

Always allow the cooling fan to cool the appliance down before switching off at the wall prior to carrying out any cleaning / maintenance work.

Only clean this appliance in accordance with the instructions given in this book.

SERVICE

Repairs should not be carried out by inexperienced persons as this may cause injury or serious malfunction. This appliance should be serviced by an authorised Service Engineer and only genuine approved spare parts should be used. Details of servicing and repair arrangements are supplied on page 43 of this book.

AT THE END OF THE APPLIANCE LIFE

When the time comes to dispose of your appliance please contact your local Council Authority. They can arrange to dispose of the appliance in a safe and controlled manner. The number will be in the telephone book.

Please read this instruction book carefully before use and retain for future reference.

CONTENTS

FOR THE USER

Important Safety Information	2
Description Of The Oven	4
Getting To Know Your Oven	5
The Cooling Fan For The Controls	5
Control Panel Indicator Neons	5
Grill And Oven Furniture	6
Before Using For The First Time	7
Rating Plate	7
When First Switching On	7
Condensation And Steam	7
Cookware.....	8
The Electronic Timer	9
How To Select Main Oven Cooking Functions And Temperature	13
To Fit The Main Oven Shelves	13
Boost Function And Pizza Baking Function	14
The Main Fan Oven	15
Uses of the Fan Oven	15
Selecting The Fan Oven	15
Things To Note	15
Hints And Tips	16
The Main Oven Conventional Setting	17
Uses Of The Conventional Oven	17
Selecting The Conventional Oven	17
Hints And Tips	17
Main Oven Cooking Chart	18
Roasting Chart	19
Rotitherm Grilling	20
Uses Of The Rotitherm Grill	20
Selecting The Rotitherm Grill	20
Things To Note	20
Hints And Tips	21
Main Oven Grill	22
Uses Of The Main Oven Grill	22
Things To Note	22
Using The Telescopic Runners(Where Fitted) .	22
The Grill Pan And Handle	23
Grilling Chart	24
Bottom Heat	25
Defrosting	26
Uses Of Defrost Feature	26
Selecting Defrost	26
Things To Note	26
Hints And Tips	26
Helpful Hints When Buying And Preparing Food	27


Main Oven Light	28
The Second Oven	29
Uses Of The Second Oven	29
Selecting the Second Oven	29
Second Oven Light	29
To Fit the Second Oven Shelf	29
The Second Oven Conventional Setting	30
Second Oven Grill	33
Grilling Chart	35
Care And Cleaning	36
Cleaning Materials	36
Cleaning The Outside Of The Oven	36
Cleaning Inside The Ovens	37
Removing And Replacing Wirework	
Side Runners	37
Cleaning The Grill And Oven Furniture	37
Cleaning The Door Glass	38
To Remove the Inner Glass	38
To Clean the Inner Glass Door Panels	39
To Replace The Inner Glass Door Panels	39
Replacing An Oven Light Bulb	40
If Something Doesn't Work	41
Service and Spare Parts	43
Guarantee Conditions	44

FOR THE INSTALLER

Technical Details	45
Warnings	46
Choice Of Electrical Connection	46
Things To Note	47
Preparing Cabinet For Fitting Oven	47
Recommended Cabinet Dimensions	48
How To Finish Unpacking	49
Tools Required	49
Making The Electrical Connections	49
Preparing Cable	49
To Remove Cover Of Mains Terminal	50
Connecting To The Mains Terminal	51
Connecting To A Hob Or Cooker Point	51
Checking Electrical Connections	51
Fitting Into The Cabinet	52

DESCRIPTION OF THE OVEN

Build-in electric multifunction double oven.

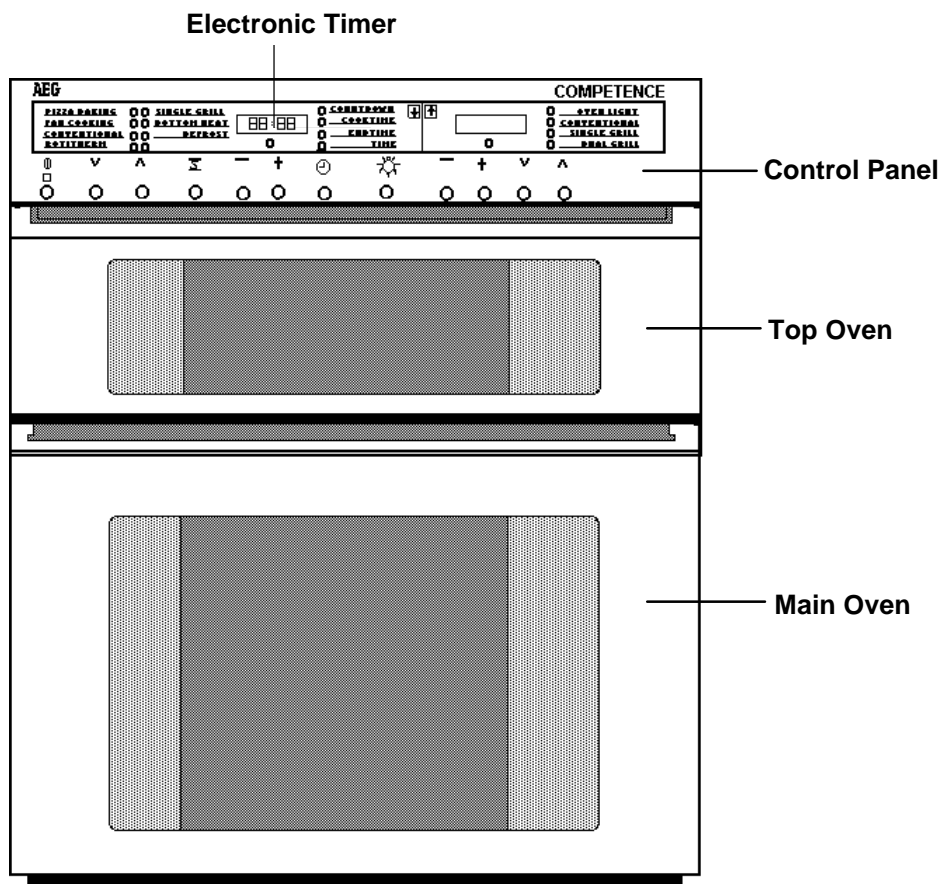


Please note that the handle type on your product may differ in type and shape from that shown in the diagram.


Your build-in oven comprises of a conventional second oven and dual grill in the top compartment. The Multifunction main oven is the larger of the two ovens. It comprises of a number of different cooking functions. The Multifunction oven can be automatically controlled by the electronic timer.

Please read the whole instruction book before using the appliance.

To help you the following symbols will be found in the text.


 **Safety Instructions**

I, 2, 3, Step by Step Instructions

 Hints and Tips

GETTING TO KNOW YOUR OVEN

The Control Panel

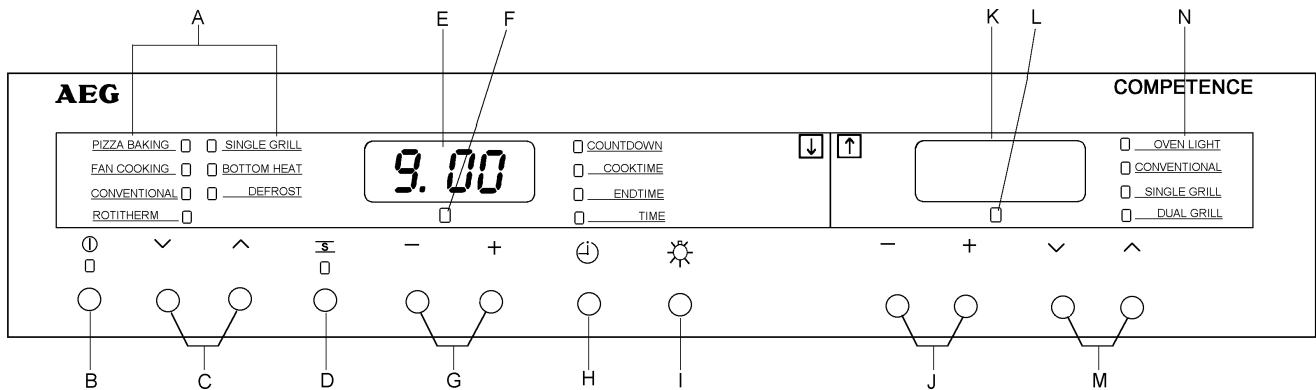

- | | | | |
|-----|--------------------------------------|-----|-----------------------------------|
| A - | Main Oven Functions | H - | Timer Function Selector |
| B - | On/Off Switch and Neon | I - | Main Oven Light |
| C - | Main Oven Function selectors | J - | Second Oven Temperature Selectors |
| D - | Boost Button and Neon | K - | Second Oven Electronic Display |
| E - | Main Oven Electronic Display | L - | Second Oven Temperature Neon |
| F - | Main Oven Temperature Neon | M - | Second Oven Function Selector |
| G - | Main Oven Temperature/Time Selectors | N - | Second Oven Functions |

The Cooling Fan for the Controls

The cooling fan comes on immediately when the grill or top oven is switched on and after a short time when the main oven is in use. It may run on after the controls are switched off until the appliance has cooled. During the initial period the cooling fan may turn ON and OFF, this is quite normal.

Do not switch off the appliance at the wall before the cooling fan has cooled the appliance down.

Control Panel Indicator Neons

These lights indicate whether the grill or ovens are switched ON. In the case of the ovens, the temperature neons also indicate when the set temperature has been reached. The temperature neon will go out when the oven has reached the set temperature. It will turn on and off during cooking to show that the oven temperature is being maintained.


If the neons do not operate as the instructions indicate the controls have been incorrectly set. Return all controls to zero and reset following the instructions for the required setting.

GRILL AND OVEN FURNITURE

The following items of grill and oven furniture have been supplied with the appliance. If you require replacements of any of the items listed below, please contact your local Service Force Centre quoting the relevant part number.


1 grill pan

(311409401)

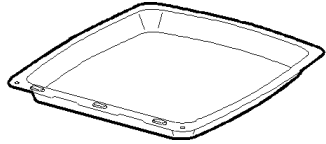

1 grill pan handle

(311468100)

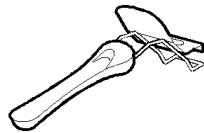


Note

If you require an additional handle for your grill pan, this can be ordered from your local Service Centre by quoting part number 311479800\6


1 grill pan grid

(311419801)

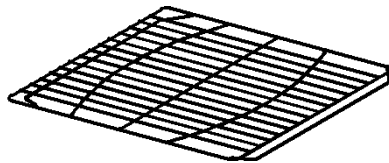


1 meat tin


(311409401)

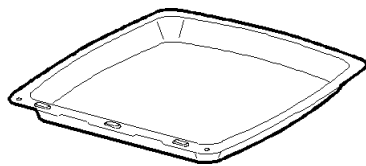

1 cranked shelf
(for grilling and
second oven
cooking)

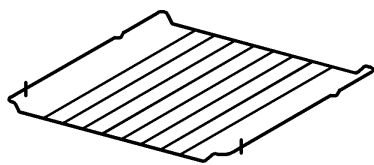

2 Straight shelves
(for main oven
cooking)

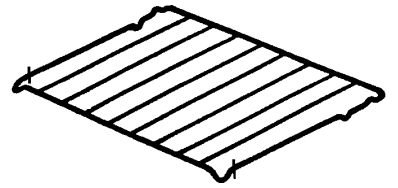


Telescopic Runners

Your appliance may be fitted with telescopic runners in the grill and main oven.

To fit the shelf into the telescopic runner,

1. Ensure the telescopic runners are pushed back into the oven cavity before fitting the shelf.
2. Holding the front edge of the shelf with both hands, place the rear shelf forms over the telescopic runners.
3. Slide the shelf into position, lifting slightly at the front so that the shelf locates into the retaining hooks.

To remove, raise the front edge and withdraw the shelf.

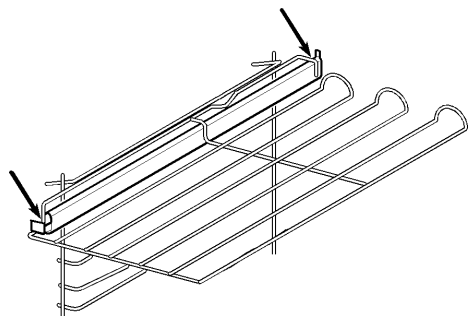

BEFORE USING THE OVEN FOR THE FIRST TIME

When First Switching on

The oven has a 24 hour clock. When the oven is first switched on at the wall the oven lights may illuminate momentarily and the electronic display will automatically show 0.00, the 'Time' neon will also flash.

To set the time of day and use the timer refer to instructions on page 9.

Rating plate

This is situated on the lower front frame of the oven and can be seen upon opening the main cavity door. Alternatively the rating plate may also be found on the back or top of some models (where applicable).

The oven must be protected by a suitably rated fuse or circuit breaker. The rating of the oven is given on the rating plate.

The rating plate must not be removed from the oven front frame as this may invalidate the guarantee.

Preparing to use your oven

Clean the ovens with a soft cloth and hot soapy water and wash the grill and oven furniture before use.



The grill and ovens should be heated without food to burn off any residue from the elements. To do this, run the ovens at 220°C for 10 - 15 minutes. The procedure should be repeated with the grill for approximately 5 - 10 minutes.

During this period an odour may be emitted, it is therefore advisable to open a window for ventilation.

Condensation and Steam

When food is heated it produces steam in the same way as a boiling kettle does. The ovens are vented to allow some of this steam to escape. However, always stand back from the appliance when opening the oven doors to allow any build up of steam or heat to be released. If the steam comes into contact with a cool surface on the outside of the appliance, e.g. a trim, it will condense and produce water droplets. This is quite normal and is not caused by a fault on the appliance.

To prevent discolouration occurring, regularly wipe away condensation and any soilage from the appliance surfaces.

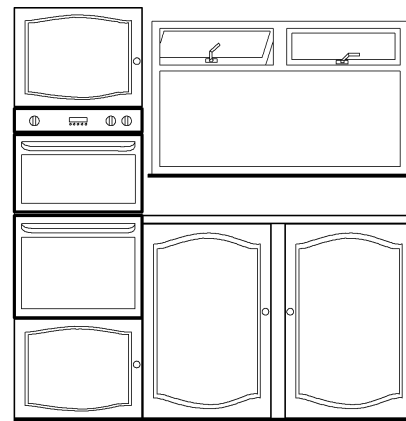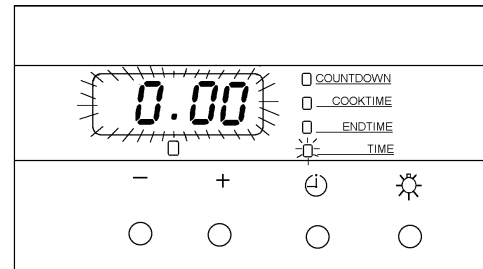

Cookware

Baking trays, oven dishes etc., should not be placed directly against the grid covering the fan at the back of the oven.

Do not use baking trays larger than 30cm x 35cm (12" x 14") as they will restrict the circulation of heat and may affect performance.

Do not place bakeware directly on the second oven base when the oven is on as damage to the oven enamel and bakeware will occur.

On/Off Push Button

The oven must be switched on before setting any cooking function or programme. When the on/off button is pressed, the neon below symbol ① will come on.


To switch off the oven, you can press button ① at any time. Any cooking function or programme will stop, the oven light will switch off and the Main Oven electronic display will show the time of day only.

Oven Function Control Push Buttons

Push buttons \wedge or \vee to allow you to select the cooking function. Each time you push these buttons a neon will come on in the Oven Function Display, showing what cooking function has been chosen.

Increase and Decrease Push Buttons

Push buttons $-$ and $+$ allows you to increase or decrease temperature or time settings.

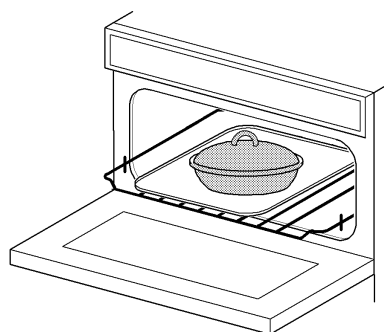

ELECTRONIC OVEN CONTROL

Key

- A - Electronic Display
- B - Main Oven Temperature Selectors
- C - Timer Function Selector
- D - Timer Function Neons
- E - Main Oven Light

Note: The time of day must be set before the main oven will operate manually.

1) How to set the Time of Day

The oven has a 24 hour clock.

When the electricity supply is first switched on, the oven lights will illuminate momentarily and the electronic display will flash 0.00, the 'Time' neon will also flash as Fig 1.

If numbers are flashing:

Press button **-** or **+** until the correct time on the 24 hour clock is reached. When the correct time is displayed, leave the controls for 5 seconds and the 'Time' neon will stop flashing and remain constant to confirm your time setting as Fig 2.

If numbers are static:

If you wish to reset the time, simply press **⌚** 4 times or until the neon scrolls to 'Time'. The 'Time' neon will flash. Press buttons **-** or **+** until the desired time is reached. After 5 seconds the neon will remain constant to confirm your time setting.

Note: The increase and decrease control buttons operate slowly at first, and then more rapidly. They should be pressed separately.

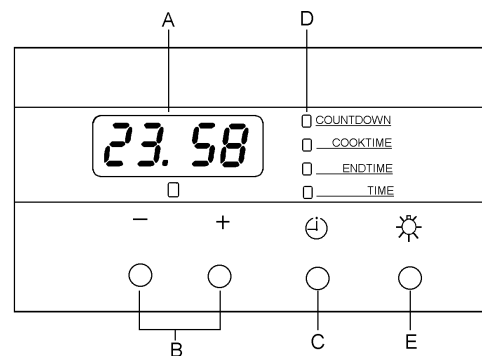


Fig 1.








 
Fig 2.



2) How to set the Countdown

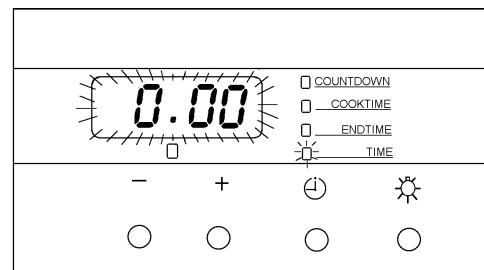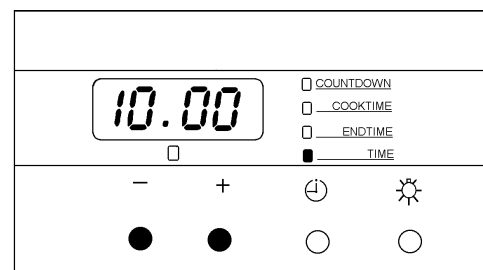The Countdown gives an audible reminder at the end of any period of cooking up to 1 hour 30 minutes. It is not part of the automatic control.

1. Press button  to select the Countdown Function. The relevant neon will flash and the control panel will display 0.00.
2. Press button  or  to select the required time, e.g. 45 minutes as Fig 3. The Countdown will wait 3 seconds and then start running. The Countdown neon will remain constant.

NOTE: This must be completed within 5 seconds of first pressing the  button.

3. The display will countdown the programmed time in minutes.
4. When the programmed time has elapsed, an acoustic alarm will be heard, and 0.00 will show on the control panel. The oven will **NOT** switch off if in use.
5. To switch off the acoustic alarm, press any button as Fig 4. The control panel will display the time of day and the Countdown neon will go out.

To cancel the Countdown



Press button  and the Countdown neon will flash. Press button  till 0.00 is displayed as Fig 5. After 5 seconds the time of day will be restored.

Fig 3.

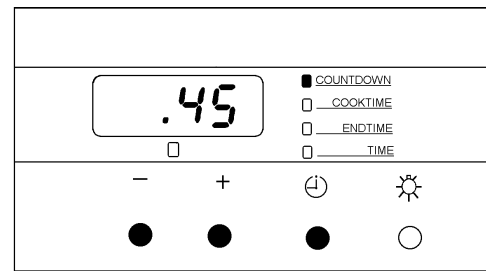


Fig 4.


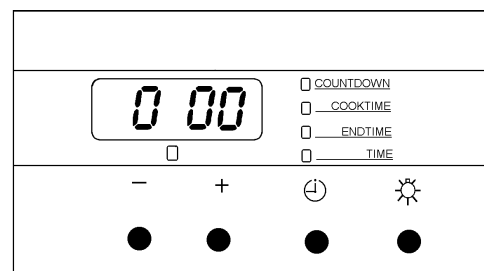


Fig 5.

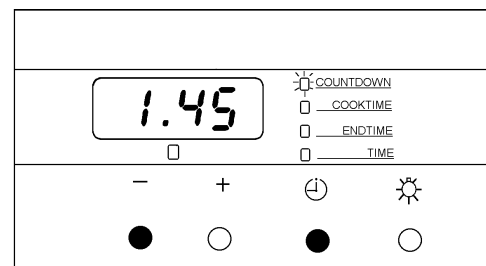

 

 
 


3) How To Set The Oven Timer Control

The main oven only can be automatically timed.

When using the timer control for the very first time it is advisable to let it operate while you are at home. The displays can be checked to show that it is operating correctly and you will feel confident to leave a meal to cook automatically in the future.

A) To Set The Timer To Switch On And Off Automatically

1. Ensure the electricity supply is switched ON and the correct time of day is displayed, e.g. 10.am as Fig 6.
2. Press button  repeatedly until the Cooktime function is selected. The neon will flash and the control panel will display 0 00 as Fig 7.
3. Press button  or  to select the required time (up to 23 hours 59 minutes). The programmer will wait 5 seconds and then start running. The 'Cooktime' neon will remain constant and the display will revert to the temperature set.
4. Press button  and scroll down until the 'Endtime' function is selected, the neon will flash. The control panel will display the end of cooking time (that is, the actual time plus cooking duration). See Fig 8
5. If this is not the time you require, press button  or  within 5 seconds to select the required end of cooking time.
6. Place food in the oven, select a cooking function and set the cooking temperature .
7. The oven will switch on and off automatically. The end of cooking will be marked by an acoustic alarm.

To switch off the acoustic alarm, press any button. The control panel will display the time of day and the endtime neon will go off, see Fig 9.

Fig 6.

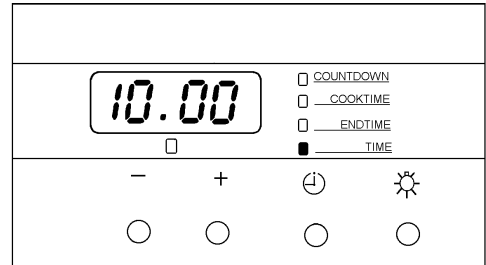


Fig 7.

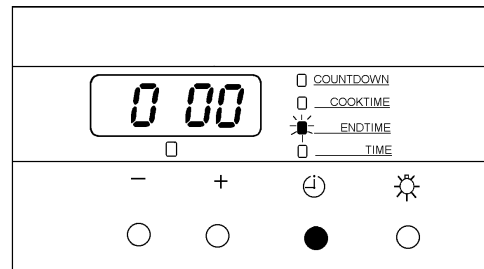


Fig 8.


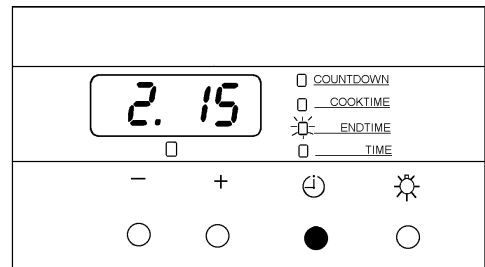

 
 


Fig 9.



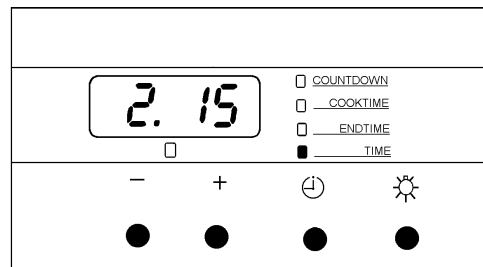

B) To set the Timer to switch off only.

1. Ensure the electricity supply is switched ON and the correct time of day is displayed, e.g. 10.am as Fig 10.
2. Place food in the oven.
3. Press button  repeatedly until the 'Endtime' function is selected. The neon will flash and the control panel will display 0.00 as Fig 11.
4. Press buttons  or  to select the required time (up to 19 hours 59 mins). The programmer will wait 5 seconds and then start running. The 'Endtime' neon will remain constant and the display will revert to the temperature set.
5. The oven will switch off automatically. The End of cooking will be marked by an acoustic alarm. The neon will flash and the control panel will display 0.00.

To switch off the acoustic alarm, press any button. The control panel will display the time of day and the 'Endtime' neon will go out as Fig 12.

To Cancel An Automatic Programme

To cancel an automatic programme simply cancel the Cooktime. Scroll through the timer selector until the Cooktime neon is illuminated. Press button  and while keeping it pressed, press button  too.

If this operation is carried out while a programme is running on, the oven will NOT switch off.

Automatic Cooking

It is advisable to leave food in the oven for as short a time as possible before automatic cooking. Always ensure commercially prepared food is well within its use by date and that home prepared food is fresh and of good quality.

When cooking is complete, **do not** leave food to stand in the oven, but remove and cool it quickly if the food is not to be consumed immediately.

Always ensure food in the oven has been covered before cooking if it is not possible to remove food immediately after cooking.

Fig 10.

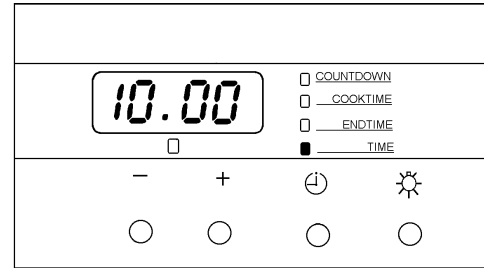


Fig 11.



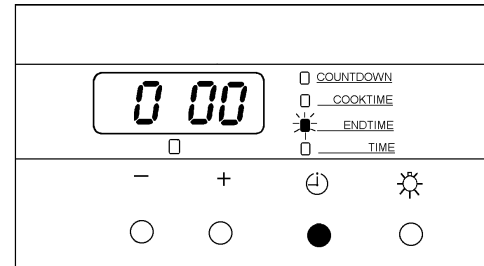


Fig 12.

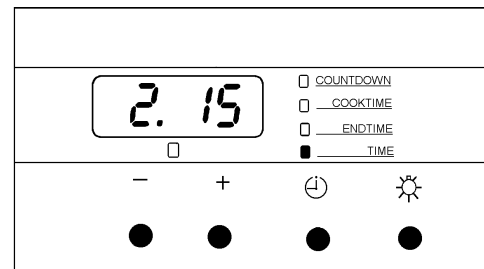

HOW TO SELECT MAIN OVEN COOKING FUNCTIONS AND TEMPERATURE

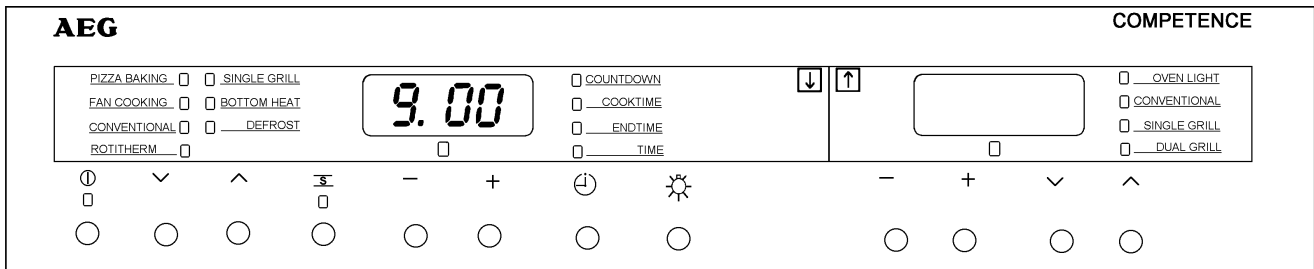

The main oven is provided with 7 different cooking functions. For each of them, a pre-set temperature will be automatically selected.

1. Press button \wedge or \vee to select the required oven function. Each time button \wedge or \vee is depressed, a neon will flash on next to the currently selected function. Once you have selected the function you require wait 5 seconds and the neon will stop flashing and remain constant confirming your choice.
2. The temperature will set automatically. If the pre-set temperature is not suitable, press button $-$ or $+$ to adjust the temperature in 5 degree steps until the required temperature setting is reached.


You can also get the current main oven internal temperature by pressing button $-$ and $+$ together. The temperature will be displayed for 10 seconds and then it will return to the set temperature.

If the internal temperature is higher than the selected temperature (e.g. when a cooking function has been completed the oven is hot) the internal temperature will not be displayed.

To switch off a function simply press \wedge or \vee once. The neon will go out and the display will return to the time of day.

TO FIT THE MAIN OVEN SHELVES

The shelves should be fitted with the straight rods uppermost on the frame and the forms towards the back of the oven. If not fitted correctly the anti-tilt and safety stop mechanism will be affected.

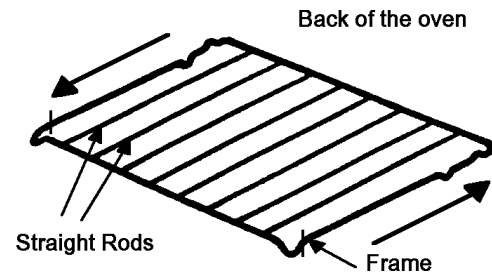

To remove a shelf slide the shelf towards you until the shelf stop is reached. Tilt shelf up at the front so that the stops clear the side supports. Lift shelf clear. To install a shelf, reverse the above steps. Each shelf position has an upper and lower support wire, ensure the shelf is placed between these two support wires.

COOKING FUNCTIONS

Pizza Baking - This setting can be used for foods such as pizzas, quiches or pies, where base browning and crispness are required.

The top and lower elements operate in conjunction with the fan oven.

Fan Cooking - This setting allows you to roast or roast and bake simultaneously using any shelf, without flavour transference.

Conventional Cooking - The heat comes from both the top and bottom element, ensuring even heating inside the oven.

Rotitherm Grilling/Fan Assisted Grilling.

This function offers an alternative method of cooking food items, normally associated with conventional grilling. The grill element and the oven fan operate together, circulating hot air around the food. **Select a maximum temperature of 220°C.**

Single Grill - The full grill element will be on.

Bottom Heating Element - The heat comes from the bottom of the oven only, to allow you to finish your dishes.

Defrost - Defrosts most foods faster than some conventional methods. It is particularly suitable for delicate frozen foods which are to be served cold.

BOOST FUNCTION AND PIZZA BAKING FUNCTION

BOOST FUNCTION

USES OF BOOST FUNCTION


After a cooking function has been selected and the temperature has been adjusted, the cavity will gradually heat up until the selected temperature is reached. This will take from 10 to 15 minutes, depending on selected function and temperature. If it is necessary to reach the required temperature in a shorter time, the Boost Function can be used.

The Boost Function is ideal for quick preheating of the oven before selecting an alternative cooking function.

SELECTING THE BOOST FUNCTION

- 1) Set the required cooking function and temperature as explained in the previous pages.
- 2) Press button **S** once. The neon will illuminate.
- 3) When the required temperature is reached, an acoustic alarm will sound for a short time, and the indicator neon will turn off.

This function cannot be used with single grill and defrost functions.

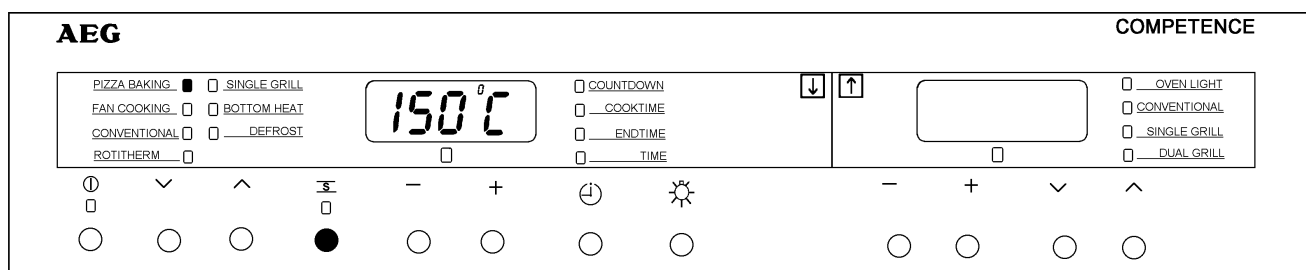

PIZZA BAKING FUNCTION

USES OF PIZZA BAKING FUNCTION

This setting can be used for foods such as pizza where base browning and crispness are required. The top and lower elements operate in conjunction with the oven fan.

SELECTING THE PIZZA FUNCTION

- Scroll through the main oven function selector using \wedge or \vee until the Pizza Baking neon is illuminated.
- Wait 5 seconds until your choice is confirmed and the neon stops flashing.
- The temperature will automatically set to 150°C. If you wish to alter the set temperature you may do so by pressing $-$ or $+$ until the required temperature setting is reached.

THINGS TO NOTE

1. The main oven indicator neon will glow until the oven has reached the desired temperature and then go out. It will turn ON and OFF periodically during cooking showing that the temperature is being maintained.
2. The cooling fan for the controls may operate after a time. It may run on after the controls are switched off until the appliance has cooled. See page 5 for further details on the operation of the cooling fan.
3. The internal oven light will come on.

HINTS AND TIPS

- Single level cooking using shelf positions 4 or 5 gives best results.
- Ensure that food is placed centrally on the shelf for maximum air circulation.
- Be guided by the cook times and temperatures given on any packaging.
- Some pizzas should be cooked directly on the oven shelf. To prevent soiling the oven base, place a baking tray in one of the lower shelf positions.



Dishes, tins or trays should not be placed directly on the oven floor as it becomes very hot and damage will occur.

- The material and finish of the baking trays and dishes used will affect base browning. Enamelware, dark heavy or non-stick utensils increase base browning, while oven glassware, shiny aluminium or polished steel trays reflect the heat away and give less base browning.

THE MAIN OVEN FAN COOKING

USES OF THE FAN OVEN

PREHEATING

The fan oven quickly reaches its temperature, so it is not usually necessary to preheat the oven. Without preheating however, you may find you need to add an extra 5-10 minutes on the recommended cooking times. For recipes needing high temperatures, e.g. bread, pastries, scones, soufflés, etc., best results are achieved if the oven is preheated first. For best results when cooking frozen or cooked chilled ready meals always preheat the oven first.


COOKING TEMPERATURES

Fan oven cooking generally requires lower temperatures than conventional cooking. Follow the temperatures recommended in the chart on page 18. As a guide reduce temperatures by about 20°C-25°C for your own recipes.

BATCH BAKING

The fan oven cooks evenly on both shelf levels, especially useful when batch baking.

SELECTING THE FAN OVEN

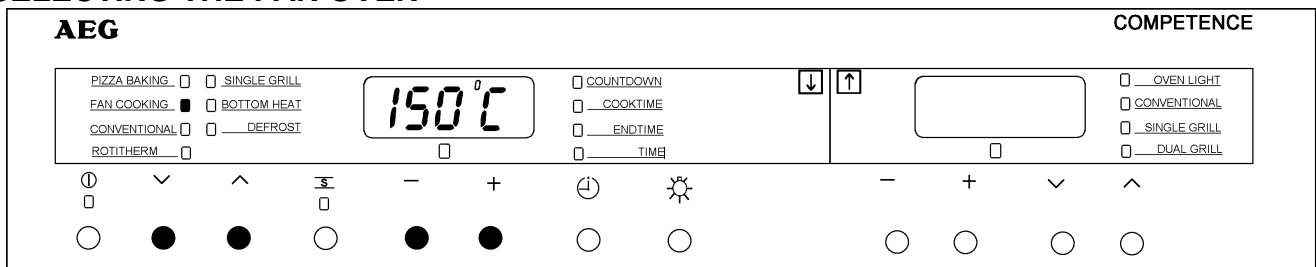

- Scroll through the main oven function selections using \wedge or \vee until the Fan Cooking oven neon is illuminated.
- Wait 5 seconds until your choice is confirmed and the neon stops flashing. The temperature will automatically set to 150°C.
- If you wish to alter the set temperature, you may do so by pressing $-$ or $+$ until the required temperature setting is reached.

THINGS TO NOTE

1. The main oven indicator neon will glow until the oven has reached the desired temperature and then go out. It will turn ON and OFF periodically during cooking showing that the temperature is being maintained.
2. The oven fan will operate continually during cooking.
3. The cooling fan for the controls operates after a period of time. It may run on after the controls are switched off, until the appliance has cooled. See page 5 for further details on the operation of the cooling fan.
4. The internal oven light will come on.






HINTS AND TIPS

- Arrange the shelves in the required positions before switching the oven ON. Shelves are numbered from the bottom upwards.
- When cooking more than one dish in the fan oven, place dishes centrally on different shelves rather than cluster several dishes on one shelf, this will allow the heat to circulate freely for the best cooking results.
- When batch baking one type of food, e.g. Victoria sandwich cakes, those of similar size will be cooked in the same time.
- It is recommended that when baking larger quantities the shelf positions should be evenly spaced to suit the load being cooked. A slight increase in cooking time may be necessary.



DO NOT place cookware and cooking pots with rough bases e.g. cast iron on the oven door as damage to the glass may occur.

- **DO NOT** place baking trays directly on the oven floor as it interferes with the oven air circulation and can lead to base burning; use the lower shelf position.
- The use of excessively high temperatures can cause uneven browning. It may be necessary to reduce temperatures slightly. Refer to the recommendations given in the oven cooking chart see page 18.

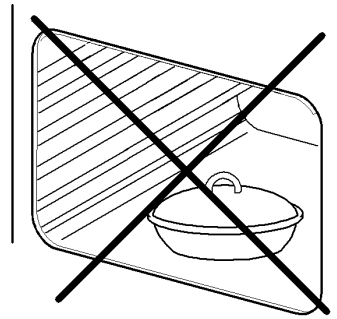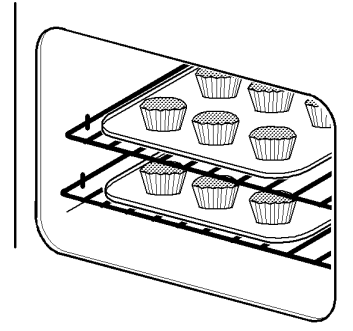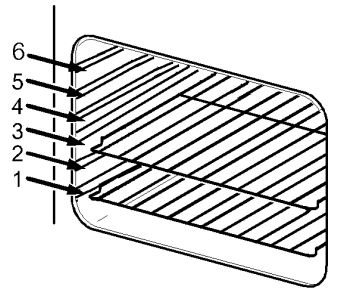


THE MAIN OVEN - CONVENTIONAL SETTING

USES OF THE CONVENTIONAL OVEN

This main oven function uses the top and lower elements to give single level cooking. This is particularly suitable for dishes which require extra base browning such as pizzas, quiches and flans. Gratins, lasagnes and hotpots which require extra top browning also cook well in the conventional oven. This form of cooking gives you the opportunity to cook without the fan oven in operation.

SELECTING THE CONVENTIONAL OVEN

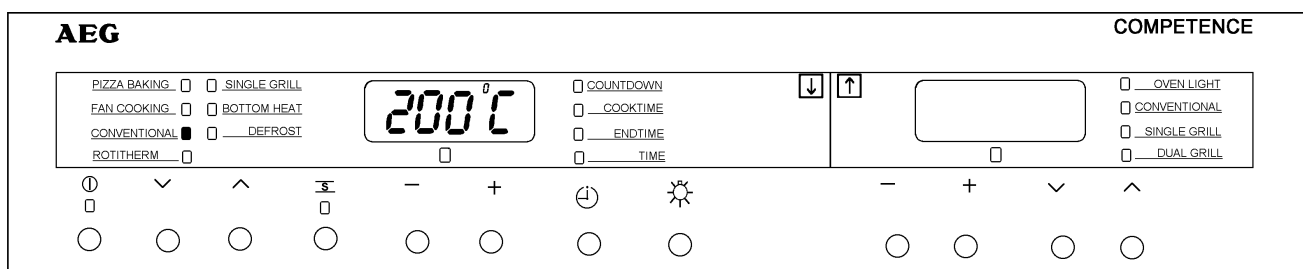

- Scroll through the main oven function selections using \wedge or \vee until the Conventional neon is illuminated.
- Wait 5 seconds until your choice is confirmed and the neon stops flashing.
- The temperature will automatically set to 200°C.
- If you wish to alter the set temperature, you may do so by pressing $-$ or $+$ until the required setting is reached.

THINGS TO NOTE

1. The main oven indicator neon will glow until the oven has reached the desired temperature and then go OUT. It will then turn ON and OFF periodically during cooking showing that the oven temperature is being maintained.
2. The cooling fan for the controls may operate after a time. It may run on after the controls are switched off until the appliance has cooled. See page 5 for further details on the operation of the cooling fan.
3. The internal oven light will come on.

OVEN COOKING CHART

The oven temperatures are intended as a guide only. It may be necessary to increase or decrease the temperatures by 10°C to suit individual preferences and requirements.

Food	FAN OVEN		CONVENTIONAL OVEN	
	Shelf Position	Cooking Temp °C	Shelf Position	Cooking Temp °C
Biscuits		180-190	3	180-190
Bread	Shelf	210-220	3	200-220
Casseroles	positions are not critical but ensure that oven shelves are evenly spaced when more than one is used	130-140	3	150-180
Cakes: Small & Queen		160-170	4	170-180
Sponges		160-170	3	160-180
Madeira		140-150	3	160-170
Rich Fruit		130-140	3	140-160
Christmas		130-140	2	130-140
Meringues		80-100	3	90 -110
Fish		170-190	3	170-190
Fruit Pies and Crumbles		190-200	4	190-200
Milk Puddings		130-140	4	130-140
Pastry: Choux	190-200	3	160-170	
Shortcrust	190-200	4	190-200	
Flaky	210-220	4	210-220	
Puff	Follow manufacturer's instructions			
Plate Tarts	180-190	3	190-200	
Quiches/Flans	170-180	3	190-200	
Scones	210-220	4	220-230	
Roasting: Meat and Poultry	160-180	3	180-200	

ROASTING CHART

ROASTING CHART		
INTERNAL TEMPERATURES - Rare : 50-60°C; Medium : 60-70°C; Well done :70-80°C		
MEAT	SECOND/FAN OVEN	COOKING TIME
Beef	160-180°C	20-35 min per ½kg/1lb and 20-35 min over
Beef, boned	160-180°C	20-35 min per ½kg/1lb and 25-35 min over
Mutton and Lamb	160-180°C	25-35 min per ½kg/1lb and 25-35 min over
Pork and Veal	160-180°C	30-40 min per ½kg/1lb and 30-40 min over
Ham	160-180°C	30-40 min per ½kg/1lb and 30-40 min over
Chicken	160-180°C	15-20 min per ½kg/1lb and 20 min over
Turkey and Goose	160-180°C	15-20 min per ½kg/1lb up to 3½kg/7lb then 10 min per ½kg/1lb over 3½kg/7lb
Duck	160-180°C	25-35 min per ½kg/1lb and 25-30 min over
Pheasant	160-180°C	35-40 min per ½kg/1lb and 35-40 min over
Rabbit	160-180°C	20 min per ½kg/1lb and 20 min over
Potatoes with meat	160-180°C	according to size
Potatoes without meat	180-190°C	according to size

The roasting temperatures and times given in the chart should be adequate for most joints, but slight adjustments may be required to allow for personal requirements and the shape and texture of the meat. However, lower temperatures and longer cooking times are recommended for less tender cuts or larger joints.

Wrap joints in foil if preferred, for extra browning uncover for the last 20 - 30 min. cooking time.

ROTITHERM - FAN ASSISTED GRILLING

USES OF ROTITHERM FAN ASSISTED GRILLING


Rotitherm fan assisted grilling offers an alternative method of cooking food items normally associated with conventional grilling.

The grill element and the oven fan operate together, circulating hot air around the food. The need to check and turn food is reduced. Rotitherm fan assisted grilling helps to minimise cooking smells in the kitchen and allows you to grill with the oven door closed.


With the exception of toast and rare steaks you can thermal grill all the foods you would normally cook under a conventional grill.

The lower part of the oven can be used to cook accompaniments at the same time, e.g. tomatoes and mushrooms with a mixed grill or breakfast.

Dishes prepared in advance such as shepherd's pie, lasagne and au gratins can be heated through and browned on the top using the thermal grilling function.

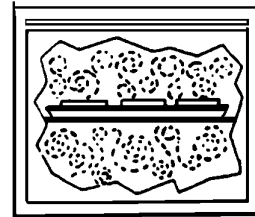

SELECTING ROTITHERM GRILLING

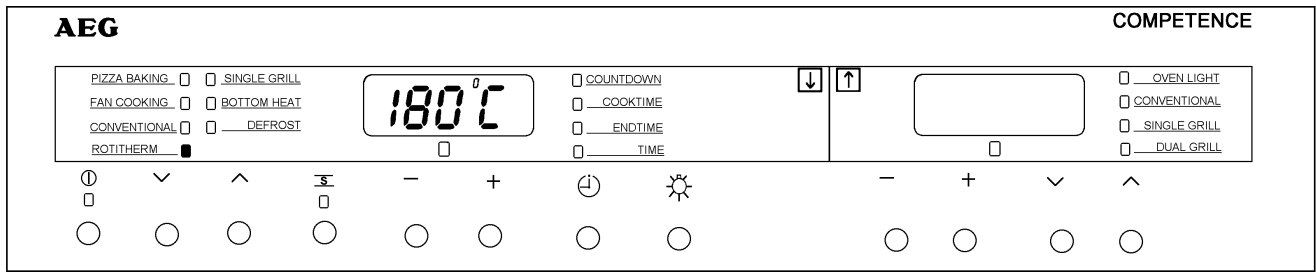

- Scroll through the main oven function selections using \wedge or \vee until the 'Rotitherm' neon is illuminated.
- Wait 5 seconds until your choice is confirmed and the neon stops flashing. The temperature will automatically set to 180°C.
- If you wish to alter the set temperature, you may do so by pressing $-$ or $+$ until the required setting is reached.
- A temperature of between 140°C and 220°C is suitable for Rotitherm grilling.

THINGS TO NOTE

1. The main oven indicator neon will glow until the oven has reached the desired temperature and then go out. It will turn ON and OFF periodically during cooking showing that the oven temperature is being maintained.
2. The oven fan and internal oven light will come on.
3. The cooling fan for the controls may operate after a short time. It may run on after the controls are switched off until the appliance has cooled. See page 5 for more details on the operation of the cooling fan.
4. Always keep the oven door closed and the grill handle removed when cooking with Rotitherm fan assisted grilling.



i HINTS AND TIPS

- Prepare foods in the same way as for conventional grilling. Brush lean meats and fish lightly with a little oil or butter to keep them moist during cooking.
- Most food should be placed on the grill pan grid in the 'high' position in the grill pan to allow maximum circulation of air around the food.
- Accompaniments such as tomatoes and mushrooms may be placed below the grid when grilling meats, or in a separate dish on a lower shelf.
- Foods will cook more quickly the closer they are to the grill element and the higher the temperatures selected. Be prepared to adjust temperatures and shelf positions during cooking if necessary.
- Turn food over during cooking as necessary.
- Ensure that ready prepared or cooked chilled dishes e.g. shepherds pie, moussaka, lasagne, etc., are piping hot throughout before serving.
- A temperature range of 140-220°C and shelf positions 3 and 4 are suitable for most foods. Be prepared to make suitable adjustments during cooking to suit individual requirements. If thermal grilling on more than one level, it may be necessary to interchange the food on the shelves during cooking.

COOKING TIMES

Cooking is more gentle, therefore food generally takes a little longer to cook when thermal grilling compared with conventional grilling. One of the advantages is that larger loads can be cooked at the same time.

A general guide to cooking times is given on this page but these times may vary slightly depending on the thickness and quantity of food being cooked.

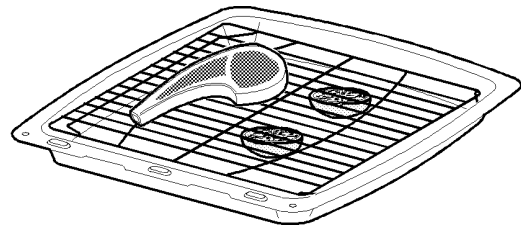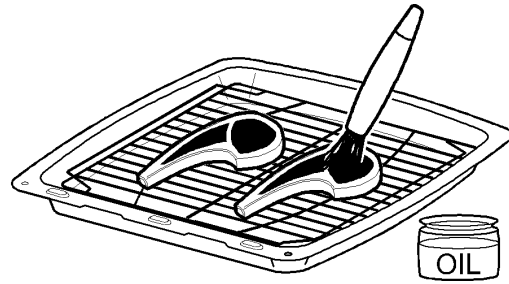

ROTITHERM FAN ASSISTED GRILLING CHART

FOOD	SHELF	TEMP (°C)	TIME (mins in total)
Bacon Rashers	4	200	8-12
Beefburgers	4	190	10-15
Chicken Joints	4	160	35-45
Chops - Lamb/Pork	4	170	20-25
		170	25-35
Fish - Whole			
Trout/Mackerel	3	170	10-20
Fillets - Plaice/Cod	3	170	10-15
Kebabs	4	170	20-30
Kidneys -Lamb/Pig	4	180	10-15
Liver -Lamb/Pig	4	180	20-30
Sausages	4	190	10-15
Steaks -Medium	4	220	8-10
			each side
Steaks - Well Done	4	220	10-12
			each side
Heating through and Browning, e.g. au-gratin, lasagne, shepherd's pie.	3	170	20-30
			depends on size


NOTE: Shelf positions are counted from the bottom of the oven.

Times quoted above are given as a guide and should be adjusted to suit personal taste.

THE MAIN OVEN - GRILL

CAUTION - ACCESSIBLE PARTS MAY BECOME HOT WHEN THE GRILL IS IN USE. CHILDREN SHOULD BE KEPT AWAY.

SELECTING THE MAIN OVEN SINGLE GRILL

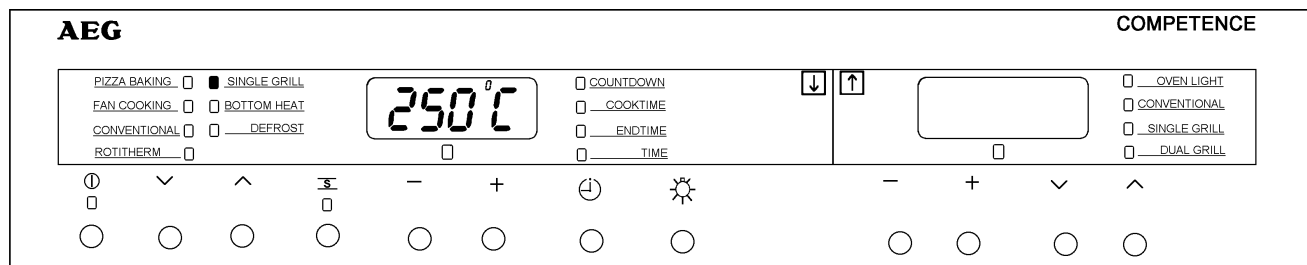

SELECTING THE SINGLE GRILL


- Scroll through the main oven function selections using \wedge or \vee until the Single grill neon is illuminated.
- Wait 5 seconds until your choice is confirmed and the neon stops flashing.
- The temperature will automatically set to 250°C
- If you wish to alter the set temperature you may do so by pressing $-$ or $+$ until the required temperature setting is reached.

THINGS TO NOTE

1. The cooling fan for the controls will operate in conjunction with the grill. It may run on after the controls are switched off, until the appliance has cooled. See page 5 for more details on the operation of the cooling fan.
2. The inner element may appear to glow slightly brighter than the outer element. This is quite normal.
3. Some smoke from fat splashes may be evident as the grill cleans itself.

USING THE TELESCOPIC RUNNERS (WHERE FITTED)

1. Ensure the telescopic runners are pushed back into the oven cavity before fitting the shelf.
2. Holding the front edge of the shelf with both hands, place the rear shelf forms over the telescopic runners.
3. Slide the shelf into position, lifting slightly at the front so that the shelf locates into the retaining hooks.
To remove, raise the front edge and withdraw the shelf.

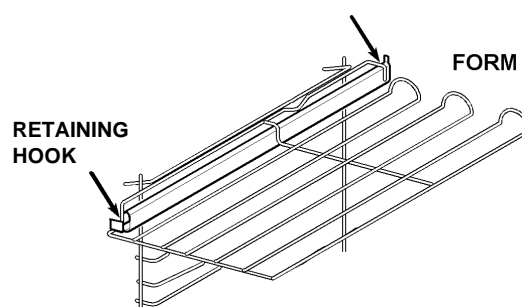

Ensure the shelf is positively located before using.

Note

Should you wish to purchase a telescopic runner kit, this can be ordered from your local Service Force Centre by quoting part number (BAZD02)

THE GRILL PAN AND HANDLE

The grill pan is supplied with a removable handle.

1. To attach the handle, place the wirework under the cut out in the pan so that the metal plate hooks over the top of the grill pan.
2. Slide the handle to the left and over the central bump on the grill pan.



Ensure the handle is correctly located. The grill pan handle should be in place when grilling.

3. To remove the handle, slide the handle to the right and lift the handle away from the cut out on the grill pan.

Place the grill pan on the shelf so that the pan is positioned centrally beneath the grill.

To check the progress of the food being grilled, the grill pan should be withdrawn to attend food during cooking.

If your model is fitted with telescopic runners in position 3, the grill pan can be withdrawn on the shelf.




Do not attempt to close the door if the telescopic shelf supports are not completely inside the grill. This could damage the door glass and handle.




HINTS AND TIPS

- Most foods should be placed on the grid in the grill pan to allow maximum circulation of air and to lift the food out of the fats and juices.
- Adjust the grid and grill pan runner position to allow for different thicknesses of food. Position the food close to the element for faster cooking and further away for more gentle cooking.
- Food should be thoroughly dried before grilling to minimise splashing. Brush lean meats and fish lightly with a little oil or melted butter to keep them moist during cooking.
- Accompaniments such as tomatoes and mushrooms may be placed around the outer edges or underneath the grid when grilling meats.
- When toasting bread, we suggest that the top runner position is used with the grid in its 'high' position.




1.

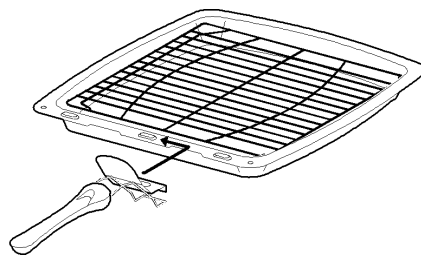

2.

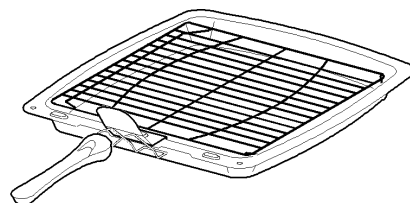


3.

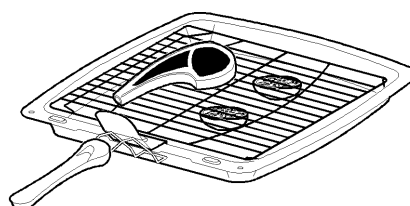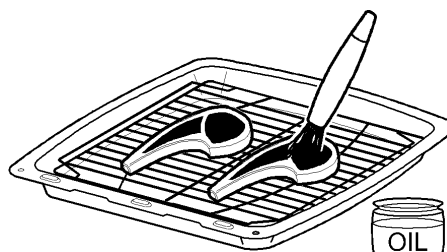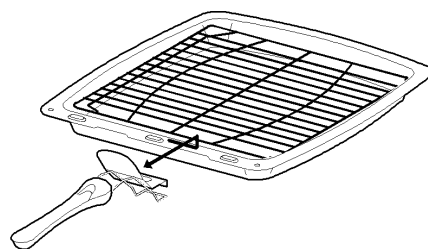

- Preheat the grill on full setting for a few minutes to seal meat or for toasting. Adjust the heat setting and the shelf as necessary during cooking.
- The food should be turned over during cooking as required.

Note

If you require an additional handle for your grill pan, this can be ordered from your local Service Centre by quoting part number 311479800\6.

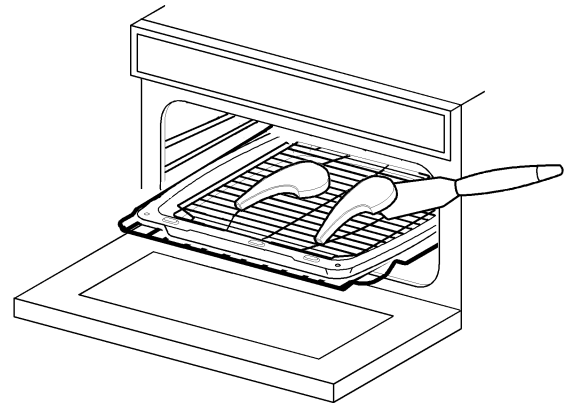


GRILLING CHART

Adjust grill grid height and shelf position according to the food being cooked.

FOOD	GRILL TIME (mins in total)
Toast	4-6
Bacon Rashers	10
Beefburgers	10-15
Chicken Joints	30-40
Chops - Lamb	15-20
Pork	20-30
Fish - Whole	
Trout/Mackerel	15-25
Fillets - Plaice/Cod	15
Kebabs	20-30
Kidneys - Lamb/Pig	8-12
Sausages	20-30
Steaks - Rare	6-12
Medium	12-16
Well Done	14-20
Toasted Sandwiches	3-4

The times quoted above are given as a guide and should be adjusted to suit personal taste.

BOTTOM HEAT

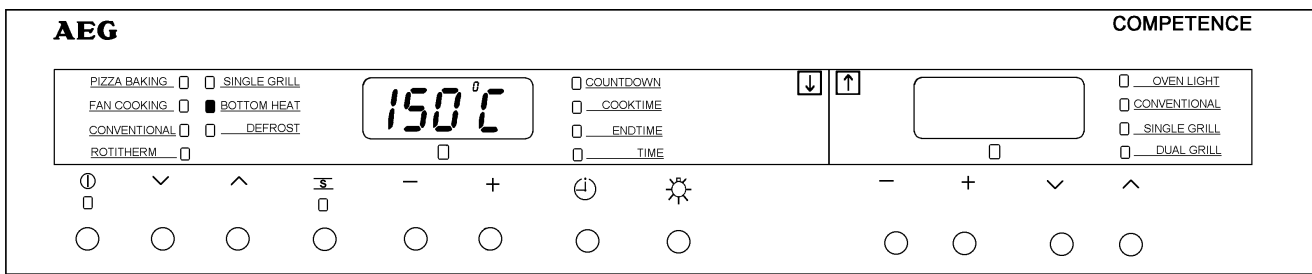

USES OF THE BOTTOM HEAT FUNCTION

This function can be used to finish off dishes that may require extra base heat or where base browning and crispness are required by pizzas or pies.

Some pizzas should be cooked directly on the oven shelf. To prevent soiling the oven base, place a baking tray in one of the lower positions.



Do not place dishes, tins or baking trays directly on the oven base as damage will occur.

SELECTING THE BOTTOM HEAT FUNCTION

- Towards the end of the 'Cook' time, scroll through the main oven function selectors using \wedge or \vee until the 'Bottom Heat' neon is illuminated.
- Wait 5 seconds until your choice is confirmed and the neon stops flashing.
- The temperature will automatically set to 150°C.
- If you wish to alter the set temperature you may do so by pressing $-$ or $+$ until the required temperature setting is reached.

Note

This function should not be used for the entire cooking time. It is intended as a support function only.

THE EFFECTS OF DISHES ON COOKING RESULTS


Dishes and tins vary in their thickness, conductivity, colour, etc, which affects the way they transmit heat to the food inside them. The material and finish of the baking trays and dishes used will affect base browning.

- Aluminium, earthenware, oven glassware and bright shiny utensils reduce cooking and underneath browning.
- Enamelled cast iron, anodised aluminium, aluminium with non-stick interior and coloured exterior and dark, heavy utensils increase cooking and underneath browning.
- Always place dishes centrally on the shelf to ensure even browning.

DEFROSTING


USES OF DEFROST FEATURE

This main oven function enables you to defrost most foods without heat faster than some conventional methods. It is particularly suitable for delicate frozen foods which are to be served cold e.g. cream filled gateaux, cakes covered with icings or frostings, cheesecakes, biscuits, scones etc.

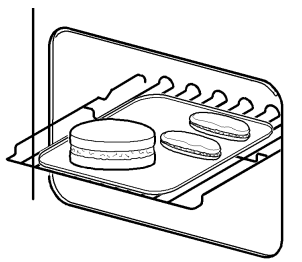


HINTS AND TIPS

- Place the frozen food in a single layer where possible and turn it over half way through the defrosting process.
- The actual speed of defrosting is influenced by room temperature. On warm days defrosting will be faster than on cooler days.
- It is preferable to thaw fish, meat and poultry slowly in the fridge. However, this process can be accelerated by using the defrost function. Small or thin fish fillets, frozen peeled prawns, cubed or minced meat, liver, thin chops, steaks etc., can be thawed in 1 - 2 hours.

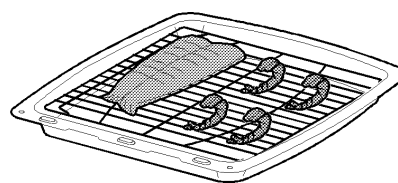

SELECTING DEFROST

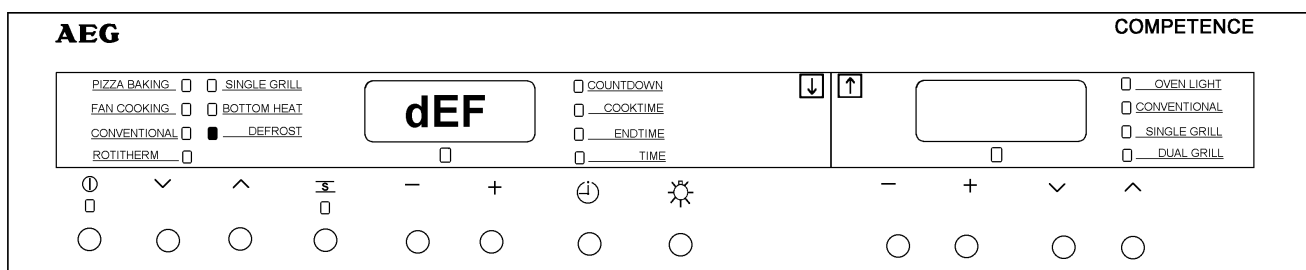

- Scroll through the main oven function selections using \wedge or \vee until the Defrost neon is illuminated.
- Wait 5 seconds until your choice is confirmed and the neon stops flashing.
- The temperature display will show 'dEF'.
- The oven fan and internal oven light will come on.
- To switch the defrost function off, just press button \wedge or \vee once again. The main oven electronic display will show the time of day.

THINGS TO NOTE

1. The oven indicator neon may glow and turn on and off when defrosting.
2. The oven fan and oven light will come on.
3. The cooling fan does not operate.

- A 1kg/2¼lb oven ready chicken will be thawed in approximately 5 hours. Remove the giblets as soon as possible during the thawing process.
- Joints of meat up to 2kg/4½lb in weight can be thawed using the defrost function.
- ALL JOINTS OF MEAT AND POULTRY MUST BE THAWED THOROUGHLY BEFORE COOKING.
- Always cook food thoroughly immediately after thawing.
- **DO NOT** leave food at room temperature once it is defrosted. Cook raw food immediately or store cooked food in the fridge once it has cooled.

HELPFUL HINTS WHEN BUYING AND PREPARING FOOD

Care must be taken when handling foods in the home. Always follow the basic rules of food hygiene to prevent bacterial and microbial growth and cross contamination when preparing, reheating, cooking, cooling, defrosting and freezing foods.

1. Always ensure food you purchase is of good quality and in prime condition. Shop at a reliable source and buy the 'freshest' looking package - avoid shop worn labels or produce covered in dust.
2. Avoid buying chilled or frozen products if you cannot store them straight away. The use of an insulated container when shopping is advisable.
3. Buy and consume foods prior to the 'Sell by' or 'Best Before' date.
4. When you arrive home, place perishable foods in the refrigerator or freezer immediately. Ensure they are well covered to prevent them drying out and to prevent any possible cross contamination with bacteria from raw to cooked foods.
5. Follow the cooking instructions on packets of prepacked and cooked chilled foods, but be prepared to adjust cooking times and temperatures to suit your particular oven. For example, the Fan Oven generally requires 20-25°C lower temperature than conventional ovens.
6. Always ensure that cooked chilled foods are thoroughly reheated until they are piping hot throughout.
7. It is preferable to defrost frozen foods slowly in the refrigerator. Alternatively, a microwave appliance or the Defrost function on your oven may be used.
8. Always cook defrosted foods immediately after thawing. Thawed food should never be refrozen.
9. Joints of meat and poultry should be thoroughly defrosted before cooking.

10. Cook meat thoroughly - use a meat thermometer if preferred, which penetrates the joint to check that the centre temperature has reached the required temperature (see table below).



MEAT	TEMPERATURES
Beef	Rare - 60°C Medium - 70°C Well Done - 80°C
Pork	Well Done - 80°C
Lamb	Medium - 70°C Well Done - 80°C

11. If not eaten straight away after cooking, food should be cooled as quickly as possible (within one hour) and then refrigerated or frozen as required. **Do not** put hot food into a refrigerator or freezer.
12. In the kitchen keep worktops, chopping boards and utensils clean with hot soapy water between preparation stages. Ideally, keep one chopping board for raw meat and another for other foods. Keep your dish cloths and tea towels clean.

MAIN OVEN LIGHT

SELECTING THE MAIN OVEN LIGHT

The oven light illuminates the main oven when a main oven cooking function and temperature has been selected.

- If you do not want the cavity to be illuminated whilst you are cooking you can press the  button which will switch the main oven light off.
- To turn the main oven light on again, or to switch the light on whilst the oven is not in operation press the  button once.

For information of replacing the main oven light bulb turn to page 40.

SAFETY CUT-OFF FUNCTION

If no changes are made to the oven settings, the oven will switch off automatically according to the following table:

If temperature setting is:	The oven will switch off:
250°C or more	after 1 ½ hours
from 120°C up to 250°C	after 5 hours
less than 120°C	after 12 hours

 
 
 
 
 
 
 
The second oven grill will switch off automatically, if no changes are made to the oven settings, after 1½ hours.

SAFETY AND ENERGY SAVING FUNCTIONS

 

 

CHILD SAFETY FUNCTION

To avoid children switching on the oven when the appliance is switched off, it is possible to lock the oven controls on both the main and second ovens individually.

MAIN OVEN

- 1) Press buttons  and  at the same time and keep them pressed for about 3 seconds. An audible signal will be heard and SAFE will now be shown in the main oven electronic display. The display will revert to the time of day after 10 seconds.
- 2) The main oven is now locked. Neither oven functions nor temperatures can be selected.
- 3) To unlock the main oven if no buttons have been depressed. Press buttons  and  at the same time and keep them pressed for about 3 seconds. An audible signal will be heard. The oven can now be operated normally.
- 4) To unlock the main oven if SAFE is illuminated in the display. Press  to return the display to the time of day. Now press  and  at the same time and keep them pressed for about 3 seconds. The oven can now be operated normally.

SECOND OVEN

- 1) Press buttons  and  at the same time and keep them pressed for about 3 seconds. An audible sound will be heard and SAFE will be shown in the second oven electronic display. The display will revert to the time of day after 10 seconds.
- 2) The second oven is now locked. Neither oven functions nor temperature can be selected.
- 3) To unlock the second oven press buttons  and  at the same time and keep them pressed for about 3 seconds. An audible signal will be heard. The oven can now be operated normally.


THE SECOND OVEN



The second oven is the smaller of the two ovens. It is heated by elements in the top and bottom of the oven. It is designed for cooking smaller quantities of food. It gives especially good results if used to cook fruit cakes, sweet and savoury flans or quiche.

The second oven is also ideal for use as a warming compartment to warm dishes and keep food hot. Use a temperature setting of 90° - 100°C on the second oven temperature control.

SELECTING THE SECOND OVEN

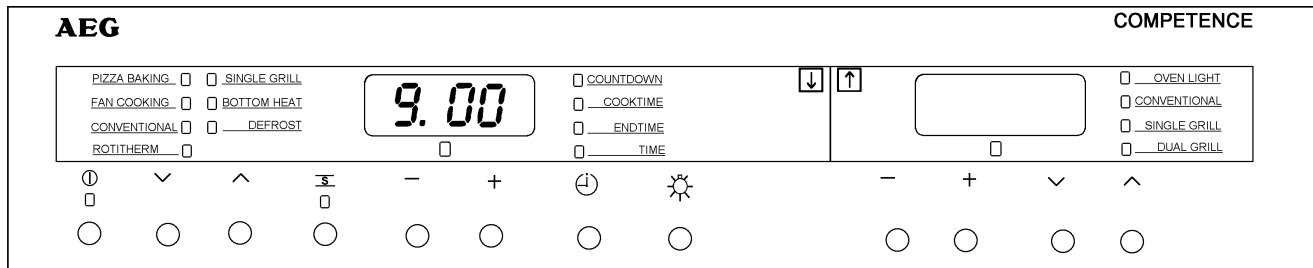

USES OF THE SECOND OVEN

The second oven is provided with 3 different cooking functions. For each of them, a pre-set temperature will be automatically selected.

- 1) Scroll through the second oven function selectors using \wedge or \vee to select the required oven function. Each time button \wedge or \vee is depressed, a neon will flash to the left of the currently selected function. Once you have selected the function you require, wait 5 seconds until your choice is confirmed. The neon will stop flashing and remain constant confirming your choice.
- 2) The temperature will set automatically. If the pre-set temperature is not suitable, press button $-$ or $+$ to adjust the temperature in 5 degree steps until the required temperature setting is reached.


You can also get the current main oven internal temperature by pressing button $-$ and $+$ together. The temperature will be displayed for 10 seconds and then it will return to the set temperature.

If the internal temperature is higher than the selected temperature (e.g. when a cooking function has been completed the oven is hot) the internal temperature will not be displayed.

To switch off a function simply press \wedge or \vee once. The neon will go out and the display will return to the time of day.

TO FIT THE SECOND OVEN SHELF

The cranked shelf should be fitted with the straight rods uppermost on the frame and the forms towards the back of the oven. If not fitted correctly the anti-tilt and safety stop mechanism will be affected.

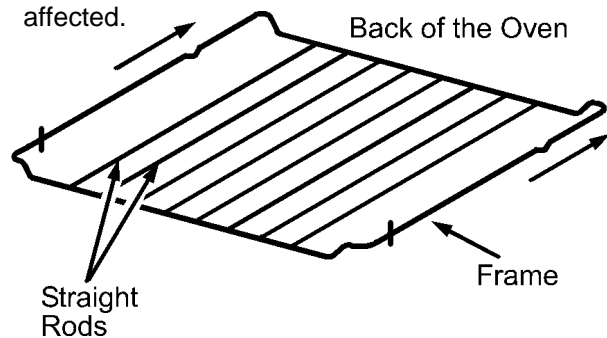

To remove a shelf slide the shelf towards you until the shelf stop is reached. Tilt shelf up at the front so that the stops clear the side supports. Lift shelf clear. To install a shelf, reverse the above steps. Each shelf position has an upper and lower support wire, ensure the shelf is placed between these two support wires.

SECOND OVEN LIGHT


SELECTING THE SECOND OVEN LIGHT

- The oven light illuminates the second oven when a second oven cooking function and temperature have been selected.
- To turn the second oven light on whilst the oven is not in operation, scroll through the second oven function selectors using \wedge or \vee until the oven light neon is illuminated. Wait 5 seconds until your choice is confirmed and the neon stops flashing.
- To switch the light off whilst the oven is not in operation simply press \wedge or \vee once.
- For information on replacing the second oven light bulb turn to page 40.

THE SECOND OVEN CONVENTIONAL SETTING

This second oven function uses the top and lower elements to give single level cooking. This is particularly suitable for dishes which require extra base browning such as pizzas, quiches and flans. Gratins, lasagnes and hotpots which require extra top browning also cook well in the conventional oven.

SELECTING THE CONVENTIONAL OVEN

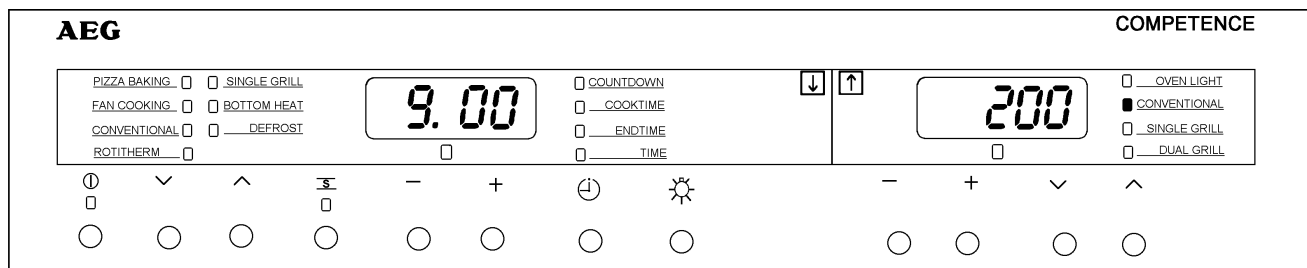

USES OF THE CONVENTIONAL OVEN

- Scroll through the main oven functions selector using \wedge or \vee until the Conventional neon is illuminated.
- Wait 5 seconds until your choice is confirmed. The neon will stop flashing. If you wish to alter the set temperature, you may do so by pressing $-$ or $+$.
- The temperature will automatically set to 200°C.


THINGS TO NOTE

1. The Second oven temperature neon will glow until the oven has reached the desired temperature and then go OUT. It will then turn ON and OFF periodically during cooking showing that the oven temperature is being maintained.
2. The internal oven light will come on.
3. The cooling fan for the controls may operate after a short time and runs on after the controls are switched off until the appliance has cooled. See page 5 for more details on the cooling fan.

Do not place dishes, tins or baking trays directly on the oven base as damage will occur.

USING THE TELESCOPIC RUNNERS (where fitted)

1. Ensure the telescopic runners are pushed back into the oven cavity before fitting the shelf.
2. Holding the front edge of the shelf with both hands, place the rear shelf forms over the telescopic runners.
3. Slide the shelf into position, lifting slightly at the front so that the shelf locates into the retaining hooks.
To remove, raise the front edge and withdraw the shelf.

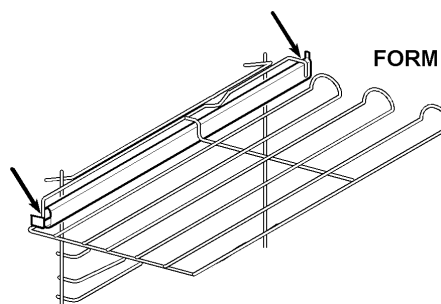

Ensure the shelf is positively located before using.

Note

Should you wish to purchase a telescopic runner kit, this can be ordered from your local Service Centre by quoting part number (BAZD02)

i HINTS AND TIPS

- All cooking should be carried out using shelf positions one and two. Shelf positions are counted from the bottom upwards. Shelf position 3 should be reserved for grilling only.
- There should always be at least 2.5cm (1") between the top of the food and the element. This gives best cooking results and allows room for rise in yeast mixtures, Yorkshire puddings etc. When cooking cakes, pastry, scones, bread etc., place the tins or baking trays centrally below the element.
- Ensure that food is placed centrally on the shelf and there is sufficient room around the baking tray/dish to allow for maximum circulation.
- Stand dishes on suitably sized baking trays to prevent spillage onto the oven base and to help reduce cleaning.






DO NOT use the grill pan or meat tin as a baking tray as this will increase base browning of the food.

- The material and finish of the baking tray and dishes will affect the degree of base browning of the food. Enamelware, dark, heavy or non-stick utensils increase base browning. Shiny aluminium or polished steel trays reflect the heat away and give less base browning.
- Because of the smaller cooking space, lower temperatures and shorter cooking times are sometimes required. Be guided by the recommendations on page 8.
- For economy leave the door open for the shortest possible time, particularly when placing food into a pre-heated oven.



DO NOT place cookware and cooking pots with rough bases e.g. cast iron on the oven door as damage to the glass may occur.

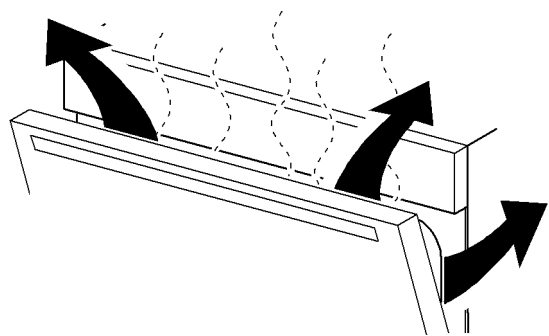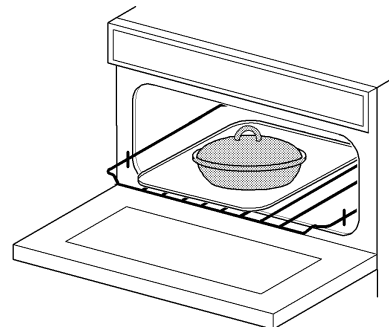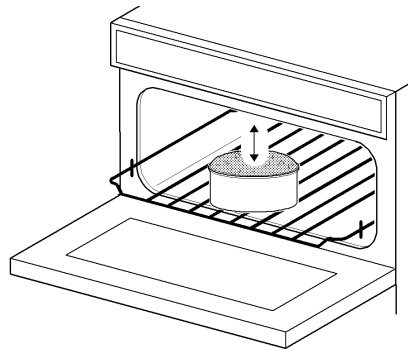

SECOND OVEN COOKING CHART

FOOD	SHELF POSITION	COOKING TEMP °C
Biscuits	1	170-190
Bread	1	200-220
Bread rolls/buns	1	200-220
Cakes:		
Small & Queen	2	180-190
Sponges	2	160-170
Victoria Sandwich	2	160-170
Madeira	1	140-150
Rich Fruit	1	130-140
Christmas	1	130-140
Gingerbread	1	140-150
Meringues	1	90-100
Flapjack	1	170-180
Shortbread	1	190-200
Casseroles:		
Beef/Lamb	1	140-160
Chicken	1	180-190
Convenience Foods	Follow manufacturer's instructions	
Fish	1	170-190
Fish Pie (Potato Topped)	1	190-200
Fruit Pies & Crumbles	1	190-200
Milk Puddings	1	140-150
Pasta, Lasagne etc.	1	170-180
Pastry:		
Choux	1	180-190
Eclairs, Profiteroles	1	170-180
Flaky/Puff Pies	1	210-220
Shortcrust:		
Mince Pies	1	190-200
Meat Pies	1	190-210
Quiche, Tarts, Flans	1	180-200
Roasting Meat, Poultry	1	160-180
Scones	2	220-230
Shepherd's Pie	1	190-200
Soufflés	1	170-180
Vegetables:		
Baked Jacket Potatoes	1	180-190
Roast Potatoes	1	180-190
Yorkshire Puddings:		
Large	1	200-210
Individual	1	200-210


Note: Shelf positions are counted from the bottom of the oven upwards.

SECOND OVEN GRILL

CAUTION - ACCESSIBLE PARTS MAY BECOME HOT WHEN THE GRILL IS IN USE. CHILDREN SHOULD BE KEPT AWAY.


The grill is a dual circuit grill which means that the full area of the grill can be used or for economy purposes, the centre section only can be used when cooking smaller quantities of food.

SELECTING THE SINGLE OR DUAL GRILL

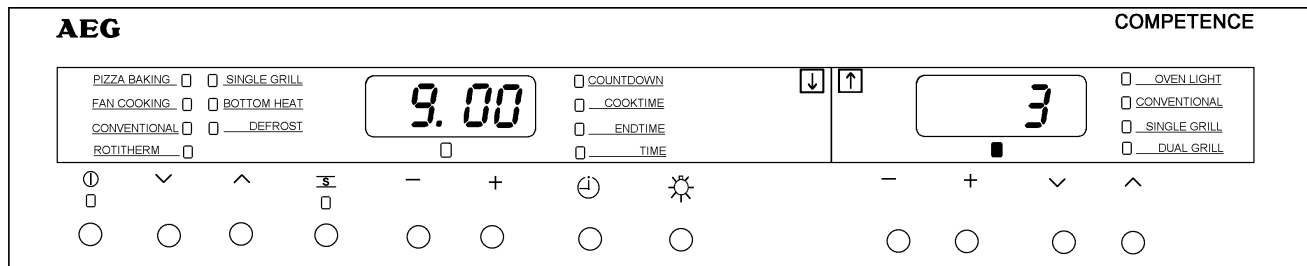

SELECTING THE SINGLE GRILL

- Scroll through the second oven function selectors using \wedge or \vee until the Single grill neon is illuminated.
- Wait 5 seconds until your choice is confirmed and the neon stops flashing.
- The temperature will automatically set to 3.
- If you wish alter the setting you may do so by pressing $-$ or $+$ until the required temperature setting is reached.
- The highest number represents the hottest setting and the lowest the coolest setting.

 **THE GRILL DOOR MUST BE LEFT OPEN DURING GRILLING. IF CLOSED THE ELEMENTS WILL SWITCH OFF AND THE OVEN LIGHT WILL TURN ON AND OFF AS A WARNING.**

THINGS TO NOTE

1. The cooling fan for the controls will operate in conjunction with the grill.
2. The inner element may appear to glow slightly brighter than the outer element. This is quite normal.
3. The second oven temperature neon will be lit when the grill is in use.
4. Some smoke from fat splashes may be evident as the grill cleans itself.


SELECTING THE DUAL GRILL

- Scroll through the second oven function selectors using \wedge or \vee until the Dual grill neon is illuminated.
- Wait 5 seconds until your choice is confirmed and the neon stops flashing.
- The temperature will automatically set to 3.
- If you wish alter the setting you may do so by pressing $-$ or $+$ until the required temperature setting is reached.
- The highest number represents the hottest setting and the lowest the coolest setting.

THE GRILL PAN AND HANDLE

The grill pan is supplied with a removable handle.


1. To attach the handle, place the wirework under the cut out in the pan so that the metal plate hooks over the top of the grill pan.
2. Slide the handle to the left and over the central bump on the grill pan.

 **Ensure the handle is correctly located. The grill pan handle should be in place when grilling.**

3. To remove the handle, slide the handle to the right and lift the handle away from the cut out on the grill pan.



Place the grill pan on the shelf so that the pan is positioned centrally beneath the grill.

To check the progress of the food being grilled, the grill pan should be withdrawn to attend food during cooking. If your model is fitted with telescopic runners in position 3, the grill pan can be withdrawn on the shelf.

 **Do not attempt to close the grill door if the telescopic shelf supports are not completely inside the grill. This could damage the door glass and handle.**

HINTS AND TIPS


- Most foods should be placed on the grid in the grill pan to allow maximum circulation of air and to lift the food out of the fats and juices.
- Adjust the grid and grill pan runner position to allow for different thicknesses of food. Position the food close to the element for faster cooking and further away for more gentle cooking.
- Food should be thoroughly dried before grilling to minimise splashing. Brush lean meats and fish lightly with a little oil or melted butter to keep them moist during cooking.
- Accompaniments such as tomatoes and mushrooms may be placed around the outer edges or underneath the grid when grilling meats.
- When toasting bread, we suggest that the top runner position is used with the grid in its 'high' position.

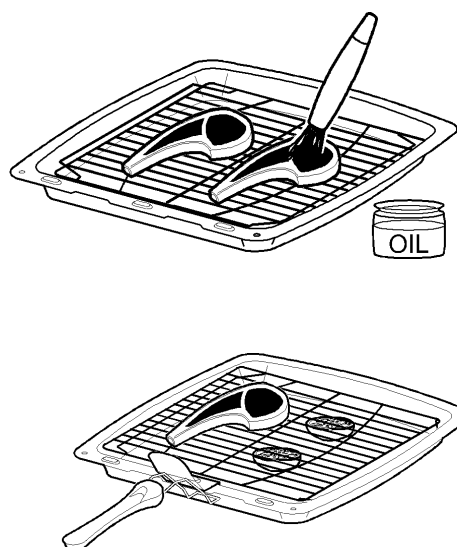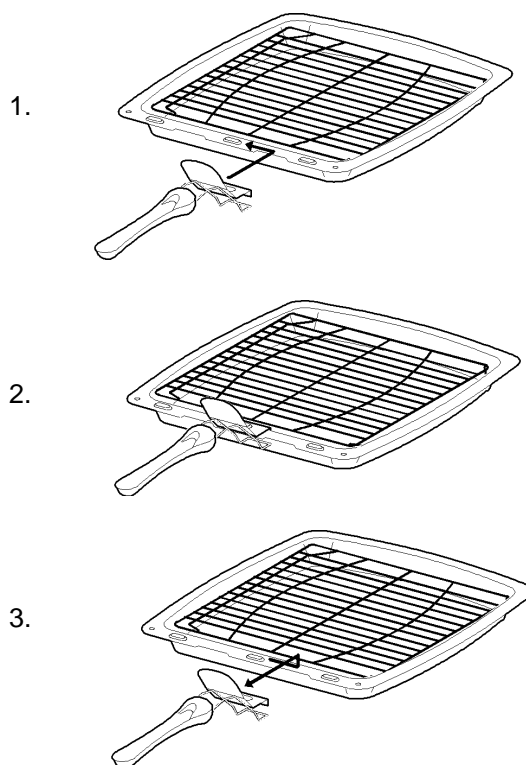

- Preheat the grill on full setting for a few minutes to seal meat or for toasting. Adjust the heat setting and the shelf as necessary during cooking.
- The food should be turned over during cooking as required.
- When using the centre section grill, ensure food is placed centrally on the grilling grid directly beneath the grill element.

Note

If you require an additional handle for your grill pan, this can be ordered from your local Service Centre by quoting part number 311479800\6.

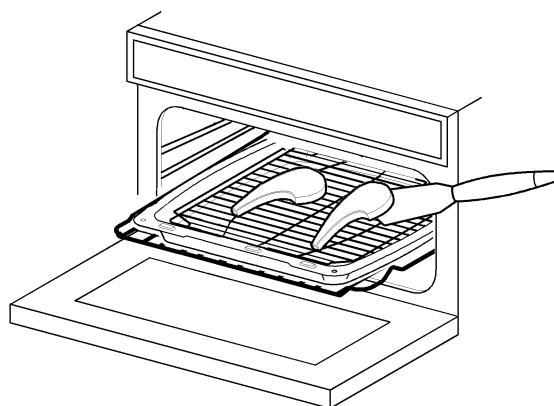

GRILLING CHART

FOOD	GRILL TIME (mins in total)
Toast	3-4
Bacon Rashers	10
Beefburgers	10-15
Chicken Joints	30-40
Chops - Lamb	15-20
Pork	20-30
Fish - Whole Trout/Mackerel	15-25
Fillets - Plaice/Cod	15
Kebabs	20-30
Kidneys - Lamb/Pig	8-12
Sausages	20-30
Steaks - Rare	6-12
Medium	12-16
Well Done	14-20
Toasted Sandwiches	3-4

The times quoted above are given as a guide and should be adjusted to suit personal taste.

CARE AND CLEANING



BEFORE CLEANING THE OVEN ALWAYS ALLOW THE COOLING FAN TO COOL THE OVEN DOWN BEFORE SWITCHING OFF THE ELECTRICITY SUPPLY.

CLEANING MATERIALS

Before using any cleaning materials on your appliance, check that they are suitable and that their use is recommended by the manufacturer.

Cleaners that contain bleach should NOT be used as they may dull the surface finishes. Harsh abrasives and scourers should also be avoided as damage will occur.

CLEANING THE OUTSIDE OF THE OVEN

Regularly wipe over the control panel, oven doors and handles using a soft cloth and hot soapy water. To prevent streaking finish with a soft cloth.



Do not attempt to remove any of the control knobs from the panel as this may cause damage and is a safety hazard.



Under no circumstances should the door assembly be detached from the product for cleaning. Please refer to the cleaning instructions.


Model D8100-1M only

Stainless steel cream cleaners can be abrasive and should be avoided as damage to the surface finish can occur. Washing up liquid and hot water or liquid stainless steel cleaners such as Homecare Stainless Steel Cleanser and Polish may be used to remove fingermarks.

Cleaning the Brass Handles (where fitted)

It is strongly recommended that only hot water to which a little washing up liquid has been added and a soft cloth is used for cleaning the brass handles.

ANY OTHER CLEANING MATERIALS WILL DULL THE BRASS PLATED FINISH.

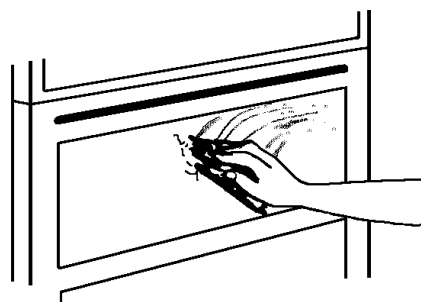

CLEANING INSIDE THE OVENS

The vitreous enamel base in the ovens can be cleaned using normal oven cleaners or aerosol oven cleaners with care. Ensure that the manufacturers instructions are followed and that all parts are well rinsed afterwards.

The sides and back of the main oven and top oven compartment are coated with Stayclean enamel surfaces.

The Stayclean surfaces inside the ovens should not be cleaned manually. See 'Care of Stayclean Surfaces'.

CARE OF STAYCLEAN SURFACES



Aerosol cleaners must not come into contact with elements or the door seal as this may cause damage.

Stayclean surfaces destroy splashes of food and fats when the oven temperature is raised to around 220°C.

It is a good idea to run the oven for an hour or two per week to ensure continued good performance from the Stayclean finish.

HINTS AND TIPS

- Manual cleaning of Stayclean is not recommended. Damage will occur if oven sprays or abrasives of any kind are used.
- Slight discolouration and polishing of the Stayclean surface may occur in time. This DOES NOT affect the Stayclean properties in any way.
- A good time to allow the oven to run on is after the weekly roast. After removing the roast, turn the oven up to 220°C and allow to run for an hour or so. It is important NOT to allow a build-up of soilage as this can prevent the Stayclean from working.
- Follow the recommendations below to keep oven soilage to a minimum.
- Cook at the recommended temperatures. Higher temperatures during roasting will increase soilage. Try cooking at lower temperatures for an increased length of time, you will save energy and often the joint is more tender.
- Use minimal, if any, extra oil or fat when roasting meat, potatoes only require brushing with fat before cooking. Extra fat in the oven during roasting will increase splashing and soilage.
- It is NOT necessary to add water to a meat tin when roasting. The water and the fat juices from the joint create excessive splattering during cooking - even at normal temperatures, as well as causing condensation.


- Covering joints during cooking will also prevent splashing onto the interior surfaces. Removing the covering for the last 20-30 minutes will allow extra browning if required. Some large joints and turkeys especially benefit by this method of cooking, allowing the joint to cook through before the outside is overbrowned.

REMOVING AND REPLACING WIREWORK SIDE RUNNERS

Remove all shelves and furniture from the oven. If fitted ensure the telescopic runners are pushed back into place in the oven cavity. Hold the bottom of the wirework runners and draw the runners towards the centre of the oven. Unhook from the top and remove.

The telescopic runners should be dried carefully after washing in hot water to which washing up liquid has been added. If heavily soiled mild abrasives may be used.

To replace the runners, hook the wirework side runner into the cavity, slide back and press into place.

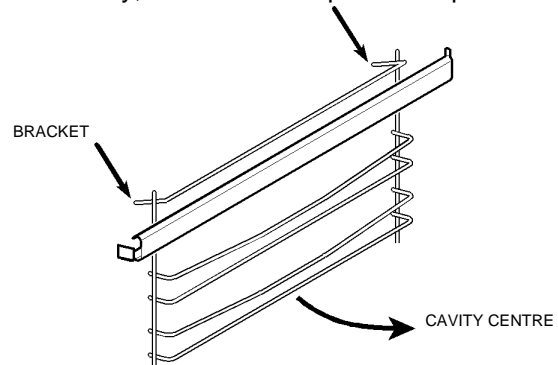

Ensure the wirework runners are firmly in position before replacing the oven shelves.

CLEANING THE GRILL AND OVEN FURNITURE

All removable parts, except the grill pan handle and telescopic runners can be washed in the dishwasher. Alternatively soak them in hot soapy water if heavily soiled. They will then clean more easily.


The grill pan and meat tin may be cleaned using a soap impregnated steel wool pad. The grill pan grid, wirework runners and oven shelves should be cleaned using hot soapy water. Soaking first will make cleaning easier.

CLEANING THE TRIPLE GLAZED DOOR GLASS

The main oven and second oven inner and middle door glass panels are removable for cleaning.


 To prevent damaging or weakening the door glass panels avoid the use of the following:

- Household detergents and bleaches
- Impregnated pads unsuitable for non-stick saucepans
- Brillo/Ajax pads or steel wool pads
- Chemical oven pads or aerosols
- Rust removers
- Bath/Sink stain removers




 Under no circumstances should the door assembly be detached from the product for cleaning. Please refer to the cleaning instructions.

TO REMOVE THE INNER GLASS

1. Fully open the oven door.
2. Firmly grasp the rear edge of the inner glass panel with both hands.
3. Push the glass panel towards you until it clears the hinge location points at the rear.
4. With one hand, carefully lift the glass panel to disengage it from the location points under the handle. **(With your other hand, hold the outer door to ensure it does not spring shut on removing the inner panel).**
5. Close the oven door

 If the door glass panel becomes chipped or has deep scratches the glass will be weakened and must be replaced to prevent the possibility of the panel shattering. Please contact your local Service Force Centre who will be pleased to advise further.

Note: Please note that the handle type on your product may differ in type and shape from that shown in the diagrams.

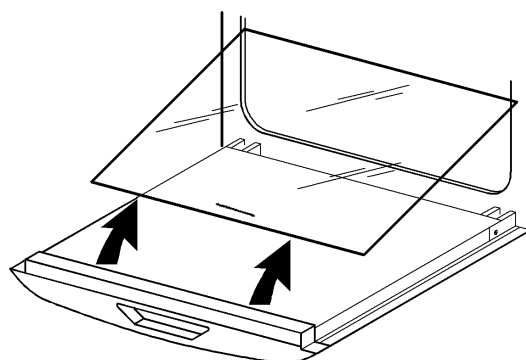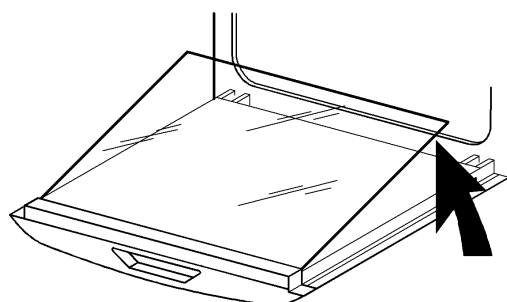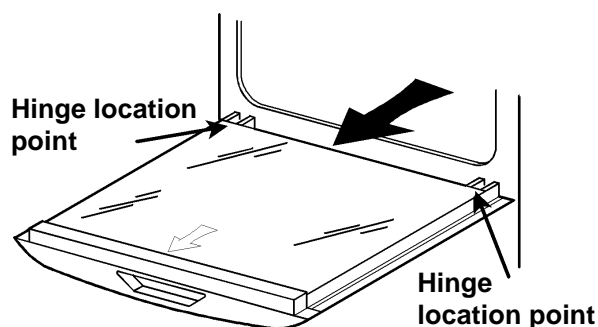


TO REMOVE THE MIDDLE GLASS

- 6) To remove the middle door glass repeat steps 1 - 3 as page 38.
- 7) Then, lift glass clear of handle.

Note:

Plastic end caps can be removed for cleaning.

- 8) Close the oven door.

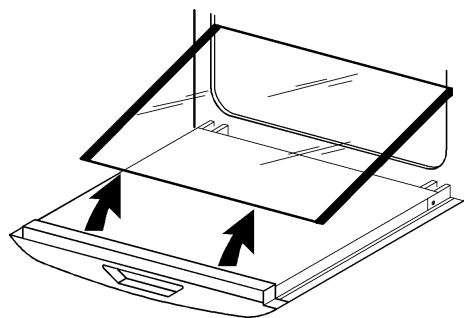

TO CLEAN THE INNER AND MIDDLE GLASS DOOR PANELS


Clean the inner door glass panels using a soft cloth and hot water to which a little washing up has been added. If the inner panel is heavily soiled, Hob Brite may be used. **Do not** use abrasive cleaning materials on the door glass. Ensure that all parts are well rinsed and thoroughly dried before attempting to replace the glass.



Do not clean stainless steel outer panels (where fitted) with Hob Brite as damage to the finish will occur. See cleaning instructions for stainless steel models on page 36.

TO REPLACE THE MIDDLE AND INNER GLASS PANELS

- 1) Ensure plastic end caps are in place on the middle glass.
Note: This is the smaller of the two pieces of glass. Top oven door glass must have the angled corners facing towards the bottom of the door when refitted.
- 2) Holding the glass panel with your right hand fully open the oven door with your left hand.
- 3) Gently place the middle glass in the door recess, the plastic end strips will evenly space the middle glass from the outer.
- 4) Holding the door fully open pick up the door inner glass.
- 5) Gently ease and push the glass into the location points under the handle before lowering and sliding the glass into position under the hinge location points at the rear.
- 6) Ensure that the glass is properly located and that the text 'This way up' is facing towards you and at the top edge of the door.

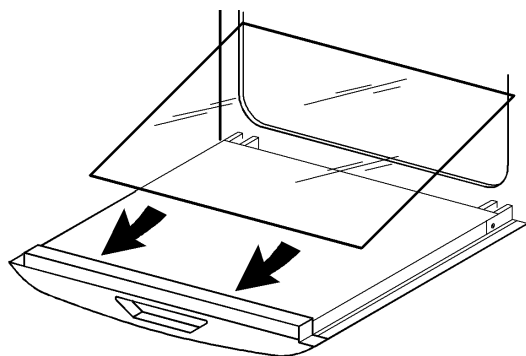

Do not attempt to use the oven without the glass being in place.

REPLACING AN OVEN LIGHT BULB

The oven light illuminates the main oven when the function is chosen, or when a main oven function and temperature are selected.


The second oven light illuminates when the Second oven light function is selected, or when a cooking function and temperature are selected.

The type of bulb required is a 300°C 25 watt small Edison Screw.
(Available through Service Force Centres).



Disconnect the appliance from the electricity supply before replacing the bulb.

1. Make sure the appliance is cool before replacing the bulb.
2. Open the oven door and remove the shelves and wirework runners.
Instructions on how to remove the wirework runners are given on page 37.
3. Pull the glass bulb cover towards you and then pull it off. If necessary, use a screwdriver to carefully lever off the cover, taking care not to damage the oven cavity.
4. Unscrew the bulb by turning it to the left.
5. Fit a new bulb and then replace the glass bulb cover.
6. Replace the oven shelves.
7. Restore the electricity supply and reset the time of day.

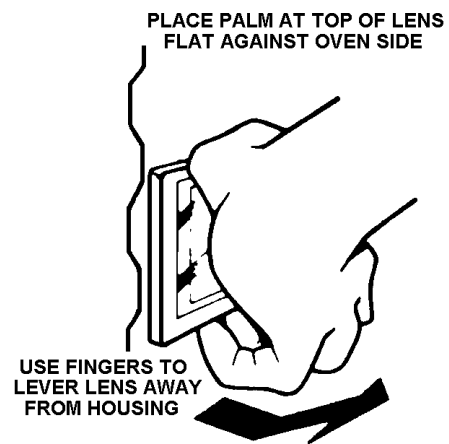

IF SOMETHING DOESN'T WORK

Please carry out the following checks on your appliance before calling a Service Engineer. It may be that the problem is a simple one which you can solve yourself without the expense of a service call.

In-guarantee customers should make sure that the checks have been made as the engineer will make a charge if the fault is not a mechanical or electrical breakdown.

Please note that proof of purchase is required for in-guarantee service calls.

PROBLEM	POSSIBLE SOLUTION
The grill, ovens and timer do not work	<p>Check that the appliance has been wired in to the appliance supply and is switched on at the wall.</p> <p>Check that the main cooker fuse is working.</p> <p>If you have checked the above: Allow the appliance to cool for a couple of hours. The appliance should now be working normally.</p>
The Grill and Second Oven work but the Main Oven does not.	<p>Check that the time of day has been set on the clock. See page 9.</p> <p>Check that the oven is set for manual cooking. See page 12.</p>
The Grill does not work or cuts out after being used for a long period of time.	<p>Ensure that the grill oven door is open when grilling.</p> <p>Ensure the cooling fan is running when the grill is on. If the cooling fan fails, the grill will not work. Contact your nearest Service Force Centre.</p> <p>Leave the grill door open and allow the grill to cool. After a couple of hours check that the grill works as normal.</p>
The clock and minute minder does not work	<p>Check that the instructions for the operation of the timer are being closely followed.</p>
The indicator neons are not working correctly	<p>Check that you have selected only the function you require.</p>
The oven is not cooking evenly	<p>Check that the appliance is correctly installed and is level.</p> <p>Check that the recommended temperatures and shelf positions are being used.</p>
The oven light fails to illuminate	<p>The oven light bulb may need replacing see page 40.</p> <p>If the Main Oven is set for automatic cooking the light will illuminate when the cook time begins.</p>

The oven fan is noisy

Check that the oven is level.

Check that shelves and bakeware are not vibrating in contact with the oven back panel.

The oven temperature is too high or low

Check that the recommended temperatures and shelf positions are being used. See pages 18 and 32. Be prepared to adjust the temperature up or down by 10°C to achieve the results you want.

SERVICE AND SPARE PARTS

In the event of your appliance requiring service, or if you wish to purchase spare parts, please contact your local Service Force Centre by telephoning:-

0870 5 929929

Your telephone call will be automatically routed to the Service Force Centre covering your post code area.

For the address of your local Service Force Centre and further information about Service Force, please visit the website at www.serviceforce.co.uk

Before calling out an engineer, please ensure you have read the details under the heading 'Something Not Working'.

When you contact the Service Force Centre you will need to give the following details:

1. Your name, address and post code
2. Your telephone number
3. Clear and concise details of the fault
4. The model and serial number of the appliance (found on the rating plate)
5. The purchase date

Please note that a valid purchase receipt or guarantee documentation is required for in-guarantee service calls.

CUSTOMER CARE DEPARTMENT

For general enquiries concerning your AEG appliance or for further information on AEG products, please contact our Customer Care Department by letter or telephone at the address below or visit our website at www.aeg.co.uk

Customer Care Department
AEG Domestic Appliances
55 - 77 High Street
Slough
Berkshire
SL1 1DZ

Tel: 0870 5 350350 (*)

*calls to this number may be recorded for training purposes.

GUARANTEE CONDITIONS

Standard guarantee conditions

AEG offer the following guarantee to the first purchaser of this appliance:

1. The guarantee is valid for 12 months commencing when the appliance is handed over to the first retail purchaser, which must be verified by purchase invoice or similar documentation.
The guarantee does not cover commercial use.
2. The guarantee covers all parts or components which fail due to faulty workmanship or faulty material. The guarantee does not cover appliances where defects or poor performance are due to misuse, accidental damage, neglect, faulty installation, unauthorised modification or attempted repair, commercial use or failure to observe requirements and recommendations set out in the instruction book.
This guarantee does not cover such parts as light bulbs, removable glassware and plastic.
3. Should guarantee repairs be necessary the purchaser must inform the nearest customer service office (AEG's service or authorised agent). AEG reserves the right to stipulate the place of repair (i.e. the customer's home, place of installation or AEG workshop).
4. The guarantee or free replacement includes both labour and materials.
5. Repairs carried out under guarantee do not extend the guarantee period for the appliance. Parts removed during guarantee repairs become the property of AEG.
6. The Purchaser's statutory rights are not affected by this guarantee.

European Guarantee

If you should move to another country within Europe then your guarantee moves with you to your new home subject to the following qualifications:

- The guarantee starts from the date you first purchased your product
- The guarantee is for the same period and to the same extent for labour and parts as exists in the new country of use for this brand or range of products
- This guarantee relates to you and cannot be transferred to another user
- Your new home is within the European Community (EC) or European Free Trade Area
- The product is installed and used in accordance with our instructions and is only used domestically, i.e. a normal household
- The product is installed taking into account regulations in your new country

Before you move please contact your nearest Customer Care centre, listed below, to give them details of your new home. They will then ensure that the local Service Organisation is aware of your move and able to look after you and your appliances.

France	Senlis	+33 (0) 3 44 62 29 29
Germany	Nürnberg	+49 (0) 800 234 7378
Italy	Pordenone	+39 (0) 0800117511
Sweden	Stockholm	+46 (0) 8 672 53 60
UK	Slough	+44 (0) 1753 219899

INSTALLATION INSTRUCTIONS

TECHNICAL DETAILS

Voltage: 230-240 Volts AC 50 Hz

Loading info:

Second Oven: 1.7kW

Dual Grill: 2.3kW

Single Grill: 1.3kW

Main Oven

Fan Element: 2.5kW

Fan Motor: 0.03kW

Single Grill: 2.3kW

Base Element: 1.0kW

Oven light: 0.05kW



Wattage: 5.0 - 5.5kW

Height: 897mm

Width: 592mm

Depth: 563mm
(excluding handles and knobs)

Weight: 57kg

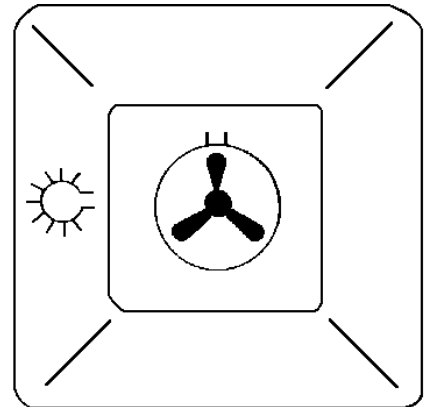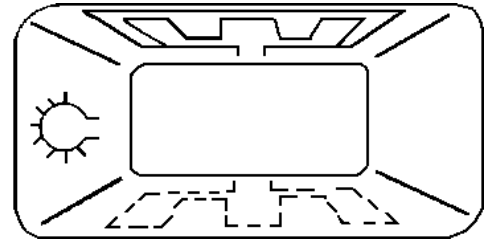

This appliance complies with European Council Directive 72/23/EEC.
This appliance carries the C.E. mark.

WARNINGS:



- This appliance must be installed by a qualified electrician/competent person. Safety may be impaired if installation is not carried out in accordance with these instructions.
- This appliance must be earthed.
- Do not remove the screws from the earth tab extending from the oven mains terminal block (Fig.1).
- Before connecting the appliance make sure that the voltage of your electricity supply is the same as that indicated on the rating plate. The rating plate can be seen by opening the oven door and looking below the oven door seal. Alternatively the rating plate may also be found on the back or top of some models (where applicable)
- Do not alter the electrical circuitry of this appliance.

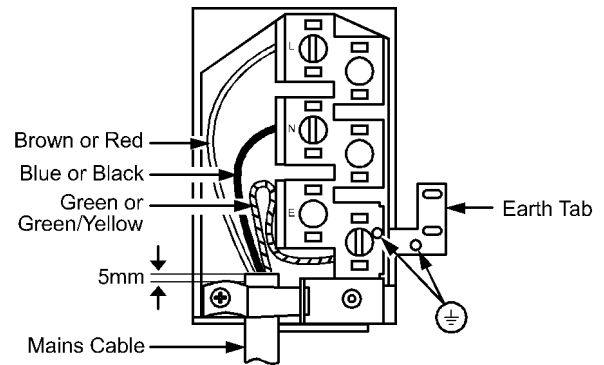


Fig. 1

CHOICE OF ELECTRICAL CONNECTION

- There are three possible ways to connect your appliance. In each case the appliance should be operated using at least 6mm² twin core and earth PVC insulated multicore cable. Please choose from the most appropriate after reading the different methods:-
- a) By connecting the appliance to a cooker point (having a double pole isolating switch with at least 3mm contact separation in all poles and neutral) and protected with a fuse or miniature circuit breaker at your mains fuse box.

Subject to Regional Electricity Company regulations if you wish to connect the oven and hob to the power supply you may use one of the following two methods:-

- b) By connecting the appliance together with a hob directly to a cooker point(s). Having a double pole isolating switch with at least 3mm contact separation in all poles and neutral.
- c) If you wish to connect an oven and a hob to a cooker point you can by connecting the oven and hob separately to the cooker point. Oven and hob units should be separately connected to a control panel. See Fig. 2.

NOTE: It is good practice to:

- Fit an Earth Leakage Circuit Breaker to your house wiring.
Wire your appliance to the latest IEE regulations.

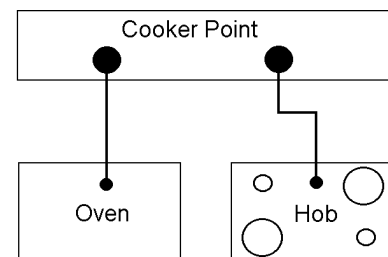


Fig. 2

THINGS TO NOTE

- This appliance is designed to be fitted in cabinets of the recommended dimensions as shown (Fig. 3), page 48.
- If your cabinet interior dimension is between 565-570mm the oven may still be fitted. However, a minor modification to the cabinet will be required to reduce the aperture size down to 560-565mm. To allow the product to be securely screwed into the cabinet.
- The dimensions given provide adequate air circulation around the unit within the cabinet, ensuring compliance with BS EN60-335.
- Enquiries regarding the installation of the cooker point if required should be made to your Regional Electricity Company to ensure compliance with their regulations.
- The cooker socket switch should be outside the cabinet but within 2m of the appliance to make it accessible to switch off the appliance in case of an emergency.
- To protect the hands wear gloves when lifting the oven into its housing.



Do not lift the appliance by the handles.


NOTE: HOUSE CIRCUIT

Earth leakage and continuity tests must be carried out before the appliance is connected to the mains supply and re-checked after fitting.

PREPARING CABINET FOR FITTING OF OVEN

- Make sure the cabinet is the correct size for the appliance to be fitted (Ref. Fig. 3), page 48.
- If the size is between 565-570mm, then the cabinet should be modified so that at the screw fixing points the recommended dimension of at least 560-565mm is maintained. The modification should ideally be localised to ensure that after screw fitment the oven is **securely** fixed into position.
- The cabinet must be stable and level by firmly securing it to the wall or floor. If necessary, make arrangements to ensure the shelf upon which the oven will rest is level.
- When the appliance is installed ensure a minimum gap of 2mm is maintained between the trim on the bottom edge of the appliance and any corresponding door/ panel underneath.

RECOMMENDED CABINET DIMENSIONS (IN MILLIMETRES)

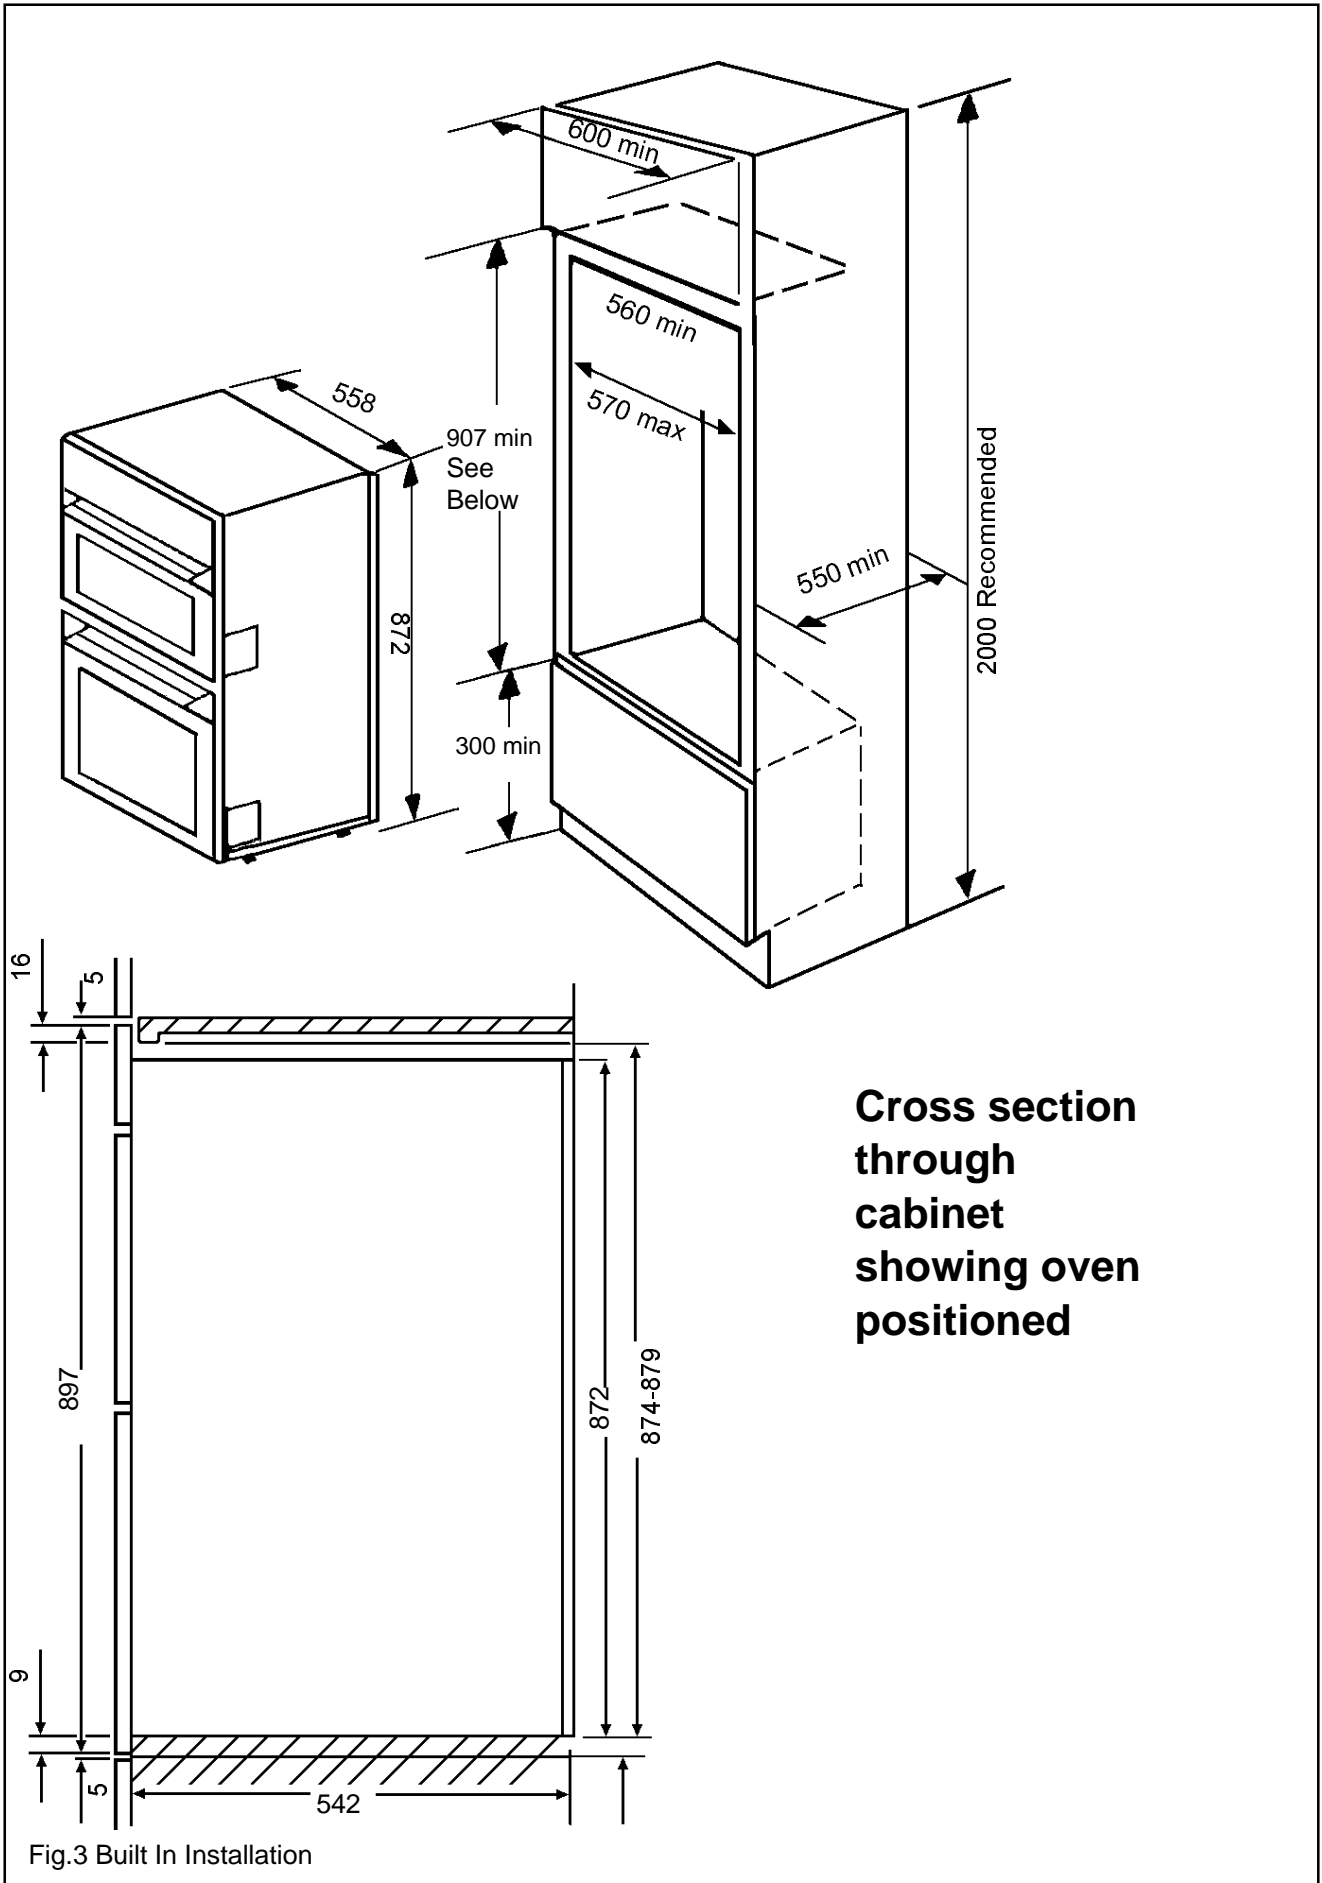

HOW TO FINISH UNPACKING

- Place packed appliance next to the cabinet in which it will be installed.
- Remove the appliance packing except for bottom tray which should be left in position until the appliance is ready to be fitted into its cabinet.
It is imperative that the appliance is left in the base to protect both the appliance and the floor.
- Ensure the user is given these operating instructions.

TOOLS REQUIRED

The following tools will be needed and it helps to assemble them before starting to install the oven:-

A terminal screwdriver (3mm wide blade)
A pozidrive screwdriver
Pliers
Wirestrippers
Knife
Sidecutters
Adhesive Tape
Tape Measure

MAKING THE ELECTRICAL CONNECTIONS



Important: Switch off at mains, miniature circuit breaker and, if appropriate, remove fuse before commencing any electrical work

PREPARING CABLE

We recommend you use a new length of cable to ensure your safety.

- Ensure you have the correct length of cable appropriate to the wiring method you are using. When fitting new cable allow sufficient cable for removal of the unit at a later date, should it be necessary.
- Score, but **do not** cut through, around the sheathing with a knife 100mm (4in) from each end of the cable and break through to the encased wires by bending the cable backwards and forwards to fatigue the sheathing.
- Carefully score down from each end of the cable sheathing along the length of the bare earth wire (if a cut was made along the length of the live and neutral wires, it might cut into their sheathing) to the cuts already made.
- Carefully prise open the sheathing at each end of the cable to expose the encased wiring.

TO REMOVE COVER OF MAINS TERMINAL

From the rear of the appliance, remove mains input terminal cover to gain access to terminal block.

- First remove retaining screw with pozidrive screwdriver. See Fig. 4.

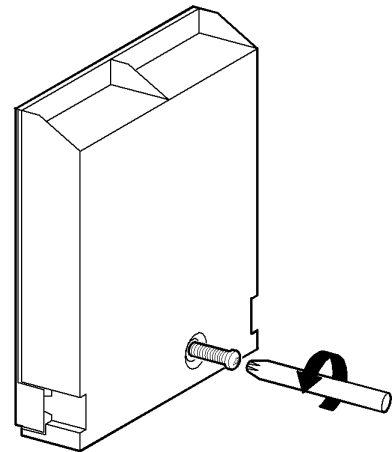


Fig.4

- Prise cover loose using screwdriver in position (1) then lever off with screwdriver in position (2) at either side. See Fig. 5.

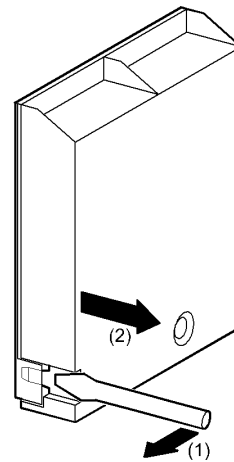


Fig.5

- Lift cover and remove screw from cable clamp. See Fig. 6.

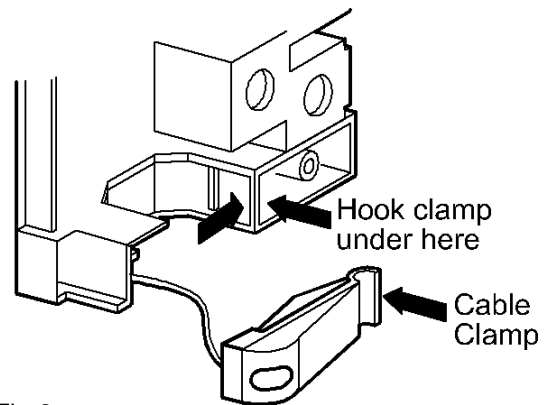


Fig.6

CONNECTING TO MAINS TERMINAL



WARNING: This appliance must be earthed.

- Make connection as shown in Fig. 7 by proceeding as follows:-
- Preform wires to the appropriate shape to suit fitting into the mains terminal block.
- Strip inner insulation on wires using wirestrippers.
- Twist the bared wires using pliers.
- Cut bared wires 10mm away from the end of the inner insulation. Where uninsulated Earth wires are used ensure they are suitably sheathed to leave 10mm bare wire to fit into the terminal.
- Clamp bare wires into the relevant terminal and check they are held by tugging each one in turn.
- Clamp the mains cable securely ensuring 5mm of the outer insulation is inside the terminal block and that the wires are not taut but not so slack as to cause any fouling. See Fig. 7.
- Place fuse/miniature circuit breaker in circuit and switch on at mains.

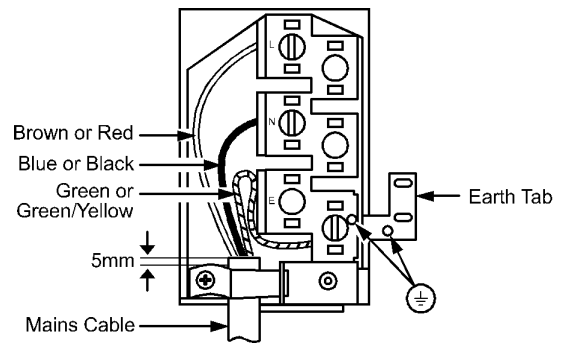


Fig. 7

CONNECTING TO A HOB OR COOKER POINT

- Either follow in general terms the instructions for connecting to the terminal block or refer to the hob suppliers installation instructions.



Feed the cable through the cabinet and arrange to route the cable away from the appliance which may become hot.

CHECKING ELECTRICAL CONNECTIONS

- Correct electrical connection can be confirmed when switching on the appliance as the timer will be flashing.

NOTE: HOUSE CIRCUIT


Earth leakage and continuity tests must be carried out before the appliance is connected to the mains supply and re-checked after fitting.

FITTING INTO THE CABINET



IMPORTANT: Ensure that the oven is switched off at the wall before any further work is carried out.

- Using a tape measure establish the internal width of the cabinet. Refer to page 47 if greater than 565mm.
- Position the appliance in front of the cabinet. See Fig. 8.
- Take out all oven furniture before installation to reduce the weight you need to lift. The oven door should be taped up to keep it closed whilst lifting.
- To place the appliance into the cabinetry follow the procedure below:
- **N.B. Two people will be required to carry out the lifting procedure.**
Warning: **Do not** attempt to lift this appliance by the handle(s).
- Each person should squat either side of the appliance.
- Tilt the appliance so that your hands can support the underside of the appliance.
- Keeping your back straight, raise the appliance to the cabinet by straightening at the knees.
- Rest the rear underside of the appliance on the cabinet floor while your hands support the front.
- The appliance can be pushed fully into the cabinet. Take care to avoid damaging the mains lead.
- Ensure the appliance is central in the cabinet and level.
- **Do not** remove spacer fitted behind fixing holes.
- When the appliance is fully housed screw the stability screws (supplied with the appliance) into the side of the cabinet taking care not to distort the side trims (See Fig. 9). It is advisable to turn each screw alternately to avoid damaging the trims.
- Switch on the appliance then refer to the operating instructions.

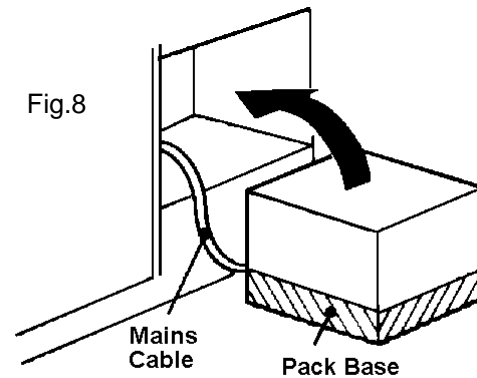

(Cable not supplied)

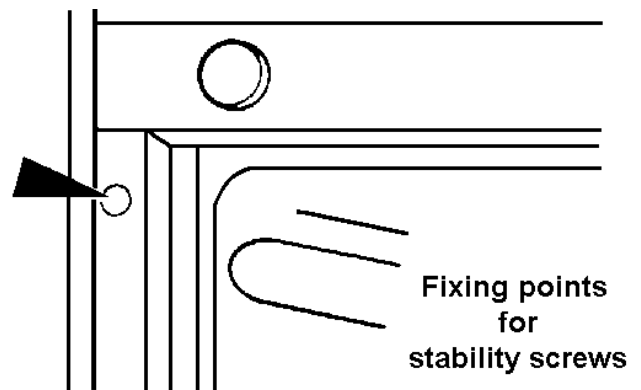


Fig.9

NOTES

NOTES

NOTES

IMPORTANT NOTICE

In line with our continuing policy of research and development, we reserve the right to alter models and specifications without prior notice.

This instruction booklet is accurate at the date of printing, but will be superseded if specifications or appearance are changed.

AEG DOMESTIC APPLIANCES
55 - 77 HIGH STREET,
SLOUGH,
BERKSHIRE,
SL1 1DZ
TELEPHONE 0870 5 350350
<http://www.aeg.co.uk>

Part Number:311573205

©Electrolux plc 2002

 **From the Electrolux Group.** *The world's No.1 choice.*

The Electrolux Group is the world's largest producer of powered appliances for kitchen, cleaning and outdoor use. More than 55 million Electrolux Group products (such as refrigerators, cookers, washing machines, vacuum cleaners, chain saws and lawn mowers) are sold each year to a value of approx. USD 14 billion in more than 150 countries around the world.