




## **30" MICROWAVE / WALL OVEN COMBO**

### **MODELS:**

JMW2430WB00 (Black)  
JMW2430WW00 (White)  
JMW2430WS00 (Stainless)  
JMW2430WR00 (Oiled Bronze)  
JMW2430WP00 (Pro-Style)

# OVEN PARTS

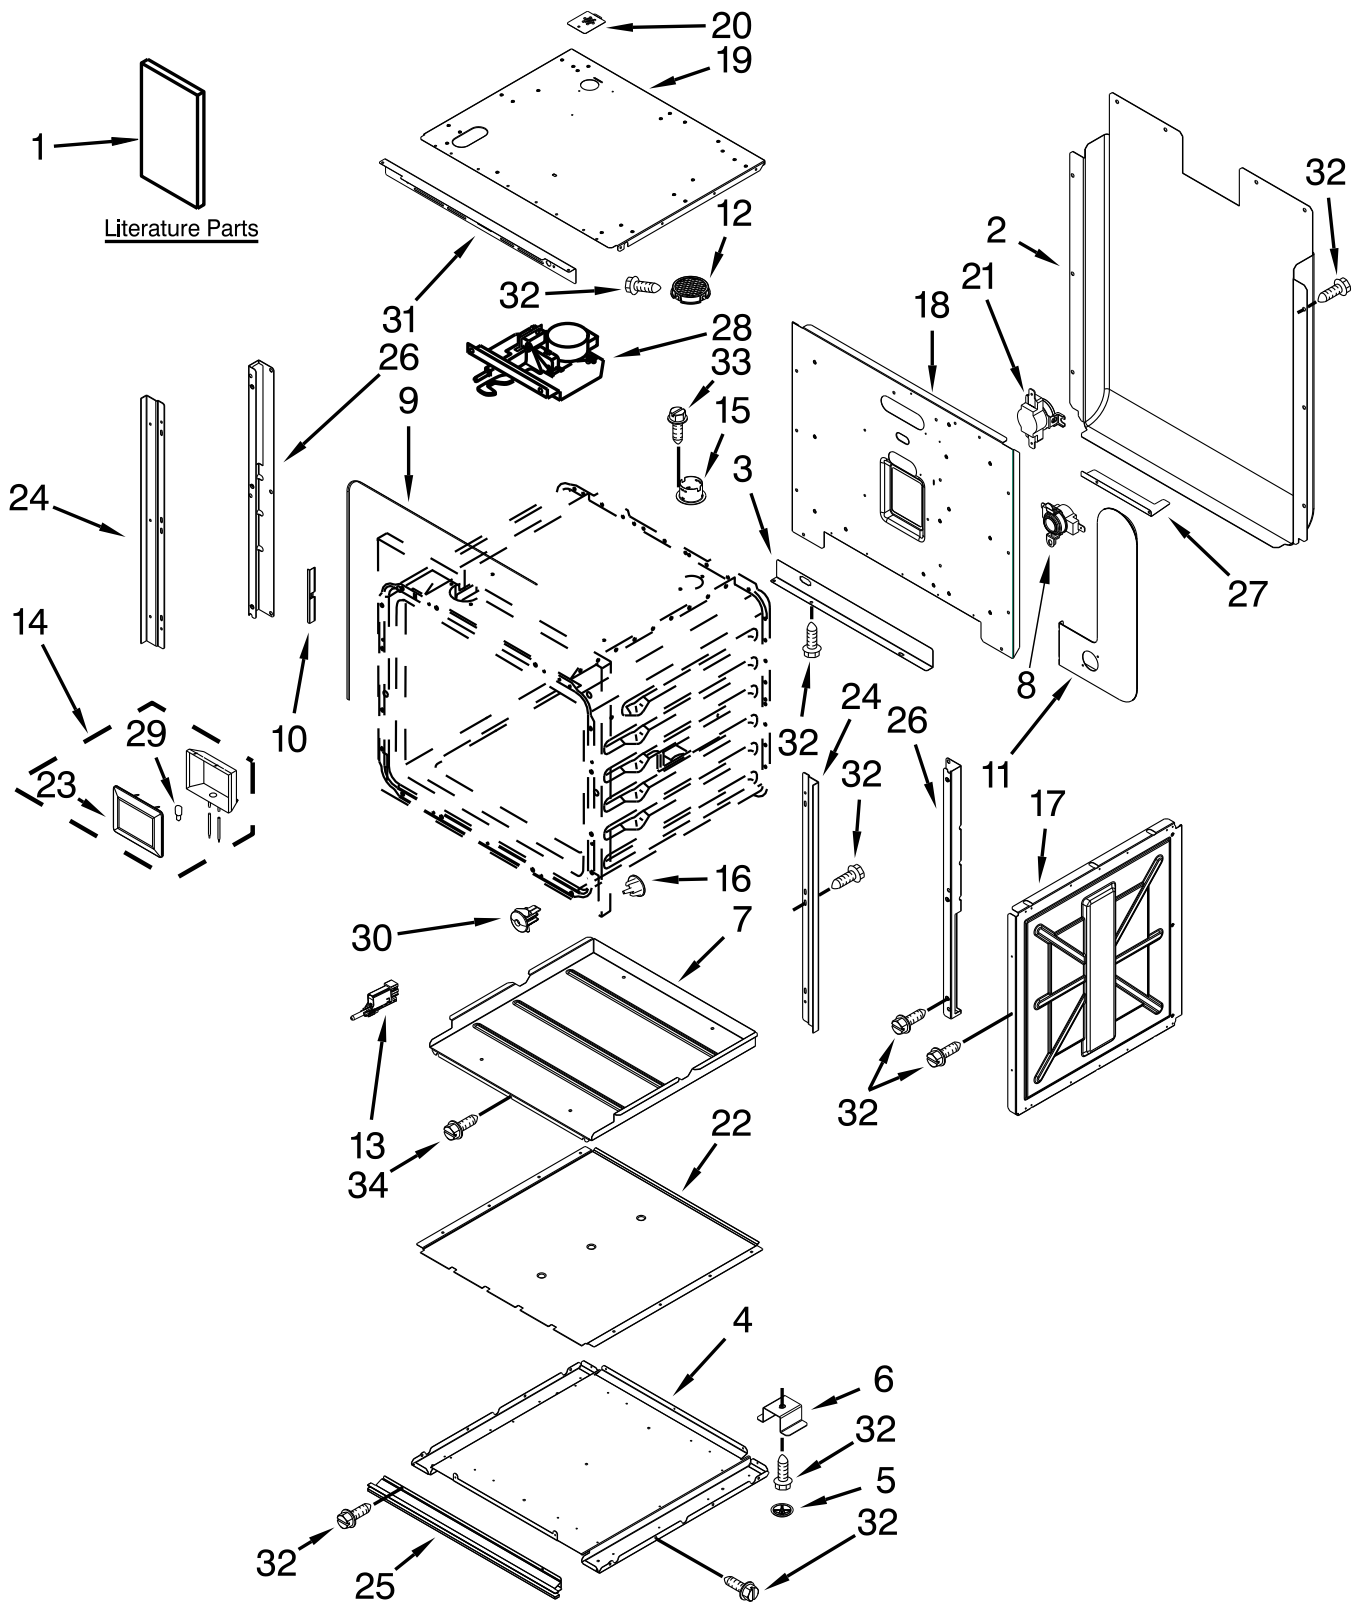


# OVEN PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts
	W10221384	Instruct, Install
	W10221392	Owners Manual (Combo)
	W10221391	Owners Manual (Microwave)
	9762761	Tips, Safe Cooking (English)
	W10065852	Tips, Safe Cooking (French)
	W10213735	Tech Sheet (English)
	W10213736	Tech Sheet (French)
2	2624F043-51	Back, Main
3	3601F343-51	Baffle, Grease Deflector
4	W10280327	Panel, Bottom
5	8038P035-60	Foot, Plastic
6	W10213759	Support, Air Channel
7	3401F079-45	Pan, Hidden Bake
8	W10277609	Fuse, Thermal

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
9	W10213818	Gasket
10	W10176218	Retainer, Gasket
11	4006W217-45	Assembly, Box Vent
12	8034P008-60	Screen, Smoke Eliminator
13	W10286173	Switch, Micro
14	W10175989	Assembly, Light
15	8026P065-60	Tube, Vent
16	7718P033-60	Plug, Button
17	W10175995	Panel, Side
18	W10213724	Retainer, Rear Insulation
19	W10175998	Panel, Top Retainer
20	W10213792	Cover, Vent
21	7403P899-60	Switch, High Limit
22	W10280325	Channel, Bottom Air Bake Element
23	W10187003	Lens
24	W10277588	Trim, Side

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
25		Trim, Bottom Vent
	W10238700	Black
	W10176036	Stainless
26	W10277423	Bracket, Reinforcement Left Hand
	W10277424	Bracket, Reinforcement Right Hand
27	W10186984	Cover, Rear
28	W10213755	Latch, Door Lock
29	W10169757	Bulb, Light
30	W10213745	Frame, Micro Switch
31	W10176018	Trim, Control Panel
32	7101P426-60	Screw
33	7101P434-60	Screw
34	W10236129	Screw
		Following Parts Not Illustrated
	W10186989	Insulation, Wrap
	W10213750	Insulation, Back

# OVEN DOOR PARTS

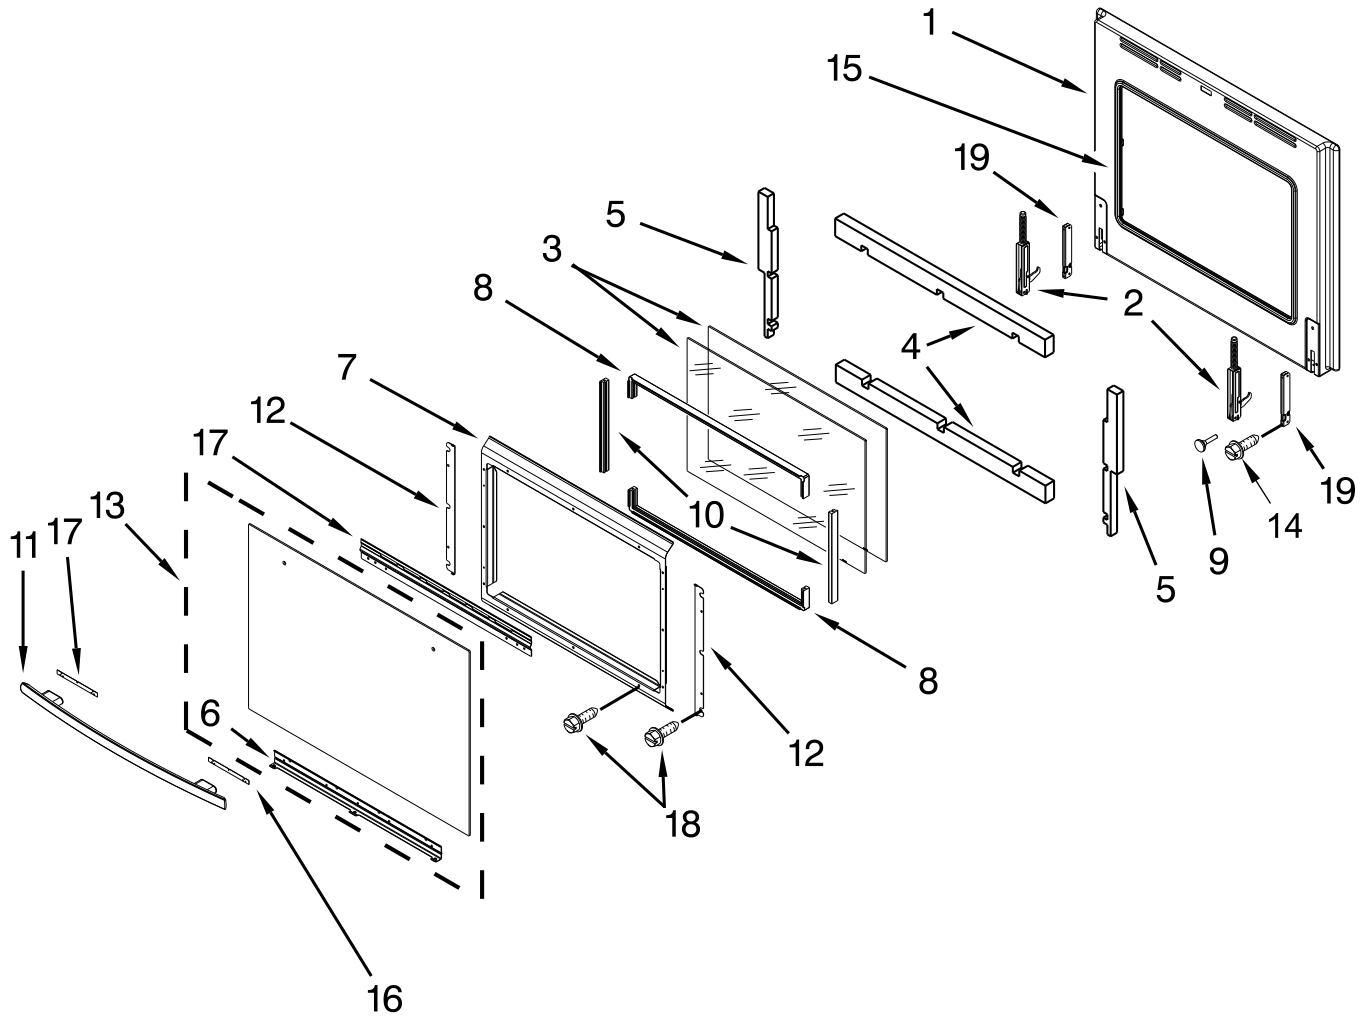


# OVEN DOOR PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10187019	Liner, Door
2		Hinge, Door
	W10176157	Black
	W10277751	Stainless
3	W10176100	Glass, Inner
4	W10273676	Insulation, Door (Horizontal)
5	W10273591	Insulation, Door (Vertical)
6	W10176175	Bracket, Door Clip
7	W10176103	Retainer, Door Glass
8	W10213816	Spacer, Inner Glass
9	W10176233	Bumper, Door
10	W10213806	Spacer, Inner Glass Side

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
11		Handle, Door
	W10186754	White
	W10186755	Black
	W10186756	Stainless
	W10186757	Oiled Bronze
	W10187014	Pro-Style
12	W10186882	Bracket, Inner Door Glass
13		Assembly, Outer Door Glass
	W10277594	White
	W10277593	Black
	W10176184	Stainless
	W10176224	Oiled Bronze
	W10187006	Pro-Style

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
14	W10254050	Screw
15	W10213803	Glass, Cavity
16	W10213722	Pad, Handle Foam
17	W10176126	Bracket, Handle
18	7101P426-60	Screw
19	W10175993	Hinge, Receiver

# INTERNAL OVEN PARTS

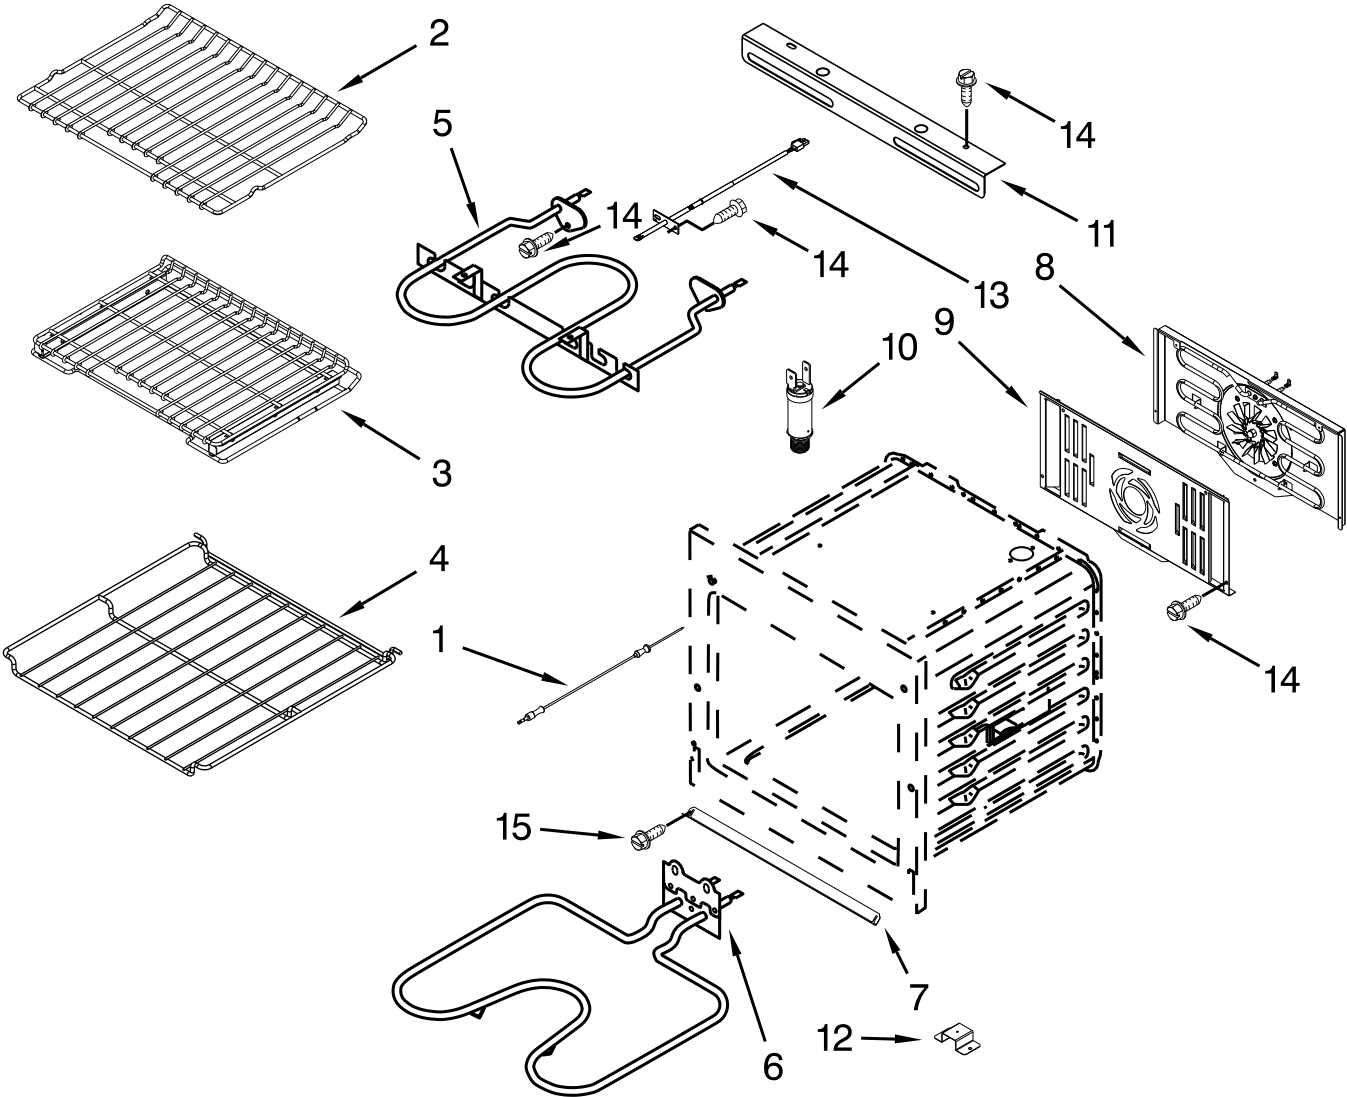


# INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	7430P038-60	Probe, Meat
2	W10176138	Rack, Baking
3	W10277572	Rack, Roll-Out
4	W10186988	Rack, Offset
5	W10314708	Element, Broil
6	W10314698	Element, Bake

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
7	3807F678-45	Retainer, Element Bake
8	W10213813	Kit, Unity Convection
9	W10186795	Baffle, Unity Convection
10	7408P088-60	Receptacle, Meat Probe
11	3807F754-45	Support, Element

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
12	3801F823-51	Bracket, Support (Hidden Bake)
13	7430P043-60	Probe, Sensor
14	7101P426-60	Screw
15	7101P426-60	Screw

# CONTROL PANEL PARTS

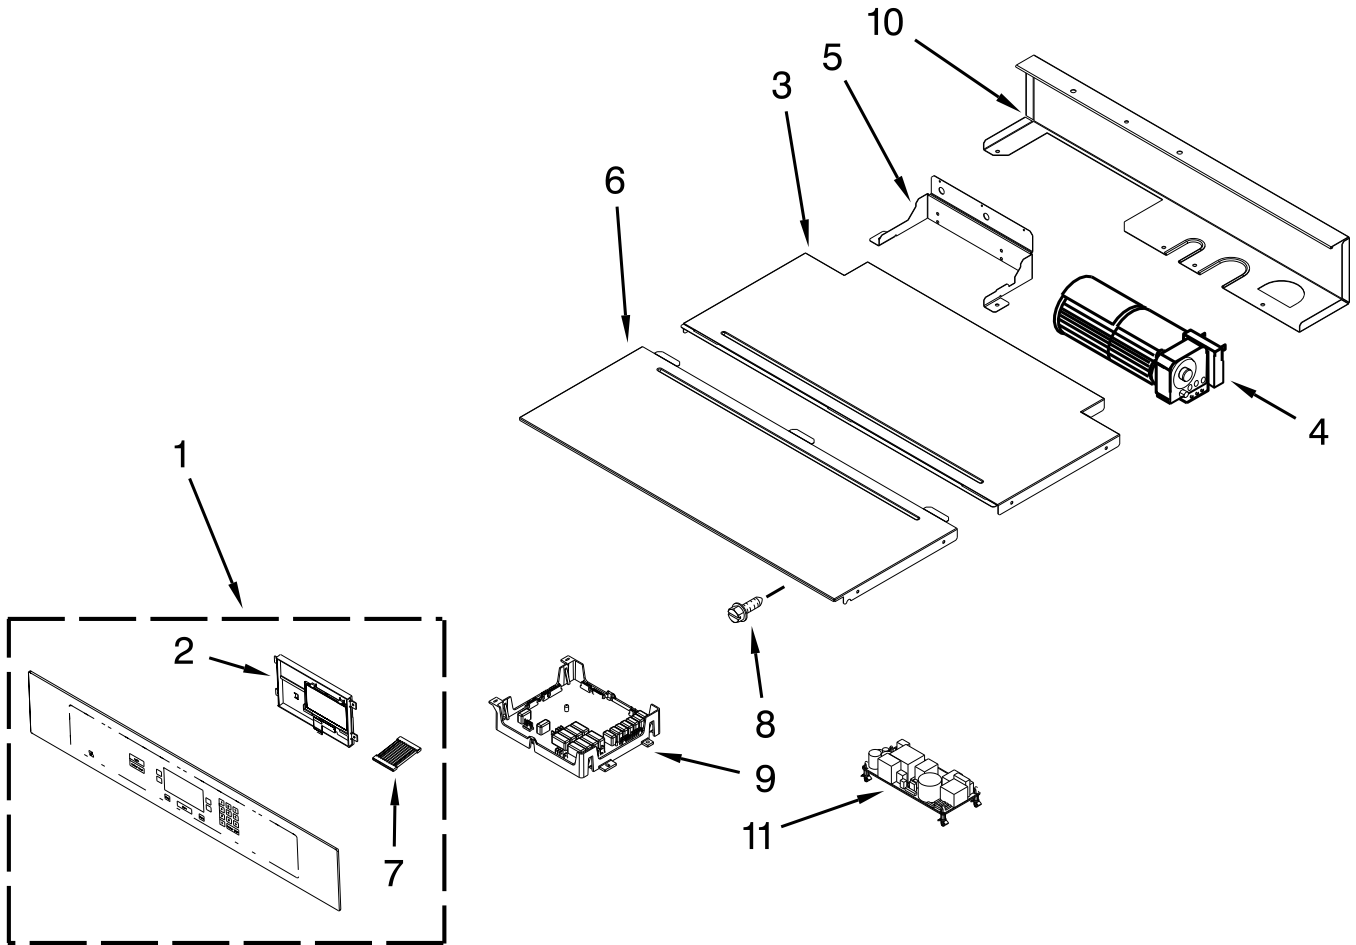




# CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Assembly, Control Panel	3	W10176094	Panel, Rear	8	7101P426-60	Screw
	W10212039	Black	4	W10273667	Blower	9	W10289533	Manager, Appliance
	W10212040	White	5	W10186997	Bracket, Cooling Fan	10	W10186983	Bracket, 2nd Blower
	W10212041	Oiled Bronze	6	W10176092	Panel, Front	11	W10286791	Supply, Power
	W10187356	Stainless	7	W10175829	Cable, User Interface			
2	W10289537	Assembly, User Interface						


# CABINET AND STIRRER PARTS

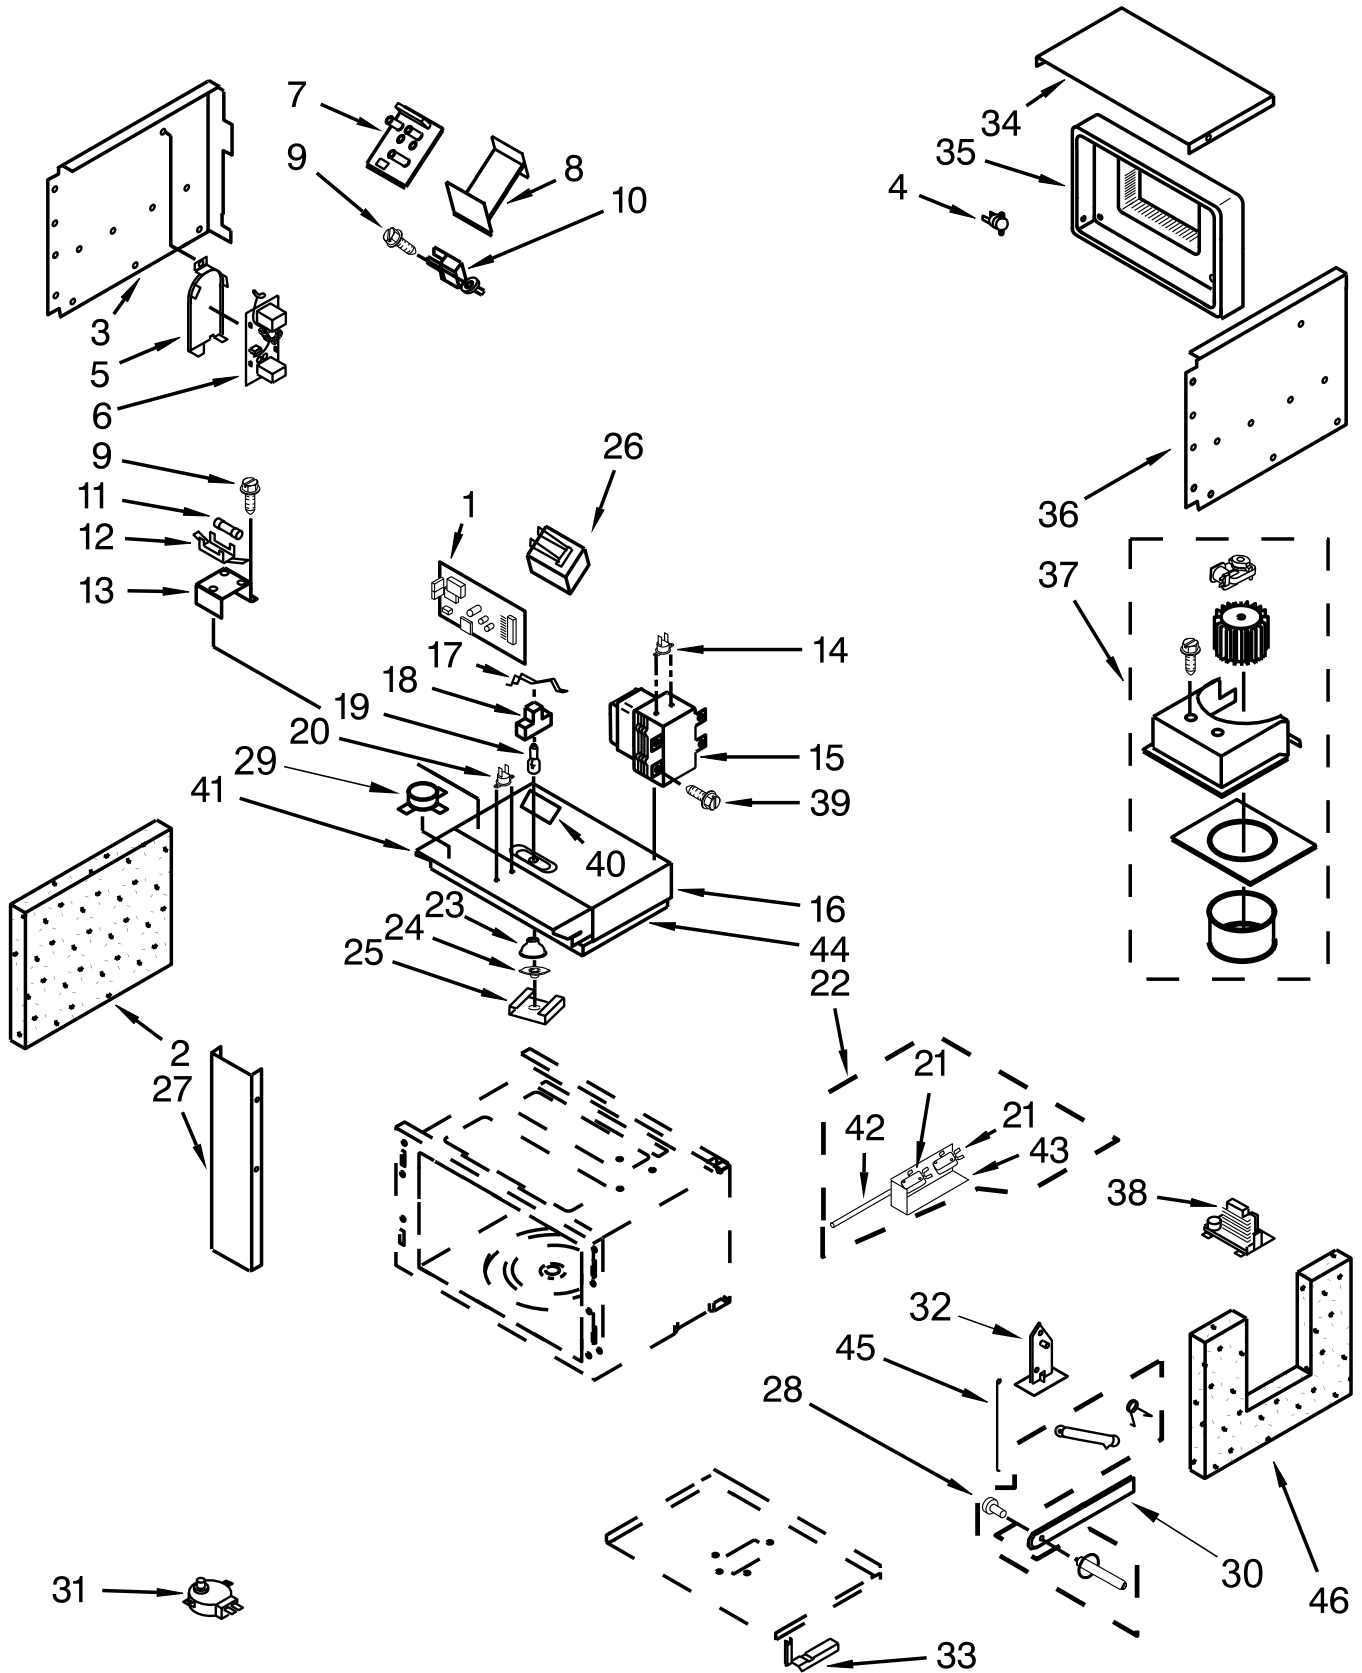

# CABINET AND STIRRER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10287989	Control, Electric	16		Not Serviced	32	8205686	Support
2	W10130901	Insulation, Side Left	17	4375319	Spring, Lamp	33	W10120478	Hinge, Door
3	W10120471	Cover, Side Left	18	W10287974	Housing, Lamp	34		Not Serviced
4	W10120223	Thermostat	19	W10287972	Lamp, Halogen	35		Not Serviced
5		Not Serviced	20	W10287985	Thermostat	36		Not Serviced
6	W10287966	Noise Filter	21	4375346	Switch, Door	37	W10330572	Assembly, Blower
7	W10120228	Control, Electric Converter	22	W10358246	Asm-Interlock	38	W10120229	Inverter
8		Not Serviced	23	4375320	Reflector	39	W10130890	Screw
9	W10131249	Screw	24	4375318	Lens, Lamp	40		Not Serviced
10	4375427	Thermoactuator	25	W10120231	Clip. Spring	41		Not Serviced
11	4375321	Fuse	26	8205692	Transformer	42	W10120235	Rod, Release
12	4375231	Block, Fuse	27		Not Serviced	43	8205683	Holder, Switch
13	W10130897	Bracket, Support	28	W10128850	Assembly, Sliding Arm	44		Not Serviced
14	W10287986	Thermostat	29	W10287988	Sensor, Humidity	45	8205704	Spring, Torsion
15	W10120113	Magnetron	30	W10120236	Arm, Sliding	46		Not Serviced
			31	W10287967	Motor, Turntable			

# MICROWAVE COMPARTMENT PARTS

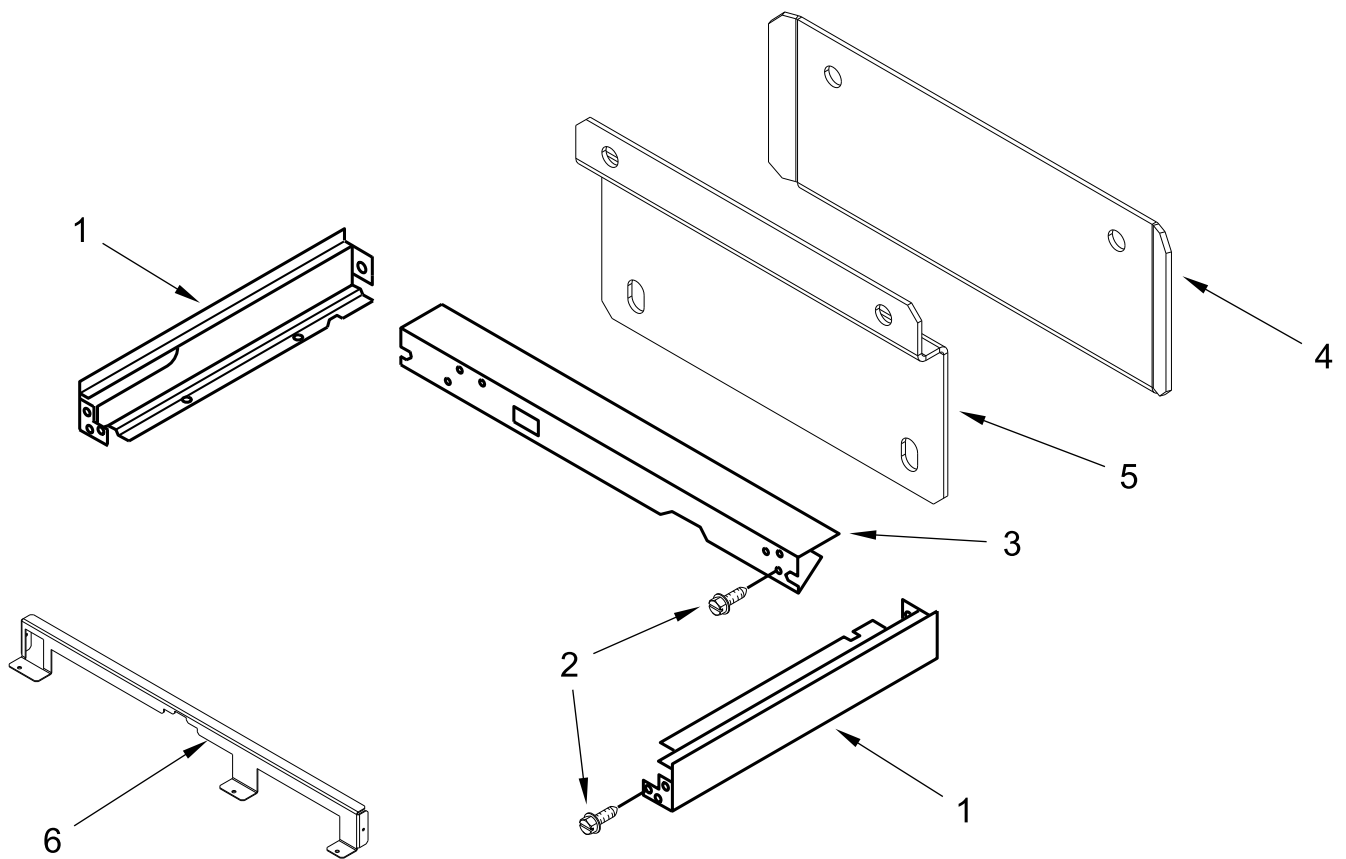


# MICROWAVE COMPARTMENT PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10176190	Rails, Support (Right)
	W10176189	Rails, Support (Left)
2	7101P426-60	Screw

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
3	W10176195	Support, Rear
4	W10186985	Guide, Stop

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
5	W10186986	Stop, Microwave
6	W10176196	Support, Front

# MICROWAVE DOOR PARTS

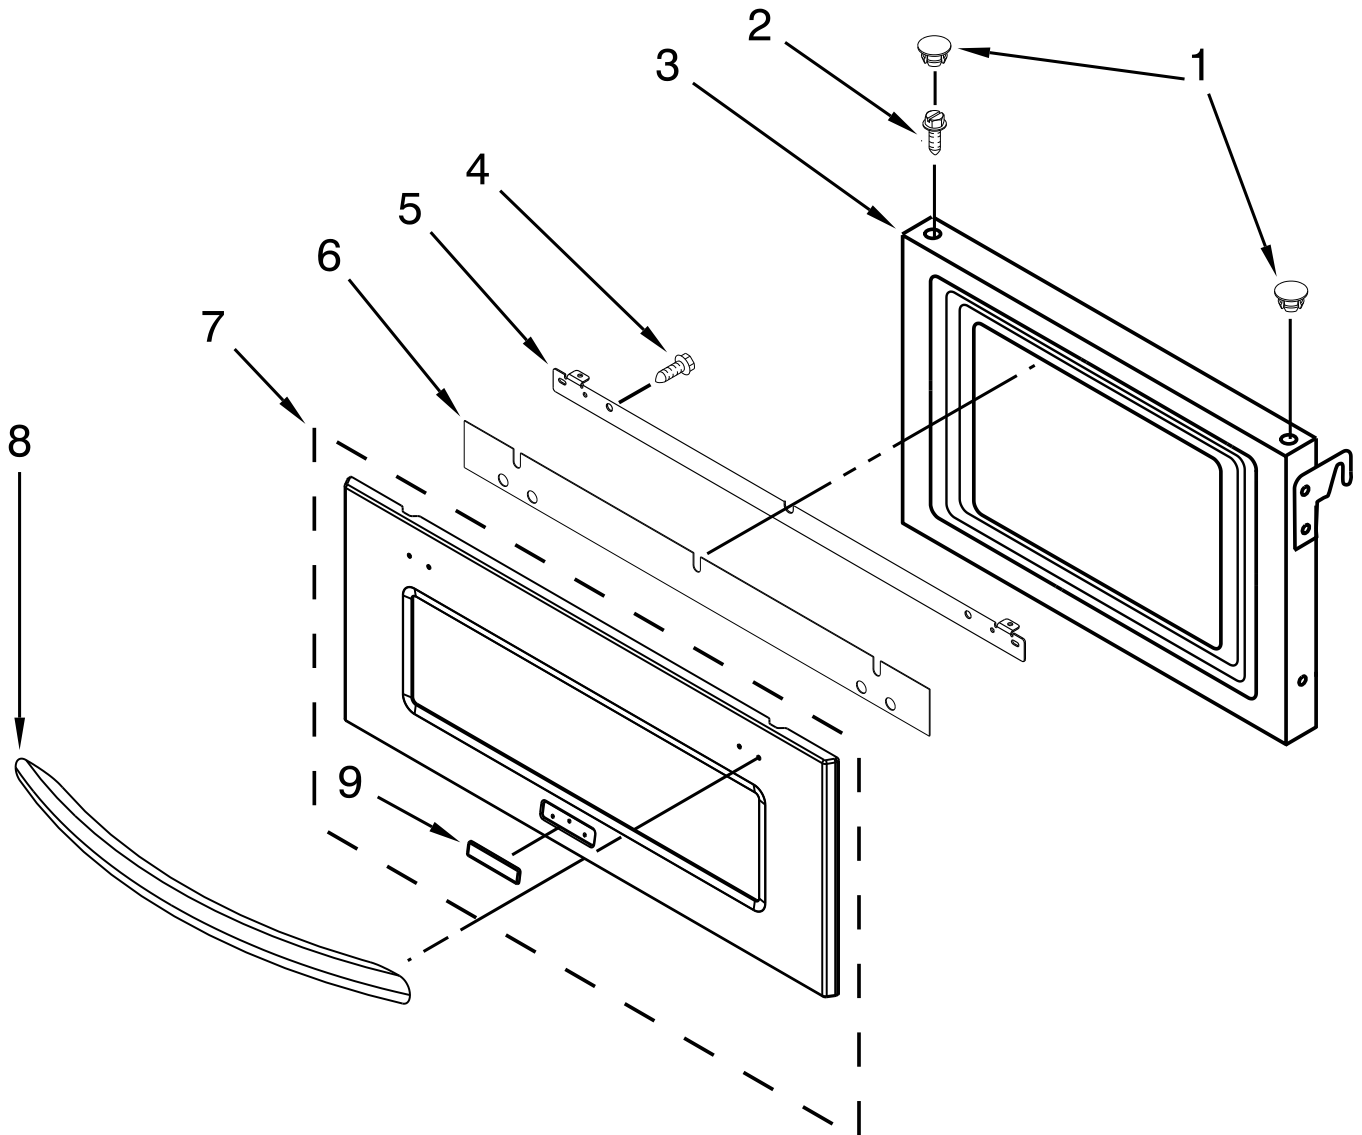


# MICROWAVE DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	8304588BL	Cap, Screw
2	7101P426-60	Screw
3	W10288012	Door, Microwave
4	W10267047	Screw
5	W10176199	Bracket, Handle
6	W10213722	Pad, Handle Foam
7		Assembly, Glass
	W10176200	Black
	W10176202	White
	W10269421	Stainless
	W10269422	Oiled Bronze
	W10269423	Pro-Style

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
8		Handle, Door
	W10186755	Black
	W10186754	White
	W10186756	Stainless
	W10186757	Oiled Bronze
	W10187014	Pro-Style
9		Badge
	W10190724	Black
	W10190723	White
	W10214168	Stainless
	W10214169	Oiled Bronze
	W10159578	Pro-Style

# TOP SUPPORT AND TURNTABLE PARTS

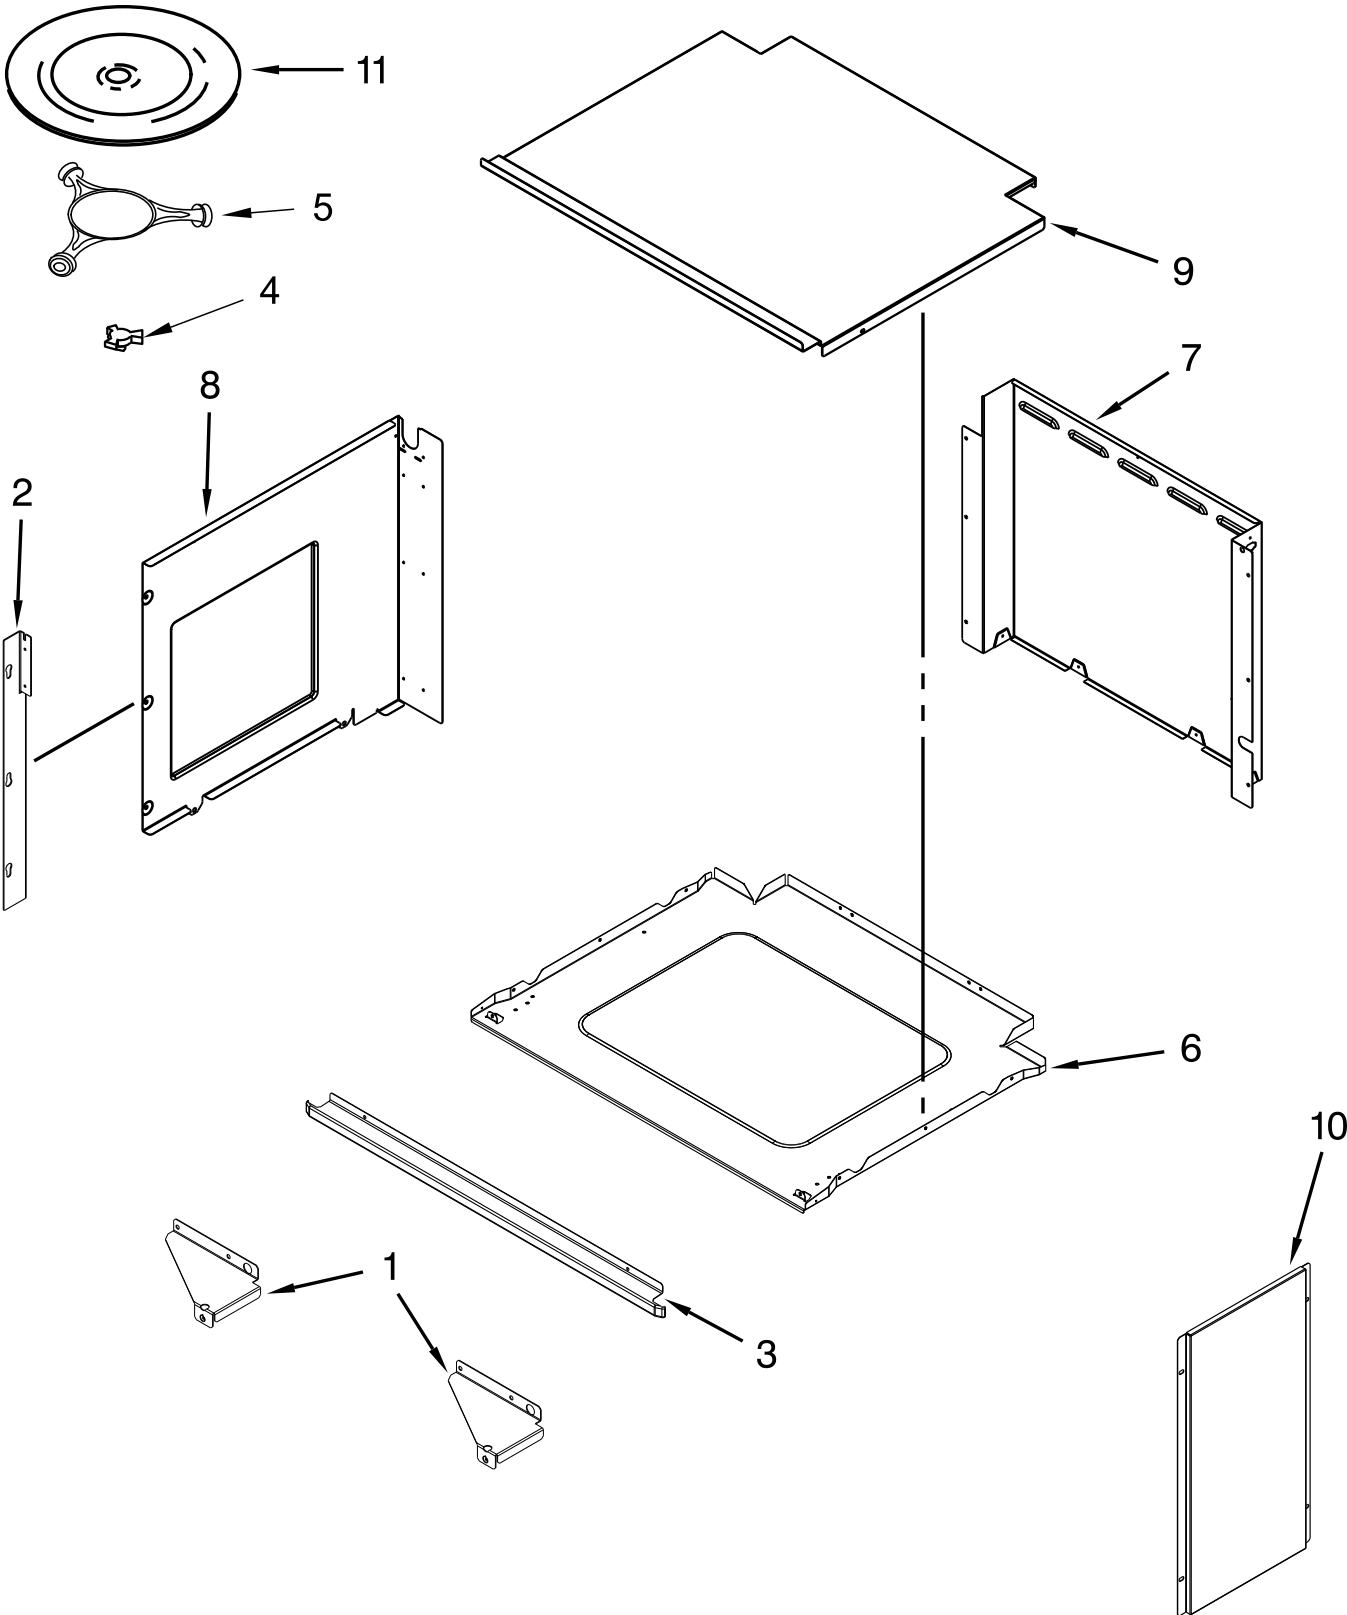



# TOP SUPPORT AND TURNTABLE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10239156	Bracket, Lower (Left)	5	8205678	Ring, Turntable	10	W10176066	Cover, Service
	W10239157	Bracket, Lower (Right)	6	W10176063	Retainer, Bottom	11	4455915	Turntable
2	W10277588	Trim, Side	7	W10186984	Cover, Rear			
3		Trim, Bottom Vent	8	W10176065	Retainer, Side (Left)			
	W10238700	Black		W10176064	Retainer, Side (Right)			
	W10176036	Stainless	9	W10175998	Panel, Top Retainer			
4	8205677	Drive, Turntable						

# OPTIONAL PARTS

## PAIN, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	72032	Black

## PAIN, SPRAY

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	830864	Black

## ADHESIVE

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	482338	Sealer, Silastic

## WIRING HARNESS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	W10174756	Harness, Main
	5171P208-60	Harness, Meat Probe Jack
	W10174375	Harness, Signal Extended
	W10209123	Harness, Latch W/ Meat Probe
	W10277590	Jumper, Secondary Thermal Fuse
	W10176182	Conduit, Combo
	W10174758	Harness, Communications
	4454949	Holder, Fuse
	W10017410	Fuse, Time Delay