



myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for KENMORE 721.66339. You'll find the answers to all your questions on the KENMORE 721.66339 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual KENMORE 721.66339
User guide KENMORE 721.66339
Operating instructions KENMORE 721.66339
Instructions for use KENMORE 721.66339
Instruction manual KENMORE 721.66339




MICROWAVE OVEN
Use and Care Guide

HORNO DE MICROONDAS
Manual de uso y cuidado

Models/Modelos 721.66339



TrueCookPlus®
See page 10 for details

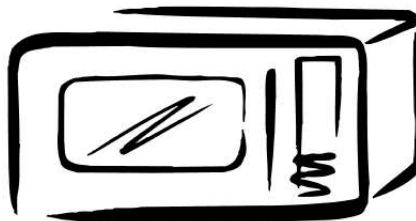

ENGLISH

ESPAÑOL

Sears, Roebuck and Co., Hoffman Estates, IL 60179 U.S.A.
P/No.: MFL47278401 www.sears.com



[Your user manual](#)
[KENMORE 721.66339](#)

Manual abstract:

Read all the instructions before using your microwave oven. Do not allow children to use this oven without close supervision! Read and follow the specific PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY found on page 4. Do not tamper with the built-in safety switches on the oven door! The oven has several built-in safety switches to make sure the power is off when the door is open. When cleaning the door and the surfaces that touch the door, use only mild, nonabrasive soaps or detergents and a sponge or soft cloth. If your oven is dropped or damaged, have it thoroughly checked by a qualified service technician before using it again. B) Do not use recycled paper products in your oven. They can contain particles that can cause arcing or may ignite.) in the oven because if lightning strikes the power lines, it may cause the oven to turn ON. e) Do not use wire twist=ties in the oven. Be sure to remove them before placing the item in the oven.

f) Do not use the cavity for storage purposes. Do not leave paper products, cooking utensils, or food in the cavity when not in use. Liquids such as water, coffee, or tea are able to be overheated beyond the boiling point without appearing to be boiling due to surface tension of the liquid. Visible bubbling or boiling when the container is removed from the microwave oven is not always present. THIS COULD RESULT IN VERY HOT LIQUIDS SUDDENLY BOILING OVERWHEN THE CONTAINER IS DISTURBEDOR WHEN A SPOON OR OTHER UTENSIL IS INSERTEDINTO THE LIQUID.

To reduce the risk of injury to persons: 1) Do not overheat the liquid. 2) Stir the liquid both before and halfway through heating it. 3) Use extreme care when inserting a spoon or other utensil into the container once heating has begun. 4) Do not use straight-sided containers with narrow necks. 5) After heating, allow the container to stand in the microwave oven for a short time before removing the container.

13. Keep the glass tray and the turntable roller rest in the oven when you are cooking. Do not use this product near water. - For example, near a kitchen sink, in a wet basement, near a swimming pool or similar location. Do not cover or block any openings in the oven. - Do not allow the gray film on special microwave cooking packages to touch the glass turntable. C) Disconnect the power cord or shut off the power at the fuse or circuit breaker panel. 9. Do not use this oven for commercial purposes. This microwave is made for household use only.

10. Install or locate this appliance in accordance with the provided installation instructions.) b) Do not operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped. E) This appliance should be serviced only by qualified service personnel. If you use the browning dish incorrectly, you could break the glass turntable. Chips or scratches may cause the turntable to break during use. 21. Some items (for example, whole eggs, sealed containers and closed glass jars) are able to explode and should not be heated in this oven. 22. Use this appliance only for its intended use as described in this manual. Do not use corrosive chemicals or vapors in this appliance.

This type of oven is specifically designed to heat, cook, or dry food. IEC 60705 RATING STANDARD Specifications subject to change without prior notice. Carefully remove your Kenmore microwave oven from the shipping carton. Be sure to remove all packing materials from the oven cavity before use. For safety purposes this oven must be plugged into a 20-amp circuit.

No other electrical appliances or lighting circuits should be on this line. Your microwave oven can be placed easily in your kitchen, family room, or anywhere else in your home. Place the oven on a flat surface such as a kitchen countertop or a specially designed microwave oven cart at least 39. Do NOT place your microwave oven over a range, cooktop, or other heat-producing appliances. Free airflow around the oven is important.

Allow at least 4 in. (10 cm) of space at the top, sides, and back of the oven for proper ventilation. To reduce the risk of fire or electric shock, do not install closer than 4 inches to side and back wall..



[Your user manual](#)
[KENMORE 721.66339](#)