

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST


OVEN PARTS

For Models: KBHS179SSS03
(Stainless)

Illus. No.	Part No.	DESCRIPTION
1		Literature Parts
	8304424	Installation Instructions
	W10162181	Use & Care Guide Tech Sheet
	8304418	English
	8304419	French
	8304375	Easy Set Guide Safer Cooking Tips
	3191638	English
	9759133	French
2	4448444	Grommet, Mounting Rail
3	8304570	Support, Microwave Module
4		Rail, Mounting Side
	8304621BL	Right
	8304622BL	Left
5		Side, Chassis
	8304546	Right
	8303539	Left
6	8304217	Base, Chassis
7	W10165448	Trim, Bottom
8	8304509	Chassis, Back
9	9760213	Transformer, Microwave UI
10	3400832	Screw
11	4449809	Screw
12	8285593	Connector Cover
13	8303802	Cover, Top
14	8303538	Channel, Rear
15	3400893	Screw

CONTROL PANEL PARTS

For Models: KBHS179SS03
(Stainless)

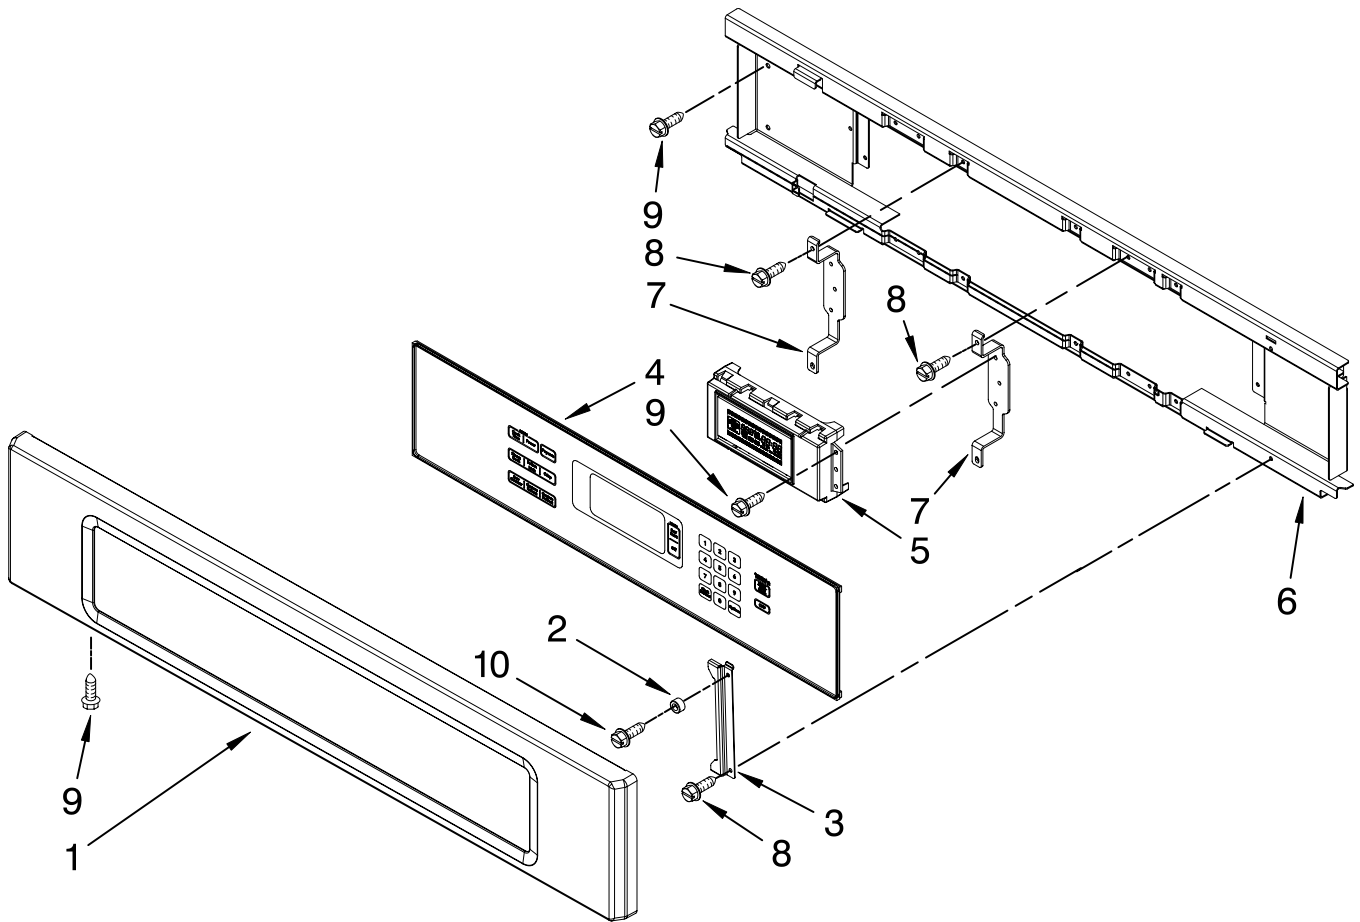


Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

- | | | |
|----|-----------|-----------------------|
| 1 | W10165446 | Panel, Control |
| 2 | 9760749 | Bumper, Door |
| 3 | W10169348 | Bracket, Glass Touch |
| 4 | 8304334 | Keyboard, Glass Touch |
| 5 | W10118736 | User Interface |
| 6 | 8303720 | Backer, Control |
| 7 | 8303887 | Bracket, Enclosure |
| 8 | 4449154 | Screw |
| 9 | 3400805 | Screw |
| 10 | 4449809 | Screw |

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

MICROWAVE DOOR PARTS

For Models: KBHS179SSS03
(Stainless)

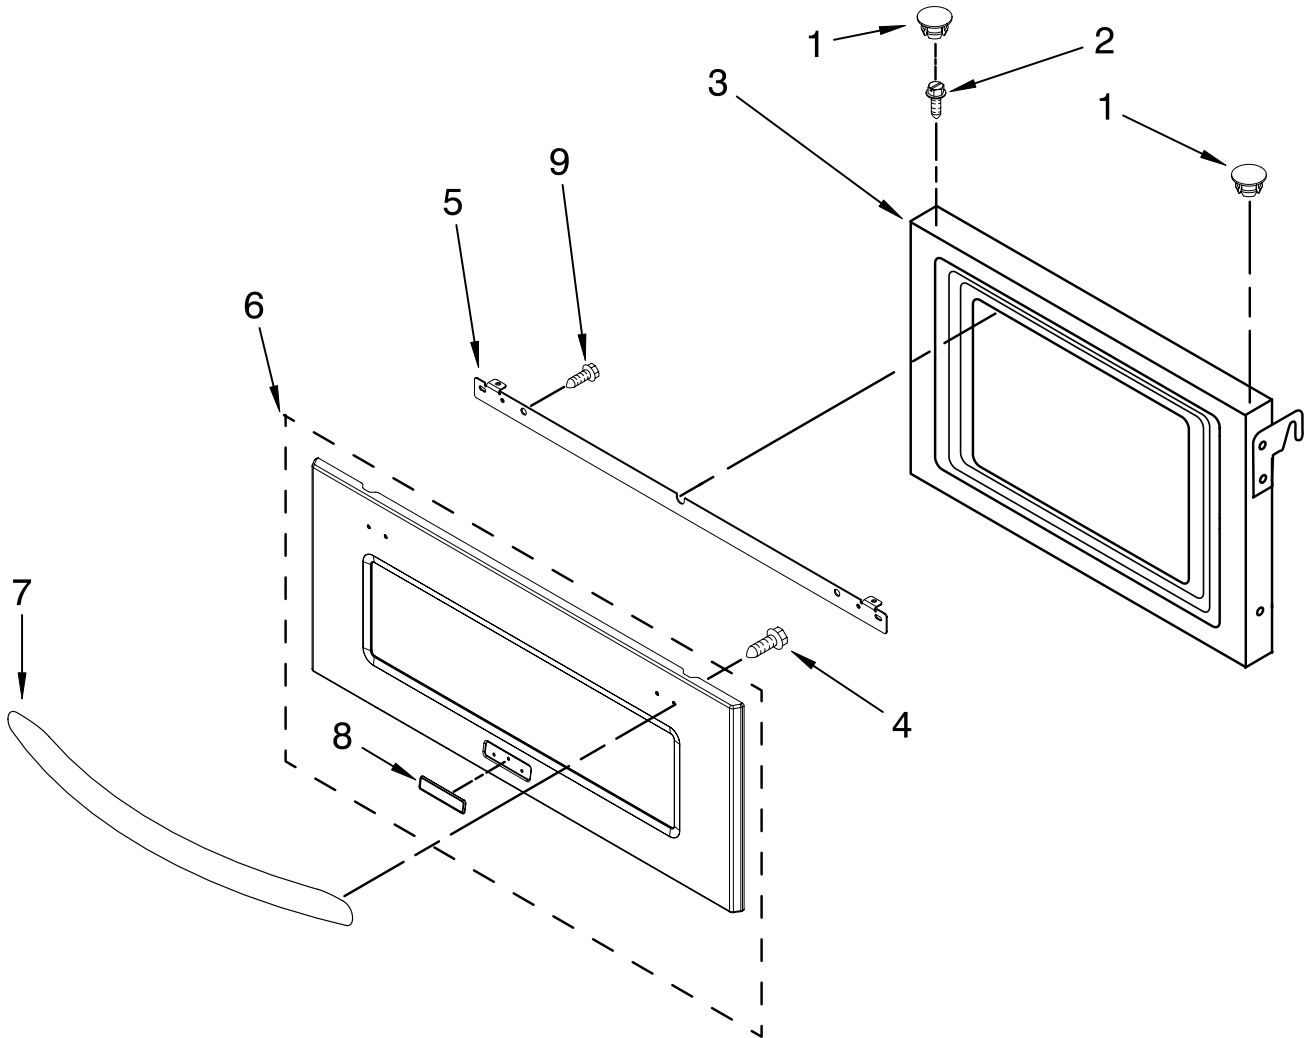


Illus. No.	Part No.	DESCRIPTION
1	8304588BL	Button, Plug (2)
2	W10143304	Screw
3	W10165442	Door, Microwave
4	4449154	Screw (4)
5	8303033	Bracket, Handle
6	8304455	Glass Assembly
7	8303775SS	Handle, Door
8	8304603SS	Badge
9	W10143304	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CABINET AND STIRRER PARTS

For Models: KBHS179SSS03
(Stainless)

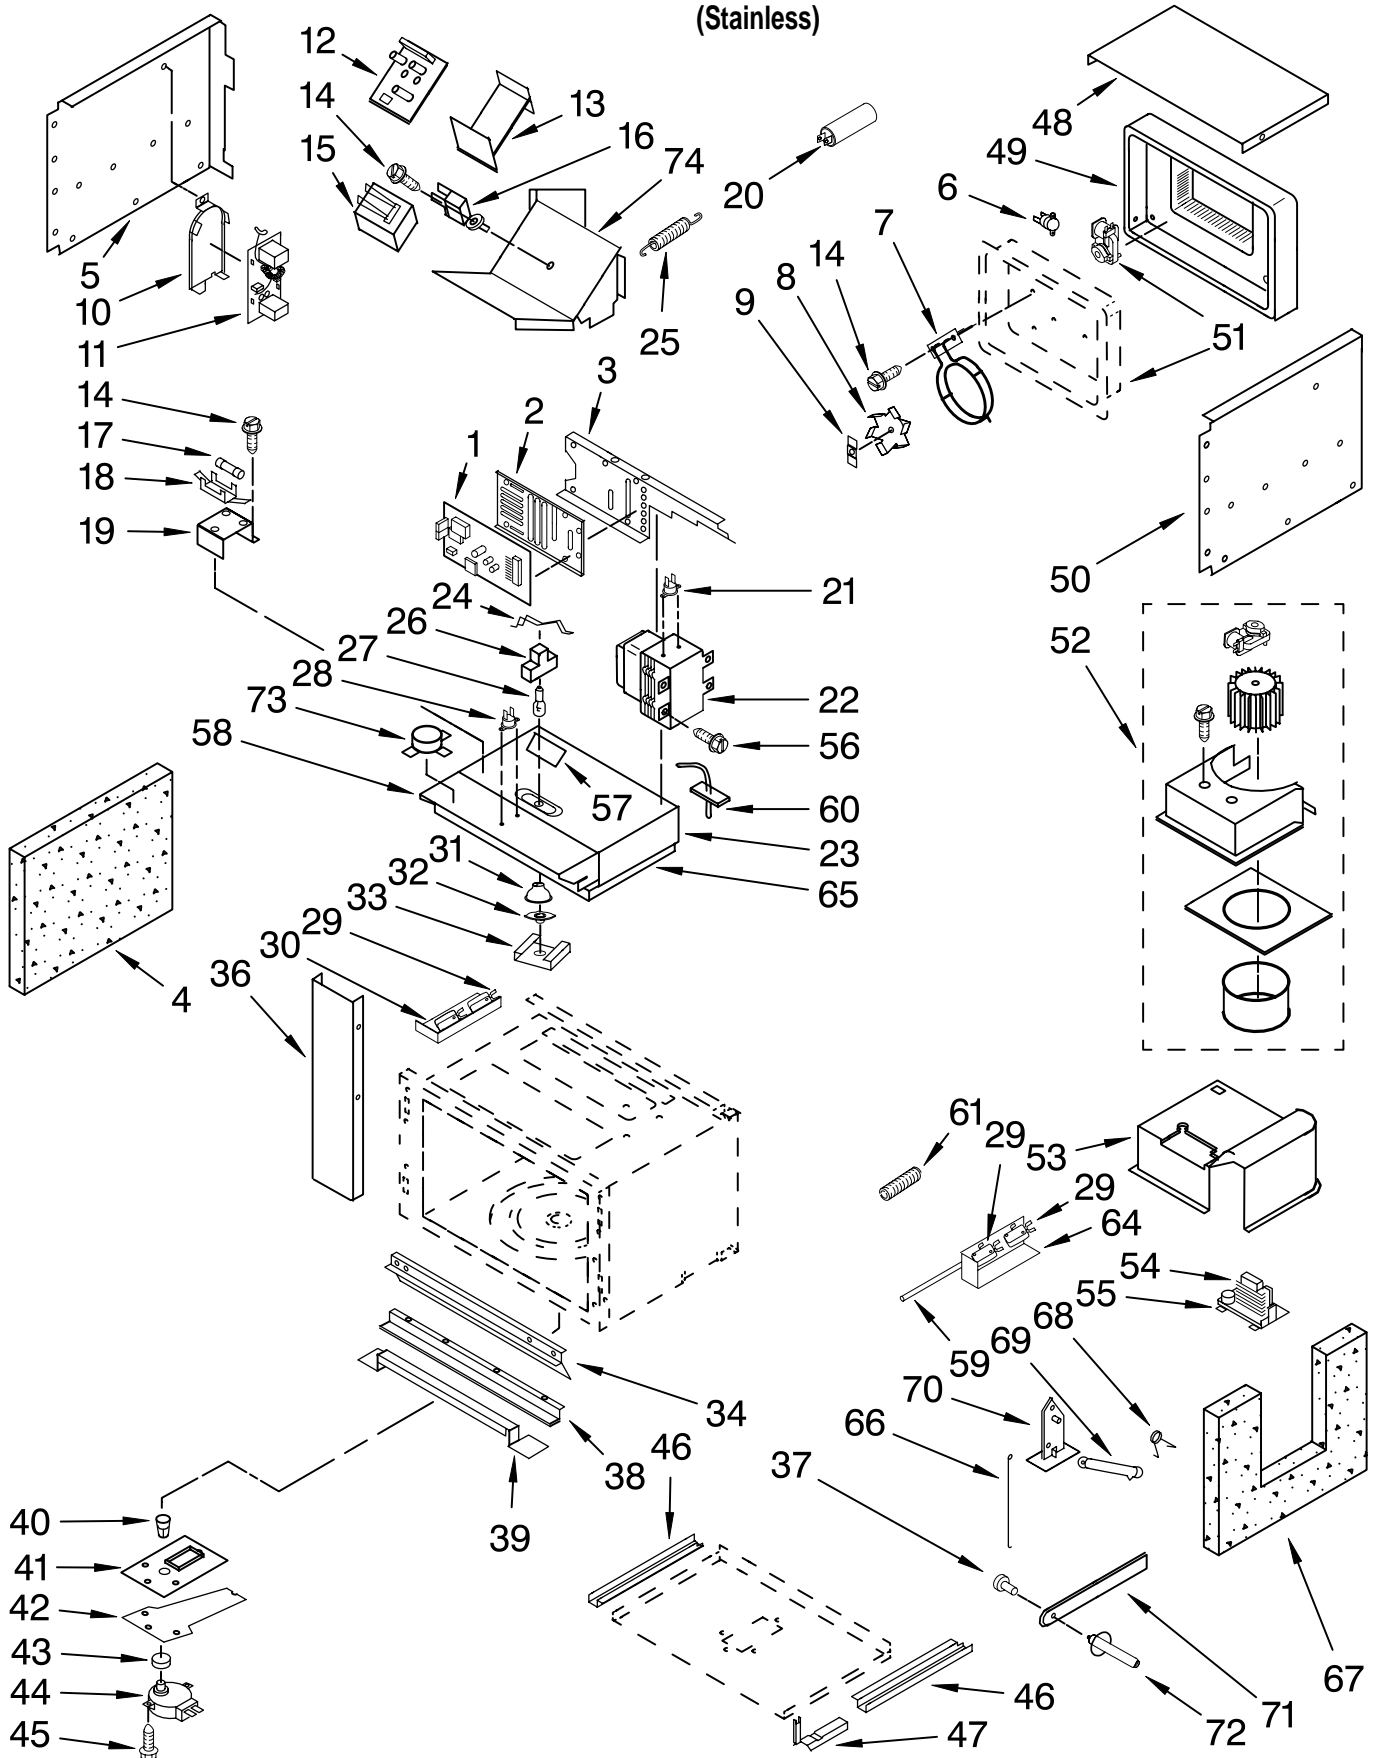

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CABINET AND STIRRER PARTS


For Models: KBHS179SSS03
(Stainless)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	W10120227	Control, Electric	23	W10130895	Plate, Air	47	W10120478	Hinge, Door
2	8205669	Support	24	4375319	Spring, Lamp	48	W10130903	Cover, Plate
3	W10130892	Plate, Air	25	8205685	Spring	49	W10130904	Cover, Rear
4	W10130901	Insulation, Side Left	26	8205658	Housing, Lamp	50	8205680	Cover, Side Right
5	W10120471	Cover, Side Left	27	4375348	Lamp	51	W10120221	Convection, Motor Assmebly
6	W10120223	Thermostat	28	W10120222	Thermostat	52	8205721	Blower Assembly
7	W10120224	Element, Convection	29	W10131248	Switch	53	W10130907	Cover, Inverter
8	4375418	Fan	30	8205683	Holder, Switch	54	W10120229	Inverter
9	W10120233	Nut, Speed	31	4375320	Reflector	55	W10130906	Holder, Inverter
10	W10130891	Holder	32	4375318	Lens, Lamp	56	W10130890	Screw
11	W10120220	Noise Filter	33	W10120231	Clip, Spring	57	W10130908	Baffle, Air
12	W10120228	Control, Electric Converter	34	W10120476	Top Vent	58	W10130899	Plate, Air
13	W10130909	Bracket, Support	36	W10120472	Trim, Side Right	59	W10120235	Rod, Release
14	W10131249	Screw		W10120474	Left	60	W10120225	Sensor
15	8205692	Transformer	37	W10120469	Bushing	61	8205685	Spring
16	4375427	Actuator	38	W10130905	Bracket, Support	64	8205683	Interlock
17	4375321	Fuse	39	8205708	Bracket, Support	65	W10130900	Insulation
18	4375231	Block, Fuse	40	8205682	Shaft, Turntable	66	8205704	Spring
19	W10130897	Bracket, Support	41	8205681	Cover, Motor Turntable	67	W10130902	Insulation
20	8205653	Filter, Noise	42	W10120234	Cover	68	8205689	Spring
21	8205654	Thermostat	43	4375252	Gasket, Shaft	69	8205688	Arm
22	W10120113	Magnetron	44	8205655	Motor, Turntable	70	8205686	Support
			45	4375202	Screw	71	W10120236	Arm
			46	8205707	Support	72	W10120470	Pin, Damper
						73	8205690	Sensor
						74	W10130898	Duct, Magnetron

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

INTERNAL MICROWAVE PARTS

For Models: KBHS179SSS03
(Stainless)

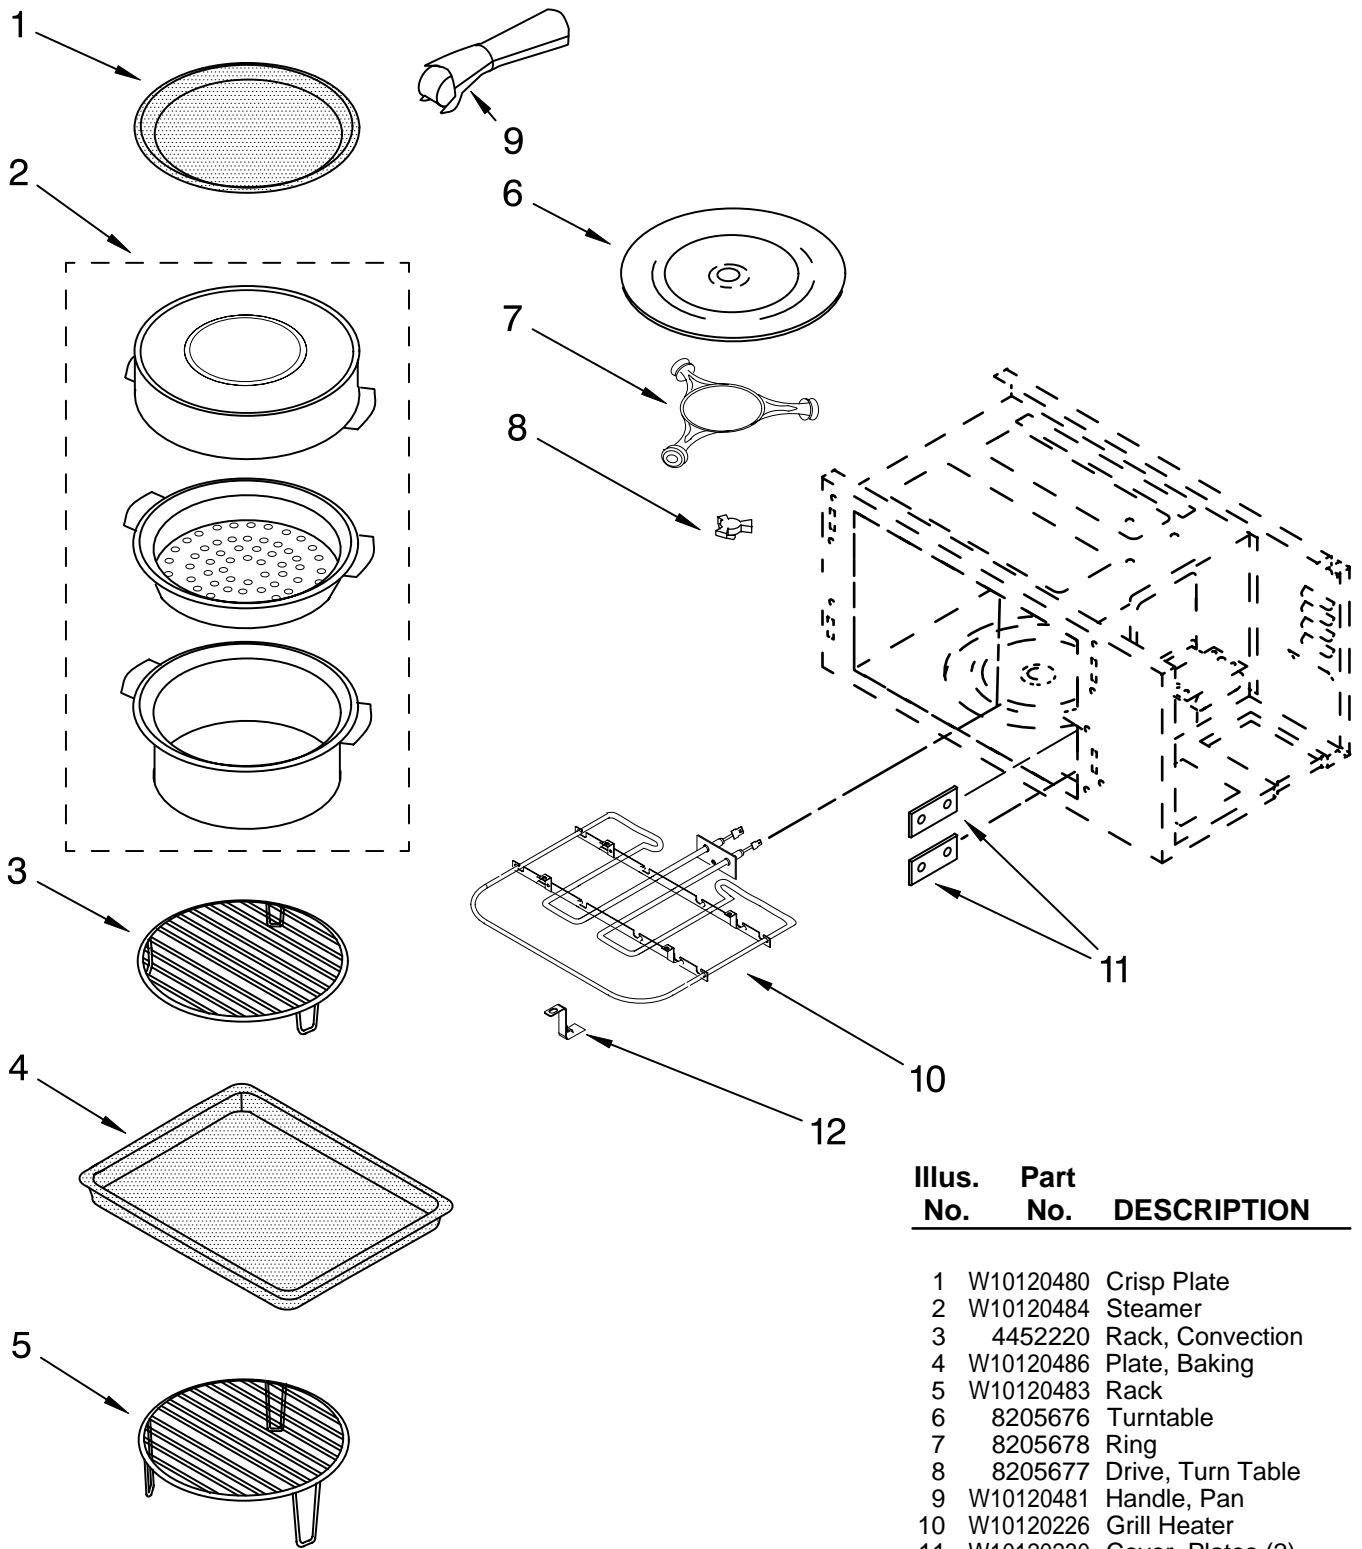

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

1	W10120480	Crisp Plate
2	W10120484	Steamer
3	4452220	Rack, Convection
4	W10120486	Plate, Baking
5	W10120483	Rack
6	8205676	Turntable
7	8205678	Ring
8	8205677	Drive, Turn Table
9	W10120481	Handle, Pan
10	W10120226	Grill Heater
11	W10120230	Cover, Plates (2)
12	W10120232	Bracket, Mounting

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OPTIONAL PARTS

For Models: KBHS179SSS03
(Stainless)

Illus. No.	Part No.	DESCRIPTION
-------------------	-----------------	--------------------

OPTIONAL PARTS NOT INCLUDED

PAINT, TOUCH-UP (1/2oz.)

72017 White
261869 Cord Brown
72032 Black

PAINT, SPRAY

350930 White
261900 Citrine White
830864 Black

FOLLOWING PARTS NOT ILLUSTRATED

482338 Sealer, Silastic
(3 oz.)

WIRING HARNESS PARTS

8304442 Harness, Main
8304373 Harness,
Communication
W10155291 Connector, Flex
4450800 Screw, Ground
W10140600 Conduit
4452400 Lead, Ground Strap