


■ COMBIMICROWAVE



KH 1106

GB **Combi**microwave
IE Operating instructions
CY

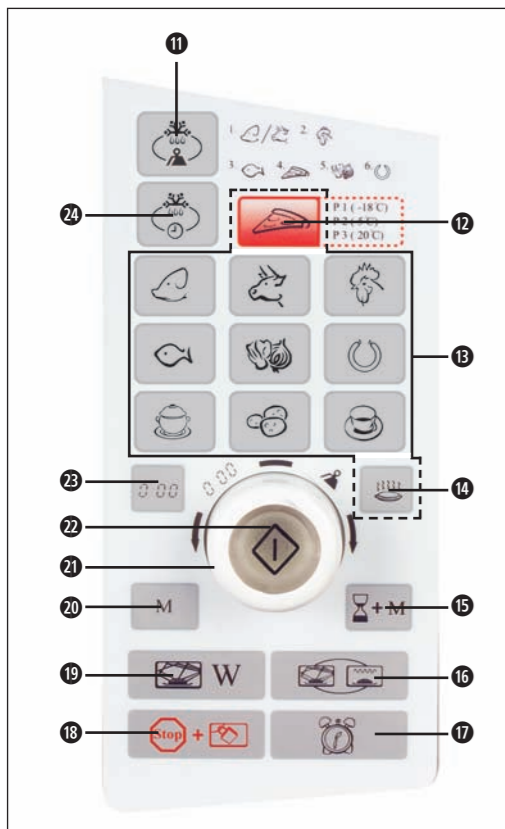

LIST OF CONTENTS	PAGE
Introduction	3
Proper Use	3
Package Contents	3
Description of Components	3
Buttons/controls on the control panel	3
Technical data	4
Safety	4
Safety precautions for the avoidance of excessive contact with microwave energy	4
Important safety instructions	4
Earthing notice/Correct Installation	7
Interference with other appliances	8
Before you begin	8
Basic principles of microwave cookery	8
Use suitable cookware	8
Installation of the appliance	9
Description of functions	9
Setting the clock	9
Setting 12-hour-mode	9
Setting 24-hour-mode	9
Setting the kitchen timer	10
Operation	10
Cooking in the microwave oven	10
Quick start function	11
Memory function	11
Selecting pre-settings	11
Auto menu	12
Grill function	14
Grill/Combi cooking procedure	14
Defrosting by weight	14
Defrosting by time	15
Query functions	15

Child protection system	15
Power-saving function	16
Magnetron control protection function	16
Acoustic signal function	16
Cleaning and Care	16
Disposal	17
Warranty & Service	17
Importer	17
Tips	18
Freezing and defrosting – the easy way ...	18
Cooking – the easy way ...	19
Grilling – the easy way ...	22
Recipe suggestions	24
Pizza	24
Onion soup with gratinated cheese topping	24
Lentil Hotpot	25
Cauliflower with gratinated cheese topping	25
Maccaroni and minced meat casserole with broccoli	26
Filet of pork with mushrooms in spicy paprika sauce	26
Potato gratin	27
Chicken fricassee	27
Green chicken casserole	28
Bread or bacon dumplings	28
White sauce	29
Vanilla sauce	29
Rice pudding	29
Red fruit pudding (with strawberries and raspberries)	30
Index	31

Read these operating instructions carefully before using the appliance for the first time and preserve this manual for later reference. Pass this manual on to whoever might acquire the appliance at a future date.

COMBI MICROWAVE KH 1106


Introduction


Proper Use


This appliance is intended for the heating and preparation of foodstuffs according to the described procedures. Any modifications of the appliance shall be deemed to be improper use and implies substantial danger. The manufacturer takes no responsibility for damage(s) arising out of usage that is contrary to the instructions laid down.

This appliance is not intended for commercial use.

Legend

 *Important! Warnings against damages to the appliance.*

 *Danger! Risk of injuries!*

 *Notes! Hints and tips for handling the microwave.*

Package Contents

Immediately after unpacking the appliance, please ensure that the contents are complete and not damaged.

- 1 Microwave oven, Model KH 1106
- 1 Turnable ring
- 1 Glass turntable
- 1 Metal rack
- 1 Crispy-Pan
- 1 Operating manual

Description of Components

- ① Air vent
- ② Glass turntable
- ③ Turnable ring
- ④ LED display
- ⑤ Control panel
- ⑥ Door safety latch
- ⑦ Window
- ⑧ Door handle
- ⑨ Metal rack
- ⑩ Crispy-Pan

Buttons/controls on the control panel

- ⑪ Weight defrost
- ⑫ Pizza
- ⑬ Button panel for preset cooking functions. With the buttons ⑫ and ⑬ a total of 11 cooking functions is available
- ⑭ Pre-heat
- ⑮ Pre-settings
- ⑯ Grill/combi
- ⑰ Kitchen timer
- ⑱ Cancel/stop/childlock
- ⑲ Microwave
- ⑳ Memory
- ㉑ Dial
- ㉒ Start/quick start
- ㉓ Clock/energy save
- ㉔ Time defrost



This symbol on the microwave warns you about the risk of burning.

Door safety latch ⑥

Pull the handle to open the door. If the door is opened during operation, the cooking process is interrupted, the program or function, however, remain. The cooking process is continued when the door is closed and the button Start/quick start ② is pressed again.

Glass turntable ②

Place the turnable ring ③ in the middle of the microwave. Position the turntable ② such that the indentations on the back of the turntable lock into the three base clips. Always leave the glass turntable with the turnable ring ③ in the appliance during operation. Due to the rotating turntable an even distribution of energy and microwaves is guaranteed.

Metal rack ④

Use the metal stand for grilling.

Place a heat-resistant plate underneath the metal stand. This will collect any splashes of grease or food.

⚠ Important! *The metal stand must only be used on the glass turntable. Always place the metal stand in the middle of the turntable. When removing food after cooking, always use oven gloves or similar.*

Please note that it may become very hot inside the appliance and take care.

Crispy-Pan ⑩

Use the Crispy-Pan to give a crispy touch to pizza. Place the Crispy-Pan onto the metal rack.

⚠ Important! *After cooking the Crispy-Pan is hot. Use a kitchen cloth to remove the pan.*

ⓘ Note: *Clean the Crispy-Pan with a damp cloth. Never clean in a dish washer.*

The Crispy-Pan is suitable for all conventional ready-made pizzas with a diameter of 25.5 cm.

Technical data

Rated voltage:	230 V ~ 50 Hz
power output	
Microwave:	800 W
Grill:	1000 W
power consumption:	1300 W
Capacity:	approx. 20 l
Glass turntable diameter:	270 mm

Safety

Safety precautions for the avoidance of excessive contact with microwave energy

- Do not try to operate the appliance while the door is open, as this can lead to a damaging dose of microwave radiation. It is also important not to break open or manipulate the safety locks.
- Do not jam anything between the front of the appliance and the door, and make sure that there is no residual food or cleaning agent on the seals.

⚠ WARNING: *If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.*

- It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.

Important safety instructions

When using electrical appliances, elementary safety precautions must be taken, including the following:

- Do not allow individuals (including children) to use the appliance whose physical, sensorial or mental abilities or lack of experience and knowledge hinder their safe usage of it if they have not previously been supervised or instructed in its correct usage. Tell children about the appliance and its potential dangers so that they do not play with it.

⚠ Danger: *To reduce the risk of burns, electric shock, fires, bodily injuries or excessive contact with microwave radiation:*

Please read all instructions before using the appliance.

- Only use this appliance for its intended purpose as described in this manual. Do not use any caustic chemicals or vapours in this appliance. This microwave oven is especially designed for heating, cooking, grilling, or drying foodstuffs. It is not designed for use in industrial or laboratory areas.
- Do not use the microwave oven when it is empty.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Place the microwave oven so that there is a minimum distance of 30 cm to walls or cupboards. Ensure ventilation openings are always free. The microwave is not designed to fit into a kitchen unit.
- The AC power supply must be 230 V, 50 Hz, with a minimum 16 A distribution line fuse, or a minimum 16 A distribution circuit breaker. It is recommended that a separate circuit serving only this appliance be provided.
- Do not install the oven in an area of high humidity or where moisture may collect.
- Do not leave the oven unattended when using disposable plastic, paper or other combustible food containers.
- Do not place flammable materials near the oven or ventilation openings.
- Remove all metallic seals, wire twists, etc., from food and food packages. Arcing on metallic surfaces may cause a fire.
- To make popcorn, use only special microwave popcorn makers.
- Do not warm up seed, cherry pip or gel filled pillows in the microwave oven. Risk of fire!
- Do not store food or any other items inside the oven.
- Check the settings after you start the oven to ensure the oven is operating as desired.
- Inside the oven cavity or on the door; make sure there are no dents.
- Do not allow grease or dirt to build up on the door seals and adjacent parts.
- Under no circumstances should you remove the outer cabinet. Never spill or insert any objects into the door lock openings or ventilation openings. In the event of a spill, turn off and unplug the oven immediately, and call an authorised service agent.
- Do not attempt to replace the oven lamp yourself or allow anyone who is not an electrician authorised to do so. If the oven lamp fails, please consult your dealer or an authorised service agent. If the power supply cord of this appliance is damaged, it must be replaced by an authorised service agent.
- Take care when microwaving liquids. Use a widemouthed container to allow bubbles to escape.
- To prevent sudden eruption of boiling liquid and possible scalding:
 - Stir liquid prior to heating/reheating.
 - It is advisable to insert a glass rod or similar utensil into the liquid whilst reheating.
 - Let liquid stand for at least 20 seconds in the oven at the end of cooking time to prevent delayed eruptive boiling.
- Pierce the skin of such foods as potatoes, sausages and fruit before cooking, or they may explode.

- To avoid burns, always test food temperature and stir before serving and pay special attention to the temperature of food and drink given to babies, children or the elderly. Temperature of the container is not a true indication of the temperature of the food or drink, always check the food temperature.
- Sliced stuffed baked foods after heating to release steam and avoid burns.
- Keep children away from the door, to prevent them burning themselves.
- Do not touch the oven door, outer cabinet, oven cavity, ventilation openings, bottom grill, accessories and dishes during grill, dual and automatic operation (except auto defrost) as they will become hot. Before cleaning make sure they are not hot.
- Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.
- Do not lean or swing on the oven door. Do not play with the oven or use it as a toy.
- Children should be taught all important safety instructions: use of pot holders, careful removal of food coverings; paying special attention to packaging (e.g. self-heating materials) designed to make food crisp, as they may be extra hot.
- Never modify the oven in any way.
- Do not move the oven while it is in operation.
- When using a browning dish or self-heating material, always place a heat resistant insulator such as a porcelain plate under it to prevent damage to the turntable due to heat stress. The preheating time specified in the dish's instructions must not be exceeded.
- Do not use metal utensils, which reflect microwaves and may cause electrical arcing. Do not put cans in the oven.
- Use only the turntable designed for this oven.
- Do not place anything on the outer cabinet during operation.
- Do not use plastic containers for microwaving if the oven is still hot from using the grill, dual and automatic operation (except auto defrost), because they may melt. Plastic containers must not be used during above modes unless the container manufacturer says they are suitable.
- If you are unsure how to connect your oven, please consult an authorised, qualified electrician.
- Water vapour or drops may occasionally form on the oven walls or around the door seals and sealing surfaces. This is a normal occurrence and is not an indication of microwave leakage or a malfunction.
- The electrical outlet must be readily accessible so that the unit can be unplugged easily in an emergency.
- Do not place the oven in areas where heat is generated. For example, close to a conventional oven.
- Clean the waveguide cover, the oven cavity and the turntable after use. After cooking fatty foods without lid, always clean the cavity and especially the grill heating elements thoroughly. These must be dry and free from grease. Built-up grease may overheat and begin to smoke or catch fire.
- Individuals with pacemakers should check with their doctor or the manufacturer of the pacemaker for precautions regarding microwave ovens.
- Do not immerse the power supply cord or plug in water or any other liquid.
- Do not let the power supply cord hang over the edge of a table or work surface.
- Keep the power supply cord away from heated surfaces, including the rear of the oven.
- Always open containers, popcorn makers, oven cooking bags, etc., away from the face and hands to avoid steam burns.
- Always stand back from the oven door when opening it, to avoid burns from escaping steam and heat.

⚠ Danger: Only permit children unsupervised use of the microwave oven when they have received adequate instruction in its operation. Children must understand the dangers from improper usage.

- To minimize the risk of fire in the microwave: When heating food in plastic or paper containers, always keep an eye on the microwave when it is in operation, as these materials can catch fire.
- Remove closures containing wire from paper or plastic bags, before placing them in the microwave.
- Should you notice smoke, switch the appliance off or pull the plug from the socket and keep the door closed to suffocate any possible flames.
- Do not use the interior of the microwave for storage purposes. Do not leave paper items, cooking utensils or food in the microwave when it is not being used.

⚠ Important: Liquids and other foods must not be heated in airtight containers, as these may explode and damage the appliance. When heating beverages in the microwave, bubbling may be delayed when the drink boils. Therefore, be careful when handling the container.

- Do not fry in the microwave. Hot oil can damage parts of the appliance and utensils and even cause skin burns.
- Eggs in their shells and hard-boiled eggs should not be heated in the microwave, as they may explode, even after completion of the heating process.
Food with thick skins, such as potatoes, whole pumpkins, apples and chestnuts must be pricked before cooking.
The content of babies' bottles or jars of baby food should be shaken or stirred.

⚠ Danger: Before feeding, check the temperature to avoid potentially lethal burns for babies. Cooking utensils may become hot from the heat emitted by the food, so you may require oven gloves to touch them. In this case it should be checked if the cooking utensils are suitable for use in the microwave.

⚠ Danger: Microwave radiation is dangerous! Arrange for service and repair work, in which the coverings that protect you from contact with microwave radiation need to be removed, to be carried out only by trained specialists.

⚠ Danger: Inadequate cleanliness of the cooking appliance can lead to destruction of the upper surface, which on your part influences the total period of use and could possibly lead to dangerous situations.

Earthing notice/Correct Installation

This appliance must be earthed. The appliance has a lead with an earthing wire and earthing connector. A correspondingly installed and earthed wall socket is required for this. In the case of a short circuit, earthing with the earthing cable reduces the risk of an electric shock. An individual circuit solely for the connection of the microwave is recommended. The use of high voltages is dangerous and can cause fires or other accidents, resulting in damage to the appliance.

⚠ Danger: Improper use of the earthing connector can cause the risk of an electric shock.

ⓘ NOTE: Should you have any questions about earthing or the instructions on the use of this electrical appliance, please consult an electrician or a maintenance technician.

Neither the manufacturer nor the dealer can accept liability for damage to the microwave oven or injury to persons resulting from failure to comply with the instructions for electrical connection.

Interference with other appliances

The operation of the microwave can cause interference on your radio, television or similar appliances. If such interference should occur, it may be reduced or corrected with the following remedial measures:

- Clean the door and the seal of the microwave.
- Re-align the receiver antenna of your radio or television.
- Position the microwave in a different place to the receiver.
- Move the microwave away from the receiver.
- Plug the microwave into another wall socket. The microwave and the receiver should be connected to different circuits.

Before you begin

Basic principles of microwave cookery

- Arrange the food sensibly.
- The thickest parts near the edges.
- Pay attention to the cooking time. Select the shortest possible stated cooking time and increase as required. Food that is cooked too long can begin to smoke or catch fire.
- Cover the food during cooking with a lid suitable for microwave cookery. The lid prevents splashing and helps in the even cooking of the food.
- While cooking, turn the food in the microwave once so that items such as chicken or hamburgers are cooked more quickly.
- Large pieces of food such as joints of meat must be turned at least once.
- Completely re-arrange foods such as meatballs after half the cooking time. Turn them and place the meatballs from the middle of the tableware to the edge.

Use suitable cookware

- The ideal material for a microwave oven is microwave-permeable, allowing the energy to penetrate the container to heat the food. Microwave cannot penetrate metal. Therefore metal containers and cookware should not be used.
- When heating in the microwave, do not use items which made of recycling paper. This can contain tiny metal fragments which generate sparks and/or even cause fires.
- We recommend the use of round/oval cookware instead of square or oblong containers, as food in corner areas tends to overcook. The following list is intended to assist you in selecting the correct tableware.

Cookware	Micro-wave	Grill	Combination
Heat-resistant glass	Yes	Yes	Yes
Not heat-resistant glass	No	No	No
Heat-resistant ceramic	Yes	Yes	Yes
Microwaves suitable plastic cookware	Yes	No	No
Kitchen roll	Yes	No	No
Metal tray Metal plate	No	Yes	No
Metal racks	No	Yes	Yes
Kitchen foil & Foil container	No	Yes	No
Crispy-Pan	Yes	No	Yes

Installation of the appliance

- Choose an even surface with enough space for the ventilation of the appliance.
- Keep a distance at least 7.5 cm between the appliance and the adjacent walls. Make sure that the door of the microwave oven can be easily opened.
- Make sure that the power plug is easily accessible and can be reached and disconnected in emergencies or dangerous situations.
- Keep a gap at least 30 cm free above the microwave.
- Do not remove the feet underneath the microwave.
- Do not block air supply and exhaust openings. Otherwise the appliance may be damaged.
- Install the appliance as far away as possible from radios and televisions. The operation of the microwave oven can cause malfunctions of radio and television reception.
- Connect the appliance to a standard household wall socket. Make sure that the voltage and frequency ratings correspond to the details stated on the rated power label.

⚠ Important! Do not install the microwave above a cooker or other appliance generating heat. Installation in such a location could lead to damage to the appliance and the loss of warranty.

- Remove packaging material and any protective film on the surface of the casing.


i Note: Do not remove the light grey flimmer cover plate, which is mounted in the cooking area to protect the magnetron.

Description of functions


Setting the clock

After inserting the mains plug into the socket and powering on, open the microwave door once. The LED display reads „0:00“. The oven emits an acoustic signal and goes into standby mode.

Setting 12-hour-mode

1. Press button **⌚** „Clock“ once. A red clock symbol appears on the LED display  and 12-hour-mode is indicated via „12 H“.
2. Turn the dial **⌚** to set the hours.
3. Now press the button **⌚** „Clock“ and the display changes over to the minutes setting.
4. Turn the dial **⌚** to set the minutes.
5. To finish press the button **⌚** „Clock“. The following display flashes in the LED display „:“ indicating that the „Set clock“ process has been successfully completed.



Setting 24-hour-mode

1. Press button **⌚** „Clock“ twice. A red clock symbol appears on the LED display  and 24-hour-mode is indicated via „24 H“.
2. Turn the dial **⌚** to set the hours.
3. Now press the button **⌚** „Clock“ and the display changes over to the minutes setting.
4. Turn the dial **⌚** to set the minutes.
5. To finish press the button **⌚** „Clock/energy save“. The following display flashes in the LED display „:“ indicating that the „Set clock“ process has been successfully completed.

i Note: If you press the button „Cancel/Stop“ **⏹**, the appliance automatically changes back to its previous status.

Setting the kitchen timer

The microwave has a kitchen timer, which you can use independently with microwave operation.

1. Press button **17** „Kitchen timer“ if the appliance is in standby mode. The LED display shows a flashing „0:00“ and the red clock symbol  lights up.
2. Now set the desired time by using the dial **21**. You can select any time range from 5 seconds to 95 minutes.
3. Press button **22** „Start/quick start“. An acoustic signal is issued and the read clock symbol  flashes. The count down begins.

As soon as the set time is expired, you will hear a repeated acoustic signal. Press the button „Cancel/Stop“ **18** to stop the acoustic signal.

i Note: While the Kitchen timer is running, the current time cannot be displayed.

Operation

Cooking in the microwave oven

If you wish to use the classical basic functions of the microwave (reheat, boiling, cooking), you must simply select the microwave power and set the desired cooking time. You can choose between eight power levels from 100 to 800 watts, with a maximum cooking time of 95 minutes.

1) Select power

- Press the button **19** „Power“ the appropriate number of times to set the required power level.
- **1x** for 800 watt power.
- **2x** for 700 watt power.
- **3x** for 600 watt power.
- **4x** for 500 watt power.
- **5x** for 400 watt power.
- **6x** for 300 watt power.
- **7x** for 200 watt power.
- **8x** for 100 watt power.

The power is shown in the LED display (e.g. P 800 at 800 watts power).



2) Setting the cooking time

1. Turn the dial **21** to set the cooking time.

The increments for setting the time with the control knob are as follows:

- from 0 to 1 min: in 5 second increments
- from 1 to 5 min: in 10 second increments
- from 5 to 10 min: in 30 second increments
- from 10 to 30 min: in 1 minute increments
- from 30 to 95 min: in 5 minute increments

3) Start the cooking process

To start the cooking process, please press button **22** „Start/quick start“. In the LED display, the symbols for microwave operation  and cooking  appear. The count down begins.

i Note: If you press button **22** „Start/quick start“ during operation, the cooking time will be increased by 30 seconds, while the power level remains unchanged.

Interrupting processes (Cancel/Stop)

You can stop a process, interrupt it and then continue.

Aborting/stopping an input process

Press button **18** „Cancel/Stop“ once, to abort or stop an input process. The appliance switches back to standby mode.

Interrupting the cooking process

Press button **18** „Cancel/Stop“ once to interrupt a cooking process. The appliance interrupts the cooking process and stops the remaining time. Press button **22** „Start/quick start“, to continue the cooking process.

Abort the cooking process

Press button **18** „Cancel/Stop“ twice to abort a cooking process. The appliance switches back to standby mode.

Prolong/shorten the cooking time

To increase/decrease the cooking time during cooking, turn the dial **21**:



- turn clockwise and the cooking time is increased by one minute.
- turn anti-clockwise and the cooking time is decreased by one minute.

In order to increase the cooking time by 30 seconds at a time, press button **22** „Start/quick start“.

i Note: In standby mode and during defrosting, the time cannot be altered by means of the dial.

Quick start function

With this function you can immediately for 30 seconds (or longer, up to 95 minutes) begin cooking at 100 % power.

- Press button **22** „Start/quick start“. In the LED display the symbols for microwave operation  and cooking flash . The count down begins.

Memory function

Use the memory function, if you wish to carry out 3 processes after one another. If you choose several operations and one of them includes defrosting, defrosting must be set as the first in the sequence.

After finishing a process, the acoustic signal sounds once, then the next process immediately starts

Example

You require 300 watts for 15 minutes.

Use microwave power for defrosting + 10 minutes at 600 watts microwave power for cooking + 10 minutes grilling for the preparation of food.

1. Press button **20** „Memory“ once. „3-1“ is displayed in the LED display.
2. Press button **19** „Microwave“ six time to set 300 watts power for defrosting. „P300“ is displayed in the LED display.
3. Turn the dial **21** to set the cooking time (duration). Set 15:00 at 300 w power.
4. Press button **20** „Memory“ once again. Now „3-2“ is displayed in the LED display.
5. Press button **19** „Microwave“ three times, to set 600 watts power. „P600“ is displayed in the LED display.
6. Turn the dial **21** to set the cooking time (duration: 10:00) at 600 w power.
7. Press button **20** „Memory“. „3-3“ is displayed in the LED display.
8. Press button **18** „Grill/Combi“ once to set the grilling function. „G-1“ is displayed in the LED display.
9. Turn the dial **21** to set the grilling time (duration: 10:00).
10. Press button **22** „Start/quick start“, to activate the pre-setting function.

Selecting pre-settings

With this program you can pre-program a certain starting time for cooking or grilling food.

If you have correctly adjusted the settings, the appliance will automatically start at the set time.

i Note: The clock must be set to select the „Pre-settings“ function.

1. Press button **18** „Pre-settings“. The LED display shows the currently set time, and the hour figure flashes.
2. Turn the dial **21** to set the hours.

3. Press button **15** „Pre-Settings“ again. Now the minute indicator starts flashing.
4. Turn the dial **21** to set the minutes.
5. Enter the desired cooking program:
For microwave operation: Press button **19** „Microwave“ correspondingly often to select the power level. Set the desired cooking time using the dial **21**. For grilling: Press button **16** „Grill/Combi“ once to activate the grill function. Set the desired cooking time using the dial **21**.
6. Press button **22** „Start/quick start“.
The clock symbol and the colon flash. The microwave automatically starts the process at the pre-set time.

Example:

It is 12:30 a.m. You wish to heat your food at 12:45 a.m. automatically at 400 watts power for 10 minutes.

1. Press button **15** „Pre-settings“. The LED display shows the currently set time (12:30 a.m., and the hour figure flashes).
2. Press button **15** „Pre-settings“ again and set the minutes to „:45“ with the dial **21**.
3. Press button **19** „Microwave“ five times, to set 400 watts power.
4. Set the 10 minutes cooking time using the dial **21**.
5. Press button **22** „Start/quick start“, to start the stored process.

Auto menu


For foods to be prepared in auto menu mode, it is not necessary to enter the cooking time or power setting. It is quite sufficient to enter which type of food is to be cooked/boiled, and its weight.

To do this, press the button on which the food you wish to cook is pictured and named.

The weight of the item must then be set via the dial **21**.

Enter the weight of the food

The weight setting is important to determine the necessary cooking time.












After pressing the respective symbol, a weight appears on the LED display in grams „g“; for starters the number of portions and for beverages in „ml“. You can change the respective details via the dial **21**. As soon as the weight of the food appears, press button **22** „Start/quick start“. „Auto-Cook“ appears on the LED display .

i Note: For some foods such as beef, pork, poultry and cooked meats it is necessary to turn the food after approx. 2/3 of the cooking time. The acoustic signal sounds twice and „turn“ appears on the display, to remind you to turn the food.

1. Press button **18** „Cancel/Stop“, to interrupt the cooking process and turn the food.
2. To continue please close the door. Press button **22** Start/quick start. The microwave automatically resumes operation for the remaining time.

i Note: If you wish to carry on without turning, wait for the acoustic signal. The microwave automatically continues its program. We recommend that you turn the food. This ensures even cooking. However, during turning process, make sure that you are extremely careful as handling very hot foods in the microwave.

Your microwave oven can cook different types of food of following weights:

Type of food	Symbol	Weight	turn over after ...
Pizza		P1 150– 450 g P2 150– 450 g P3 700– 900 g	-
Pork		200– 1500 g	2/3 of the cooking time
Beef		200– 1500 g	2/3 of the cooking time
Poultry		400– 1400 g	2/3 of the cooking time
Fish		200– 1200 g	-
Vegetables/fruit		100– 1000 g	-
Sausage		100– 500 g	2/3 of the cooking time
Potatoes		100– 800 g	-
Beverages		200– 500 ml	-
Entrees		1– 2 portions	-
Auto warming		300– 700 g	-

i Note: The acoustic signal sounds twice to remind you to turn the food over.

Example 1:

Proceed as follows to cook 400 g vegetables or fruit:

1. Press button „Vegetables/fruit“ (in standby mode).
2. Using the dial **1** select „400 g“.
3. Press button **2** „Start/quick start“.

Example 2:

To heat 300 ml water, proceed as follows:

1. Press button „Beverages“ in standby mode.
2. Using the dial **1** to select „300 ml“.
3. Press button **2** „Start/quick start“.

Example 3:

Proceed as follows if you wish to heat a starter:

1. Press button „Enteres“ in standby mode.
2. Press button **2** „Start/quick start“.

Making pizza in the Crispy-Pan

Using the „Crispy-Pan“ you can make crisp pizzas in the microwave. To do this, use the button **12** „Pizza“. Press button **12** „Pizza“:

- once for frozen pizza, temperature approx. -18° /weight 150 g– 450 g („P-1“ appears on the LED display).
- twice for chilled pizzas, temperature approx. 5° /weight 150 g– 450 g („P-2“ appears on the LED display).
- three times for fresh pizzas, temperature approx. 20° /weight 700 g– 900 g („P-3“ appears on the LED display).

Example:

Proceed as follows if you wish to cook a pizza:


1. Press button **12** „Pizza“ once. The LED displays „P-1“.
(„P-2“ or „P-3“ if the button is pressed twice or three times respectively).

2. Turn the dial ④ to set the weight of the pizza.
3. Place the pizza in the Crispy-Pan ⑩ and position the Crispy-Pan on the metal rack ⑨ in the middle of the turntable ② in the microwave.
4. Press button ⑫ „Start/quick start“, to start the grilling process. The LED displays the time.

Grill function

The grilling function can be used for thin slices of meat, steaks, meatballs, sausage or pieces of chicken. It is also suitable for toasted sandwiches, gratins and for the baking of crispy rolls.

When grilling, always use the metal rack ⑨. This way you will achieve optimal grilling results.



1. Press button ⑩ „Grill/Combi“ once to activate the grill function.
The red symbol for the grilling function  and G-1 appears on the LED display.
2. Set the desired cooking time using the dial ④. The maximum possible cooking time is 95 minutes.
3. To start the grilling function press button ⑫ „Start/quick start“.

Grill/Combi cooking procedure

The function combines the grilling function with normal microwave operation. In combined mode, the microwave automatically cooks for a certain amount of time and grills for the remaining time. You can notice a quiet clicking noise when the oven is changing between modes.



Grill/Combi 1

In Grill/Combi 1 the microwave power is 36% and the grilling power is 64% of the cooking time. This is suitable e.g. for fish, potatoes or gratins.

1. Press button ⑩ „Grill/Combi“ twice to activate the grill/combi function 1. In the LED display the red symbol for microwave operation  appears as well as grilling function  and C-1.
2. Set the desired cooking time using the dial ④. The maximum possible cooking time is 95 minutes.
3. To start please press button ⑫ „Start/quick start“.

Grill/Combi 2

In Grill/Combi 2 the microwave power is 55% and the grilling power is 45% of the cooking time. This is suitable e.g. for puddings, omelettes or poultry dishes.



1. Press button ⑩ „Grill/Combi“ three times to activate the grill/combi function 2. In the LED display the red symbol for microwave operation  appears as well as grilling function  and C-2.
2. Set the desired cooking time using the dial ④. The maximum possible cooking time is 95 minutes.
3. To start please press button ⑫ „Start/quick start“.

Defrosting by weight

With this function you can defrost meat, poultry and fish without any problems. The defrosting time and the power level are calculated and set automatically once you have entered the weight.

1. Press button ⑪ „Weight defrost“:
 - once to defrost meat („dEF1“ appears in the LED display),
 - twice to defrost poultry („dEF2“ appears in the LED display),
 - three times to defrost fish („dEF3“ appears in the LED display),
 - four times to defrost pizza („dEF4“ appears in the LED display),

- five times to defrost vegetables („dEF5“ appears in the LED display),
- six times to defrost cooked meats („dEF6“ appears in the LED display).

The red symbols for microwave operation  and defrosting  also appear on the LED display.

- Using the dial **21** to enter the weight of the food to be defrosted in grams (the LED display shows **9**). You can set the following weight ranges for the various foods:

Meat: 100 to 2300 g


 
Poultry: 100 to 4000 g

Fish: 100 to 1000 g

Pizza: 150 to 900 g

Vegetables: 100 to 600 g

Sausage: 100 to 500 g


 

 
- To start the defrosting process by weight, please press button **22** „Start/ quick start“. In the LED display the symbols for microwave operation  and defrosting flash . The calculated time counts backwards.

i Note: With some foods, such as meat, poultry, fish, vegetables and sausage, it is necessary to turn the food after a while. The acoustic signal sounds twice and „turn“ appears on the display, to remind you to turn the food.

- Press „Cancel/Stop“ button **18** then open the door and turn the food.
- Close the door and press button **22** „Start/quick start“. The defrosting process is continued.

i Note: If you wish to carry on without turning, wait for a while after the acoustic signal. The microwave automatically continues its program. We recommend that you turn the food. This ensures even defrosting.

Defrosting by time

- Press button **20** „Defrosting“. The red symbols for microwave operation  and defrosting  also appear on the LED display.
- Turn the dial **21** to set the defrosting time: The maximum possible defrosting time is 95 minutes.
- Press button **22** „Start/quick start“, to start the defrosting process. In the LED display the symbols of microwave operation  and defrosting flash . The calculated time counts backwards

Query functions

Query the time during operation


During the cooking process, press button **23** „Clock“. The time appears on the LED display for 2–3 seconds.

Query the power level operation


During the cooking process, press button **19** „Micro-wave“. The activated power level appears on the display for 2–3 seconds.

Child protection system

Activate this setting to prevent accidental activation by children and other persons not familiar with the operation of the appliance.

The symbol for the child protection system  appears on the LED display, and the appliance cannot be put into operation as long as this function is active.

Setting the child protection system

Keep button **18** „Delete/Stop“ for 3 seconds. At first an acoustic signal sounds, then the symbol for the child protection system  appears on the LED display.


Deactivating the child protection system

Keep button **18** „Delete/Stop“ pressed again for 3 seconds, until an acoustic signal sounds and the symbol for the child protection system  goes out.

Power-saving function

You can activate the power-saving function if you do not wish to use the microwave.

Activating the power-saving function

In standby mode, press button  „clock“ for three seconds. The LED display goes out and the power-saving function is activated.

Deactivating the power-saving function

As long as any button is pressed, the microwave is in standby mode and the clock is displayed.

i Note: *The clock continues to run despite the power-saving function.*

Magnetron control protection function

If the microwave function has been in operation for 30 minutes or longer at a power level of 800 W, the power level of the microwave is automatically reduced to 700 W. This takes place when the memory function is activated and also in another status.

Acoustic signal function

After completion of the cooking process a long acoustic signal sounds five times.

i Note:

- *If you have pressed a button and activated a valid function, a long acoustic signal sounds. If, however, you have selected an invalid button/function, no acoustic signal sounds.*
- *If after setting cooking mode for 5 minutes you have not pressed the button „Start/quick start“, the appliance returns to stand-by mode (time is displayed).*

Cleaning and Care

Before cleaning, switch the microwave off and pull the power plug out of the wall socket.

- Always keep the interior of the microwave clean.
- If splash of food or spilt liquids stick to the walls of the microwave, wipe them off with a damp cloth.
- Use a mild detergent if the microwave is more heavily soiled.
- Avoid using cleaning sprays and other aggressive cleaning agents, as they can cause stains, stripes or a blurring of the door surface.
- Clean the external walls with a damp cloth.
- To avoid damage to the functional components in the interior of the microwave, do not let any water seep in through the ventilation slits.
- Regularly remove splashing or contamination. Clean the door, both sides of the window, door seals and adjacent components with a damp cloth. Do not use abrasive cleaning agents.
- If steam should collect on the outside of the appliance door, wipe it off with a soft cloth. This can happen if the microwave is operated in extremely humid conditions.
- Regularly clean the glass turntable. Rinse the plate in warm soapy water or in the dishwasher.
- Clean the turntable ring and the appliance door regularly to prevent excessive noise generation. Simply wipe the bottom of the microwave with a mild detergent. You can also wash the turntable ring in mild soapy water or in the dishwasher. Make sure after removing the turntable ring for cleaning, that you re-install it correctly.

- Regularly eliminate odours. Put a deep microwave bowl with a cup of water, juice and peel of a lemon into the microwave. Heat for 5 minutes. Wipe off thoroughly and rub dry with a cloth.
- Clean the Crispy-Pan with a damp cloth and mild detergent. Never attempt to clean it in a dish washer!
- If the replacement of the bulb in the microwave should be necessary, have it changed by a dealer or consult our service department.

Disposal



Do not dispose of the device in normal domestic waste.

Dispose of the device over a registered waste disposal firm or through your communal waste disposal facility.

Observe the currently valid regulations. In case of doubt, consult your waste disposal facility.



Dispose of the packaging materials in an environmentally responsible manner.

Warranty & Service

This appliance is guaranteed for 3 years from the date of purchase. It has been carefully produced and meticulously checked before delivery. Please keep your receipt as proof of purchase. Contact your service centre by telephone in case of questions pertaining to the warranty.

Your goods can be transmitted free of cost only in this manner.

The warranty covers only material or manufacturing faults, not normal wear or damage to fragile parts such as switches or rechargeable batteries.

The appliance is intended solely for private, not commercial, use. If this product has been subjected to improper or inappropriate handling, abuse, or interventions not carried out by one of our authorised sales and service outlets, the warranty will be considered void. This warranty does not affect your statutory rights.

DES Ltd

Units 14-15
 Bilston Industrial Estate
 Oxford Street
 Bilston
 WV14 7EG
 Tel.: 0870 787 6177
 Fax: 0870 787 6168
 e-mail: support.uk@kompernass.com

Kompernass Service Ireland

c/o Irish Connection
 41 Harbour view
 Howth Co. Dublin
 Tel: 087-99 62 077
 Fax: 18398056
 e-mail: support.ie@kompernass.com

Importer

KOMPERNASS GMBH
 BURGSTRASSE 21
 D-44867 BOCHUM

www.kompernass.com

Tips

Freezing and defrosting – the easy way ...

The microwave is the ideal appliance for even and quick defrosting of deep-frozen goods. The selection of power, defrosting and standing times depend on the nature and amount of food.

Microwaves always penetrate the food from the outside to the inside. Therefore particularly large items cannot be defrosted right to the middle, otherwise the outer layers may begin to cook.

Correct defrosting begins with the freezing process. Consider what you are doing and freeze small, flat portions suitable for your household. Consider also the size of the various bowls or plates on which you wish to defrost the deep-frozen goods later in the microwave.

In the following defrosting chart, several foods are listed. You will find a so-called „standing time“ as well as details regarding time and amount. This serves as a temperature compensation time, in which the remaining heat from the defrosted layers is transferred to the still frozen layers in the middle. During this standing time, leave the deep-frozen goods in the switched off microwave or outside the appliance.

There may be deviations in the stated values. These are caused by the different factors of the foods.

Use the integrated defrosting functions. See also the chapters „Defrosting by weight“ and „Defrosting by time“.

Type of food	Rolls
Weight/quantity	50 g/2 pc
Defrosting time	approx. 1 min
Standing time	--
Notes/tips	--

Type of food	Bread
Weight/quantity	500 g
Defrosting time	8–10 mins
Standing time	10–20 mins
Notes/tips	--

Type of food	Layer cake
Weight/quantity	400–800 g
Defrosting time	8–12 mins
Standing time	90–120 mins
Notes/tips	only slightly defrost the fancy cake

Type of food	Butter
Weight/quantity	250 g
Defrosting time	approx. 1 min
Standing time	20– 30 mins
Notes/tips	remove the packaging and put the butter on a plate

Type of food	Cheese (piece)
Weight/quantity	500 g
Defrosting time	5– 6 mins
Standing time	60– 90 mins
Notes/tips	turn the item once after half of the time

Type of food	Cold meats
Weight/quantity	200 g
Defrosting time	approx. 3 mins
Standing time	10– 15 mins
Notes/tips	turn the cold meat after half the time, carefully cut slices with the knife before standing time begins

Type of food	Strawberries
Weight/quantity	250 g
Defrosting time	approx. 8 mins
Standing time	5– 10 mins
Notes/tips	defrost the strawberries or other fruit in a dish with a lid. Stir carefully after half of the time

To defrost meat, poultry and fish please read the chapter „Defrosting by weight“.

Cooking – the easy way ...

- When cooking food, always use tableware with a lid suitable for microwave cookery (unless stated otherwise).
The cooking details refer to food at refrigerator temperature. Defrost food to be cooked first.

i Note: The defrosting time for deep-frozen vegetables (-18 °C, approx. 100– 1000 g) can vary between 5 and 15 minutes. Follow the instructions on the packet if in doubt. Prepare vegetables by washing and cleaning them before cooking.

Preparation instructions are important

- Please absolutely observe the various preparation instructions. While the addition of liquid is required (usually 1 – 2 tblsp. per 100 g vegetables) for some foods, no liquid is required e.g. for cucumber, spanish onions, mushrooms and spinach. Other foods must be stirred at least once during cooking.

Observe standing times

- The so-called „standing time“ is particularly important, as for defrosting. The temperature compensation and the resulting after-cooking should always be 5 – 10 minutes.
- During this standing time, leave the food in the switched off microwave or outside the appliance.
- After this standing time you can season vegetables or add a little butter if desired.
- When cooking food in bowls or deep-frozen convenience foods, pay attention to the preparation times for cooking in microwave ovens stated on the packaging.
- The details in the following chart are only intended as standard values.

Type of food	Boiled potatoes
Weight/quantity	250 g
Add liquid	3 Tbls water
Watts/power	600 Watt
cooking time in mins.	approx. 5 mins
Preparation information	evenly sized pieces if possible – directly after cooking drain off the water

Type of food	Noodles
Weight/quantity	125 g
Add liquid	600 ml water
Watts/power	500 Watt
cooking time in mins.	approx. 5 mins
Preparation information	at 800 W add noodles to boiling water approx. 7 min and cook without the lid

Type of food	Rice
Weight/quantity	100 g
Add liquid	300 ml water
Watts/power	600 Watt
cooking time in mins.	approx. 3 – 4 mins
Preparation information	The expansion time depends on the type of rice. Brown rice takes longer.

Type of food	Cauliflower
Weight/quantity	400 g
Add liquid	4 Tbls water
Watts/power	600 Watt
cooking time in mins.	approx. 6–7 mins
Preparation information	Values also apply to broccoli

Type of food	Peas
Weight/quantity	300 g
Add liquid	3 Tbls water
Watts/power	600 Watt
cooking time in mins.	approx. 3– 4 mins
Preparation information	--

Type of food	Spinach
Weight/quantity	500 g
Add liquid	--
Watts/power	600 Watt
cooking time in mins.	approx. 6 mins
Preparation information	add a little cream to the spinach

Type of food	Mushrooms
Weight/quantity	400 g
Add liquid	--
Watts/power	600 Watt
cooking time in mins.	approx. 5–6 mins
Preparation information	before cooking add a little butter

Type of food	Fish filet
Weight/quantity	400– 600 g
Add liquid	see notes
Watts/power	500 Watt
cooking time in mins.	approx. 8– 12 mins
Preparation information	for every 100 g of fish, add 1 tblsp. water, lemon, stock or wine

Grilling – the easy way ...

- For all grilling processes, please use the metal rack **9**. Additionally place a large heat-resistant plate underneath the metal rack **9**. This collects gravy/fat, juices and contamination by food splashes.
- The grill function is e. g. suitable for thin slices of meat, fish, meatballs, shish-kebab, sausage or pieces of chicken. Toast or rolls can be toasted with the grill (read also „Tips“) and gratinated toast (e. g. Hawaii-Toast) can be made.
- You can directly select the grill function or select several foods via the quick-selection buttons with the menu images.
- For some foods and/or the way of their preparation, a combined cooking and grilling process is advisable. For both possible functions, cooking and grilling times are automatically carried out in the corresponding length. Please also read chapter „Grill/Combi cooking process“.
- Prepare the food you wish to grill just as you would usually do. For example, remove the scales from fish first, then gut them. Rub chicken with seasoning and always cook chicken legs skin side first.
- Turn the food after the first stated cooking time. The stated value 1 corresponds with the time for the first side, value 2 for the second, following side.

i **Note:** Make sure to enter the times for the first and second side separately.

There may be deviations in the following stated values. They result from various factors (e. g. temperature, shape) of the food.

Type of food	2 turkey steaks 400 g
Function	Grill
Time (1nd side) in mins.	approx. 12 mins
Function	Grill
Time (2nd side) in mins.	approx. 10 mins

Type of food	2 chicken legs 500 g
Function	Grill
Time (1st side) in mins.	approx. 8 mins
Function	Grill
Time (2nd side) in mins.	approx. 7 mins

Type of food	2 shish kebab 400 g
Function	Grill
Time (1nd side) in mins.	approx. 12 mins
Function	Grill
Time (2nd side) in mins.	approx. 12 mins

Type of food	2 trouts 400 g
Function	Combi 2
Time (1st side) in mins.	approx. 8 mins
Function	Grill
Time (2nd side) in mins.	approx. 7 mins

Type of food	4 Meatballs 600 g
Function	Combi 2
Time (1nd side) in mins.	approx. 12 mins
Function	Grill
Time (2nd side) in mins.	approx. 8 mins

Type of food	2 pork chops 600 g
Function	Grill
Time (1nd side) in mins.	approx. 15 mins
Function	Grill
Time (2nd side) in mins.	approx. 13 mins

Suitable tableware

For defrosting, cooking etc., always use dishes or bowls suitable for microwave cookery. In most cases glass dishes are suitable. Procure microwave tableware in various sizes with lids.

Baking crispy rolls

By means of the grill function of your microwave, you can bake crisp rolls. Before baking, moisten the rolls with a little water. Bake the rolls for approx. 2 minutes, depending on the amount and type. So that the rolls have that „fresh-from-the-oven“ taste, even inside, we recommend that you cut the rolls after the first period and re-bake for one minute, the turned bake for a further minute.

Recipe suggestions

Pizza

Ingredients:

300 g ready-made dough
200 g strained tomato pulp
150 g Topping (as desired, e. g.
cabon, salami, mushrooms)
50 g grated cheese
Spices: basil, oregano, thyme, salt, pepper

Preparation:

Prepare the dough as per instructions on the packing. Roll out the dough to the size of the Crispy-Pan. Lightly grease the Crispy-Pan and lay the pizza dough into it. Pierce a few holes in the dough. Spread the tomatoes along with the seasonings over the pizza base. Place the desired layer over it. Now cover the pizza with cheese. Place the pizza on the metal stand in the middle of the turntable and bake it with the setting „fresh pizza“ (P-3).

Onion soup with gratinated cheese topping

Ingredients for 4 portions:

300 g onions
30 g butter, salt, white pepper,
500 ml instant meat broth
125 ml white wine, dry
2 slices of toasted bread
2 slices of young Gouda cheese

Preparation:

Peel the onions and cut them into rings. Put them into a microwave dish with the butter and pepper, add the meat broth and cook with lid at 800 watts for approx. 12–15 minutes. Then add white wine and season to taste. Now cut the toated bread into small cubes.

Fill the onion soup into 4 soup dishes and add the bread cubes. Place 1/2 slice of cheese on each soup dish.

Place the four soup dishes on the turntable and gratinate via the grill function for approx. 10 minutes.

Lentil Hotpot

Ingredients:

200 g dried lentils
50 g smoked fat bacon
125 g pork belly
1 bunch vegetable mix for soups
500 ml water
1 bay leaf
250 g potatoes
2 smoked boiling sausages
Spices: salt, pepper, vinegar, sugar

Preparation:

Soak the lentils in plenty of water over night.
Clean and wash the soup vegetables and cut them into small pieces. Cube the meat and the bacon. Put the drained lentils into a microwave dish together with 500 ml water and meat, bacon, soup vegetables and the bay leaf.
Cook at 600 watts for 10–12 minutes with the lid on. Peel, wash and cube the potatoes and cut the boiling sausage into slices. Add the pieces of potato and slices of sausage to the hotpot and mix well. Cook at 500 watts for approx. 18 minutes and then add seasoning to taste.

Cauliflower with gratinated cheese topping

Ingredients:

500 g cleaned cauliflower
250 ml water
Salt
1 tbsp. starch
2 egg whites
2 egg yolks
1 carton of cream (200 ml)
2 tbsp. chives,
1 touch of cayenne pepper
150 g raw bacon (lean)
50 g grated Emmentaler cheese

Preparation:

Split the cauliflower into small pieces and put it into a microwave dish with 250 ml water and salt. Cook with the lid on at full power 800 Watt for approx. 5 minutes.
Then drain off the vegetable water and save it.
Now stir the cream into the starch and add it to the vegetable water. Cook at full power 800 watts for approx. 2 to 3 minutes, stirring several times.
Add the egg yolk, chives and cayenne pepper, beat the egg white and fold it gently into the mixture
Place the cauliflower and the bacon (in strips) into a flat casserole, then pour over the sauce and cover with grated cheese. Cook and gratinate using the Grill/Combi function „C-1“ at 500 watts for 18–22 minutes.

Maccaroni and minced meat casserole with broccoli

Ingredients:

150 g macaroni, 500 ml water
1 tsp. salt, 1 onion, 1 clove of garlic
20 g butter, 300 g mixed mincemeat
(half pork, 1/2 beef)
1 packet of tomato purée with herbs
(approx. 350 g)
400 g broccoli, 4 tblsp. water
1 carton sour cream (200 g)
150 g sliced Gouda cheese semi-mature
Spices: salt, pepper

Preparation:

Fill 500 ml water and 1 tsp. salt into a microwave dish with lid and boil at full power 800 watts in approx. 10 minutes. Then add macaroni and cook for 3–5 minutes at 600 watts and then at 300 watts for another 3–5 minutes. Then drain off in a colander. Now braise the onion and the clove of garlic with the butter in a microwave dish at 600 watts for approx. 4–5 minutes. Then add the mincemeat and the tomato purée – cook again for 8–10 minutes at 600 watts. Stir in 3/4 carton of sour cream and season with salt and pepper. Wash and clean the broccoli and place it into a microwave dish with 4 tblsp. water. Pre-cook with lid at 800 watts for approx. 5 minutes, then allow to drain off. Put the macaroni, vegetables and mincemeat in sauce into a casserole and mix. Distribute the remaining 1/4 carton of sour cream over the top and cover with cheese slices. Cook and gratinate with the Grill/Combi function „C-2“ at 500 watts for approx. 16–18 minutes.

Filet of pork with mushrooms in spicy paprika sauce

Ingredients:

4 filets of pork, each approx. 150 g
350 g white mushrooms
150 g cubed bacon
2 cartons of cream (400 ml)
2 tblsp. tomato purée
Spices: salt, pepper, paprika

Preparation:

Season the filets of pork and place them in a flat casserole. Clean and halve the mushrooms and put them into the casserole with the filets of pork. Mix the cream, tomato purée and paprika in a microwave dish and boil at 600 watt for approx. 5–6 minutes.
Then pour the sauce over the filets.
Cook and gratinate using the Grill/Combi function „C-2“ at 300 watts for approx. 20–22 minutes.

Potato gratin

Ingredients:

1000 g potatoes
Fat (to grease the casserole)
2 tblsp. breadcrumbs
1 carton of cream (200 ml)
50 g grated Emmentaler cheese
Butter (flakes)
Spices: salt, pepper

Preparation:

After peeling and washing, cut the potatoes into thin slices and season them. Grease a casserole, layer the potatoes and pour the cream over them. Finally sprinkle with the cheese and breadcrumbs and distribute the butter flakes over the top. Gratinates with the Grill/Combifunction „C-1“ at 500 watts for approx. 20 minutes.

Chicken fricassee

Ingredients:

1 chicken (approx. 1000 g)
300 g mushrooms
500 g asparagus
250 ml instant meat broth
100 ml cream
2 packets white sauce (instant)
1 tblsp. white wine
Spices: salt, pepper, nutmeg

Preparation:

Sprinkle salt on the chicken and put it into a microwave dish.
Cook with lid at 800 watts for approx. 16–18 minutes
Clean and halve the mushrooms, peel the asparagus and cut into 2 to 3 cm long pieces. Remove the skin and bones from the cooked chicken and cut the meat into bite-size pieces.
Put the meat broth, chicken, asparagus and mushrooms into a microwave dish. Heat with lid at 600 watts for approx. 13–15 minutes, stirring occasionally. Now stir the cream and the powdered sauce in and boil at 600 watts for a further 5–6 minutes. Season to taste with white wine, salt, pepper and nutmeg.

Green chicken casserole

Ingredients:

400 g chicken breast fillet
1 small courgette
1 small green paprika
125 ml instant chicken broth
200 g leeks
150 g turnip cabbage
150 g celery
2 tblsp. crème fraîche
50 g cream cheese with herbs

Preparation:

Clean and wash the vegetables. Cut the leeks into rings and the turnip cabbage and celery into thin slices. Braise in a microwave dish with lid at 600 watts for approx. 6–8 minutes. Cut the chicken breast into small pieces, the courgette into half slices and the paprika into cubes, and put them into the dish together with the hot instant chicken broth and the other ingredients. Cook with lid at 600 watts for approx. 12–15 minutes, stirring occasionally. Then stir in the crème fraîche and the cream cheese with herbs.

Bread or bacon dumplings

Ingredients for 4 dumplings:

4 wheat rolls
1/2 tsp. salt
150 ml milk
40 g butter
3 eggs
2–3 tblsp. breadcrumbs
2–3 tblsp. chopped parsley
30 g cubed bacon (for bacon dumplings)

Preparation:

Cut the rolls small and sprinkle with salt. Heat the milk in a microwave dish (at 800 watts for approx. 2–4 minutes), then pour it over the rolls and leave to stand for approx. 15 minutes. Beat the butter and the eggs until creamy, then add the soaked rolls together with the breadcrumbs and the parsley and knead to a firm dough (Note: for bacon dumplings also knead in the cubed bacon). Moisten your hands and shape 4 evenly sized dumplings, immerse them in cold water for a moment. Cook at 500 watts for approx. 6–8 minutes, then they are ready to be served.

White sauce

Ingredients:

40 g flour

30 g butter

250 ml instant broth

250 ml milk

Spices: salt, white pepper, sugar

Preparation:

Put flour, butter, hot broth and milk into a microwave dish, mix well and cook at full power, 800 watts for approx. 4–5 minutes, stirring well occasionally.

Then cook further for another 4-5 minutes at just 300 watts.

Mix well and add the seasonings to taste.

Vanilla sauce

Ingredients:

250 ml milk

Pulp of 1/2 a vanilla bean

1 carton of cream (250 ml)

2 tbsps. starch

3 tbsps. sugar

1 egg yolk

Preparation:

Mix the milk, vanilla paste, cream, corn flour and sugar in a microwave-safe bowl. Cook at 800 watts for approx. 4–5 minutes, stirring once.

Stir the cooked sauce well and bind it with egg yolk.

Rice pudding

Ingredients:

250 g rice for milk puddings

1 l. milk

1 tsp. butter

40 g sugar, cinnamon and sugar (for sprinkling)
or stewed fruit

Seasoning: salt

Preparation:

Put rice, milk, a pinch of salt, butter and sugar into a large microwave basin. Boil with lid at full power, 800 watts for approx. 10–12 minutes, then stir and allow to swell at only 100 watts for approx. 20–22 minutes. Then leave to stand for a few minutes, stir and sprinkle with sugar and cinnamon or stewed fruit.

Red fruit pudding (with strawberries and raspberries)

Ingredients:

250 g deep-frozen strawberries

250 g deep-frozen raspberries

1 packet of vanilla sugar

2 tbsp. sugar

2 tbsp. starch

Preparation:

First stir the starch into 3 tbsp. water. Then put the fruit into a microwave bowl with lid and defrost and heat at full power, 800 watts, in approx. 6–8 minutes.

Lightly squash the fruits and add vanilla sugar, sugar and starch. Stir well and cook with lid at 600 watts for approx. 6–8 minutes.

Finally pour the pudding into dessert bowls and allow to cool.

Serve the red fruit pudding with the described vanilla sauce...

Enjoy your meal!

Recipes provided without guarantee. All ingredients and preparation information are guiding values.

Add your own personal experience to these recipes. We hope you enjoy the recipes and wish you „bon appetit“.

Index

- 12-hour-mode 9
- 24-hour-mode 9
- Acoustic signal function 16
- Auto menu 12
- Beef 12, 13, 26
- Beverages 7, 12, 13
- Boiled potatoes 20
- Bread 18, 24, 28
- Butter 19, 20, 21, 24, 26, 27, 28, 29
- Buttons/controls on the control panel 3
- Cancel/stop 3, 10
- Cauliflower 21, 25
- Cheese 19, 24, 25, 26, 27, 28
- Chicken legs 22
- Child protection system 15
- Cleaning and care 16
- Clock 3, 9, 10, 11, 12, 16
- Cold meats 19
- Cooking process 4, 10, 11, 12, 15, 16, 22
- Cooking time 5, 8, 10, 11, 12, 13, 14, 20, 21, 22
- Cooking utensils 7
- Cookware 8
- Crispy-Pan 3, 4, 8, 13, 14, 17, 24
- Deep-frozen goods 18
- Defrosting by time 15
- Defrosting by weight 14
- Description of Components 3
- Dial 3, 9, 10, 11, 12, 13, 14, 15
- Disposal 17
- Fish 13, 14, 15, 19, 21, 22
- Fish fillet 21
- Glass Turntable 3, 4, 16
- Grill function 3, 12, 14, 22, 23, 24
- Grill/Combi 3, 14, 25, 26
- Kitchen timer 3, 10
- Layer cake 18
- Magnetron control protection function 16
- Meatballs 8, 14, 22, 23
- Memory 3, 11, 16
- Memory function 11, 16
- Metal stand 4, 24
- Microwave power 10, 11, 14
- Microwave radiation 4, 5, 7
- Mushrooms 20, 21, 24, 26, 27
- Noodles 20
- Peas 21
- Pizza 3, 4, 13, 14, 15, 24
- Pork 12, 13, 23, 25, 26
- Pork chops 23
- Potatoes 5, 7, 13, 14, 20, 25, 27
- Poultry 12, 13, 14, 15, 19
- Power 4, 5, 6, 9, 10, 11, 12, 14, 15, 16, 18, 20, 21, 25, 26, 29, 30
- Power-saving function 16
- Pre-heat 3
- Pre-settings 3, 11
- Quick start 3, 4, 10, 11, 12, 13, 14, 15, 16
- Recipes 30
- Rice 21, 29
- Rolls 14, 18, 22, 23, 28
- Shish-kebab 22
- Spinach 20, 21
- Standing times 18, 20
- Start/quick start 3, 4, 12
- Starters 12
- Strawberries 19, 30
- Time defrost 3
- Trouts 23
- Turnable ring 3, 4, 16
- Vegetables/fruit 13
- Warranty & Service 17
- Weight defrost 3
- Weight of the food 12, 15

