



myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for MAYTAG HANDY CHILLER MSA240HC. You'll find the answers to all your questions on the MAYTAG HANDY CHILLER MSA240HC in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual MAYTAG HANDY CHILLER MSA240HC
User guide MAYTAG HANDY CHILLER MSA240HC
Operating instructions MAYTAG HANDY CHILLER MSA240HC
Instructions for use MAYTAG HANDY CHILLER MSA240HC
Instruction manual MAYTAG HANDY CHILLER MSA240HC



MICROWAVE HOOD COMBINATION USER INSTRUCTIONS

THANK YOU for purchasing this high-quality product. If you should experience a problem not covered in TROUBLESHOOTING, please visit our website at www.maytag.com for additional information. If you still need assistance, call us at 1-800-688-9900. You will need your model and serial number located on the front facing of the microwave oven opening, behind the door.

Para obtener acceso a "Instrucciones para el usuario de la combinación microondas campana" en español, o para obtener información adicional acerca de su producto, visite www.maytag.com

Tenga listo su número de modelo completo. Puede encontrar su número de modelo y de serie en la etiqueta ubicada en la parte frontal de la abertura del horno de microondas, detrás de la puerta.

Microwave Hood Combination Safety

Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.
This symbol alerts you to potential hazards that can kill or hurt you and others.
All safety messages will follow the safety alert symbol and either the word "DANGER" or "WARNING."
These words mean:

⚠ DANGER You can be killed or seriously injured if you don't immediately follow instructions.

⚠ WARNING You can be killed or seriously injured if you don't follow instructions.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances basic safety precautions should be followed, including the following:

WARNING: To reduce the risk of burns, electric shock, fire, injury to persons, or exposure to excessive microwave energy:

- Read all instructions before using the microwave oven.
- Read and follow the specific "PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY" found in this section.
- The microwave oven must be grounded. Connect only to properly grounded outlet. See "GROUNDING INSTRUCTIONS" found in this section and in the provided Installation Instructions.

- Install or locate the microwave oven only in accordance with the provided Installation Instructions.
- Some products such as whole eggs in the shell and sealed containers – for example, closed glass jars – are able to explode and should not be heated in the microwave oven.

SAVE THESE INSTRUCTIONS

W10274323A



[Your user manual](#)
[MAYTAG HANDY CHILLER MSA240HC](#)

Manual abstract:

M. and P.M. Touch CLOCK, enter time, then touch CLOCK or the Start control. Light Timer Set the cooktop light to turn on and off at certain times. Touch Options or Setup control to reach the "Light Timer" submenu, and set the Light On Time and Light Off Time in hours and minutes with A.M. or P.M. Timer (on some models) Timer can be used independently during any cooking program.

Touch the Timer control, enter time, then touch the Timer control or the Start control. Filter Reset Reset the filter status after replacing and/or cleaning the filters. Touch Options or Setup control to reach the "Filter Reset" submenu and activate reset. See "Microwave Oven Care" section. Control Lock Activate to avoid unintended start.

Touch and hold the Cancel control for about 3 seconds until 2 tones sound and padlock icon appears in the display. Repeat to unlock control. Tones Programming tones and signals. Programming tones may be turned off, or all tones (including end-of-function signals) may be turned off. Touch the Options or Setup control to reach the "Sound On/Off" submenu, and turn tones off or on.

Options or Setup Vent Timer, Light Timer, Filter Reset, Sound On/Off, Scroll Speed, Demo Mode and Language (English or French) may be changed. Scroll Speed Scroll speed of the text may be adjusted. Touch the Options or Setup control to reach the "Scroll Speed" submenu, and select the scroll speed. Touch the Start control to set speed. Vent Fan Various speeds, ranging from high to low, and off. Comes on automatically as cooling fan during any cook function. Vent Timer (on some models): Set vent fan to run for exactly 30 minutes, or to run for only 30 minutes more (off after 30 minutes). The vent fan may be turned off at any time using the Vent Fan control. Touch the Options or Setup control to reach the "Vent Fan" submenu, and select the setting. Demo Mode Activate to practice using the control without actually turning on the magnetron or any heating element (on some models).

Touch the Options or Setup control to reach the "Demo Mode" submenu, and activate or deactivate Demo Mode. Features Cooking Rack Use the rectangular cooking rack only for 2-level cooking. To avoid damage to the microwave oven, always remove rack after 2-level cooking. To avoid damage to the microwave oven due to soil buildup, clean rack supports often. Glide Tray The glide tray (rectangular "turntable") glides from side to side, and may be turned off (on some models) for manual cooking only. This is helpful when cooking with plates that are bigger than the glide tray, or when cooking with plates that are side by side. Glide tray cannot be turned off during preset or sensor (on some models) functions. 3 Cookware and Dinnerware Microwave-Safe Do Not Use Browning dish (Follow manufacturer recommendations.) Metal cookware and bakeware Ceramic glass, glass Straw or wicker China, earthenware (Follow manufacturer recommendations.) Gold, silver or pewter Melamine (Follow manufacturer recommendations.)

) Non-approved meat thermometers, skewers Paper towels, paper plates, napkins (Use non-recycled paper.) Twist ties Plastic wraps, bags, covers, dinnerware, containers (Follow Foil liners, such as sandwich wrappers manufacturer recommendations.) Staples Pottery and clay (Follow manufacturer recommendations.) Objects with gold or silver trim or with metallic glaze Silicone bakeware (Follow manufacturer recommendations.) Wax paper To Test Cookware/Dinnerware: Place dish in the microwave oven with 1 cup (250 mL) of water beside it.

Program 1 minute of cook time at 100%. If dish becomes hot and the water stays cool, do not use the dish in the microwave oven. Microwave Oven Use For list of preset programs, see the Quick Reference Guide provided with your model. Manual Cooking/Stage Cooking Touch COOK TIME, touch number pads to enter time, touch COOK POWER (if not 100%), touch number pads to enter power level (10-90), then touch the Start control. If programming additional stages, enter the cook time and cook power of each before touching the Start control.

Add More Time At the end of any cycle, "ADD MORE TIME 0:00" appears in the display. Enter the additional time, if desired, and start the microwave oven..



[Your user manual](#)
[MAYTAG HANDY CHILLER MSA240HC](#)