


CONTROL PANEL PARTS

For Models: MMV5201DW00, MMV5201DB00, MMV5201DS00
 (White) (Black) (Stainless)

MICROWAVE OVEN/HOOD
 2.0 Cu. Ft.

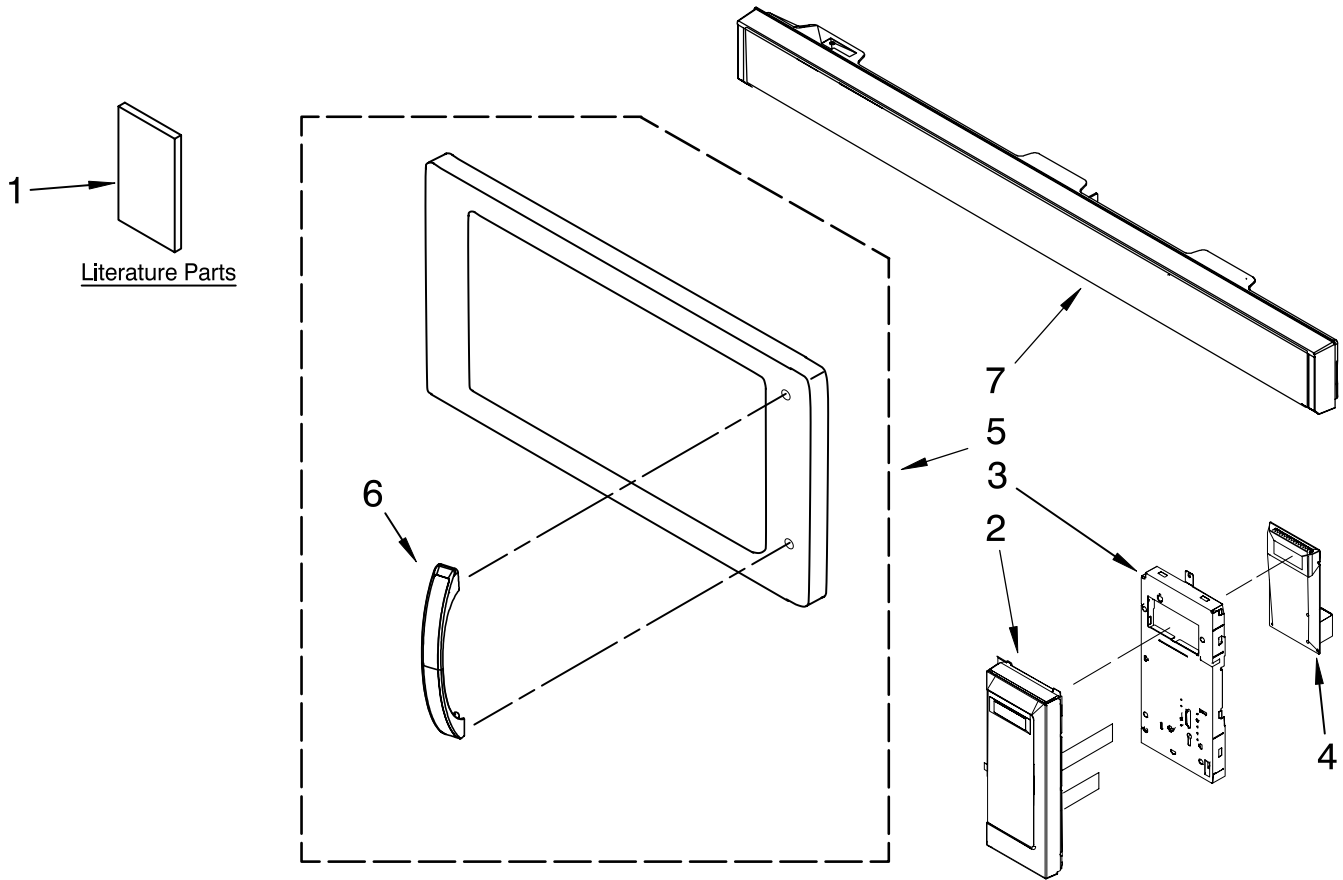

Illus. No.	Part No.	DESCRIPTION
1		Literature
	W10188236	U & C Guide
	W10188239	Tech Sheet, Slim
	W10188237	Label, Cook Guide
	W10188238	Install, Instruct
2		Panel Asy, Control Membrane, Lens and Bracket
	W10258246	Black
	W10258266	White
	W10258268	Stainless

Illus. No.	Part No.	DESCRIPTION
3	W10258165	Bracket, Control
4	W10182103	Microcomputer
5		Complete Door
	W10258192	Black
	W10258193	White
	W10258194	Stainless

Illus. No.	Part No.	DESCRIPTION
6		Handle, Door
	W10258181	Black
	W10258184	White
	W10258185	Stainless
7		Grille Assembly
	W10258215	Black
	W10258216	White
	W10258217	Stainless

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST


CABINET AND AIR FLOW PARTS

For Models: MMV5201DW00, MMV5201DB00, MMV5201DS00

(White)

(Black)

(Stainless)

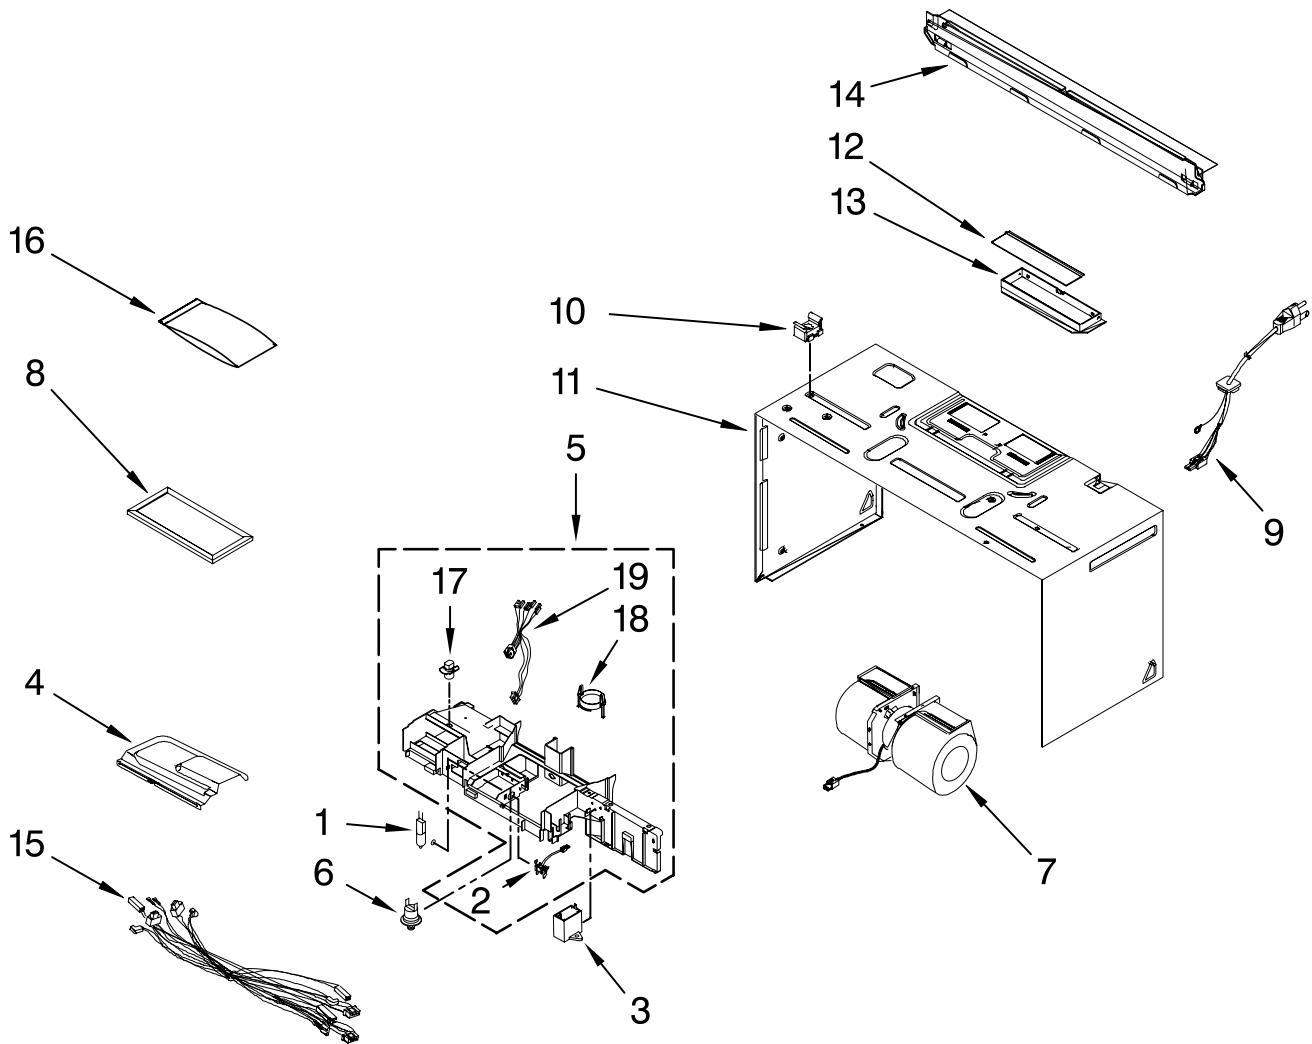

Illus. No.	Part No.	DESCRIPTION
1	4713-001165	Lamp
2	DE47-00032B	Holder, Lamp
3	DE59-50002A	Capacitor, Motor
4	W10250842	Cover, Lamp
5	DE97-00635B	Assy, Duct Upper
6	DE47-20059A	Thermostat
7	W10181452	Motor, Fan Assy
8	DE63-00367D	Filter, Charcoal
9	DE96-00218A	Cord, Power
10	DE92-90508A	Holder Nut, Assy

Illus. No.	Part No.	DESCRIPTION
11		Case, Outer
	W10187744	Black
	W10192096	White
12	W10197773	Plate, Damper
13	DE72-40022A	Damper, Assembly
14	DE70-00378A	Plate, Mounting
15	W10258269	Main Harness
16	DE92-90505E	Install, Hardware
17	DE32-60011A	Sensor, Gas

Illus. No.	Part No.	DESCRIPTION
18	DE61-00525A	Holder, Sensor
19	DE39-40678A	Harness, Sensor
Following Parts Not Illustrated		
	W10188741	Template, Wall
	W10188240	Template, Upper

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST


INTERIOR AND VENTILATION PARTS

For Models: MMV5201DW00, MMV5201DB00, MMV5201DS00

(White)

(Black)

(Stainless)

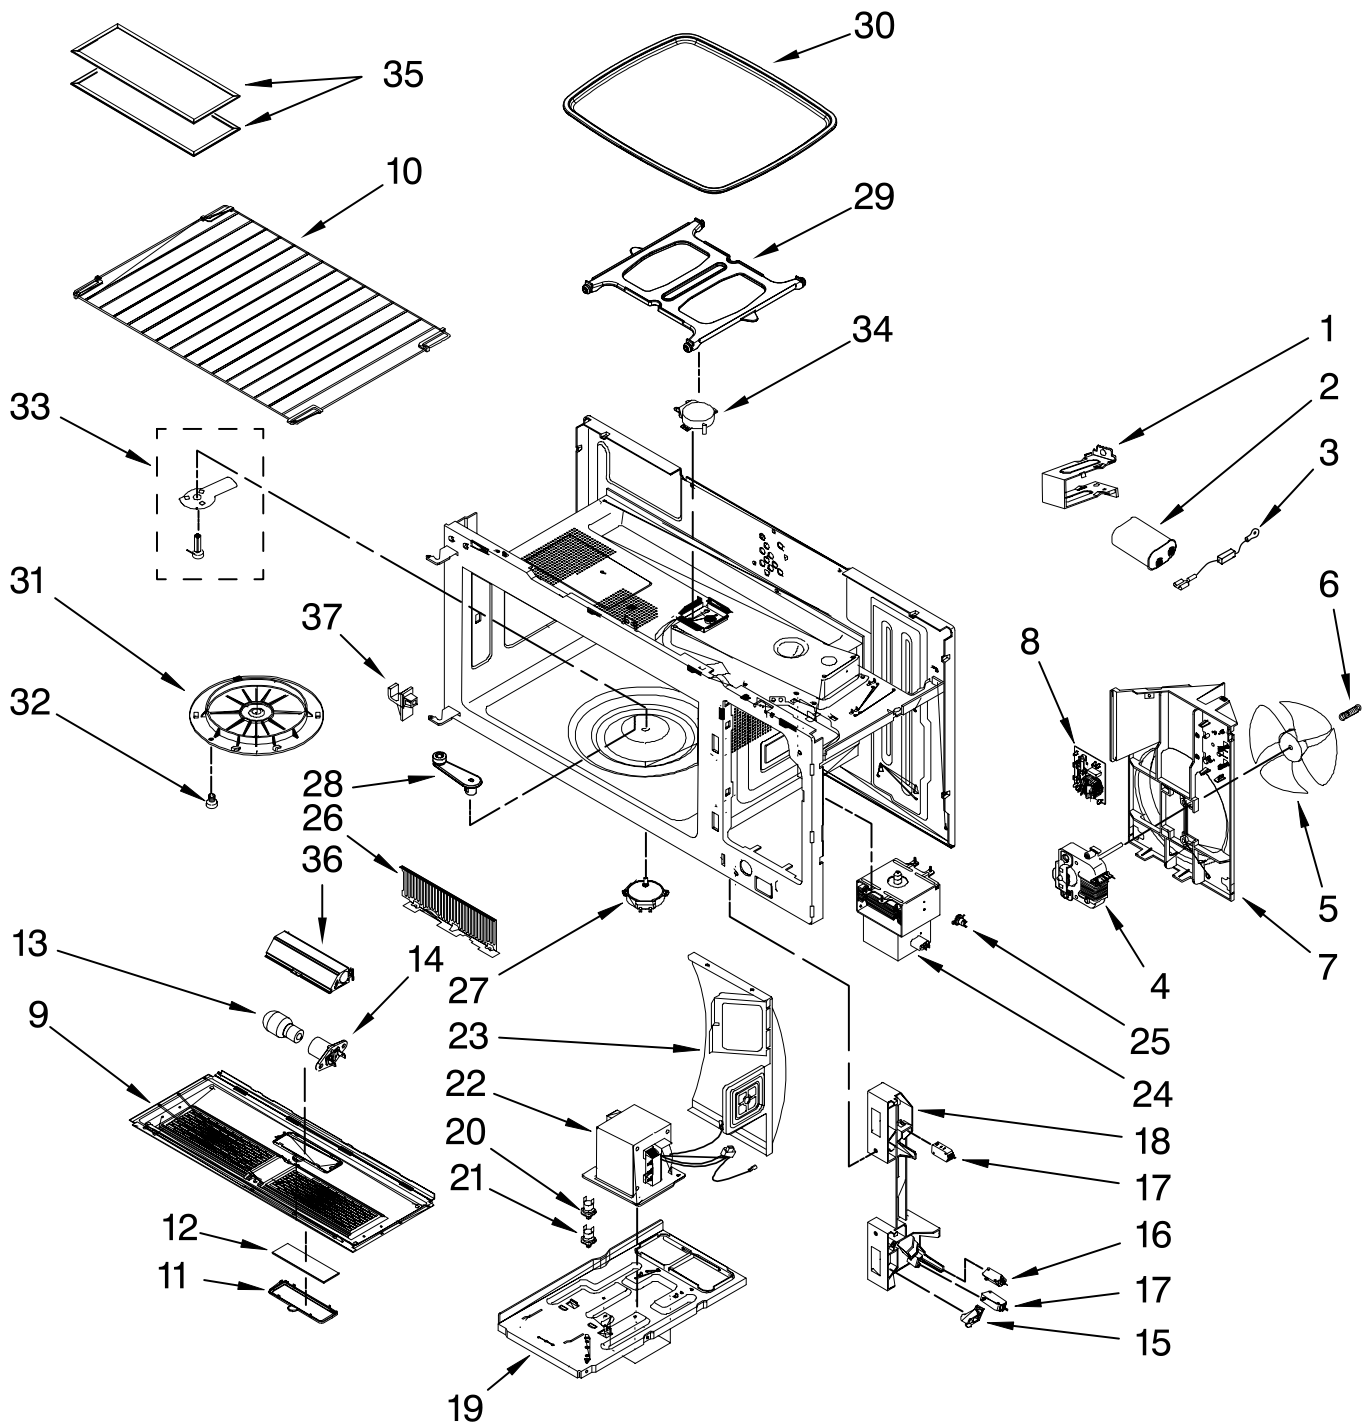

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

INTERIOR AND VENTILATION PARTS

For Models: MMV5201DW00, MMV5201DB00, MMV5201DS00

(White)

(Black)

(Stainless)

<u>Illus.</u>	<u>Part</u>	
<u>No.</u>	<u>No.</u>	<u>DESCRIPTION</u>
1	DE61-00115A	Bracket, Capacitor
2	2501-001016	Capacitor
3	DE91-70063D	Diode, H.V.
4	W10250841	Motor, Fan
5	DE31-90051A	Blade, Fan
6	W10260124	Spring, Blade
7	W10197780	Guide, Suction
8	W10182040	Filter, Noise
9		Plate, Bottom
	W10192477	Black
	W10192097	White
10	W10182049	Rack, Cooking
11		Holder, Glass
	DE63-00137B	Black
	DE63-00137C	White
12	DE64-00911A	Glass, Lamp
13	4713-001013	Lamp
14	DE47-00006A	Holder, Lamp
15	DE66-90106B	Lever, Switch
16	3405-001033	Switch, Micro
17	3405-001034	Switch, Micro
18	DE66-00168A	Latch Board
19	W10187747	Plate, Base
20	DE47-20059A	SW-Thermo
21	DE47-20034A	Thermostat
22	W10250839	Transformer, H.V.
23	W10197689	Duct, Magnetron
24	W10126786	Magnetron
25	DE47-20007A	Thermostat
26	W10197680	Cover, Front
27	DE31-10172A	Motor, Turntable
28	W10258244	Coupler
29	DE61-00855A	Guide, Tray
30	DE63-00383A	Tray, Cooking
31	DE71-60121A	Cover, Stirrer
32	DE66-20095B	Button, Lock
33	W10197709	Stirrer, Assembly
34	DE31-10173A	Motor, Drive
35	DE63-00196A	Filter, Air
36	DE61-00407C	Bracket, Lamp
37	DE61-00375A	Holder, Rack

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST