



myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for SHARP R-259. You'll find the answers to all your questions on the SHARP R-259 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SHARP R-259
User guide SHARP R-259
Operating instructions SHARP R-259
Instructions for use SHARP R-259
Instruction manual SHARP R-259

DK R-259 0/NL-028 85,3,29 0153 DK Page A (1,1)

SHARP

**OPERATION MANUAL
with COOKBOOK**



**R-259
MICROWAVE OVEN**

800W (IEC 60705)



[Your user manual](#)
[SHARP R-259](#)

Manual abstract:

15 - 17 COOKING ADVICE: Microwave Cooking Advice 18 - 19 Suitable Cookware .20 Defrosting Advice 21 Reheating Advice 22 COOKBOOK .23 - 35
AFTERCARE: Cleaning and Maintenance .36 Troubleshooting .37 To Replace the Mains Plug .38 Calling for Service .38 GUARANTEE .39
SPECIFICATIONS 40 1 UK R-259 O/M,-P28 05.3.24 4:15 PM Page 2 (1,1) OVEN AND ACCESSORIES 9 3 8 7 11 65 4 OVEN: 1.
Oven lamp 2. Control panel 1 3. Door opening handle 4. Waveguide cover (DO NOT REMOVE) 2 5. Oven cavity 6.
Coupling 7. Door latches 8. Door hinges 9. Door seals and sealing surfaces 10. Power cord 11.
Ventilation openings 12. Outer cabinet 12 10 13 14 ACCESSORIES: Check to make sure the following accessories are provided: 13. Turntable 14. Roller stay
· Place the roller stay in the coupling on the oven floor, then place the turntable on to the roller stay, ensuring it is located firmly. · To avoid turntable
damage, ensure dishes or containers are lifted clear of the turntable rim when removing them from the oven. NOTES: · The waveguide cover is fragile. Care
should be taken when cleaning inside the oven to ensure that it is not damaged. · Always operate the oven with the turntable and roller stay fitted correctly.
This promotes thorough, even cooking. A badly fitted turntable may rattle, may not rotate properly and could cause damage to the oven.

· The turntable rotates clockwise or anti-clockwise. The rotary direction may change each time you start the oven. This does not affect cooking performance. ·
When you order accessories, please quote both the PART NAME and MODEL NUMBER to your dealer or SHARP approved service facility. WARNING: The
door, outer cabinet, oven cavity, turntable and dishes will become very hot during operation. To prevent burns, always use thick oven gloves. 2 UK R-259
O/M,-P28 05.3.24 4:15 PM Page 3 (1,1) CONTROL PANEL 1. 2.
1 3. 4. 5. 2 6. 7.

8. 9. 3 11 DIGITAL DISPLAY TIME keys EXPRESS COOK keys EXPRESS DEFROST keys LESS/MORE TIME keys POWER LEVEL key START/AUTO
MINUTE key STOP/CLEAR key KITCHEN TIMER/CLOCK SET key 10. WEIGHT keys 11. AUTO COOK key 4 10 5 9 6 7 8 3 UK R-259 O/M,-P28 05.
3.24 4:15 PM Page 4 (1,1) INSTALLATION WARNING: Inspect the Oven: Check the oven carefully for damage before and regularly after installation. Make
sure the door closes properly, that it is not misaligned or warped. Check the hinges and door safety latches are not broken or loose. Ensure the door seal and
sealing surfaces are not damaged. If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.
Inspect the oven interior and door for dents. IMPORTANT: If any damage is apparent, do not operate the oven in any way, until it has been repaired by a
SHARP trained engineer. 5. Make sure the power supply cord is undamaged (See "ELECTRICAL CONNECTION" below).

Do not allow the power supply cord to run over any hot or sharp surfaces, such as the hot air vent area at the top rear of the oven. 6. The socket must be
readily accessible so that it can be easily unplugged in an emergency. 7. Do not use the oven outdoors. BUILDING-IN-KIT. This oven is not designed to be
built into a kitchen unit. ELECTRICAL CONNECTION. · Do not allow water to come into contact with the power supply cord or plug. · Insert the plug
properly into the socket.

· Do not connect other appliances to the same socket using an adaptor plug. · If the power supply cord is damaged, it must be replaced by a Sharp approved
service facility or a similarly qualified person to avoid a hazard. · When removing the plug from the socket always grip the plug, never the cord as this may
damage the power supply cord and the connections inside the plug. · If the plug fitted to your oven is a rewirable type and in the event of the socket outlet in
your home not being compatible with the plug supplied, remove the plug properly (do not cut off)..



[Your user manual](#)
[SHARP R-259](#)