


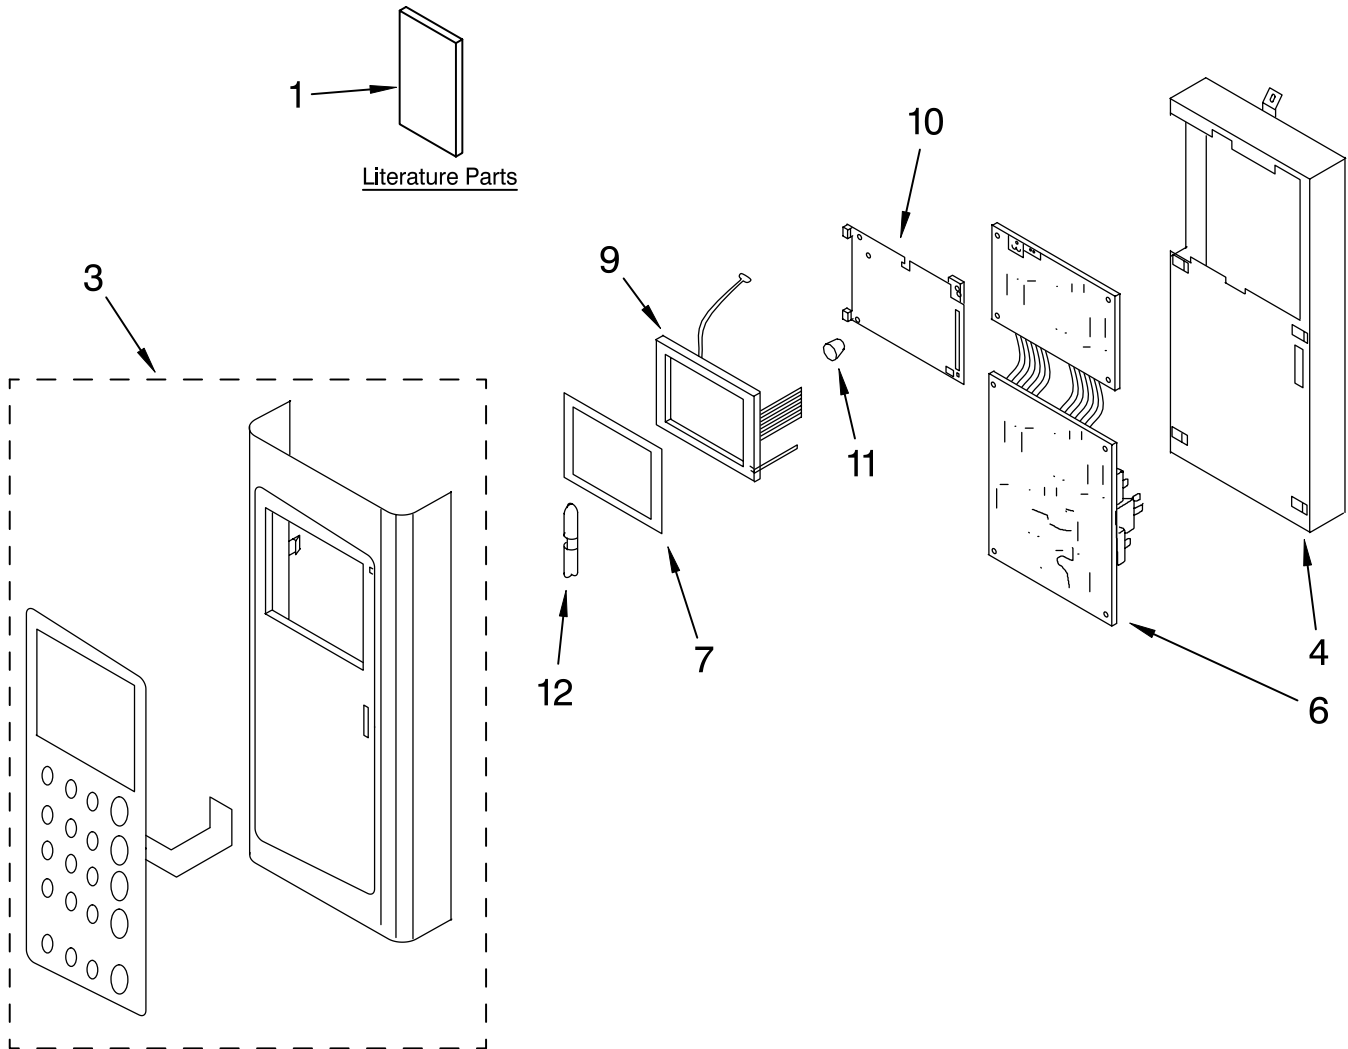

CONTROL PANEL PARTS

For Models: GH6177XPQ3, GH6177XPT3, GH6177XPB3, GH6177XPS3
 (White) (Biscuit) (Black) (Stainless Steel)

MICROWAVE
 HOOD
 COMBINATION



Illus. No.	Part No.	DESCRIPTION
1		Literature Parts
	8205977	Use & Care Guide
	8205610	Tech Sheet
	8205139	Installation Instructions
	8204711	Cook Book
	8184891	Cook Guide Label


Illus. No.	Part No.	DESCRIPTION
3		Control Panel Assembly
	8205232	White
	8205233	Black
	8205234	Biscuit
	8205235	Stainless Steel

Illus. No.	Part No.	DESCRIPTION
4	8205238	Bracket, Control
6	8205237	Microcomputer
7	8184913	Ring, Rubber
9	8184914	LCD Assembly
10	8184915	Bracket, LCD
11	8185058	Bushing, Rubber
12	8205236	Sensor, Light Lens

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR PARTS

For Models: GH6177XPQ3, GH6177XPT3, GH6177XPB3, GH6177XPS3
 (White) (Biscuit) (Black) (Stainless Steel)

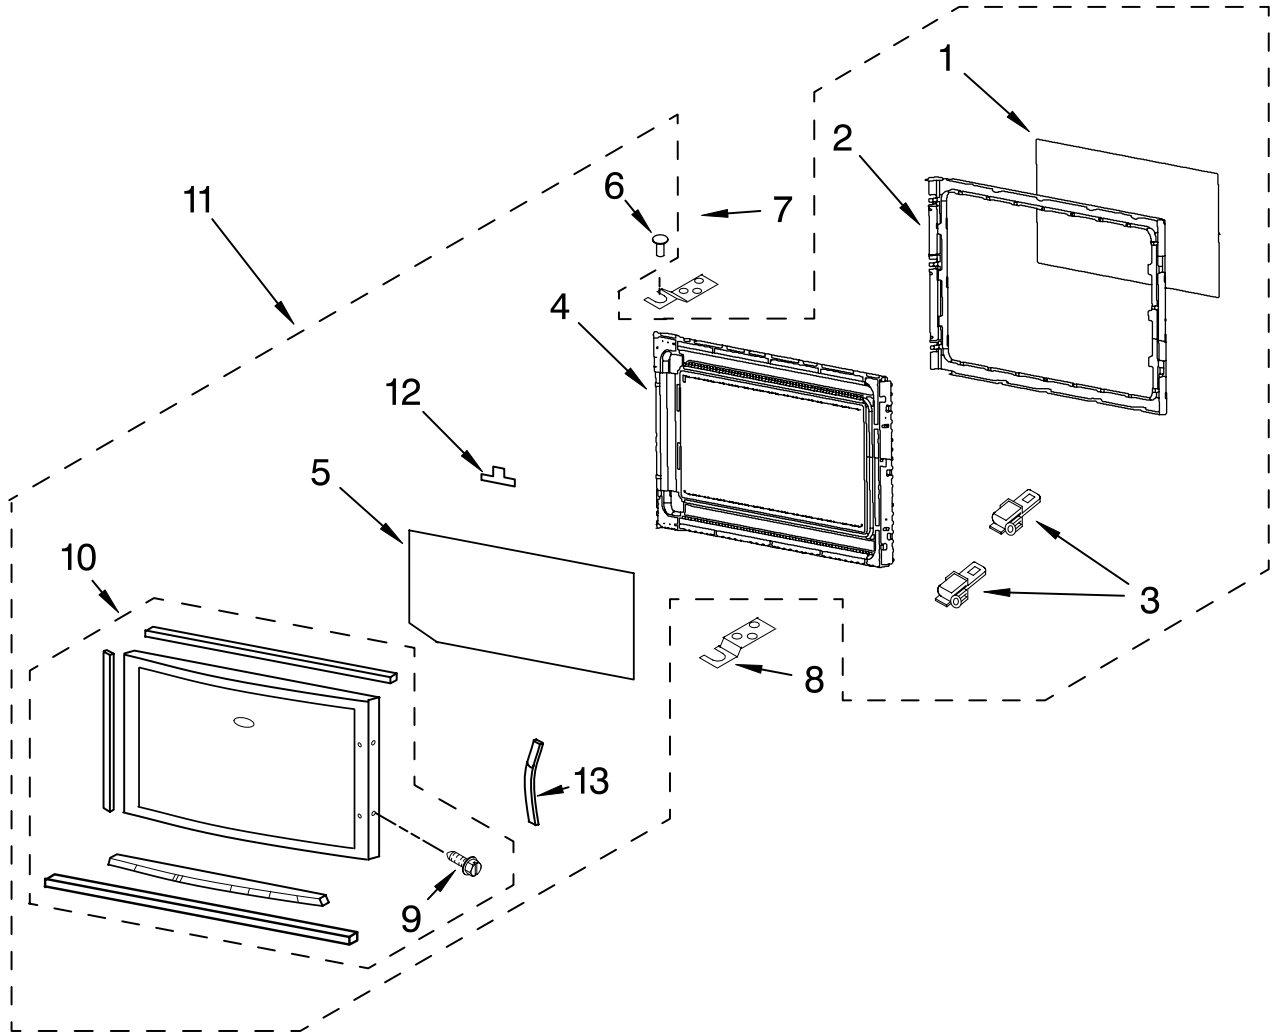

Illus. No.	Part No.	DESCRIPTION
1		Film, Back Included with #4
2	8204680	Frame, Inner
3	8184113	Latch, Door
4		Body Asy, Door Includes #1
	8185035	White
	8185038	Black
	8185037	Biscuit
5	8205219	Glass, Outer
6	8184922	Pivot, Door
7	8204679	Hinge, Upper


Illus. No.	Part No.	DESCRIPTION
8	8204678	Hinge, Lower
9	8169479	Screw
10		Frame Asy, Outer
	8205220	White
	8205221	Black
	8205222	Biscuit
	8205223	Stainless Steel
11		Complete Door
	8205228	White
	8205229	Black
	8205230	Biscuit
	8205231	Stainless Steel

Illus. No.	Part No.	DESCRIPTION
12	8205218	Bracket, Door Glass
13		Handle
	8205224	White
	8205226	Black
	8205225	Biscuit
	8205227	Stainless Steel

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

INTERIOR AND VENTILATION PARTS

For Models: GH6177XPQ3, GH6177XPT3, GH6177XPB3, GH6177XPS3
(White) (Biscuit) (Black) (Stainless Steel)

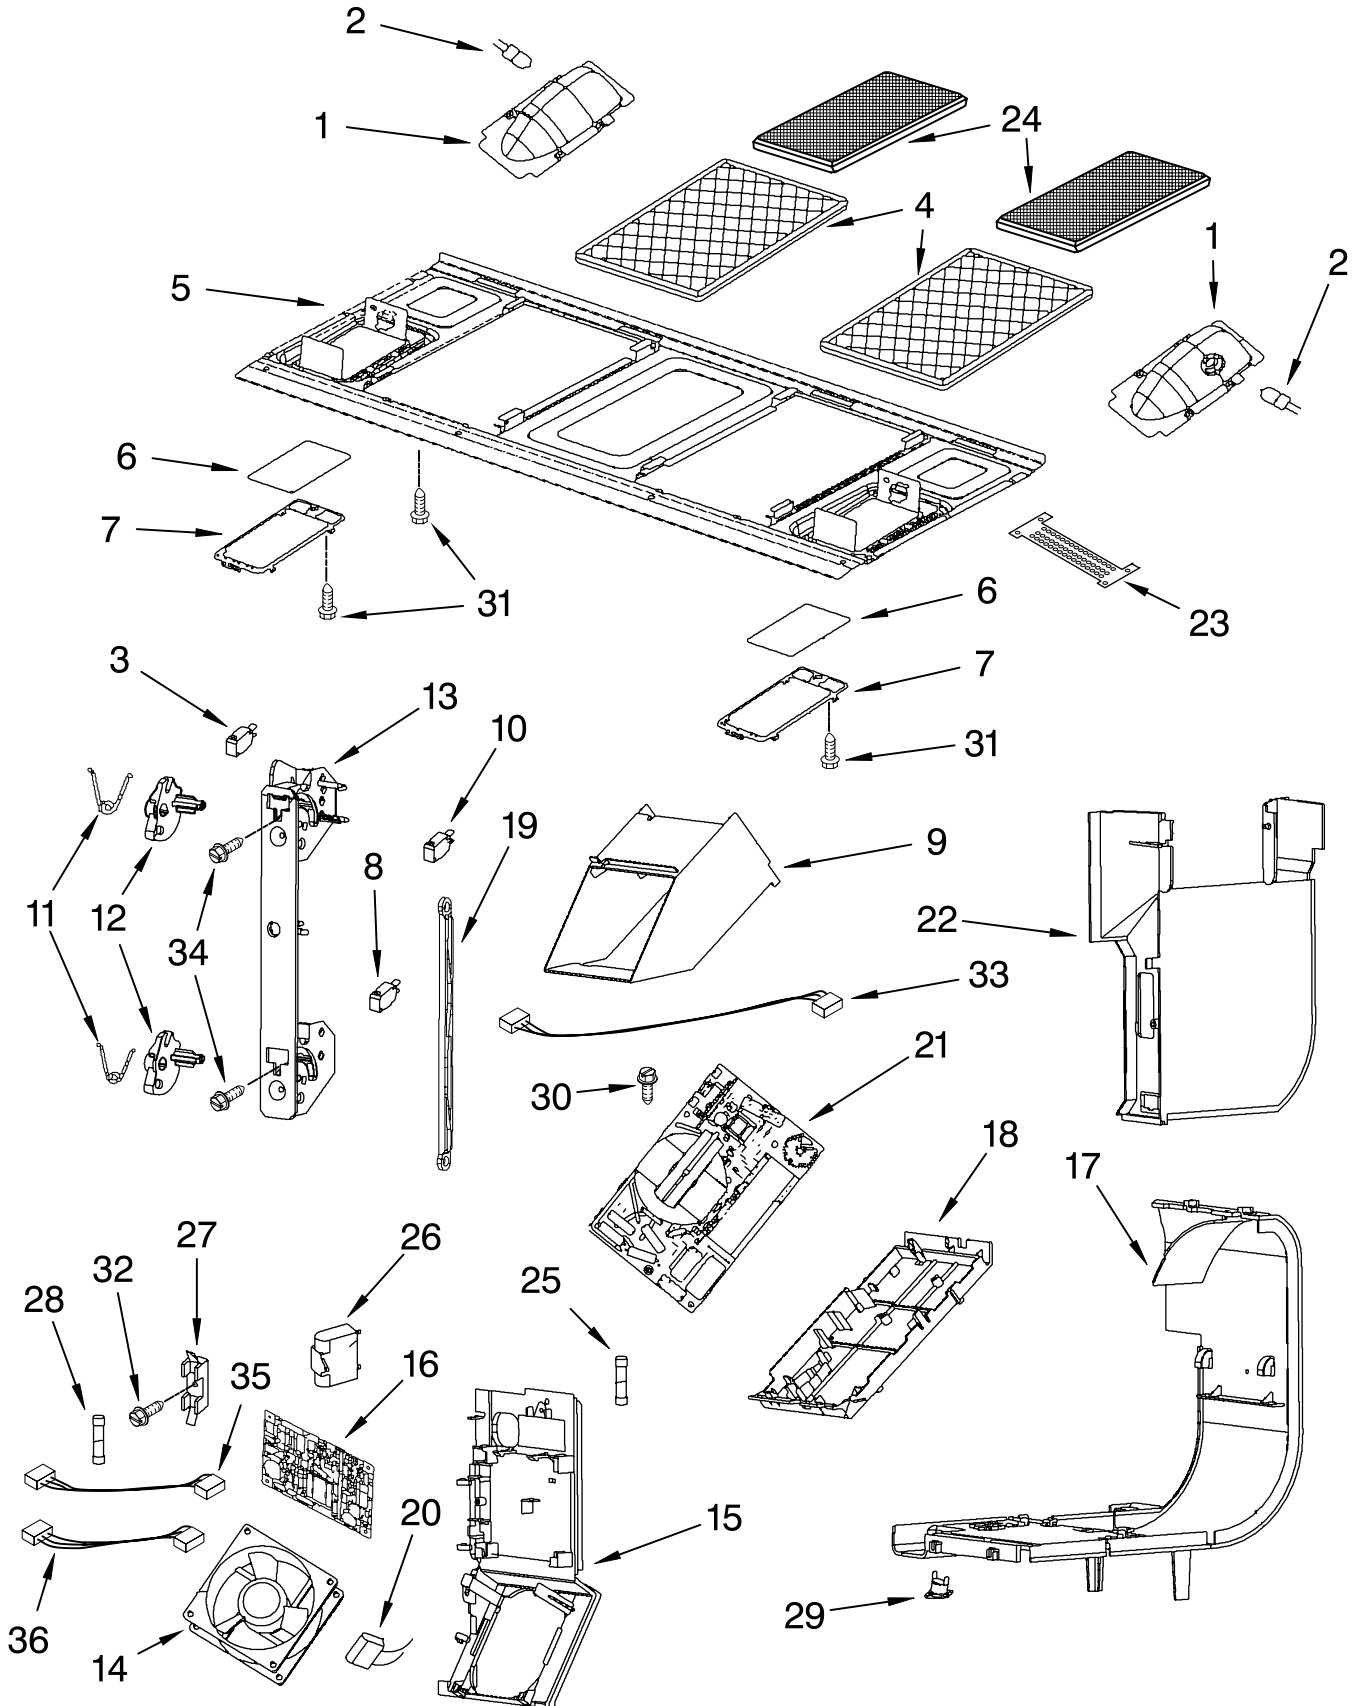

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

INTERIOR AND VENTILATION PARTS


For Models: GH6177XPQ3, GH6177XPT3, GH6177XPB3, GH6177XPS3
 (White) (Biscuit) (Black) (Stainless Steel)

Illus. No.	Part No.	DESCRIPTION
1		Reflector, Lamp
	8184194	Left
	8184132	Right
2	8185188	Lamp
3	4393598	Switch, Micro
4	8184003	Filter, Grease
5	8185105	Plate, Bottom
6	8184141	Glass, Lamp
7	8184889	Holder, Glass
8	4393599	Switch, Micro Primary/Secondary
9	8184124	Cover, Inverter
10	4393697	Switch, Micro
11	8169438	Spring, Interlock
12	8205211	Plate, Cam
13	8185189	Support, Interlock
14	8184875	Fan, DC 12 Volt
15	8184894	Housing, Fan
16	8204989	Inverter 40 W
17	8185032	Bracket, Holder
18	8184670	Holder, Inverter
19	8185190	Rod-Locking Link
20	8184093	Capacitor, 125 V
21	8205093	Inverter 1100 W
22	8185031	Plate, Side
23	8184887	Cable
24	8184002	Filter, Charcoal
25	8184579	Fuse (2) 4 Amp/250 Volt
26	8184204	Capacitor
27	8184312	Holder, Fuse
28	4393308	Fuse
29	8183998	Thermostat
30	8184199	Screw
31	4393835	Screw
32	8184200	Screw
33	8205014	Ribbon Cable (P2 To CN701 On 1100 W Inverter)
34	8169477	Screw
35	8205021	Ribbon Cable (P27 To CN153 On 40 W Inverter)
36	8205022	Ribbon Cable (P4 To CN151 On 40 W Inverter)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

AIR FLOW PARTS

For Models: GH6177XPQ3, GH6177XPT3, GH6177XPB3, GH6177XPS3
 (White) (Biscuit) (Black) (Stainless Steel)

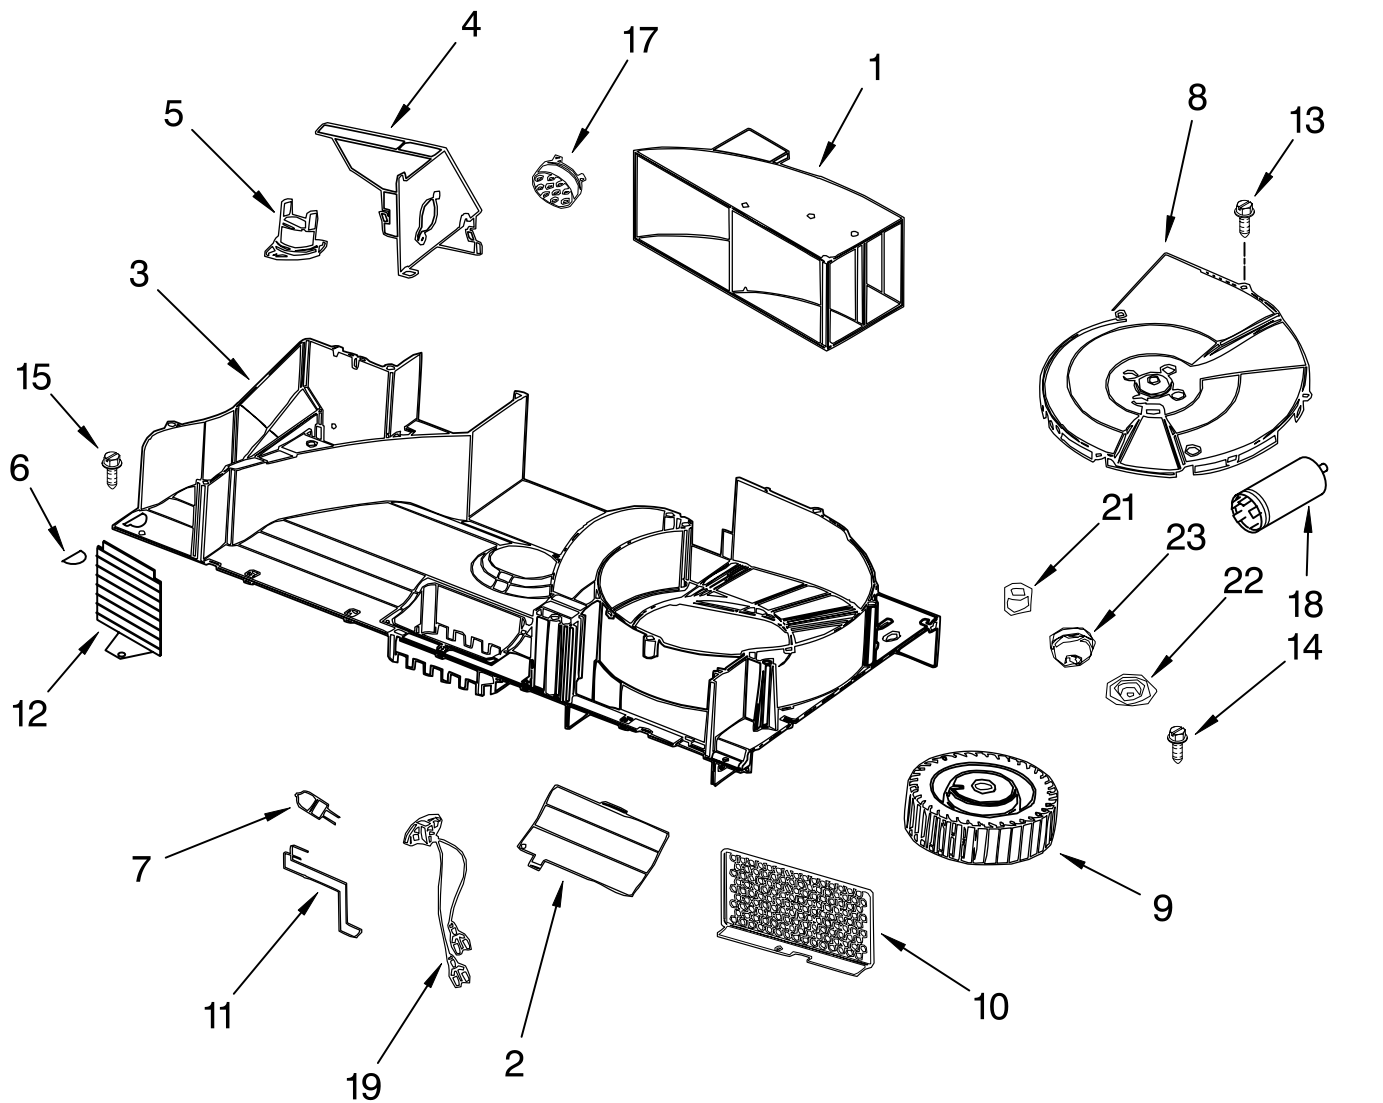


Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	8184667	Deflector, Air	9	8184876	Motor, Fan Assy	15	8169474	Screw
2	8184885	Cover, Lamp	10	8204754	Shield	17	4393808	Humidity, Sensor
3	8184886	Duct, Air	11	8169647	Spring	18	8205853	Filter
4	8204789	Bracket, Thermostat	12	8204790	Shield	19	8204669	Holder, Lamp
5	8183999	Thermostat	13	4393834	Screw	21	8184129	Spacer-Copper Pipe
6	8204676	Air Guide Cover	14	8184198	Screw	22	8204674	Plate, Damper
7	8185188	Lamp				23	8169635	Cushion, Mtr
8	8184884	Cover, Fan						

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

MAGNETRON AND TURNTABLE PARTS

For Models: GH6177XPQ3, GH6177XPT3, GH6177XPB3, GH6177XPS3
(White) (Biscuit) (Black) (Stainless Steel)

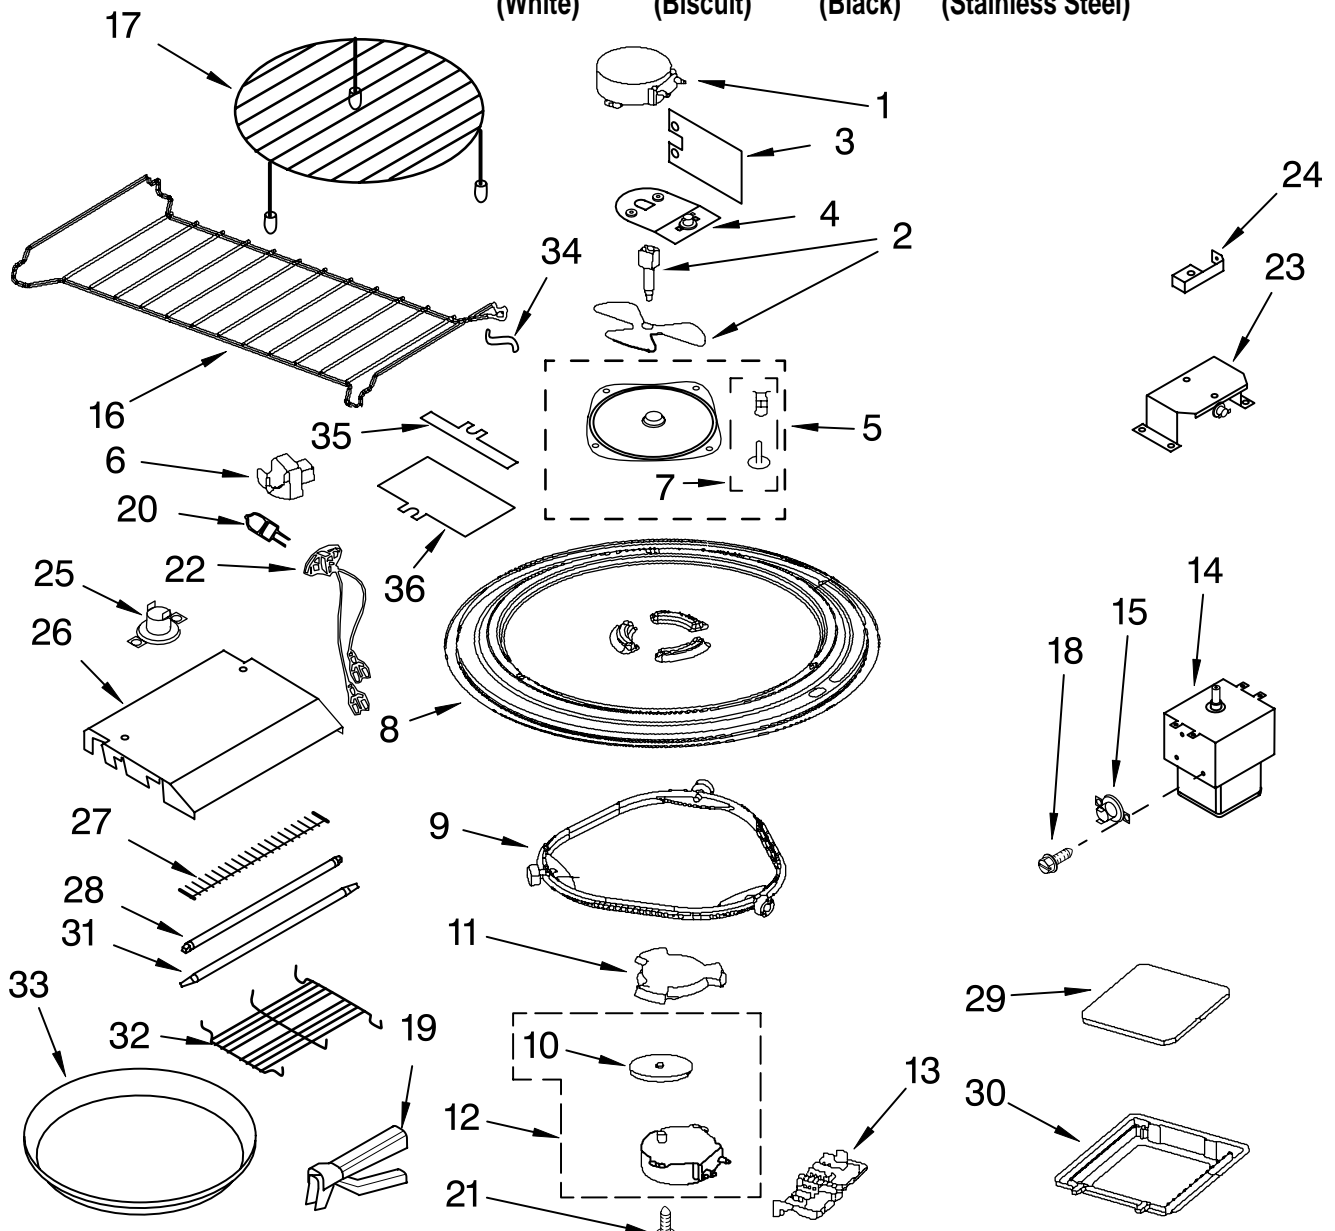

Illus. No.	Part No.	DESCRIPTION
1	8205044	Motor, Stirrer
2	8205202	Stirrer Shaft/Blade
3	8184485	Shield, Nomex
4	8184585	Thermostat/Bracket
5	8185059	Cover, Inlet Includes Nails and Bushings
6	4393849	Hook, Rack (4)
7	8184549	Nails/Bushings (5 of each)
8	4393799	Turntable
9	8205778	Ring, Turntable
10	8184109	Spacer, Waterproof


Illus. No.	Part No.	DESCRIPTION
11	8205779	Driver, Turntable
12	8183953	Motor, Turntable
13	4393756	Cover, Terminal
14	8184139	Magnetron
15	8184951	Thermostat
16	8205042	Rack
17	8184862	Grill
18	4393838	Screw
19	8204652	Handle, Crisper Plate
20	8185188	Halogen Light
21	4393832	Screw
22	8204669	Socket, Halogen Light
23	8184586	Thermostat/Bracket

Illus. No.	Part No.	DESCRIPTION
24	8184669	Bracket, Plug
25	8204995	Thermostat
26	8185060	Grill, Insulation Plate
27	8184837	Browner, Halogen
28	8184838	Quartz Tube, Soft Start
29	8169499	Glass, Lamp
30	8169646	Frame, Glass
31	8184839	Heater, Quartz
32	8205239	Cover, Protector
33	8204983	Plate, Crisp
34	8205039	Spacer
35	8185175	Shield, Front
36	8185176	Shield, Rear

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CABINET AND INSTALLATION PARTS

For Models: GH6177XPQ3, GH6177XPT3, GH6177XPB3, GH6177XPS3
 (White) (Biscuit) (Black) (Stainless Steel)

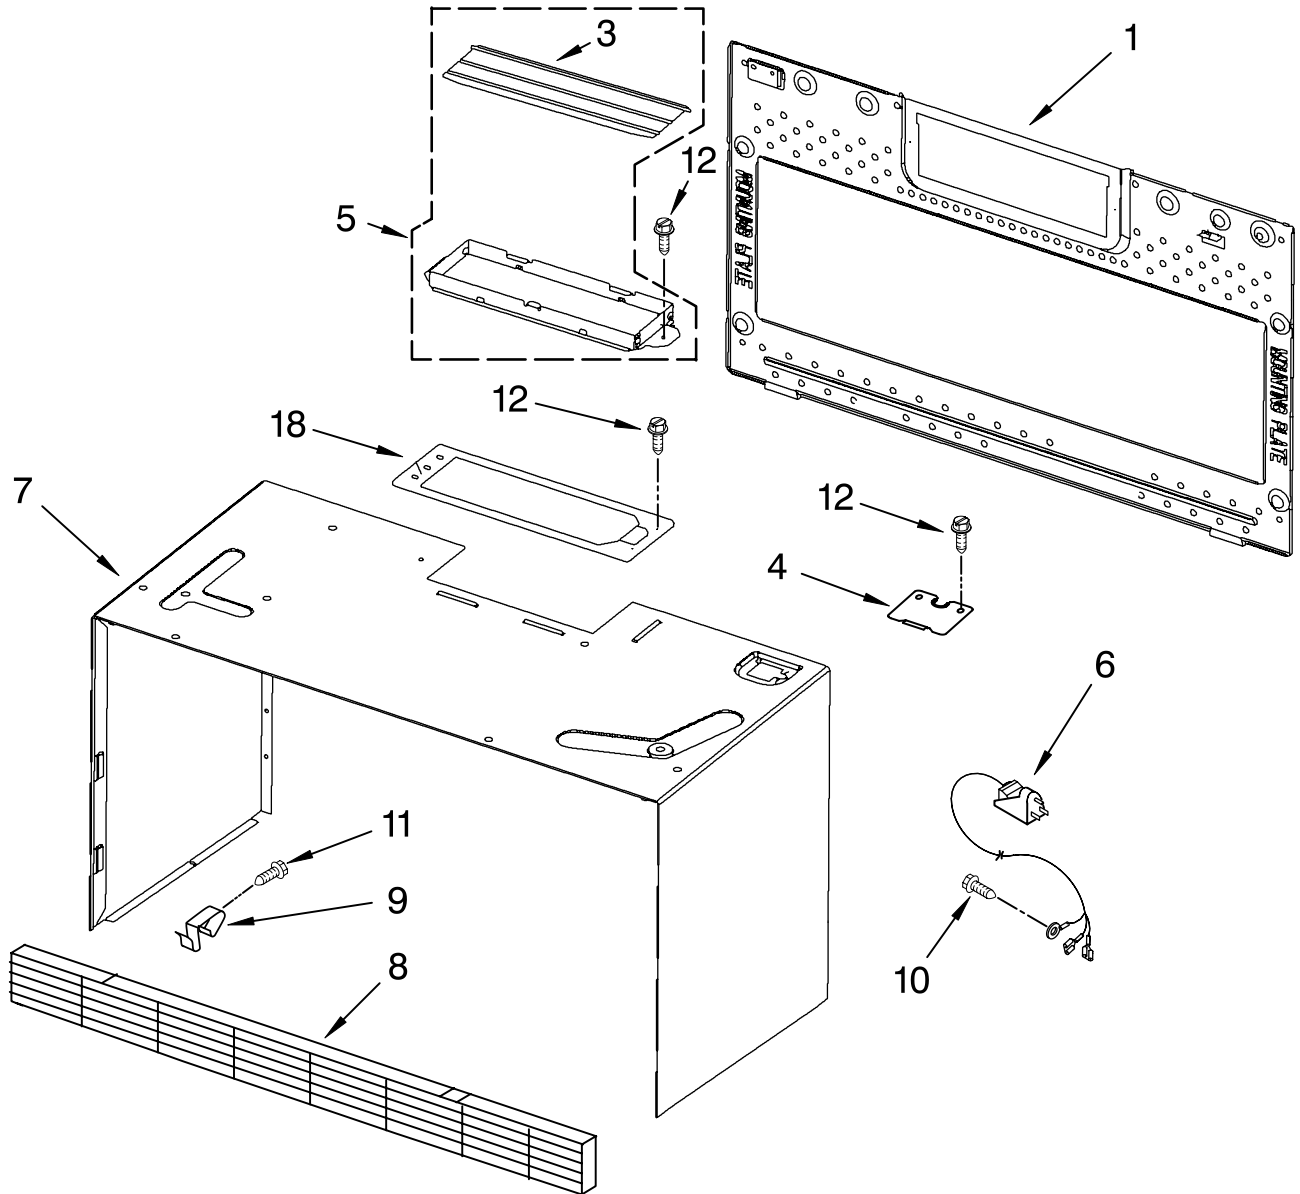

Illus. No.	Part No.	DESCRIPTION
1	8206173	Plate, Mounting
3	4393713	Door, Damper
4	8184897	Lid, Power Cord
5	8205772	Damper Assembly
6	8184898	Cord, Power
7		Case, Outer
	8205207	White
	8205212	Black
	8205213	Biscuit

Illus. No.	Part No.	DESCRIPTION
8		Grille, Vent
	8205214	White
	8205215	Black
	8205216	Biscuit
	8205217	Stainless Steel
9	8184190	Clip, Grille
10	4393836	Screw
11	8169475	Screw
12	4393472	Screw
18	8184902	Plate, Damper

Illus. No.	Part No.	DESCRIPTION
Miscellaneous		
	8184603	Wire Harness (Includes Light Sockets)
	8205947	Installation, Hardware
	8184781	Template, Upper
	8169704	Screw, Top Mountng

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST